



*Ecosys FS-1800/FS-3800
Laser Printers*


PARTS LIST

V. 1.01, Second Edition, Published in February 2001

Contents

- 1 > Enclosure > page 4
- 2 > Upper Frame > page 6
- 3 > Drive Unit > page 9
- 4 > Controller Box > page 11
- 5 > Paper Feed Unit > page 13
- 6 > Fuser Unit > page 16
- 7 > Drum Unit > page 19
- 8 > Developer Unit > page 21
- 9 > Frame MP Assembly > page 23
- 10 > Paper Cassette > page 25
- 11 > Tray MP Assembly > page 27
- 12 > Miscellaneous > page 29


1 Enclosure

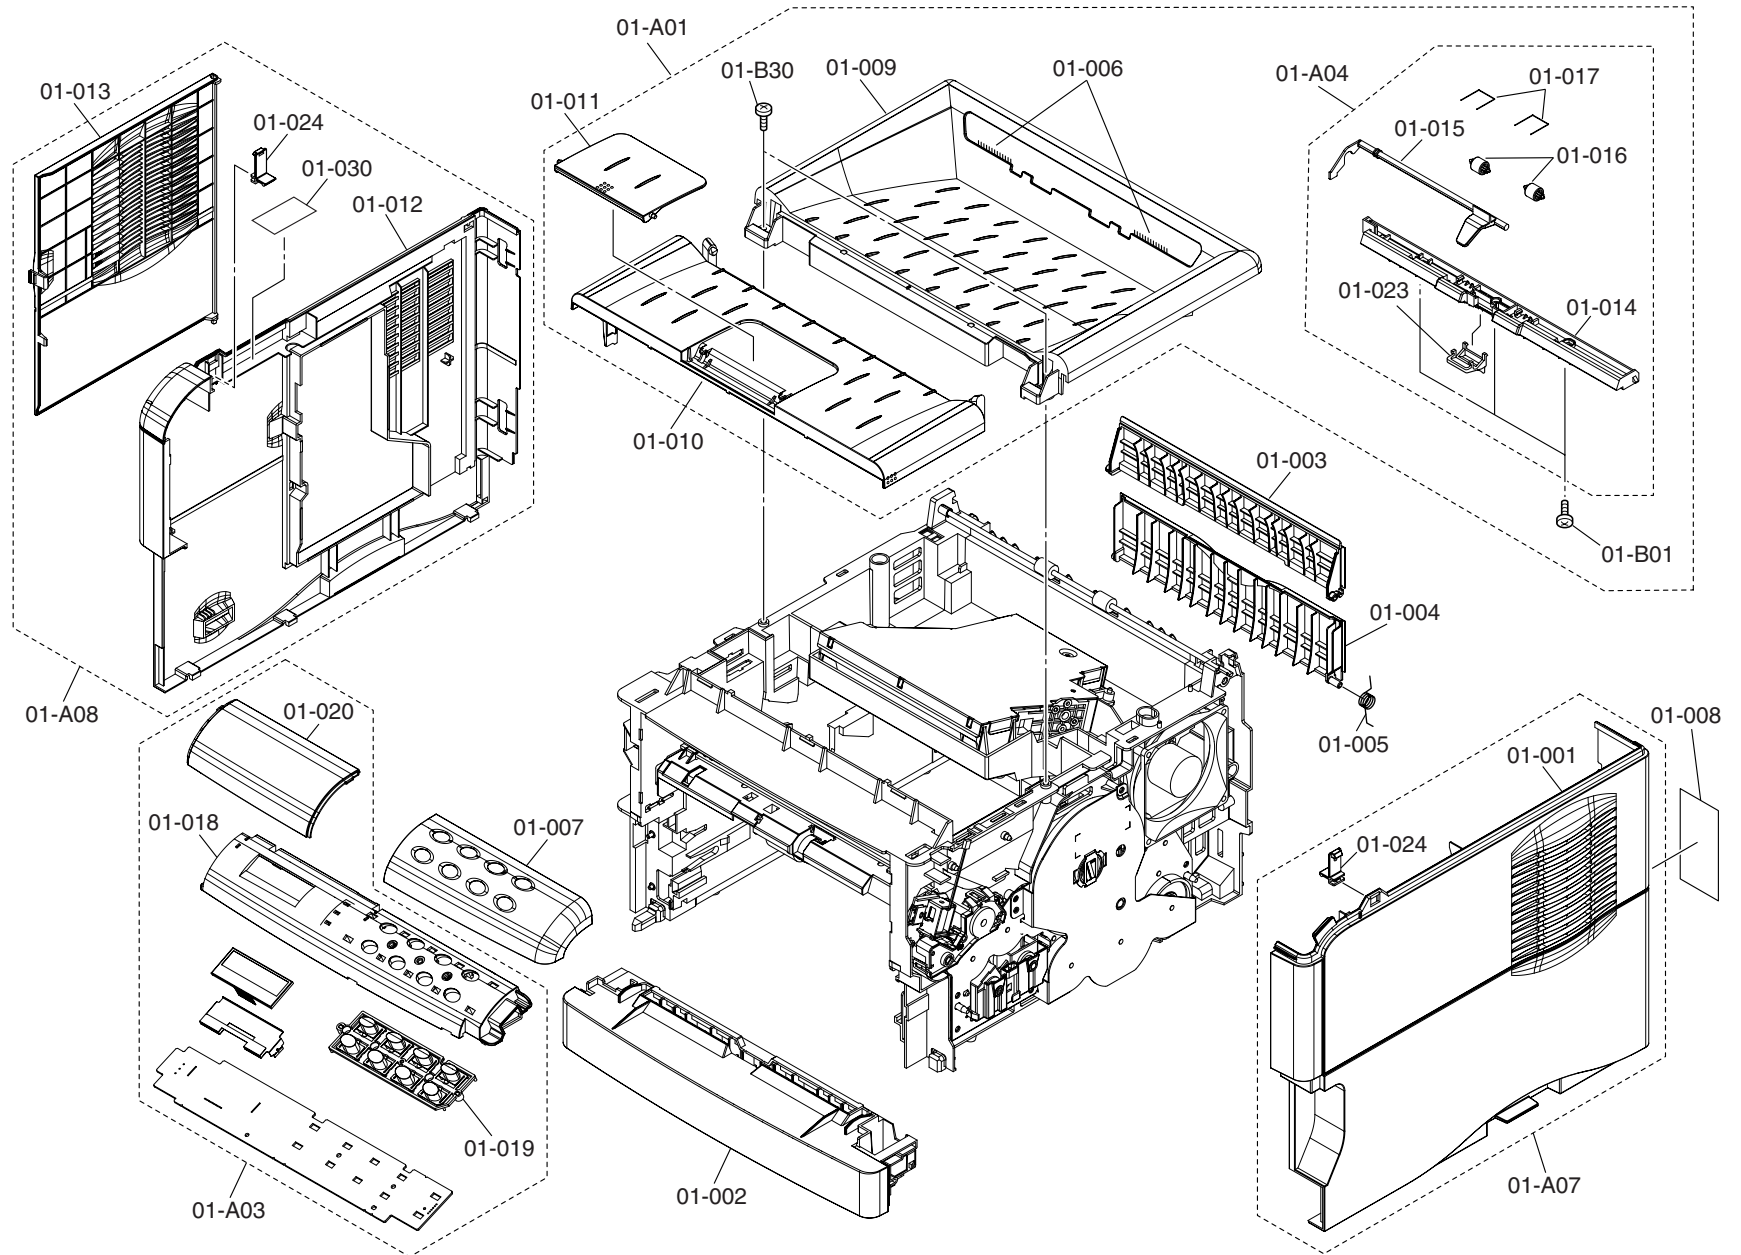

List 1 - Enclosure

Ref. No.	Part Code	Part Name	Description	Applicable Model	ISP	SP	120V	230V	SB No.
01-A01	5AAVCOVER245	COVER TOP ASSY			X	X	1	1	
01-A03	5AAYA37E++11	KEY BOARD ASSY			X	X	1	1	
01-A04	5AAMA37E++01	FD ASSY			-	-	1	1	
01-A05	5AAYA37E++52	PAD COVER R ASSY			-	X	1	1	
01-A08	5AAYA37E++54	COVER LEFT SHEET ASY			-	X	1	1	
01-002	5MVB866CH022	COVER FRONT			X	X	1	1	
01-003	5MVB862CH003	COVER FD			X	X	1	1	
01-004	5MVB862CH002	COVER REAR			X	X	1	1	
01-005	5MMW611LD003	SPRING COVER			-	-	1	1	
01-006	5MVS711XF003	DISCHARGER FD			-	-	2	2	
01-007	5MVS751SH001	PANEL ENGLISH	Excl. KMFR/KMIT		X	X	1	1	
01-007	5MVS751SH003	PANEL ITALIAN	KMIT only		X	X	-	1	
01-007	5MVS751SH002	PANEL FRENCH	KMFR only		X	X	-	1	
01-009	5MVB886CH010	COVER TOP			-	-	1	1	
01-010	5MVB874CH003	LID TOP			-	-	1	1	
01-011	5MVB662SH024	STOPPER FD			-	-	1	1	
01-013	5MVB873CH004	COVER SIDE			-	-	1	1	
01-014	5MVX852CH002	FRAME FD			-	-	1	1	
01-015	5MVX732CB003	ACTUATOR FD			-	X	1	1	
01-016	5MVM273DB006	ROLLER PINCH			-	X	2	2	
01-017	5MMW251LD046	SPRING PINCH			-	-	2	2	
01-023	5MVX332DB014	GUIDE STOCK			-	X	1	1	
01-030	5MVS631KF011	SHEET CONNECTOR			-	-	1	1	

2 Upper Frame

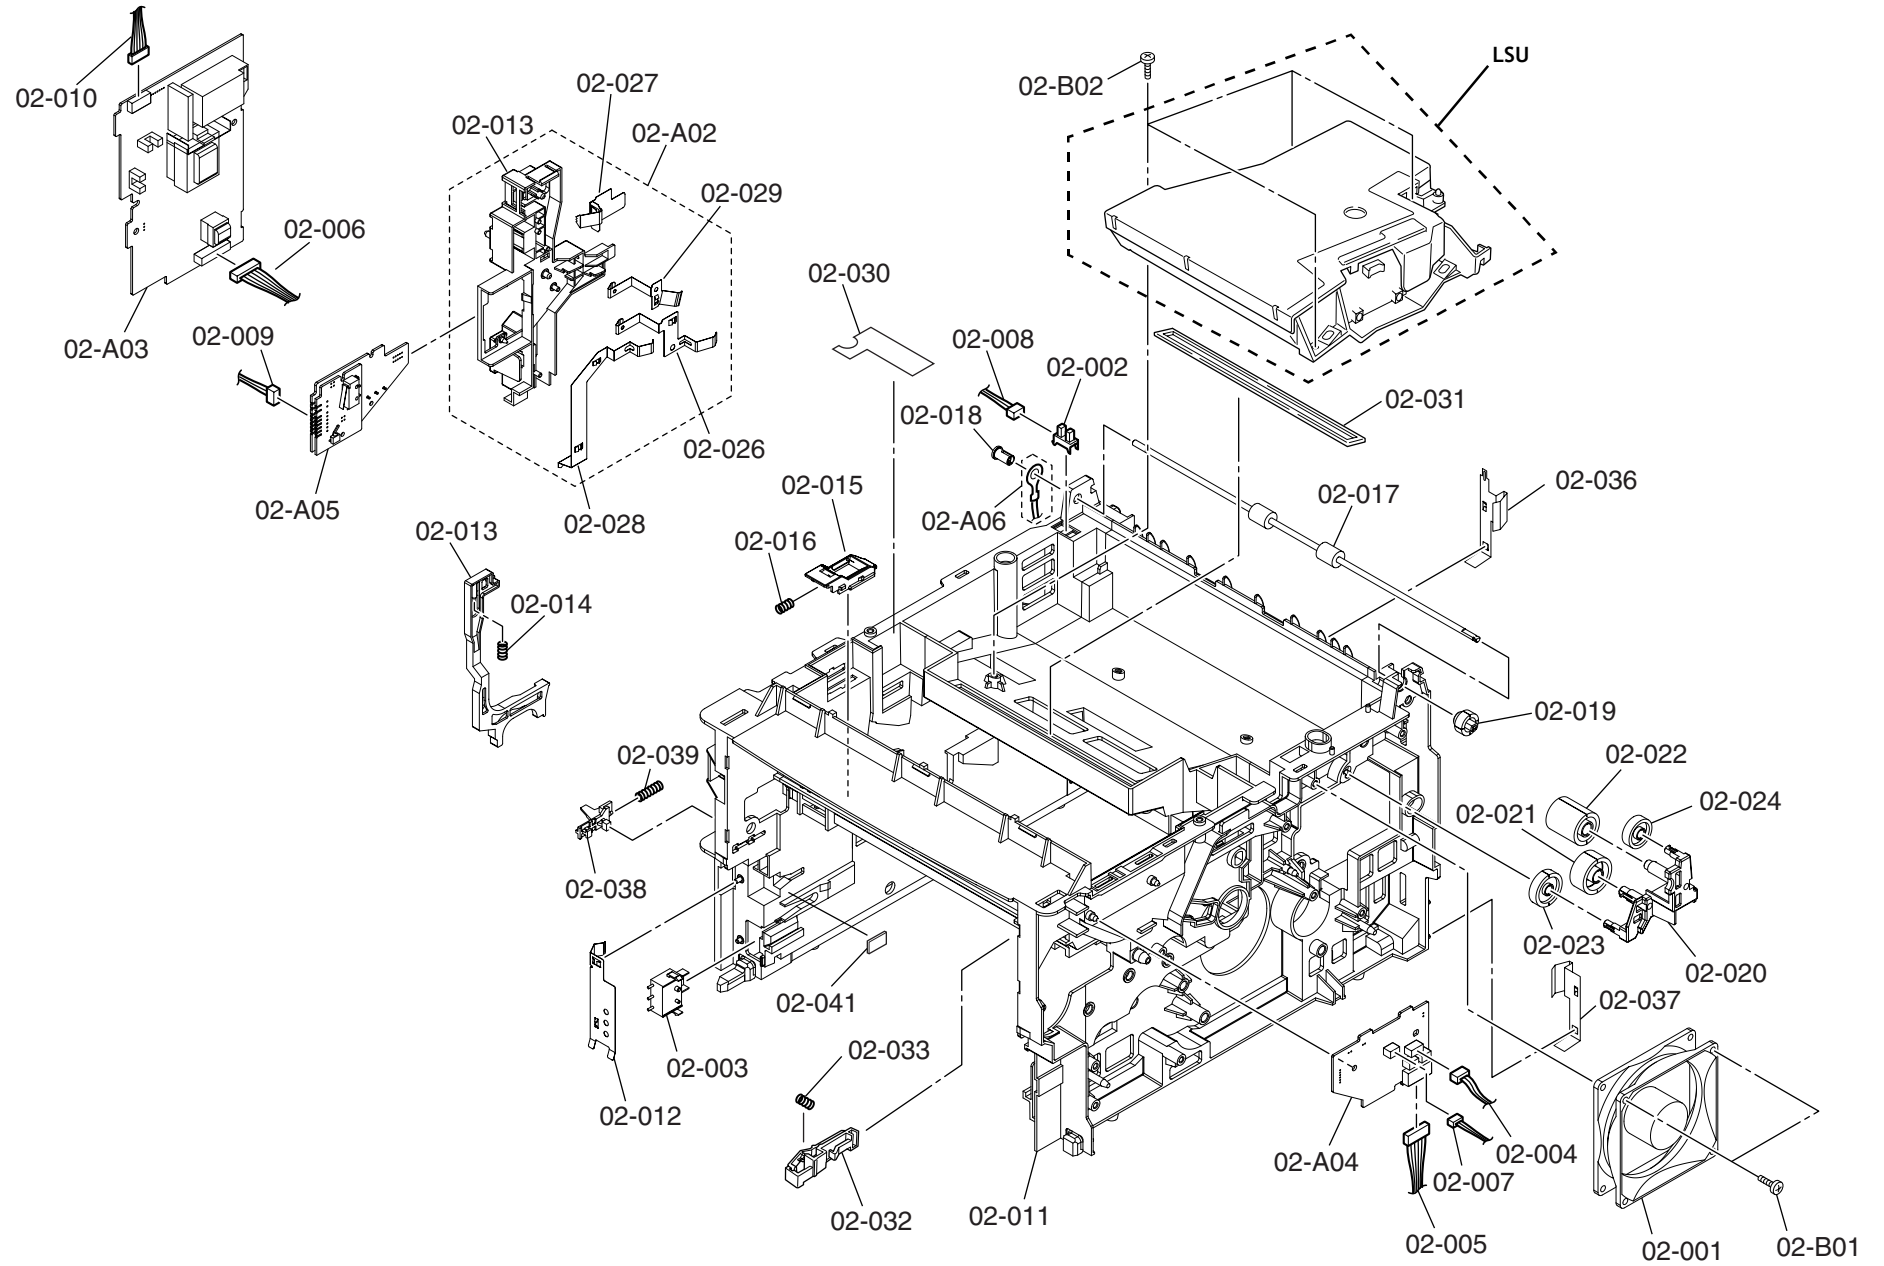


List 2 - Upper Frame Unit

Ref. No.	Part Code	Part Name	Description	Applicable Model	ISP	SP	120V	230V	SB No.
LSU	5PLPX5APKX	LK-62	SCANNER UNIT	FS-1800/N	X	X	1	1	
LSU	5PLPXZ4APKX	LK-63	SCANNER UNIT	FS-3800/N	X	X	1	1	
02-A02	5AAVC0VER247	COVER HV SUB ASSY			X	X	1	1	
02-A03	5AAXTR047VDA	TRANS ASSY		FS-1800/N	X	X	1	1	
02-A03	5AAXTR047VDB	TRANS ASSY		FS-3800/N	X	X	1	1	
02-A04	5AAPRIFC1027AH	P.W.BOARD ASSY	ENGRLY KP-817		X	X	1	1	
02-A05	5AAPRSSC1025AH	P.W.BOARD ASSY	SENSOR KP-754		X	X	1	1	
02-001	5EZNF2402503+02	FAN MOTOR		FS-1800/N	X	X	1	1	
02-001	5EZNF2403501+02	FAN MOTOR		FS-3800/N	X	X	1	1	
02-002	5ENXGP1A73A**01	PT.SENSOR GP1A73AZ			X	X	1	1	
02-003	5ESP03090001+01	CASSETTE SW			X	X	1	1	
02-004	5AACCNRF9GEA	CONN.CORD ASSY			-	-	1	1	
02-005	5AACCNRG3GEA	CONN.CORD ASSY			-	-	1	1	
02-006	5AACCNRG5GEA	CONN.CORD ASSY			-	-	1	1	
02-007	5AACCNRH0GEA	CONN.CORD ASSY			-	-	1	1	
02-008	5AACCNRK8GEA	CONN.CORD ASSY			-	-	1	1	
02-009	5AACCNRG6GEA	CONN.CORD ASSY			-	-	1	1	
02-010	5AACCNRH1GEA	CONN.CORD ASSY			-	-	1	1	
02-011	5MVB888XB001	FRAME BASE			-	-	1	1	
02-013	5MVX762SB013	PAD INTER LOCK			-	-	1	1	
02-014	5MMW451LD001	SPRING INTER LOCK			-	-	1	1	
02-015	5MVX632DH001	LEVER LOCK DLP			-	-	1	1	
02-016	5MMW261LX005	SPRING LOCK DLP			-	-	1	1	
02-017	5MMT874SN008	ROLLER FD			X	X	1	1	
02-018	5MVM266DN006	BUSH FD			X	X	1	1	
02-019	5MVG127DN076	GEAR ROLL FD Z18			X	X	1	1	
02-020	5MVX655SB001	BRACKET FD GEAR A		FS-1800/N	X	X	1	1	
02-020	5MVX655SB002	BRACKET FD GEAR B		FS-3800/N	X	X	1	1	
02-021	5MVG138DN049	GEAR FD Z33			X	X	1	1	
02-022	5MVG138DN047	GEAR FD Z28			X	X	1	1	
02-023	5MVG138DN048	GEAR FD Z29		FS-1800/N	X	X	1	1	
02-023	5MVG137DN038	GEAR FD Z23		FS-3800/N	X	X	1	1	
02-024	5MVG137DN014	GEAR IDLE Z25			X	X	1	1	
02-026	5MMX631LD005	PLATE CONTACT TC			-	-	1	1	
02-027	5MMX521LD006	PLATE CONTACT MCH			-	-	1	1	
02-028	5MMX662LD006	PLATE CONTACT EARTH			-	-	1	1	
02-029	5MMX543LD005	PLATE CONTACT BIAS			-	-	1	1	
02-030	5MVS642KF011	SEAL BASE A			-	-	1	1	

Ref. No.	Part Code	Part Name	Description	Applicable Model	ISP	SP	120V	230V	SB No.
02-031	5MVS727RF006	SEAL BASE B			-	-	1	1	
02-032	5MVX522DB006	LOCK COVER M/P			-	X	1	1	
02-033	5MMW261LD051	SP LOCK COVER M/P			-	-	1	1	
02-036	5MMX431LD015	PLATE EARTH SO L			-	-	1	1	
02-037	5MMX431LD016	PLATE EARTH SO R			-	-	1	1	
02-038	5MVX322DB023	LEVER EF			-	X	1	1	
02-039	5MMW222LD002	SPRING LEVER EF			-	-	1	1	
02-041	5MVS315KF003	SPACER FRAME			-	-	1	1	


3 Drive Unit

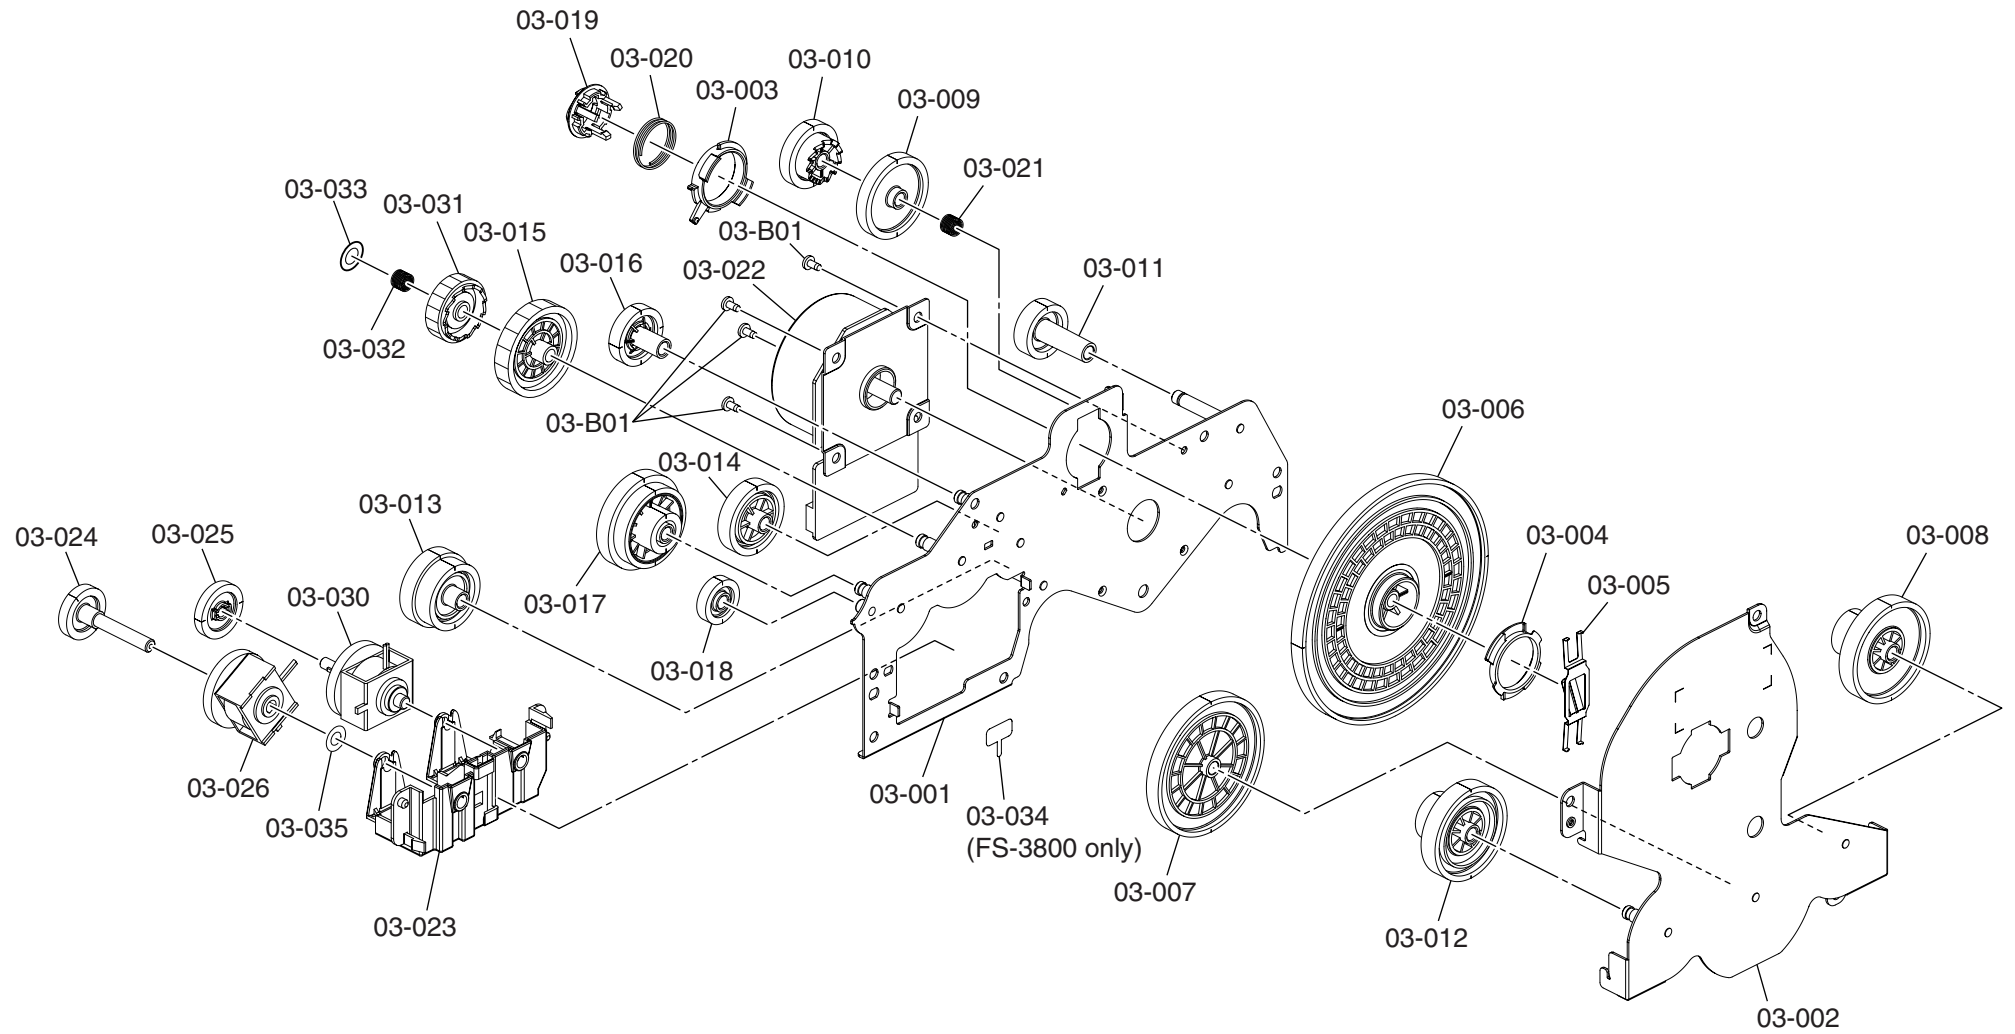

List 3 - Drive Unit

Ref. No.	Part Code	Part Name	Description	Applicable Model	ISP	SP	120V	230V	SB No.
	5PLPX6APKX	DR-60 DRIVE UNIT		FS-1800/N	X	X	1	1	
	5PLPXZ5APKX	DR-61 DRIVE UNIT		FS-3800/N	X	X	1	1	
03-001	5MMX875SD005	PLATE DRIVE A			-	-	1	1	
03-002	5MMX774SD001	PLATE DRIVE B			-	-	1	1	
03-003	5MVM188XB002	BUSH GEAR DR A			-	X	1	1	
03-004	5MVM188XN017	BUSH GEAR DR B			-	X	1	1	
03-005	5MMX621LD011	PLATE EARTH DR			-	-	1	1	
03-006	5MVG189DN001	GEAR Z222H			-	X	1	1	
03-007	5MVG179DN003	GEAR Z126H			-	X	1	1	
03-008	5MVG169DN034	GEAR Z91H-Z24H			-	X	1	1	
03-009	5MVG158DN040	GEAR FREE Z45H			-	X	1	1	
03-010	5MVG148DN057	GEAR FREE Z36S			-	X	1	1	
03-011	5MVG138BN001	GEAR Z30S			-	X	1	1	
03-012	5MVG169DN035	GEAR Z85H-Z25H			-	X	1	1	
03-013	5MVG158DN041	GEAR Z36H-Z42S			-	X	1	1	
03-014	5MVG148DN058	GEAR Z39H			-	X	1	1	
03-015	5MVG159DN013	GEAR Z50H-Z34H			-	X	1	1	
03-016	5MVG148DN059	GEAR Z31H			-	X	1	1	
03-017	5MVG169DN036	GEAR Z54S-Z44H-Z22S			-	X	1	1	
03-018	5MVG137DN033	GEAR Z23S			-	X	1	1	
03-019	5MVM788DN001	JOINT DRIVE			-	X	1	1	
03-020	5MMW381LD003	SPRING JOINT DR			-	-	1	1	
03-021	5MMW261LD041	SPRING FREE DR			-	-	1	1	
03-022	5AAXMT055GEA	MOTOR MAIN		FS-1800/N	-	X	1	1	
03-022	5AAXMT048GEA	MOTOR MAIN		FS-3800/N	-	X	1	1	
03-023	5MVB655DN001	HOLDER CLUTCH DRIVE			-	X	1	1	
03-024	5MVG038XN001	GEAR CL F Z21S			-	X	1	1	
03-025	5MVG138DN044	GEAR CL R Z22S			-	X	1	1	
03-026	5EYYAFAAM02++03	CLUTCH FEED			-	X	1	1	
03-030	5EYYALAAK01++05	CLUTCH REGIST			-	X	1	1	
03-031	5MVG148DN087	GEAR FREE Z34H			-	X	1	1	
03-032	5MMW371LD005	SPRING REVERSE DR			-	-	1	1	
03-033	5MBWL52D55NN	POLY CUT WASHER			-	X	1	1	
03-034	5MMX321SM001	CORD KEEP		FS-3800/N	-	-	1	1	
03-035	5MBWK62C02NN	POLY SLIDER			-	X	1	1	


4 Controller Box

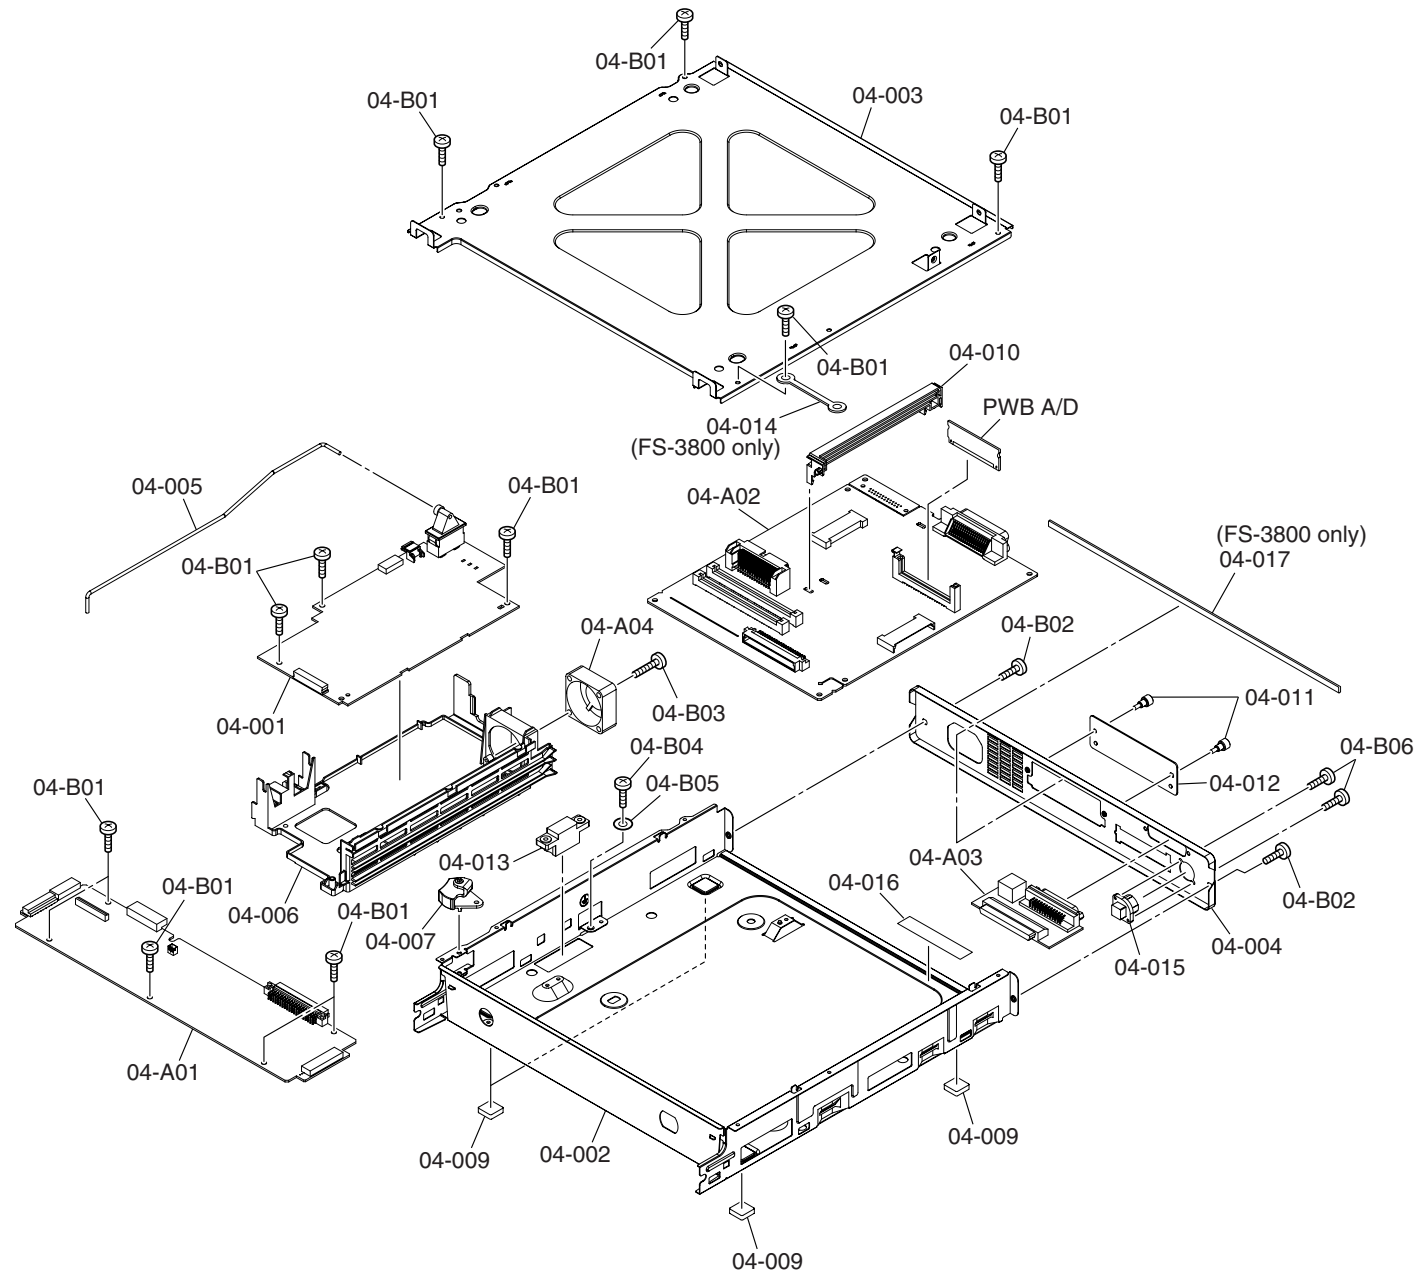

List 4 - Controller Box

Ref. No.	Part Code	Part Name	Description	Applicable Model	ISP	SP	120V	230V	SB No.
04-A01	5AAPRCZC2009AH	P.W.BOARD ASSY	ENGINE KP-864	FS-1800/N Incl.Taiwan	X	X	-	1	
04-A01	5AAPRCZC2009BH	P.W.BOARD ASSY	ENGINE KP-864	FS-1800/N Excl.Taiwan/Brazil	X	X	1	-	
04-A01	5AAPRCZC2009EH	P.W.BOARD ASSY	ENGINE KP-864	FS-1800/N Brazil only	X	X	1	-	
04-A01	5AAPRCZC2009CH	P.W.BOARD ASSY	ENGINE KP-864	FS-3800/N Incl.Taiwan	X	X	-	1	SB-01010
04-A01	5AAPRCZC2009MH	P.W.BOARD ASSY	ENGINE KP-864	FS-3800/N Incl.Taiwan	X	X	-	1	SB-01010
04-A01	5AAPRCZC2009DH	P.W.BOARD ASSY	ENGINE KP-864	FS-3800/N Excl.Taiwan/Brazil	X	X	1	-	SB-01010
04-A01	5AAPRCZC2009LH	P.W.BOARD ASSY	ENGINE KP-864	FS-3800/N Excl.Taiwan/Brazil	X	X	1	-	SB-01010
04-A01	5AAPRCZC2009FH	P.W.BOARD ASSY	ENGINE KP-864	FS-3800/N Brazil only	X	X	1	-	SB-01010
04-A01	5AAPRCZC2009NH	P.W.BOARD ASSY	ENGINE KP-864	FS-3800/N Brazil only	X	X	1	-	SB-01010
04-A02	5AAPRLGG4037AH	P.W.BOARD ASSY	MAIN KP-777	FS-1800	X	X	1	1	
04-A02	5AAPRLGG4038AH	P.W.BOARD ASSY	MAIN KP-858	FS-3800	X	X	1	1	
04-A02	5AAPRLGG4037BH	P.W.BOARD ASSY	MAIN KP-777	FS-1800N	X	X	1	1	
04-A02	5AAPRLGG4038BH	P.W.BOARD ASSY	MAIN KP-858	FS-3800N	X	X	1	1	
04-A03	5AAPRIFG4015AH	P.W.BOARD ASSY	SERIAL KP-859		-	X	1	1	
04-A04	5AAYA37E++41	FAN MOTOR KIT			X	X	1	1	
PWBA/D	5AAPRMEG4022MH	P.W.BOARD ASSY	DIMM KP-710	FS-1800/N	X	X	1	1	
PWBA/D	5AAPRMEG2011EQ	P.W.BOARD ASSY	DIMM KP-854	FS-1800/N	-	-	1	1	SB-01042
PWBA/D	5AAPRMEG4021KQ	P.W.BOARD ASSY	DIMM KP-689	FS-3800/N	X	X	1	1	
PWBA/D	5AAPRMEG2011FQ	P.W.BOARD ASSY	DIMM KP-854	FS-3800/N	-	-	1	1	SB-01042
04-001	5AAEZA38E++1	SWITCHING REGULATOR		Excl. "N"Model	X	X	-	1	
04-001	5AAEZA38U++1	SWITCHING REGULATOR			X	X	1	-	
04-001	5AAEZA38E++2	SWITCHING REGULATOR		"N"Model only	X	X	-	1	
04-002	5MMB886SD013	BOX CONTROLLER			-	-	1	1	
04-003	5MMB881SD001	LID CONTROLLER			-	-	1	1	
04-004	5MMB851SD005	PANEL REAR			-	-	1	1	
04-005	5MMX833LD001	ROD SW POWER			-	-	1	1	
04-006	5MVX875SB005	COVER PWB POWER			-	-	1	1	
04-007	5MVX433SH002	LEVER SW			-	X	1	1	
04-009	5MVX221RB014	FOOT			-	X	1	1	
04-010	5MVX732SL003	RAIL OPTION			-	-	1	1	
04-011	5MMT263SN012	SCREW OP			-	X	1	1	
04-012	5MMS636SD009	PLATE OPTION			-	-	1	1	
04-013	5AACCNRF8GEA	CONN.CORD ASSY			-	X	1	1	
04-014	5AACCN5D1GEA	CONN.CORD ASSY		FS-3800/N	-	-	1	1	
04-015	5AACCNRH5GEA	CONN.CORD ASSY			-	-	1	1	
04-016	5MVS622KF008	SHEET CONTROLLER			-	-	1	1	
04-017	5MVQ811RX014	EMI GASKET		FS-3800/N	-	-	1	1	

5 Paper Feed Unit

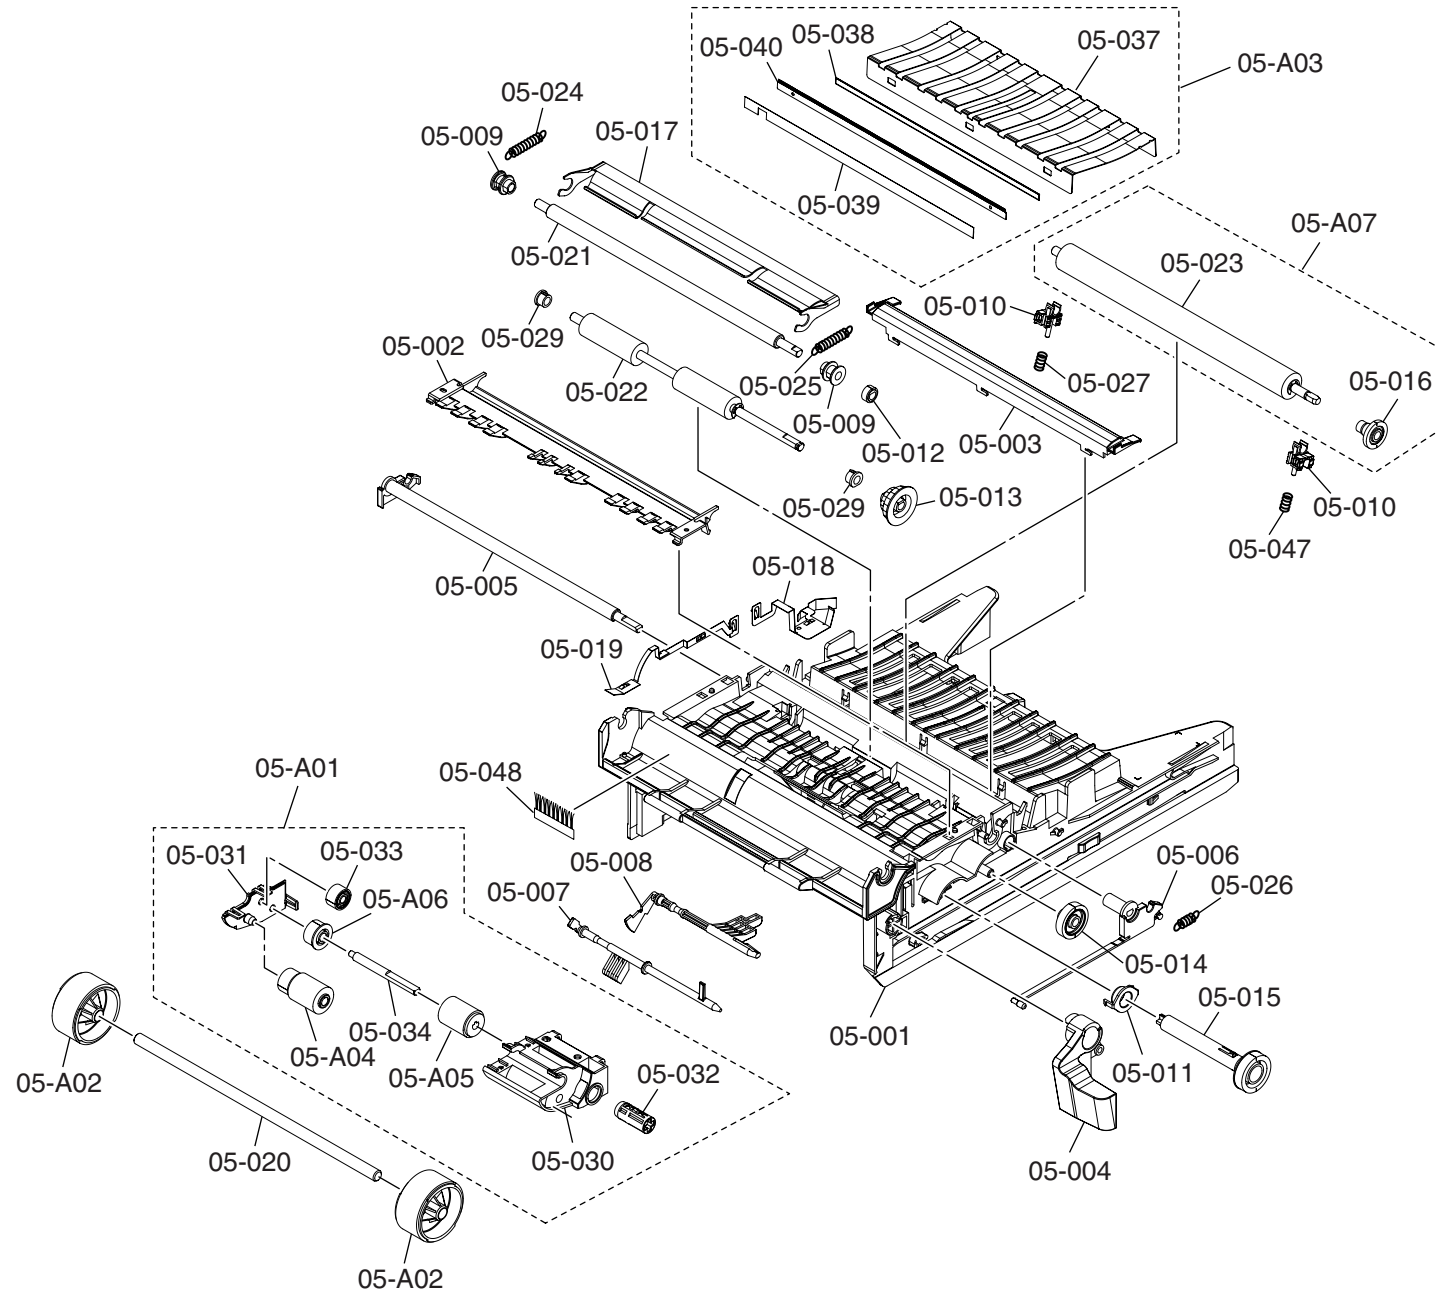


List 5 - Paper Feed Unit

Ref. No.	Part Code	Part Name	Description	Applicable Model	ISP	SP	120V	230V	SB No.
	5PLPX7APKX	FE-60 FEED TRANS UNIT		FS-1800/N	X	X	1	1	
	5PLPXAMAPKX	FE-61 FEED TRANS UNIT		FS-3800/N	X	X	1	1	SB-01010
	5PLPXDZAPKX	FE-62 FEED TRANS UNIT		FS-3800/N	X	X	1	1	SB-01010
05-A01	5AAYA37E++35	HOLDER FEED ASSY			X	X	1	1	
05-A02	5AAVROLL+049	ROLLER GUIDE ASSY			X	X	2	2	
05-A03	5AAYA37E++36	DISCHARGER ASSY			-	-	1	1	
05-A04	5AAVROLL+047	ROLLER FEED ASSY			-	X	1	1	
05-A05	5AAVROLL+048	ROLLER PICKUP ASSY			-	X	1	1	
05-A06	5AAVGEAR+037	GEAR PICKUP ASSY			-	X	1	1	
05-A07	5AAYA37E++46	ROLLER TRANSFER ASSY		FS-1800/N	X	X	1	1	
05-A07	5AAYA38E++24	ROLLER TRANSFER ASSY		FS-3800/N	X	X	1	1	SB-01010
05-A07	5AAYA38E++27	ROLLER TRANSFER ASSY		FS-3800/N	X	X	1	1	SB-01010
05-001	5MVB886SB009	BASE FEED			-	-	1	1	
05-002	5MVX862SB005	GUIDE PAPER			-	-	1	1	
05-003	5MVX832BB001	PAPER CHUTE			X	X	1	1	
05-004	5MVX666SH005	LEVER LOCK			-	X	1	1	
05-005	5MVX843CB004	SHAFT RELEASE			-	-	1	1	
05-006	5MVX733DN001	SHAFT LOCK R			-	-	1	1	
05-007	5MVX742SB008	SENSOR DOC			-	X	1	1	
05-008	5MVX663SB013	ACTUATOR PAPER			-	X	1	1	
05-009	5MVM221DB002	BUSH REGIST			-	X	2	2	
05-010	5MVX322DB019	BUSH TRANSFER			-	X	2	2	
05-011	5MVM222XN001	BUSH FEED			-	X	1	1	
05-012	5MVG126DN015	GEAR REGIST Z19S			-	X	1	1	
05-013	5MVG148DN060	GEAR REG Z22S-Z32S			-	X	1	1	
05-014	5MVG138DN045	GEAR IDLE Z23S			-	X	1	1	
05-015	5MVG038DN001	GEAR JOINT Z26S			-	X	1	1	
05-017	5MMX852LD003	PLATE GUIDE CHUTE			-	-	1	1	
05-018	5MMX633LD001	PLATE EARTH TC			-	-	1	1	
05-019	5MMX742LD002	PLATE EARTH MP			-	-	1	1	
05-020	5MMT860SN002	SHAFT ROLL GUIDE			-	-	1	1	
05-021	5MMT866SN032	ROLLER REGIST UP			-	-	1	1	
05-022	5MMT876SN076	ROLLER REGIST LOW			X	X	1	1	
05-024	5MMW341LD007	SPRING REGIST L			-	-	1	1	
05-025	5MMW341LD008	SPRING REGIST R			-	-	1	1	
05-026	5MMW251SD002	SPRING LOCK R			-	-	1	1	
05-027	5MMW241SX004	SPRING TRANS L			-	-	1	1	
05-029	5MVM176DN019	BUSH POM A			-	X	2	2	
05-030	5MVX664SH004	BRACKET FEED			-	-	1	1	

Ref. No.	Part Code	Part Name	Description	Applicable Model	ISP	SP	120V	230V	SB No.
05-031	5MVX642DH001	COVER BKT FEED			-	-	1	1	
05-032	5MVX376DN001	HOLDER RELEASE			-	X	1	1	
05-033	5MVG137DN036	GEAR FEED IDLE Z29S			-	-	1	1	
05-034	5MMT664SN002	SHAFT PICKUP			-	-	1	1	
05-047	5MMW241LX004	SPRING TRANS R			-	-	1	1	
05-048	5MVS711XF003	DISCHARGER FD			-	-	1	1	

6 Fuser Unit

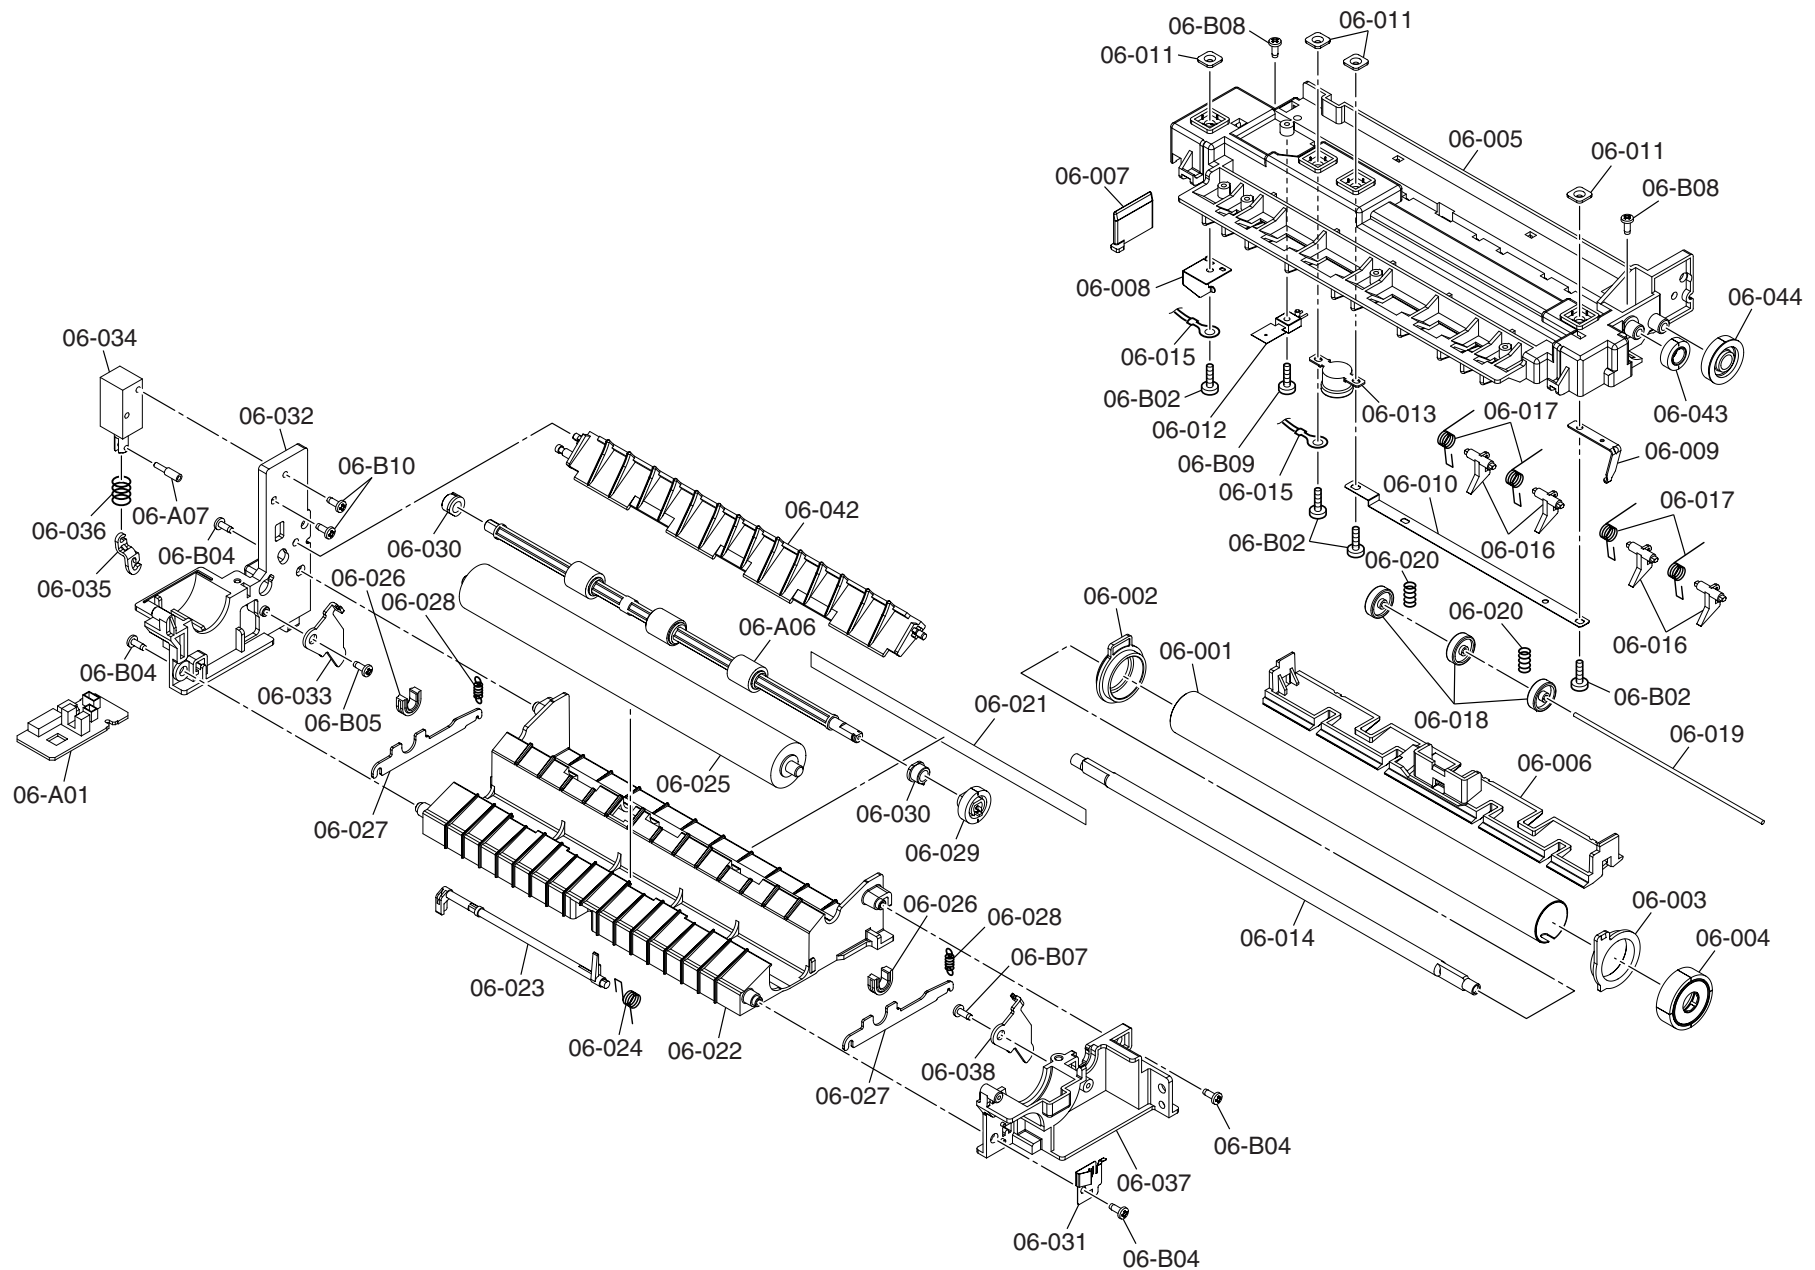


List 6 - Fuser Unit

Ref. No.	Part Code	Part Name	Description	Applicable Model	ISP	SP	120V	230V	SB No.
	5PLPX3APKX	FK-60(E) FUSER UNIT		FS-1800/N	X	X	-	1	
	5PLPX4APKX	FK-60(U) FUSER UNIT		FS-1800/N	X	X	1	-	
	5PLPXZ2APKX	FK-61(E) FUSER UNIT		FS-3800/N	X	X	-	1	
	5PLPXZ3APKX	FK-61(U) FUSER UNIT		FS-3800/N	X	X	1	-	
06-A01	5AAPRIFC1026AH	P.W.BOARD ASSY			-	X	1	1	
06-A06	5AAVROLL+046	ROLLER EXIT ASSY			-	X	1	1	
06-A07	5AAVSHAFT001	PIN ASSY			-	-	1	1	
06-001	5MMT888AX017	ROLLER HEAT		FS-1800/N	-	X	1	1	
06-001	5MMT888AX020	ROLLER HEAT		FS-3800/N	-	X	1	1	
06-002	5MVX441XN001	BUSH HEAT L		FS-1800/N	-	X	1	1	
06-002	5MVX541XN001	BUSH HEAT L		FS-3800/N	-	X	1	1	
06-003	5MVX441XN002	BUSH HEAT R		FS-1800/N	-	X	1	1	
06-003	5MVX541XN002	BUSH HEAT R		FS-3800/N	-	X	1	1	
06-004	5MVG148XN010	GEAR HEAT Z36		FS-1800/N	-	X	1	1	
06-004	5MVG158XN004	GEAR HEAT Z46		FS-3800/N	-	X	1	1	
06-005	5MVB875KB002	FRAME FUSER UP		FS-1800/N	-	X	1	1	
06-005	5MVB875KB003	FRAME FUSER UP		FS-3800/N	-	X	1	1	
06-006	5MVX833KB002	GUIDE EXIT UP		FS-1800/N	-	-	1	1	
06-006	5MVX833KB003	GUIDE EXIT UP		FS-3800/N	-	-	1	1	
06-007	5MVS331KB002	SUPPORT LAMP			-	-	1	1	
06-008	5MML232CD002	HOLDER LAMP L			-	-	1	1	
06-009	5MML143CD002	HOLDER LAMP R		FS-1800/N	-	-	1	1	
06-009	5MML143CD003	HOLDER LAMP R		FS-3800/N	-	-	1	1	
06-010	5MMS711LD002	PLATE CORD			-	-	1	1	
06-011	5MMS111SL001	NUT FUSER			-	-	4	4	
06-012	5AAXTM015GEA	THERMISTOR ASSY			X	X	1	1	
06-013	5EYFFQ17001++01	THERMOSTAT 250V170C		FS-1800/N	X	X	1	1	
06-013	5EYFFQ17501Q*01	THERMOSTAT 250V175C		FS-3800/N	X	X	1	1	
06-014	5EZPB2413320301	HEATER LAMP			X	X	-	1	
06-014	5EZPB1216720301	HEATER LAMP			X	X	1	-	
06-015	5AACCNRH2GEA	CONN.CORD ASSY		FS-1800/N	-	-	-	1	
06-015	5AACCNRH3GEA	CONN.CORD ASSY		FS-3800/N	-	-	1	-	
06-016	5MVX222XN002	SEPARATOR			-	X	4	4	
06-017	5MMW261LD015	SPRING SEPARATOR			-	-	4	4	
06-018	5MYM176DB018	PULLEY EXIT			-	X	3	3	
06-019	5MMT722SZ001	SHAFT EXIT			-	-	1	1	
06-020	5MMW261LD033	SPRING PULLEY A			-	-	2	2	
06-022	5MVX874KB002	FRAME FUSER LOW			-	-	1	1	
06-023	5MVX731CB003	ACTUATOR FUSER			-	-	1	1	

Ref. No.	Part Code	Part Name	Description	Applicable Model	ISP	SP	120V	230V	SB No.
06-024	5MMW261LD017	SPRING ACTUATOR			-	-	1	1	
06-025	5MMT886SN028	ROLLER PRESS			-	X	1	1	
06-026	5MVM166XN001	BUSHING PRESS			-	X	2	2	
06-027	5MMS621SL001	PLATE PRESS			-	-	2	2	
06-028	5MMW261SX010	SPRING PRESS			-	-	2	2	
06-029	5MVG137DN034	GEAR EXIT Z21			-	X	1	1	
06-030	5MVM176DN016	BUSH A			-	X	2	2	
06-031	5MMX221LD027	PLATE EARTH FU			-	-	1	1	
06-032	5MVX775KB001	FRAME FUSER L			-	-	1	1	
06-033	5MMX431SL001	PLATE RELEASE L			-	-	1	1	
06-034	5EZSA2401020307	SOLENOID TDS-KN07A			X	X	1	1	
06-035	5MVX311DB009	ACTUATOR SOL			-	-	1	1	
06-036	5MMW261LJ032	SPRING SOL			-	-	1	1	
06-037	5MVX755KB001	FRAME FUSER R			-	-	1	1	
06-038	5MMX431SL002	PLATE RELEASE R			-	-	1	1	
06-042	5MVX832SB012	GUIDE CHANGE			-	-	1	1	
06-043	5MVG127DN047	GEAR IDLE Z18			-	X	1	1	
06-044	5MVG138DN037	GEAR IDLE Z28			-	X	1	1	
06-B10	5MMT143SZ014	STUD SCREW M3			-	-	2	2	


7 Drum Unit

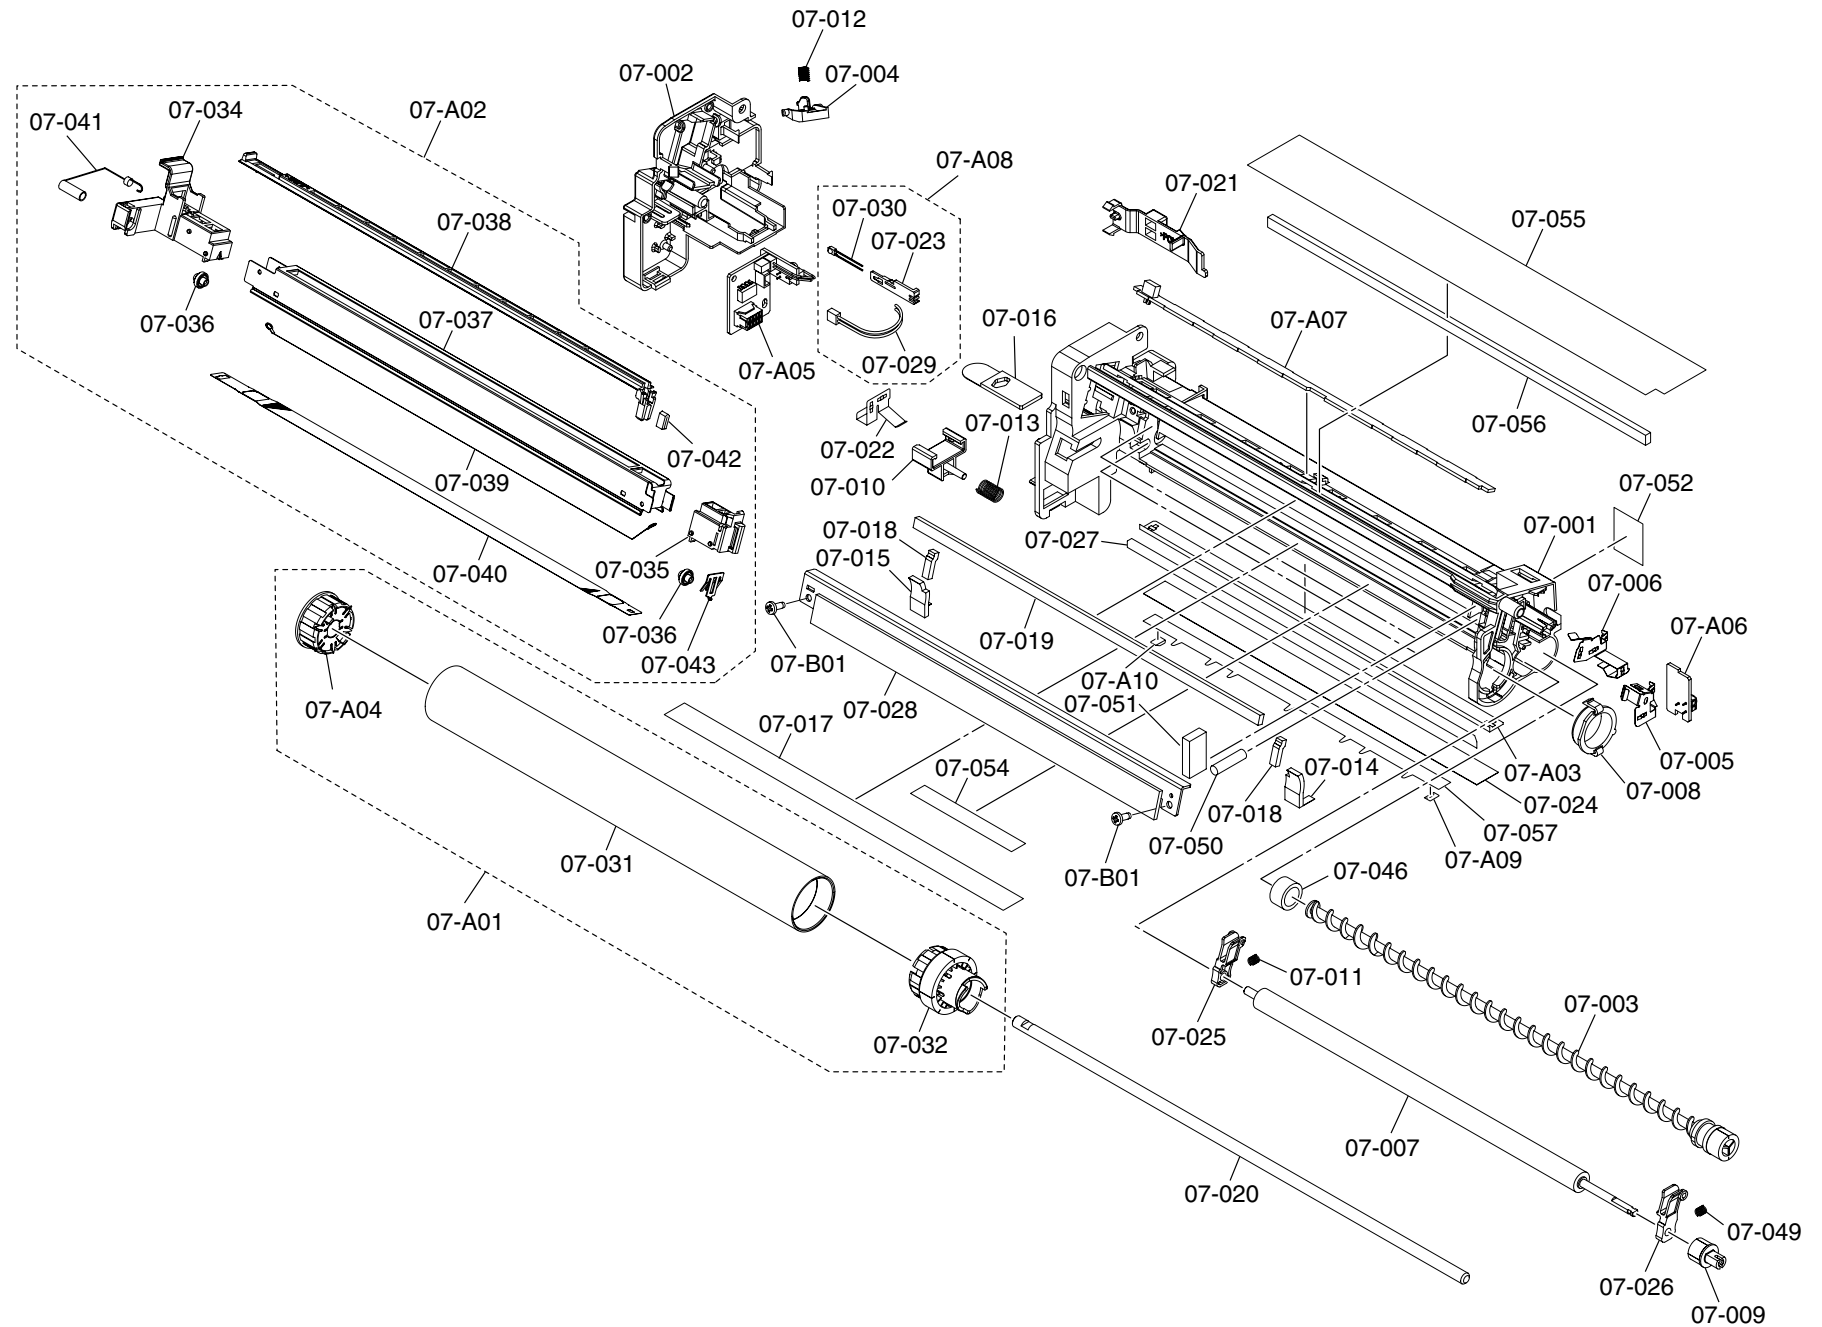

List 7 - Drum Unit

Ref. No.	Part Code	Part Name	Description	Applicable Model	ISP	SP	120V	230V	SB No.
	5PLPXY2APKX	DK-60	DRUM UNIT	FS-1800/N Excl.Taiwan	X	X	1	1	
	5PLPXFLA0LE	DK-60	DRUM UNIT	FS-1800/N Taiwan only	X	X	1	-	
	5PLPXZ8APKX	DK-61	DRUM UNIT	FS-3800/N Excl.Taiwan	X	X	1	1	
	5PLPXFPA0LE	DK-61	DRUM UNIT	FS-3800/N Taiwan only	X	X	1	-	
	5PLPXZ1APKX	MC-60	MCH ASSY		X	X	1	1	
07-A07	5AAPRELC1002AH	P.W.BOARD ASSY	ERASER KP-752		-	X	1	1	
07-A08	5AAYA37E++53	LED ASSY			-	X	1	1	
07-A09	5AAYA91J++15	SHEET SEPARATOR ASSY	Taiwan only		-	X	1	-	SB-01102
07-A10	5AAYA91J++16	PLATE SEPA R ASSY	Taiwan only		-	X	1	-	SB-01102
07-002	5MVB662CB002	COVER DRUM LEFT			-	-	1	1	
07-004	5MVX322DN004	LOCK MCH			-	-	1	1	
07-005	5MMX332LD011	PLATE ZENNER			-	-	1	1	
07-006	5MMX332LD012	PLATE EARTH ZENNER			-	-	1	1	
07-008	5MVM288XN002	BUSH DRUM RIGHT			-	X	1	1	
07-010	5MVX332DB020	SHUTTER WASTE			-	-	1	1	
07-012	5MMW141LD019	SPRING LOCK			-	-	1	1	
07-013	5MMW361LD017	SPRING SHUTTER			-	-	1	1	
07-020	5MMT865SN011	SHAFT DRUM			-	-	1	1	
07-021	5MVX622DH001	LOCK DRUM			-	-	1	1	
07-022	5MMX432LD007	PLATE EARTH LEFT			-	-	1	1	
07-028	5AAVBLADE036	BLADE ASSY			-	X	1	1	
07-055	5MVS841KB002	SHEET DRUM UP			-	-	1	1	
07-056	5MVS819RF006	SEAL SPACER DRUM			-	-	1	1	
07-057	5MVS721KN009	SHEET GUIDE DRUM	Taiwan only		-	X	1	-	


8 Developer Unit

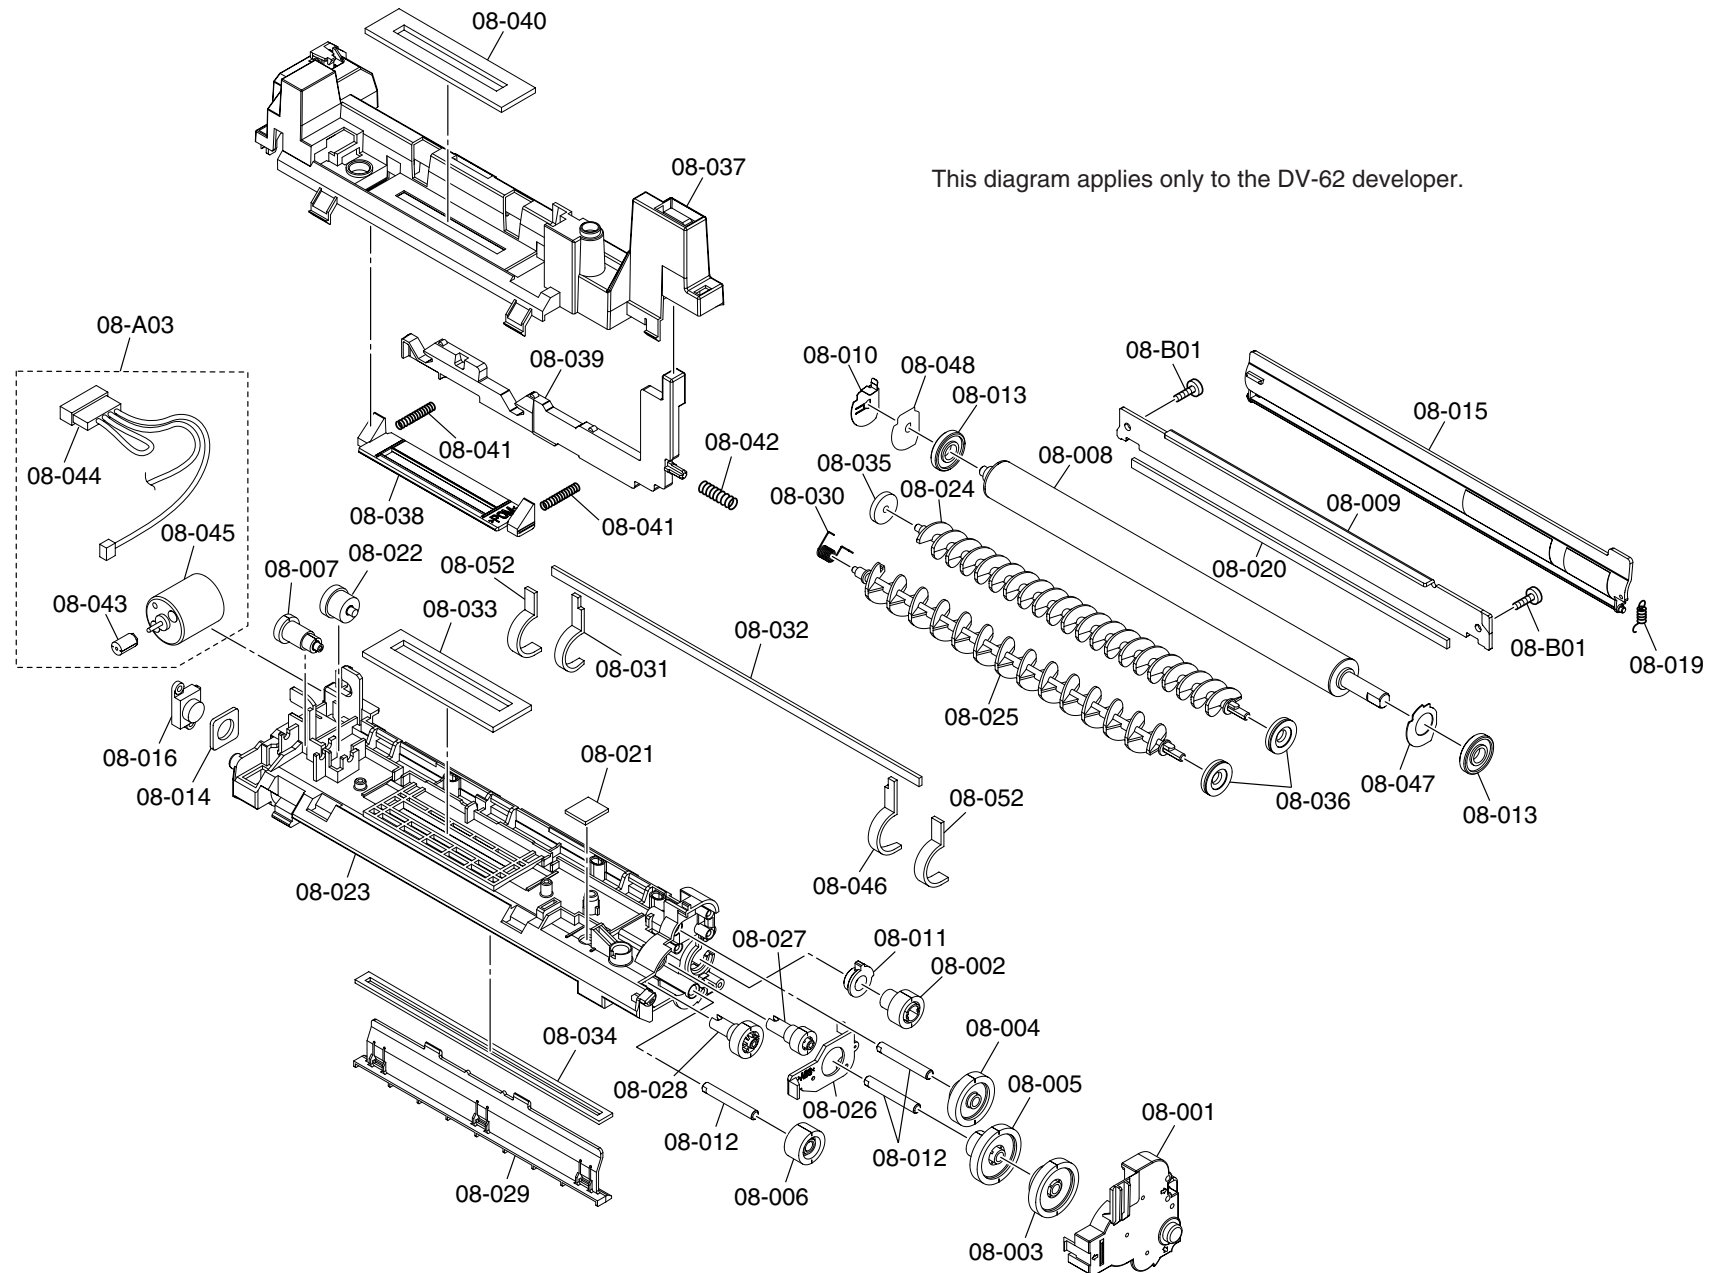

List 8 - Developer Unit

Ref. No.	Part Code	Part Name	Description	Applicable Model	ISP	SP	120V	230V	SB No.
	5PLPXCVPKX	DV-62 DEVELOPER UNIT			X	X	1	1	
08-A03	5AAYA37E++49	TONER MOTOR ASSY	DV-62		-	X	1	1	
08-001	5MVB663SB054	COVER DLP R	DV-62		-	-	1	1	
08-002	5MVG127DN072	GEAR MAG Z19H	DV-62		-	X	1	1	
08-003	5MVG148DN061	GEAR DLP Z15S-Z34H	DV-62		-	X	1	1	
08-004	5MVG138DN046	GEAR DLP Z14S-Z25S	DV-62		-	X	1	1	
08-005	5MVG148DN062	GEAR DLP Z15S-Z36S	DV-62		-	X	1	1	
08-006	5MVG127DN075	GEAR DLP Z20H	DV-62		-	X	1	1	
08-007	5MVG137DN037	GEAR TN MOTOR A	DV-62		-	-	1	1	
08-012	5MVT455XN001	PIN DLP	DV-62		-	X	3	3	
08-014	5MVS228MX001	SEAL TN SENSOR	DV-62		-	-	1	1	
08-015	5MVX842SB009	COVER MAG	DV-62		-	-	1	1	
08-016	5ENXTSP15A10+02	TONER SENSOR	DV-62		-	X	1	1	
08-019	5MMW141LJ007	SPRING COVER SLV	DV-62		-	-	1	1	
08-022	5MVG137DB056	GEAR IDLE Z30-Z15	DV-62		-	-	1	1	
08-037	5MVB866SB023	COVER DLP	DV-62		-	-	1	1	
08-038	5MVX732DB002	SHUTTER DLP	DV-62		-	-	1	1	
08-039	5MVX761DG001	LEVER DLP	DV-62		-	X	1	1	
08-040	5MVS638MF002	SEAL DLP SHUTTER A	DV-62		-	-	1	1	
08-041	5MMW355LD002	SPRING SHUTTER	DV-62		-	-	2	2	
08-042	5MMW466SD001	SPRING LEVER	DV-62		-	-	1	1	


9 Frame MP Assembly

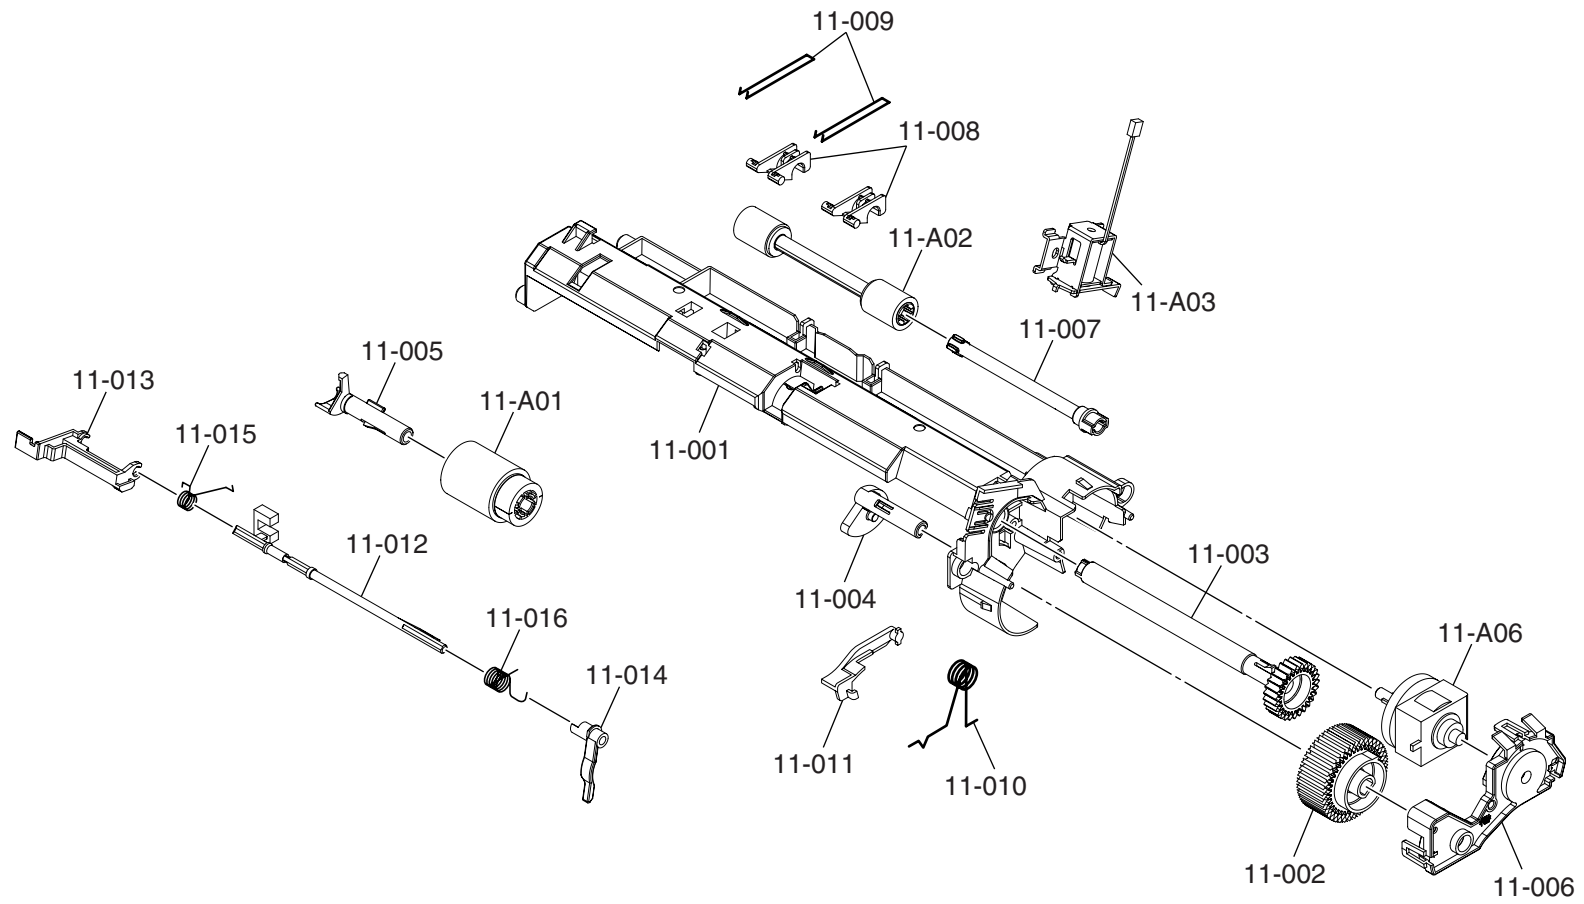

List 9 - Frame MP Assembly

Ref. No.	Part Code	Part Name	Description	Applicable Model	ISP	SP	120V	230V	SB No.
	5AAYA37E++03	FRAME M/P ASSY			X	X	1	1	
11-A01	5AAVROLL+051	ROLLER M/P ASSY			X	X	1	1	
11-A02	5AAVROLL+050	ROLL MID M/P ASSY			X	X	1	1	
11-A03	5EZSA2401310101	SOLENOID M/P ASSY			X	X	1	1	
11-A06	5EYYALAAK01++04	CLUTCH MID			X	X	1	1	
11-001	5MVX866CH001	FRAME M/P			-	-	1	1	
11-002	5MVG148DN063	GEAR M/P Z40			-	-	1	1	
11-003	5MVG133DN008	GEAR M/P Z27			-	X	1	1	
11-004	5MVX433DN002	CAM M/P			-	X	1	1	
11-005	5MVX422DN007	HOLDER FEED M/P			-	X	1	1	
11-006	5MVX662DN003	HOLDER CLUTCH M/P			-	-	1	1	
11-007	5MVT676CB003	SHAFT MID B			-	-	1	1	
11-008	5MVX321DN014	BUSH MID M/P			-	X	2	2	
11-009	5MMW601SD001	SPRING MID M/P			-	-	2	2	
11-010	5MMW161LD043	SPRING CAM M/P			-	-	1	1	
11-011	5MVX522DN004	LEVER CAM			-	X	1	1	
11-012	5MVT754SB001	ACTUATOR M/P A			-	-	1	1	
11-013	5MVX621SB010	ACTUATOR M/P B			-	-	1	1	
11-014	5MVX421SB021	ACTUATOR M/P C			-	X	1	1	
11-015	5MMW161SD010	SP ACTUATOR M/P B			-	-	1	1	
11-016	5MMW161SD009	SP ACTUATOR M/P C			-	-	1	1	


10 Paper Cassette

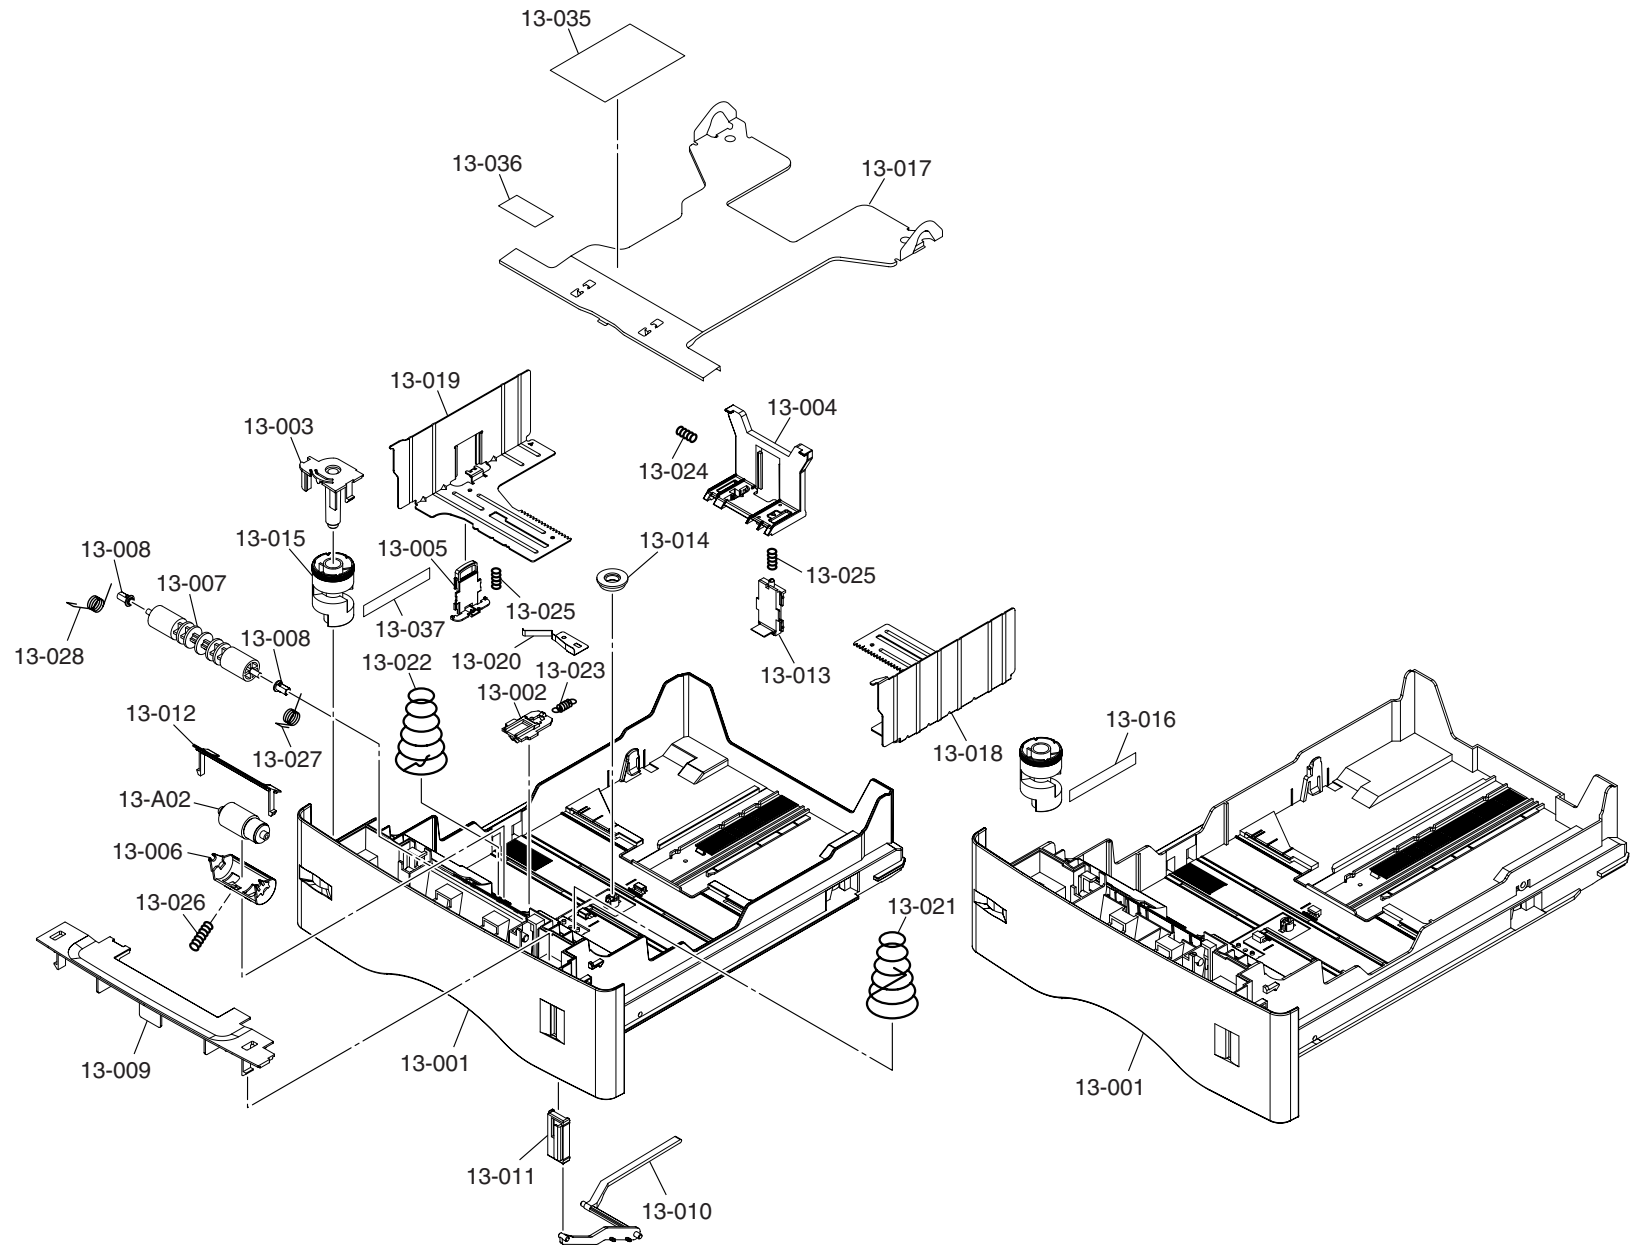

List 10 - Paper Cassette

Ref. No.	Part Code	Part Name	Description	Applicable Model	ISP	SP	120V	230V	SB No.
	5PLPX8APKX	PC-60A4 CASSETTE ASSY			X	X	-	1	
	5PLPXZ6APKX	PC-60LTR CASSETTE ASSY		Excl.Taiwan/Brazil	X	X	1	-	
	5PLPXDYAZTN	PC-60LG(A4) CASSETTE ASSY		Brazil only	X	X	1	-	
	5PLPXZ7APKX	PC-60LG(A4) CASSETTE ASSY			X	X	-	1	
	5PLPXCUPKX	PC-60LG(LTR) CASSETTE ASSY		Excl.Taiwan/Brazil	X	X	1	-	
	5PLPXDRAKX	PC-60A4 CASSETTE ASSY		Taiwan only	X	X	1	-	
	5PLPXDSAPKX	PC-60LG(A4) CASSETTE ASSY		Taiwan only	X	X	1	-	
13-A02	5AAVROLL+052	RETARD ROLL ASSY			-	X	1	1	
13-001	5MVB887SH027	BASE CASSETTE A4		PC-60	-	-	1	1	
13-001	5MVB987SH018	BASE CASSETTE LGL		PC-60LG	-	-	1	1	
13-002	5MVX432DN005	LOCK BOTTOM			-	X	1	1	
13-003	5MVX543DH002	HOLDER DIAL			-	-	1	1	
13-004	5MVX664DN001	END FENCE			-	-	1	1	
13-005	5MVX642DG001	LOCK LEVER SIDE			-	-	1	1	
13-006	5MVX644DN001	HOLDER RETARD			-	-	1	1	
13-007	5MVT774DN001	ROLLER FEED			-	X	1	1	
13-008	5MVM164DN007	BUSH4			-	X	2	2	
13-009	5MVX853SH003	COVER ROLLER			-	-	1	1	
13-010	5MVX764DN001	LEVER INDICATOR			-	X	1	1	
13-011	5MVX422SD002	INDICATER PAPER			-	-	1	1	
13-012	5MVX632SH005	GUIDE RETARD			-	-	1	1	
13-013	5MVX642DG002	LOCK LEVER END			-	-	1	1	
13-014	5MVG127DB046	GEAR CASSETTE			-	-	1	1	
13-015	5MVM586SH001	DIAL CASSETTE			-	-	1	1	
13-016	5MVVL171WN03	LABEL SIZE LGL		PC-60LG	-	-	1	1	
13-017	5MMX883SD004	PLATE BOTTOM			-	-	1	1	
13-018	5MML877SN001	PLATE SIDE R			-	-	1	1	
13-019	5MML877SN002	PLATE SIDE L			-	-	1	1	
13-020	5MMX653LD004	EARTH PLATE			-	-	1	1	
13-021	5MMW682LD004	SPRING BOTTOM		Excl.Taiwan	-	-	1	1	
13-021	5MMW682LD006	SPRING BOTTOM		Taiwan only	-	-	1	-	
13-022	5MMW682LD005	SPRING BOTTOM EARTH		Excl.Taiwan	-	-	1	1	
13-022	5MMW682LD007	SPRING BOTTOM EARTH		Taiwan only	-	-	1	-	
13-023	5MMW251LD048	SP STOPPER BOTTOM			-	-	1	1	
13-024	5MMW151SD003	SPRING END			-	-	1	1	
13-025	5MMW166LD010	SPRING LOCK GUIDE			-	-	2	2	
13-026	5MMW151LD004	SPRING RETARD			-	-	1	1	
13-027	5MMW161LD044	SPRING FEED R			-	-	1	1	
13-028	5MMW161LD045	SPRING FEED L			-	-	1	1	

11 Tray MP Assembly

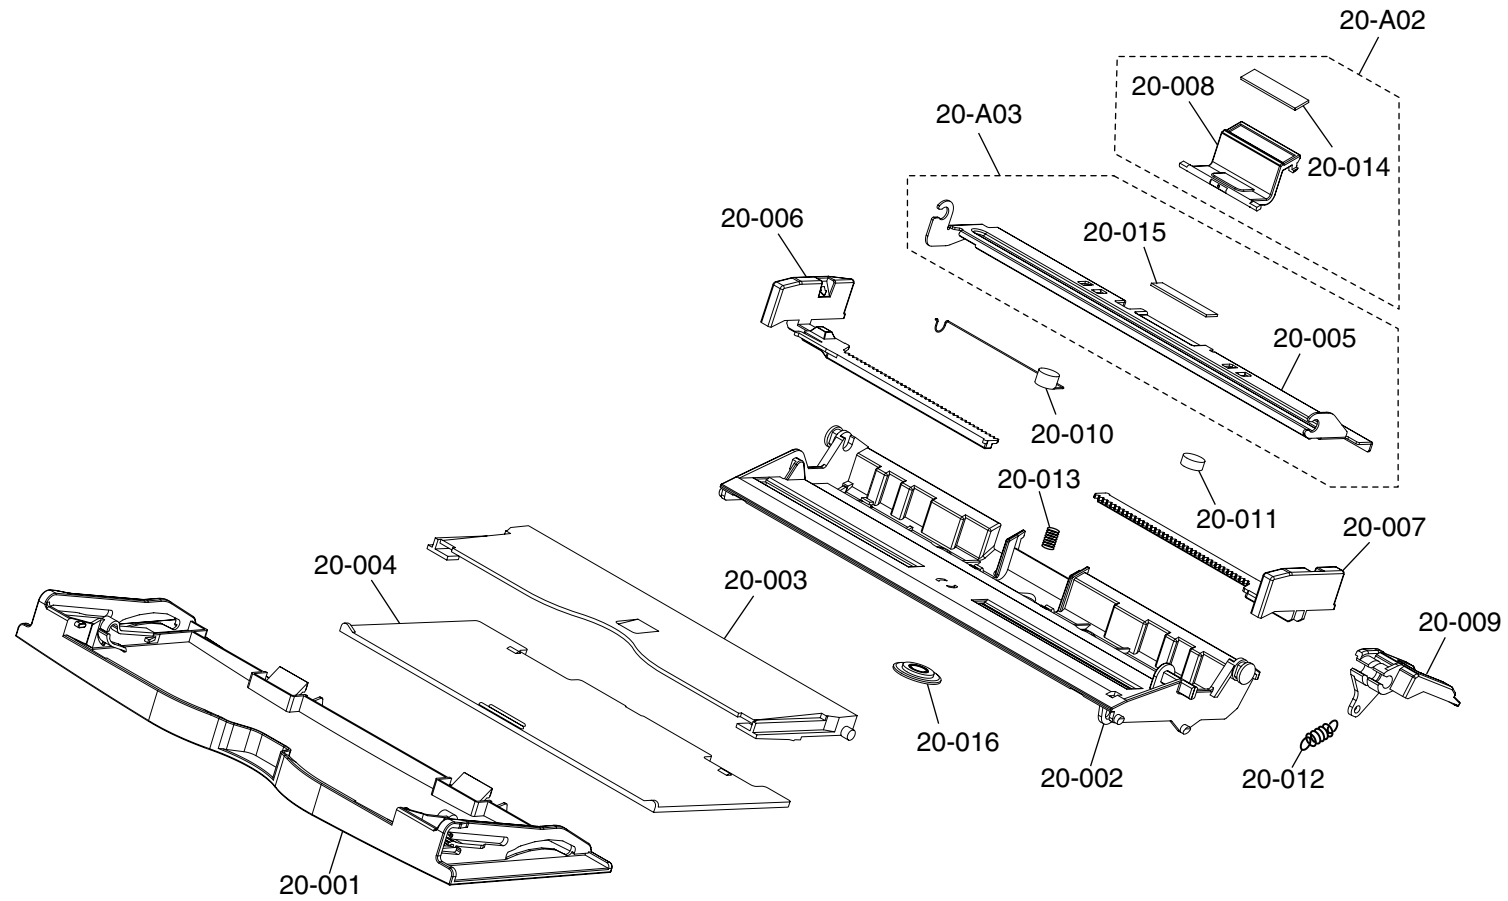

List 11 - Tray MP Assembly

Ref. No.	Part Code	Part Name	Description	Applicable Model	ISP	SP	120V	230V	SB No.
20-A01	5PLPXCHAPKX	TRAY M/P ASSY	FS-1800	X	X	-	1		
20-A01	5PLPXCJAAK1	TRAY M/P ASSY	FS-1800	X	X	1	-		
20-A01	5PLPXCMAPKX	TRAY M/P ASSY	FS-3800	X	X	-	1		
20-A01	5PLPXCNAAK1	TRAY M/P ASSY	FS-3800	X	X	1	-		
20-A01	5PLPXCAPKX	TRAY M/P ASSY	FS-1800N	X	X	-	1		
20-A01	5PLPXCCLAAK1	TRAY M/P ASSY	FS-1800N	X	X	1	-		
20-A01	5PLPXCAPKX	TRAY M/P ASSY	FS-3800N	X	X	-	1		
20-A01	5PLPXCQAAK1	TRAY M/P ASSY	FS-3800N	X	X	1	-		
20-A02	5AAVCASET248	SEPARATOR M/P ASSY		-	X	1	1		
20-A03	5AAVCASET249	BOTTOM MALTI PAD ASY		-	X	1	1		
20-001	5MVB873SH028	COVER M/P	FS-1800	-	X	-	1		
20-001	5MVB873SH030	COVER M/P	FS-1800	-	X	1	-		
20-001	5MVB873SH031	COVER M/P	FS-3800	-	X	-	1		
20-001	5MVB873SH032	COVER M/P	FS-3800	-	X	1	-		
20-001	5MVB873SH033	COVER M/P	FS-1800N	-	X	-	1		
20-001	5MVB873SH034	COVER M/P	FS-1800N	-	X	1	-		
20-001	5MVB873SH035	COVER M/P	FS-3800N	-	X	-	1		
20-001	5MVB873SH036	COVER M/P	FS-3800N	-	X	1	-		
20-002	5MVB864SH009	BASE M/P		-	X	1	1		
20-003	5MVB862SH016	TRAY M/P MID		-	X	1	1		
20-004	5MVS768SH007	TRAY M/P TOP		-	-	1	1		
20-006	5MVL673DH001	GUIDE M/P L		-	-	1	1		
20-007	5MVL673DH002	GUIDE M/P R		-	-	1	1		
20-009	5MVX533DN002	BRACKET BOTTOM		-	-	1	1		
20-010	5MMW461SD003	SP BOTTOM M/P L		-	-	1	1		
20-011	5MMW461SD004	SP BOTTOM M/P R		-	-	1	1		
20-012	5MMW261SM001	SPRING LOCK M/P		-	-	1	1		
20-013	5MMW261LD039	SPRING SEPARATOR		-	-	1	1		
20-016	5MVG127DH001	GEAR MANUAL		-	-	1	1		

12. Miscellaneous

Miscellaneous

Ref. No.	Part Code	Part Name	Description	Applicable Model	ISP	SP	120V	230V	SB No.
P-001	5AAKA37E++02	PACKING ASSY		FS-1800	-	X	-	1	
P-001	5AAKA37U++01	PACKING ASSY		FS-1800	-	X	1	-	
P-001	5AAKA38E++01	PACKING ASSY		FS-3800	-	X	-	1	
P-001	5AAKA38U++01	PACKING ASSY		FS-3800	-	X	1	-	
P-001	5AAKA37NE+02	PACKING ASSY		FS-1800N	-	X	-	1	
P-001	5AAKA37NU+02	PACKING ASSY		FS-1800N	-	X	1	-	
P-001	5AAKA38NE+01	PACKING ASSY		FS-3800N	-	X	-	1	
P-001	5AAKA38NU+01	PACKING ASSY		FS-3800N	-	X	1	-	
P-002	5KKA37E++01	OUTER CARTON		FS-1800	X	-	-	1	
P-002	5KKA37U++01	OUTER CARTON		FS-1800	X	-	1	-	
P-002	5KKA38E++01	OUTER CARTON		FS-3800	X	-	-	1	
P-002	5KKA38U++01	OUTER CARTON		FS-3800	X	-	1	-	
P-002	5KKA37NE+01	OUTER CARTON		FS-1800N	X	-	-	1	
P-002	5KKA37NU+01	OUTER CARTON		FS-1800N	X	-	1	-	
P-002	5KKA38NE+01	OUTER CARTON		FS-3800N	X	-	-	1	
P-002	5KKA38NU+01	OUTER CARTON		FS-3800N	X	-	1	-	
	5PLPX9APKX	TB-60 BOTTLE ASSY			X	X	1	1	