



IMPRIMANTE LASER

FS-850



NOMENCLATURE

16-12-1998

FS-850 Pièces détachées

Table des matières

Capots (Fig.1)	3
Unité supérieure (Fig.2).....	5
Unité inférieure (Fig.3)	7
Contrôleur (Fig.4).....	10
Mécanique (Fig.5)	12
Unité de fusion (Fig.6).....	14
Connexion (Fig.7).....	16
Cassette inférieure (option) (Fig.8).....	18

Introduction

Les figures qui suivent représentent l'assemblage de l'imprimante ou des options, par sous-ensembles.


Les informations suivantes sont indiquées après chaque pièce :

N°	N° de la pièce dans l'éclaté
Référence.....	Référence de la pièce
Description	Description de la pièce (en anglais)

Seules les pièces en caractères GRAS peuvent être commandées.


Toutes les autres pièces sont mentionnées à titre indicatif et ne sont pas disponibles.

Fig.1 – Capots

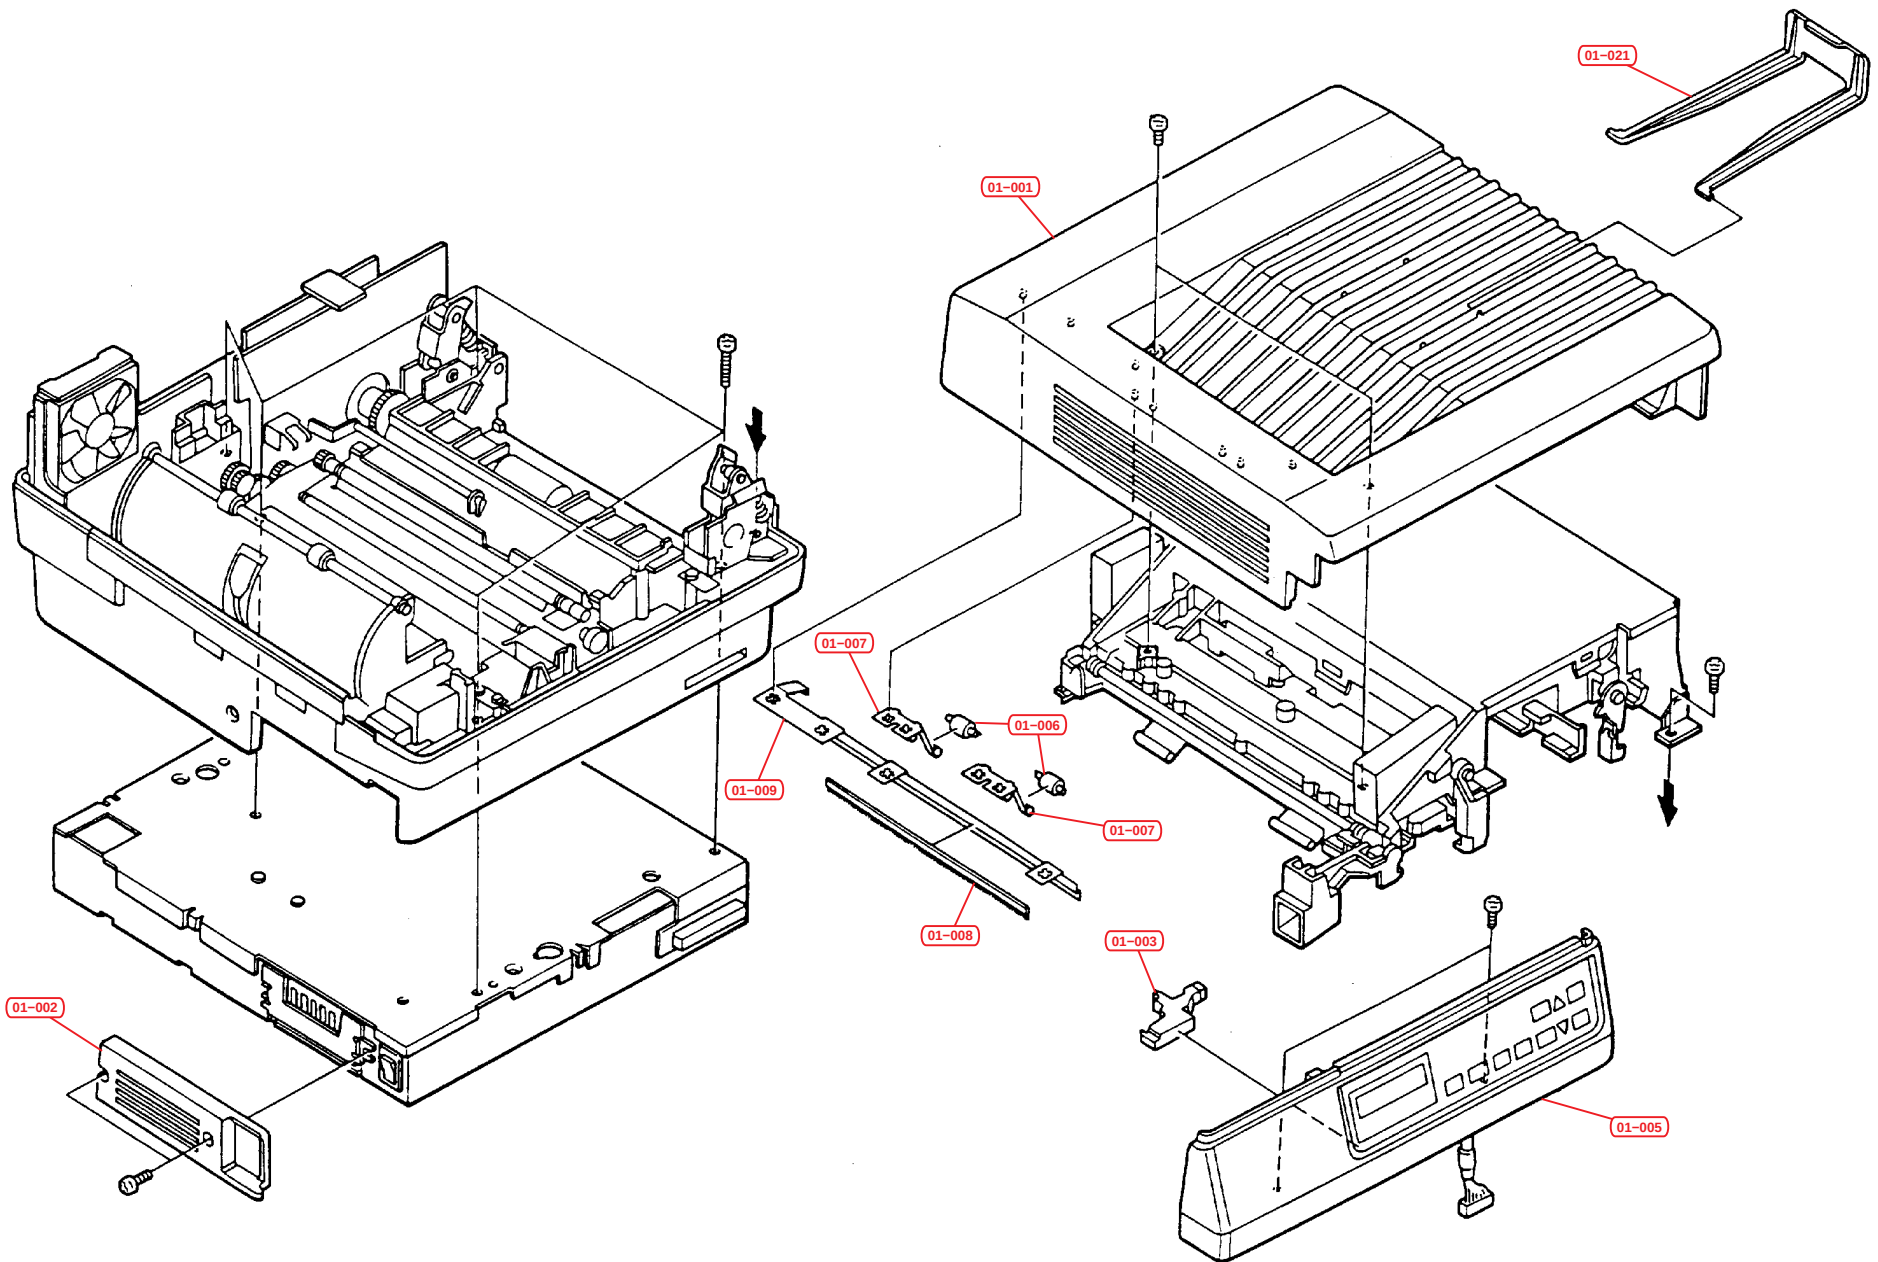


N°	Référence	Description
01-001	AYF820**58	COVER TOP SUB
01-002	VB753SH002	COVER SIDE
01-003	AVCLEAN028	CLEANING STICK
01-005	AFZFS850*1	KEYBOARD ASSY FS-850
01-006	VM374DB001	FD PULLEY
01-007	ML443LD001	ROLLER SUPPORT SP
01-008	VS827AQ001	ELEC OUT BRUSH
01-009	ML833RJ001	ELEC PLATE 2
01-021	MW904LJ002	PAPER STOPPER

Fig.2 – Unité supérieure

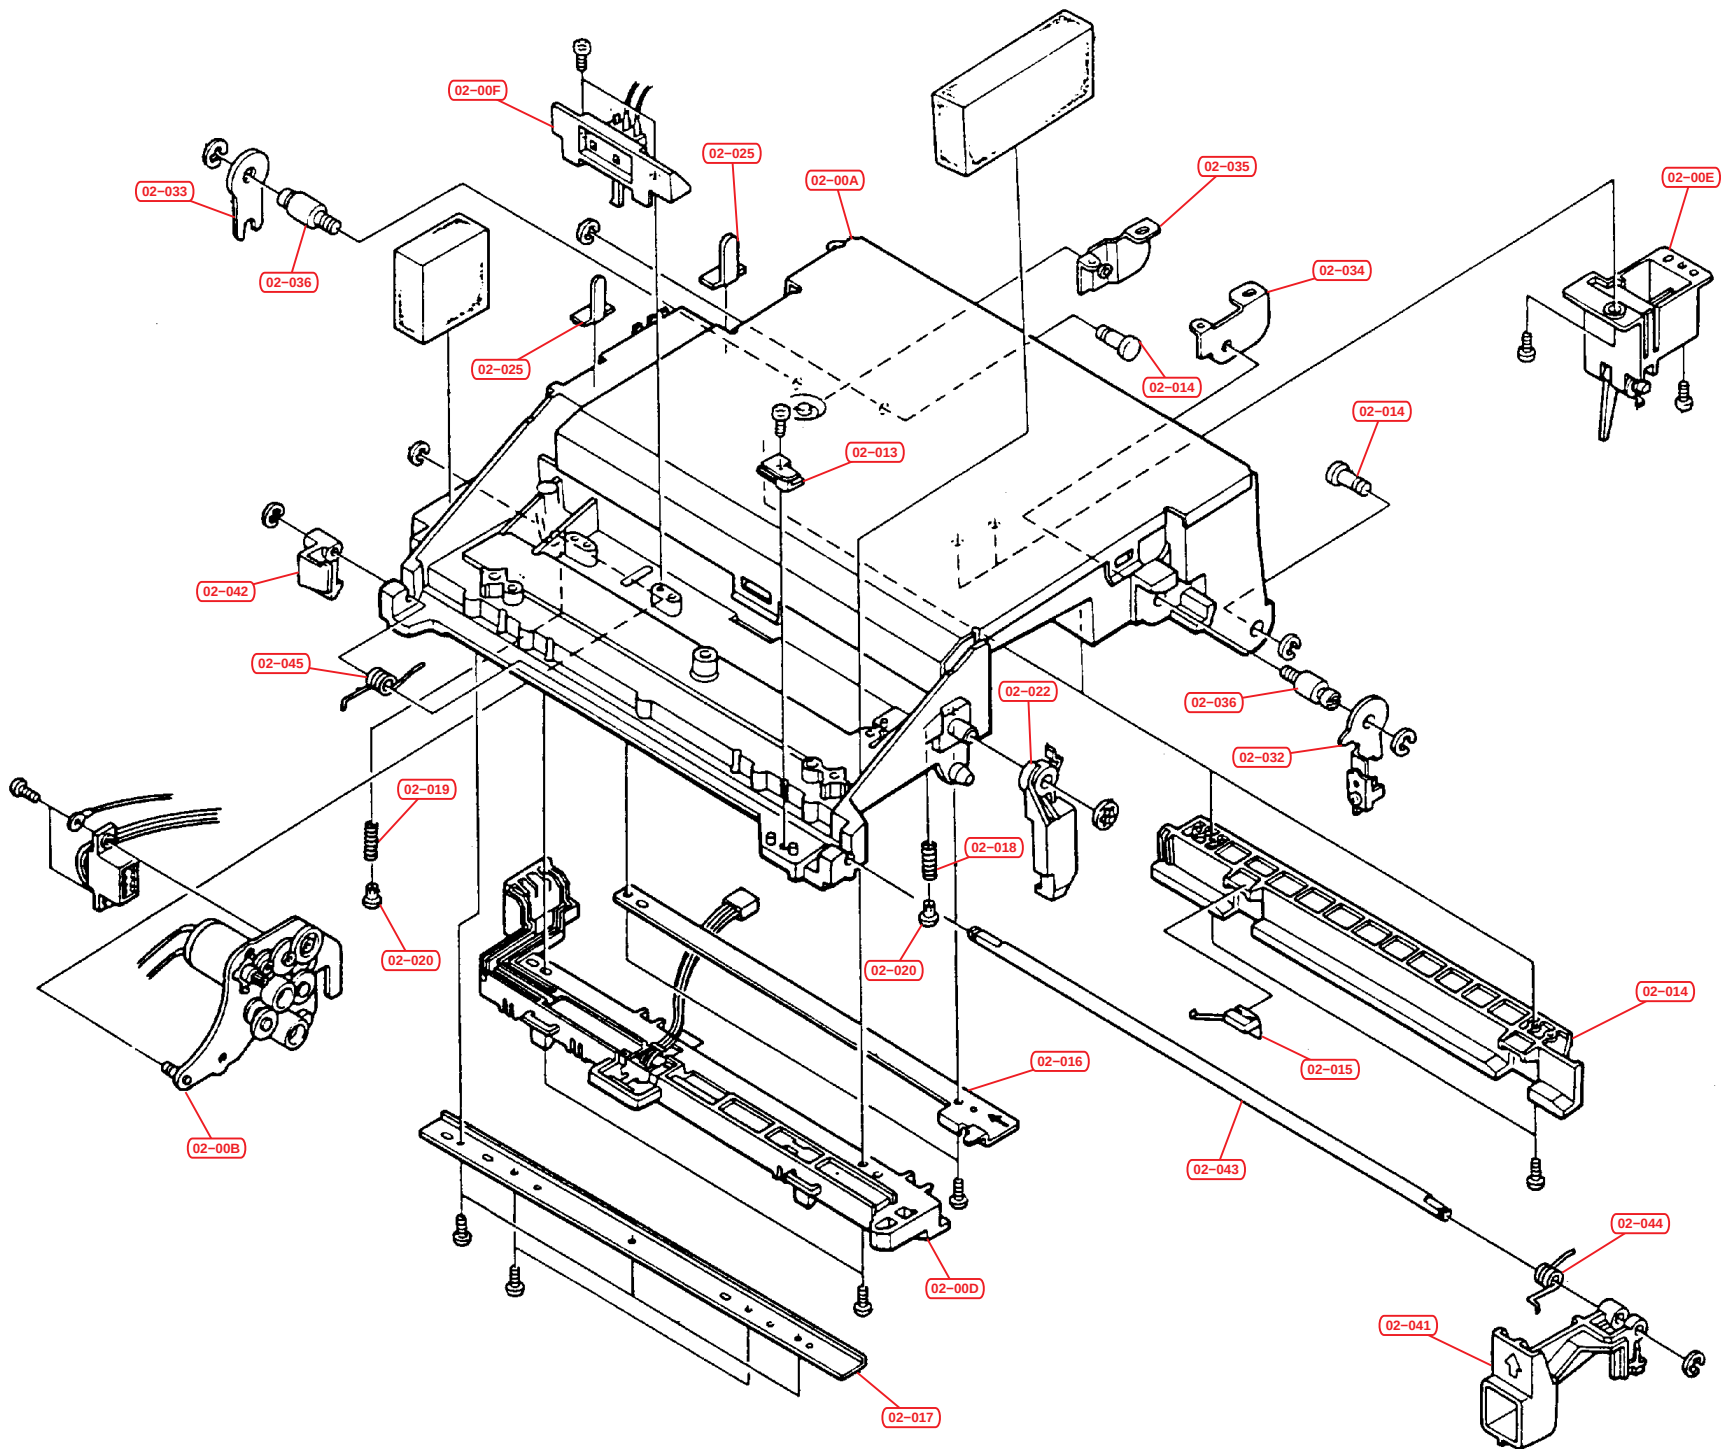

N°	Référence	Description
02-00A	AYFS850*23	SCANNER UNIT 240V
02-00B	AYFS850*11	DEVE DRIVE ASSY
02-00D	AYFS850*22	ERASER ASSY
02-00E	AYF820**18	PAPER SENSOR ASSY
02-00F	AYF820**19	BKT SWITCH ASSY
02-013	MZ321SL003	EJECT STOPPER
02-014	VX833SG001-01	DEVE GUIDE A
02-015	MX522LD003	GUIDE SPRING
02-016	MX831SL001	DEVE GUIDE B
02-017	VL821SB002	DRUM RAIL
02-018	MW361LJ019	DRUM SPRING F
02-019	MW361LJ020	DRUM SPRING R
02-020	VF166SB002	SPRING FOOT
02-022	VX622DG001	SAFETY LEVER
02-025	MX332SM001	CORD KEEP
02-032	ML363SL002	B-S ANGLE (FU)
02-033	MS531SL003	B-S ANGLE (RU)
02-034	ML532SL002	SCN ANGLE (F)
02-035	ML532SL003	SCN ANGLE (R)
02-036	MT476LD003	SCN SHAFT
02-041	VX664SD001	LEVER EJECT F
02-042	VX321SJ001	EJECT LEVER R
02-043	MT865SD001	EJECT STAY
02-044	MW262LJ004	EJECT SPRING
02-045	MW267LJ001	EJECT SPRING


Fig.3 – Unité inférieure

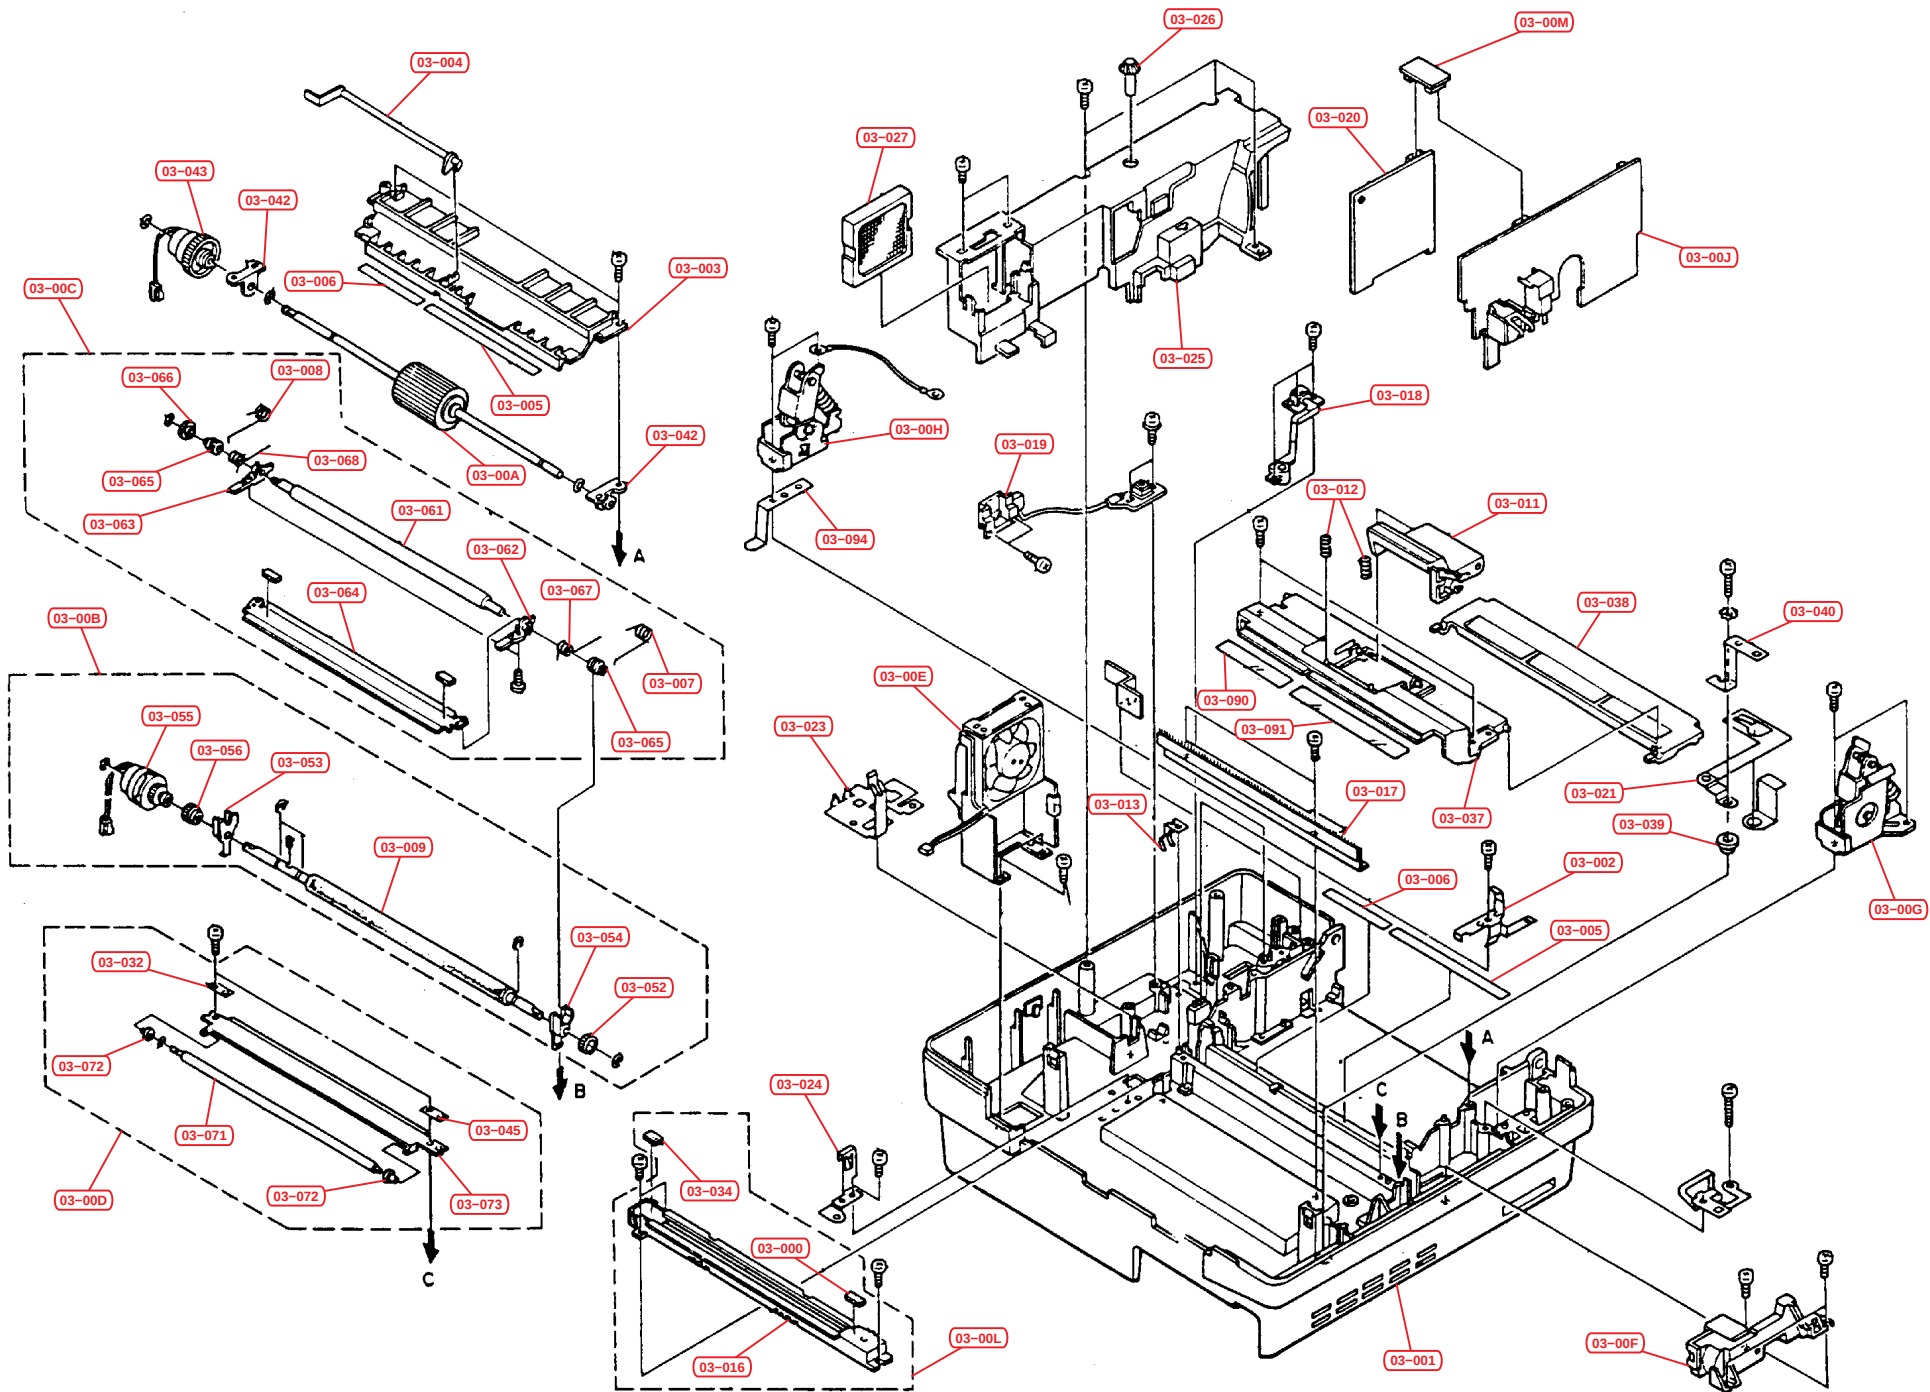

N°	Référence	Description
03-00A	AYF800**93	FEED ASSY (SHAFT+TYRE)
03-00B	AYF800**94	REGIST ASSY
03-00C	AYF800**D6	PAPER CHUTE T ASSY
03-00D	AYF820**56	PAPER CHUTE B ASSY
03-00E	AYF820**41	FAN ASSY
03-00F	AYFS850*25	COUNTER GEAR ASSY
03-00G	AYF800**37	B-S BKT ASSY (F)
03-00H	AYF800**38	B-S BKT ASSY (R)
03-00J	APRCZG2010AH	Engine PWB ASSY
03-00L	AYF820**63	SVC TC ASSY
03-00M	APRZZG2005AH	Connect PWB ASSY
03-001	AVBASE*010	BASE ASSY
03-002	MX552RD002	PLATE CLUTCH EARTH
03-003	VX864SH003-01	GUIDE ENTRANCE
03-004	VX744SB001	ACTUATOR FEED
03-005	VS613KJ001	GUIDE FILM A
03-006	VS713KJ001	GUIDE FILM B
03-007	MW167W005	SPRING REGIST F
03-008	MW167LJ006	SPRING REGIST R
03-009	AYF820**65	REGIST. ROLLER B SUB*
03-011	AVSEPR006	SEPARATOR ASSY
03-012	MW365W001	PAPER SEPARATOR SP
03-013	M1222RD002	EARTH CONTACT
03-016	AYF820**62	TC ASS'Y
03-017	AVPLATE020	DISCHARGER ASSY
03-018	VX773XH001	TC RECEPTACLE
03-019	VX853XH001	MCH CONNECT
03-020	AYL580**34	TRANS ASSY
03-021	MS663RD001	FRONT EARTH PLATE
03-023	ML665RD001	PLATE DRUM EARTH
03-024	ML422RN001	DRIVE EARTH
03-025	VB877SB001	INNER COVER
03-026	VN331SX001	DENS CONT KNOB
03-027	VX662SB013	OZONE FILTER
03-029	ML632RD001	B-S EARTH 1
03-032	VS321KJ004	P SIDE SEAL R
03-034	VS617RJ001	P SPONGE L
03-037	VB874SH007	BASE SEPARATOR
03-038	VB861SH001	BOTTOM PAN
03-039	MM122SD001	SPACER BC
03-040	MZ253RD001	EARTH KEY
03-042	VX422DX001	FEED BEARING
03-043	AYF800**E0	FEED CLUTCH ASSY (W/FILM)
03-044	VQ553RB001	SPONGE FRONT
03-045	VS321KJ004	P SIDE SEAL

N°	Référence	Description
03-052	VG137DB009	COUNT GEAR Z28
03-053	VX421DX002	REGIST. BEARING R
03-054	VX421DX001	REGIST. BEARING F
03-055	AYF800**D9	REGIST. CLUTCH ASSY (W/FILM)
03-056	VG127DB014	REGIST. GEAR
03-061	MT876SN023	REGIST. ROLLER
03-062	VX511DB001	REGIST. ARM F
03-063	VX511DB002	REGIST. ARM R
03-064	ML831LD002	PAPER CHUTE T
03-065	VX211DX001	REGIST. BEARING
03-066	VG127DB013	REGIST. GEAR T
03-067	MW176LJ004	ARM SPRING F
03-068	MW176W005	ARM SPRING R
03-071	MT863LD001	PAPER ROLLER
03-072	MF154CJ001	ROLLER BUSHING
03-073	MC183LD001	REGIST. P. CHUTE B
03-090	VS632KJ001	BASE SEPA. FILM A
03-091	VS732KJ001	BASE SEPA. FILM B
03-094	ML264RD001	B-S EARTH J

Fig.4 – Contrôleur

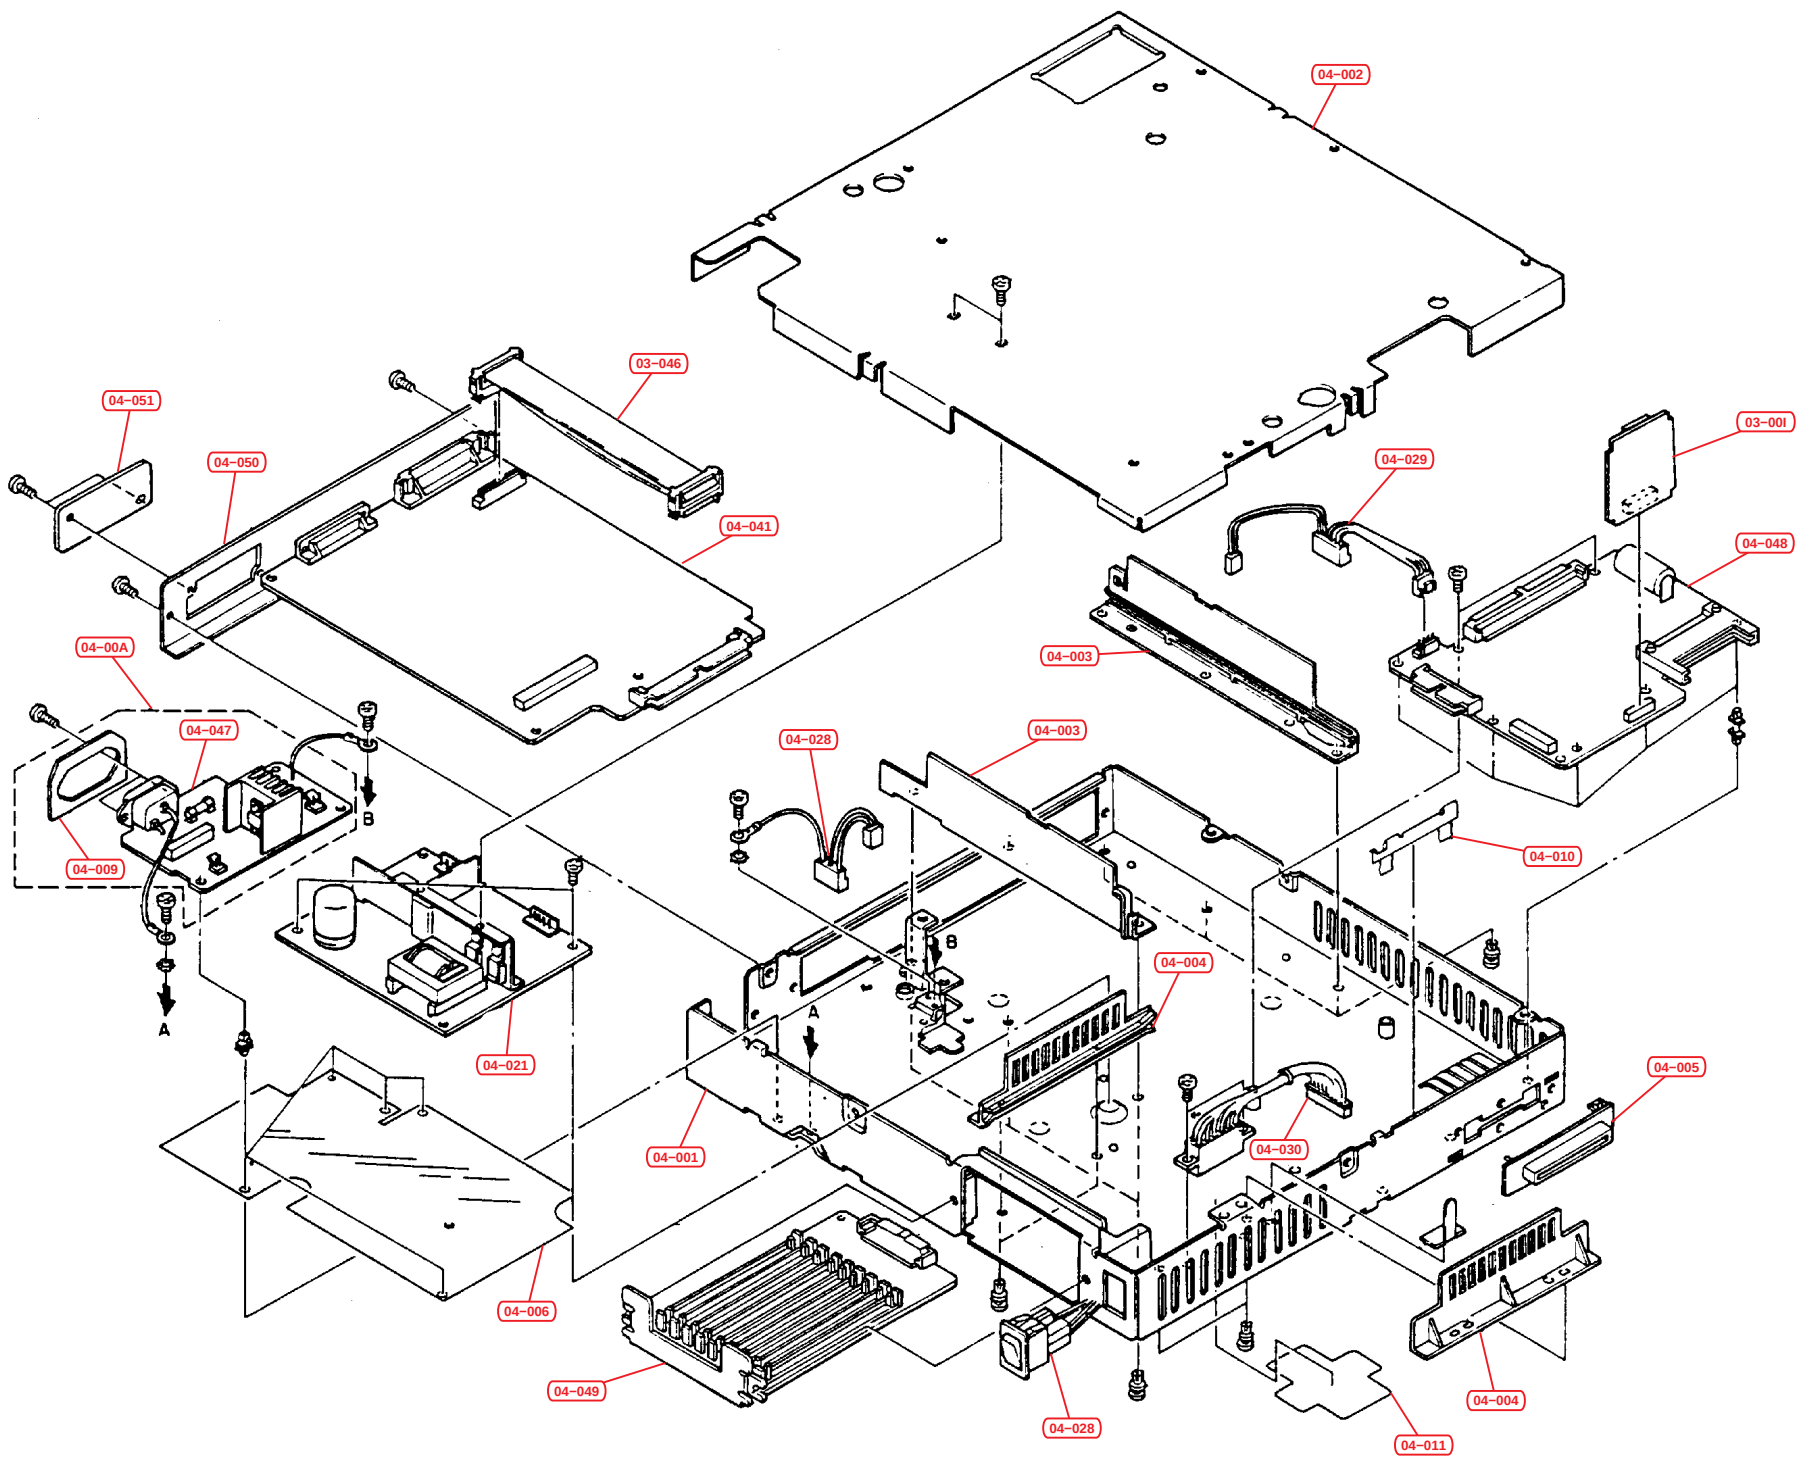

N°	Référence	Description
03-00I	APRZZG2007AH	Keyboard Conn PWB ASSY
03-046	ACCNHK7GEA	CONN CORD S00467
04-00A	AYFS850*26	INLET ASSY 240V
04-001	VCHASS016	CONTROLLER BOX ASSY
04-002	MN882SL004	COVER CONT BOX
04-003	VL722SL002	GUIDE MAIN PWB
04-004	VL722SL001	GUIDE RAM PWB
04-005	VK361SH001	GUIDE J CARD
04-006	VS875VN002	INSULATOR PWB
04-008	MS646SL004	PLATE CONNECT
04-009	VS645VH001	SHEET INLET
04-010	MX431RD005	SPRING PWB
04-011	VS663VB003	COVER CONNECTOR
04-021	AEZF820**1	SWITCHING REGULATOR 240V
04-026	SC020106***02	SEE-SAW SW UL VDE S
04-027	ACCNHE7GEA	CONN CORD S00455
04-028	ACCNHK8GEA	CONN CORD ASSY
04-029	ACCNHE6GEA	CONN CORD ASSY
04-030	ACCNHD6GEA	CONN CORD ASSY
04-041	APRLGG4011AH	PWB ASSY KP-166 240V
04-047	APRZC1027AH	INLET PWB ASSY 240V
04-048	APRIFG2007AH	Interface PWB ASSY
04-049	APRMEG4015BH	PWB ASSY OPT RAM
04-050	ML851SL001	PANEL REAR
04-051	MS646SL004	PANEL REAR


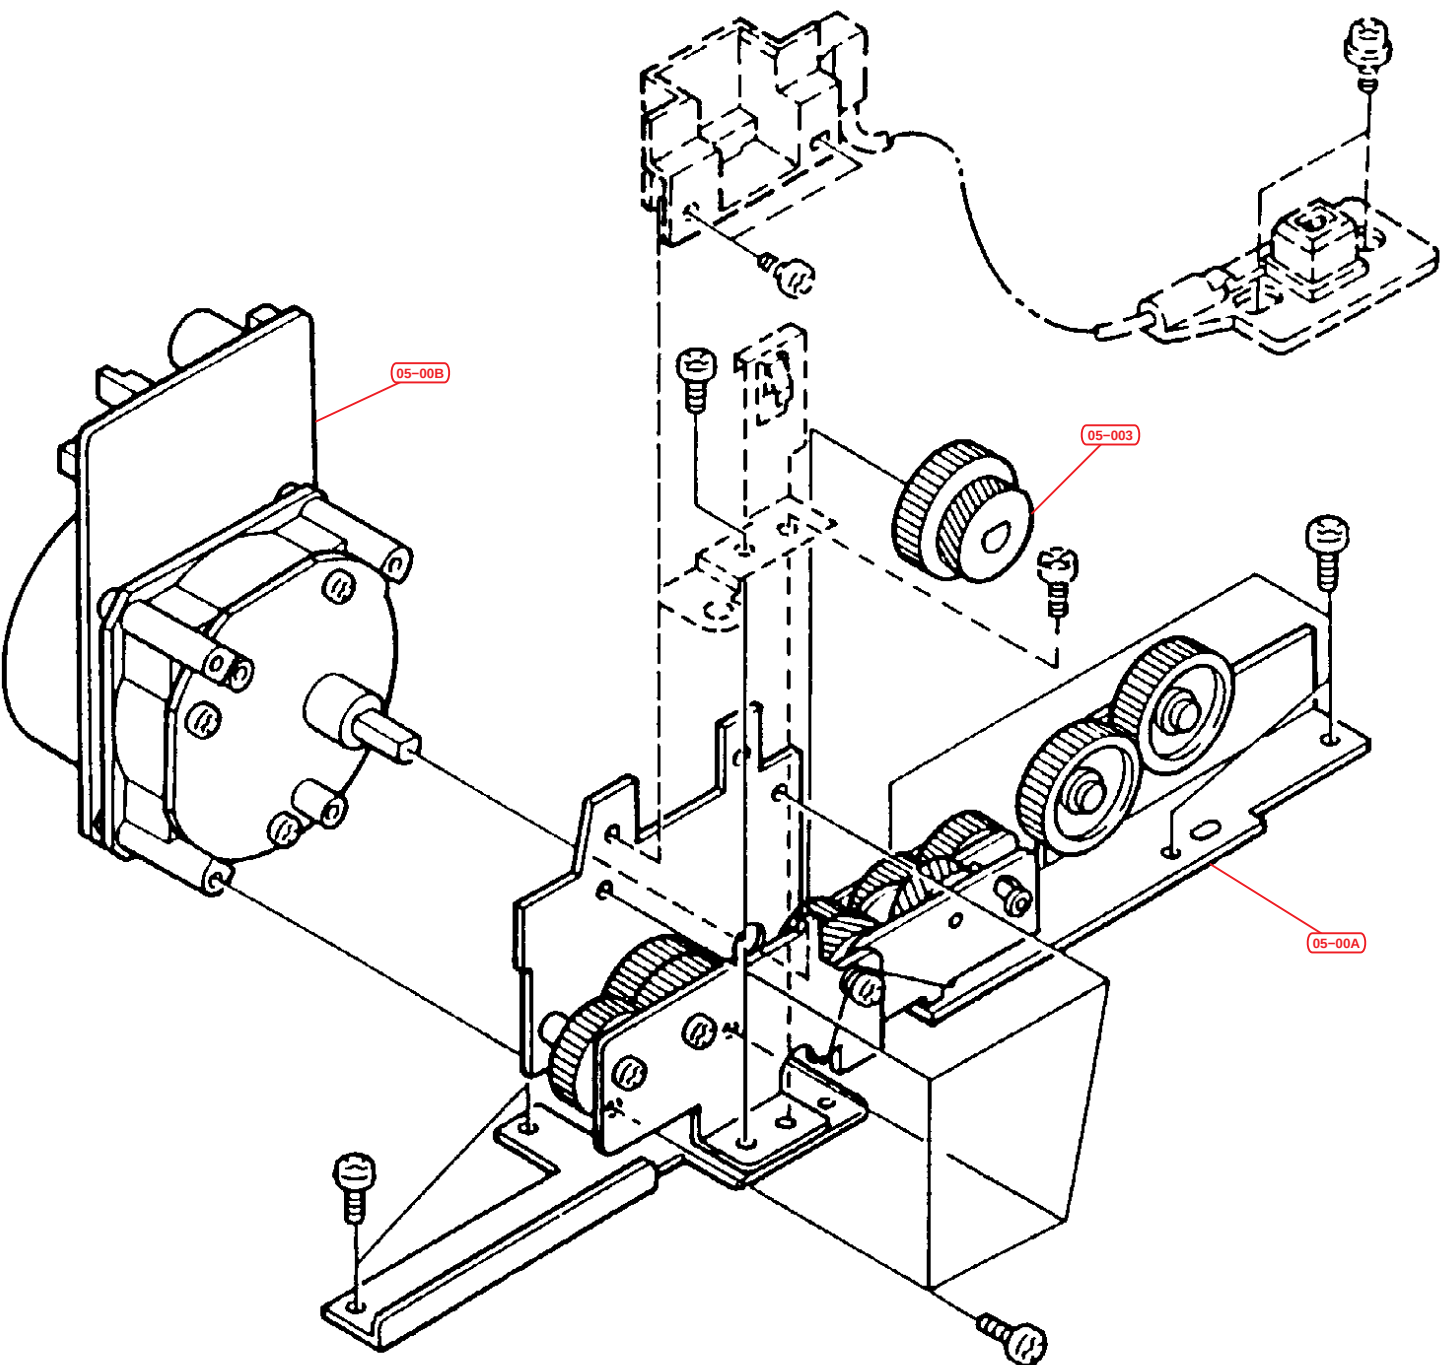


Fig.5 - Mécanique

N°	Référence	Description
05-00A	AYF820**64	DRIVE GEAR SUB
05-00B	AYF820**66	MAIN MOTOR SUB
05-003	MG038SV001	MOTOR GEAR Z30 H24

Fig.6 – Unité de fusion

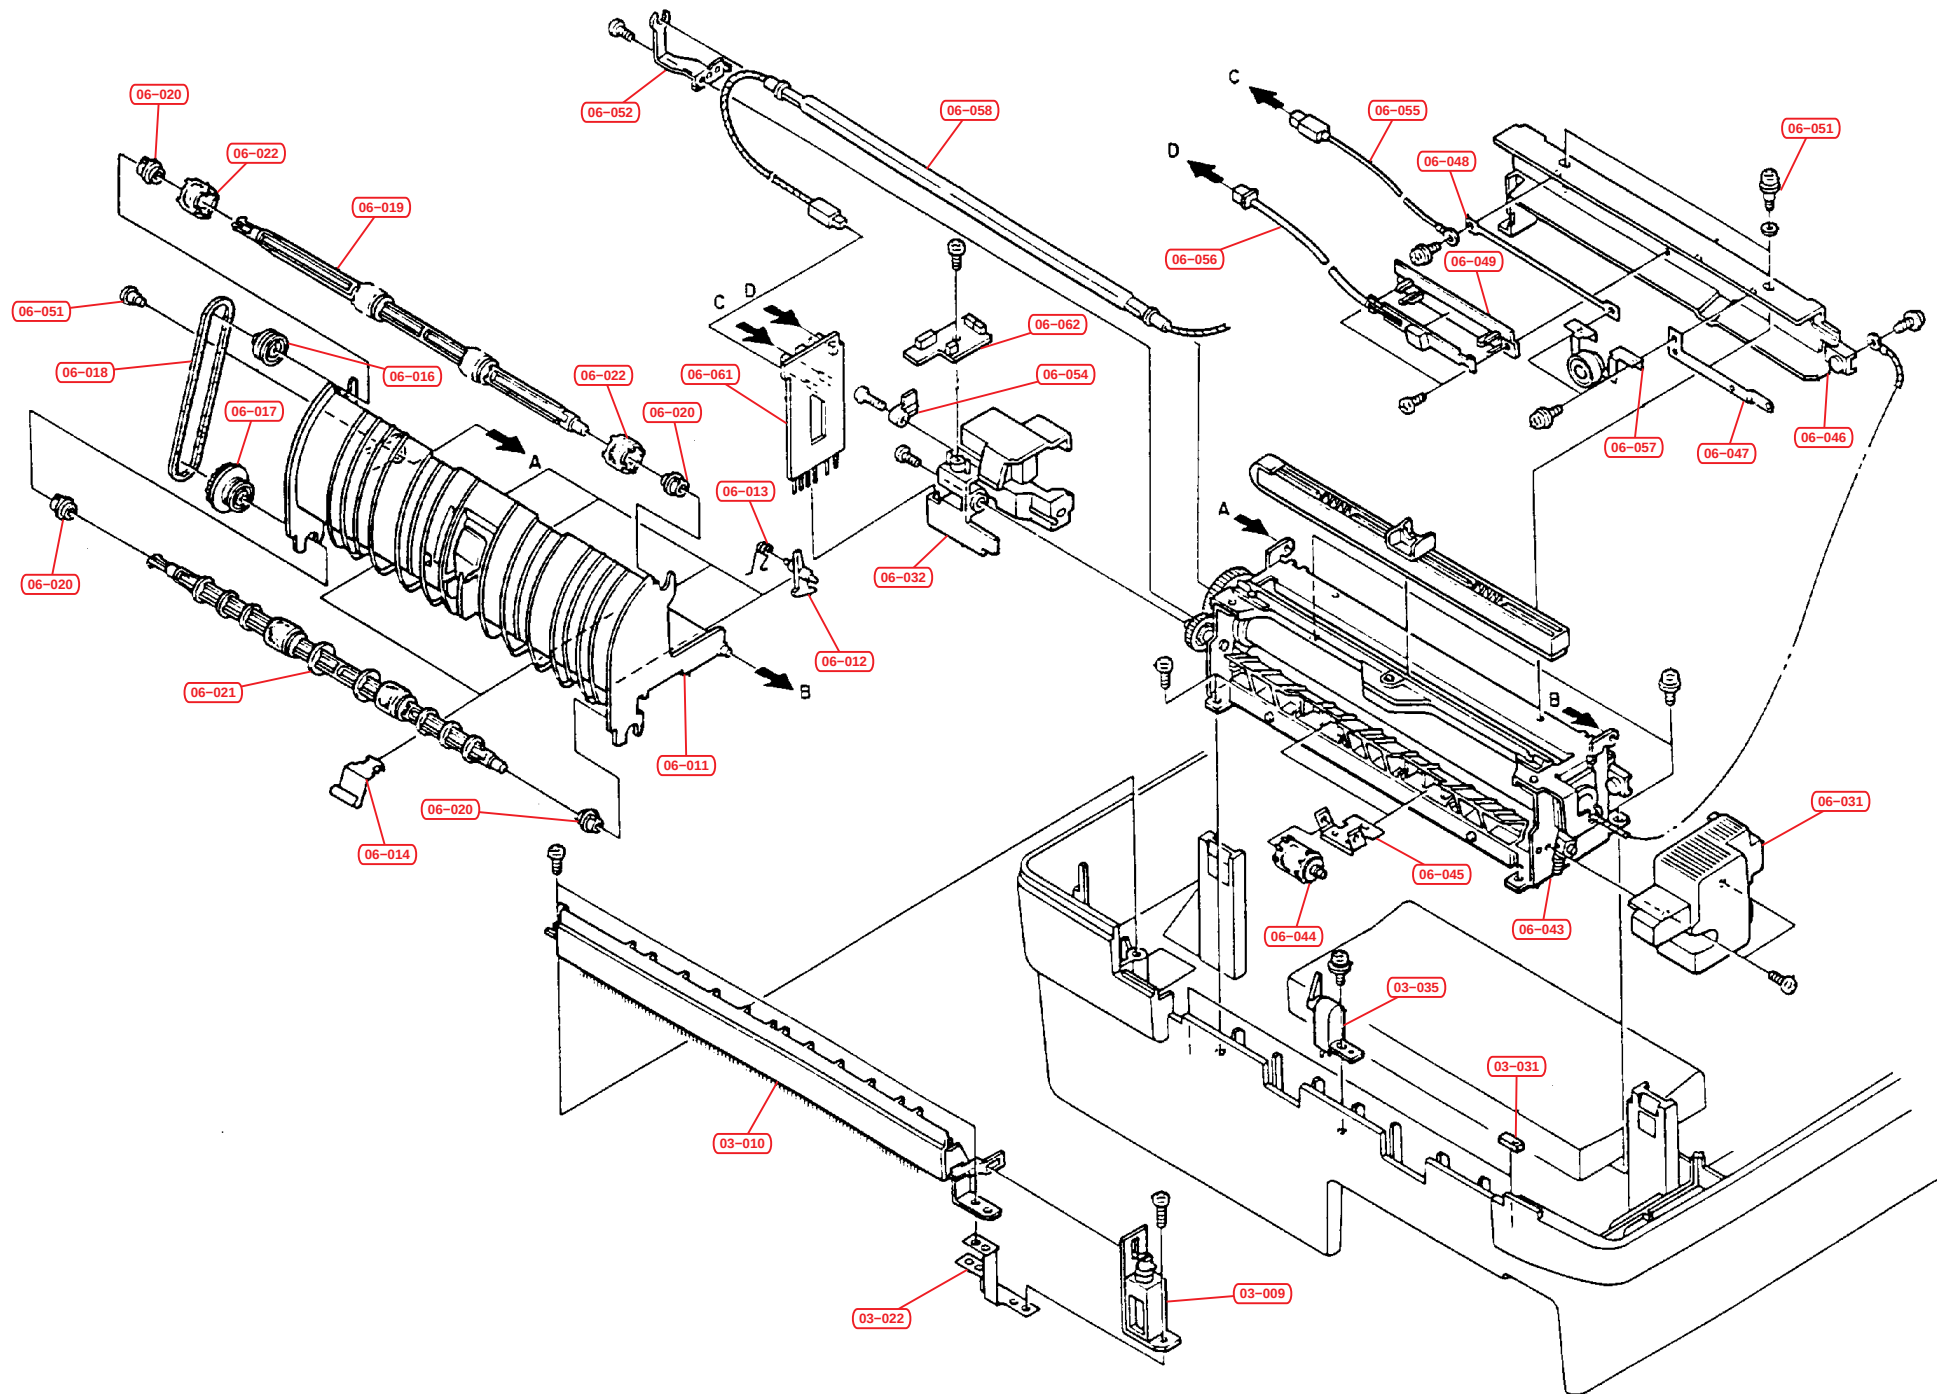

N°	Référence	Description
03-000	AYF820**01	FACE DOWN ASSY
03-009	AYF820**24	SOLENOID ASSY
03-010	AYF820**23	GATE EXIT ASSY
03-022	MZ153RD001	EARTH U-D
03-031	VQ211RB019	RUBBER CORD
03-035	AXSW027GEA	SWITCH JAM
06-011	AYF820**60	FUSER COVER SUB
06-012	VX332XN002	SEPARATOR
06-013	MW163W003	SEPARATOR SPRING
06-014	MP232LD001	CLEANER SPRING
06-016	VG307DB001	EXIT ROLL PULLEY
06-017	VG038DB001	EXIT ROLL GEAR Z23
06-018	VS668RB003	EXIT BELT
06-019	VT877CB001	EXIT ROLLER
06-020	VM176DB003	EXIT ROLL BUSHING
06-021	AVROLER018	ROLLER EXIT ASSY
06-022	VM272RB002	EXIT TYRE B
06-031	VB665XB001	COVER FUSER F
06-032	VB666XB001	FUSER COVER R
06-043	VX843XB001	GUIDE EXIT PAPER
06-044	AYF820**52	PULLEY EXIT ASSY
06-045	MM332LD001	BKT EXIT PULLEY
06-046	VX842CB002	INLET UPPER GUIDE
06-047	MS623RD001	CORD PLATE F
06-048	MS713RD001	CORD PLATE R
06-049	VX622XB001	THERMISTOR SUPPORT
06-051	BSP%4007NZ	STUD SCREW(+)
06-052	MP333LD001	HEATER SUPPORT
06-054	VX221XB001	CORD STOPPER
06-055	ACCNFROGEA	CON N CORD ASSY
06-056	AXTM001GEA	THERMISTOR ASSY
06-057	YFFQ21001**01	THERMOSTAT 210 C
06-058	ZPB2412520101	HEATER LAMP 240V
06-058	ZPB1215020101	HEATER LAMP 120V
06-061	APRHCC1004AH	FUSER PWB ASSY
06-062	APRZC1020AH	CONNECT PWB ASSY
06-063	AVCLEAN036	CLEANING PAD


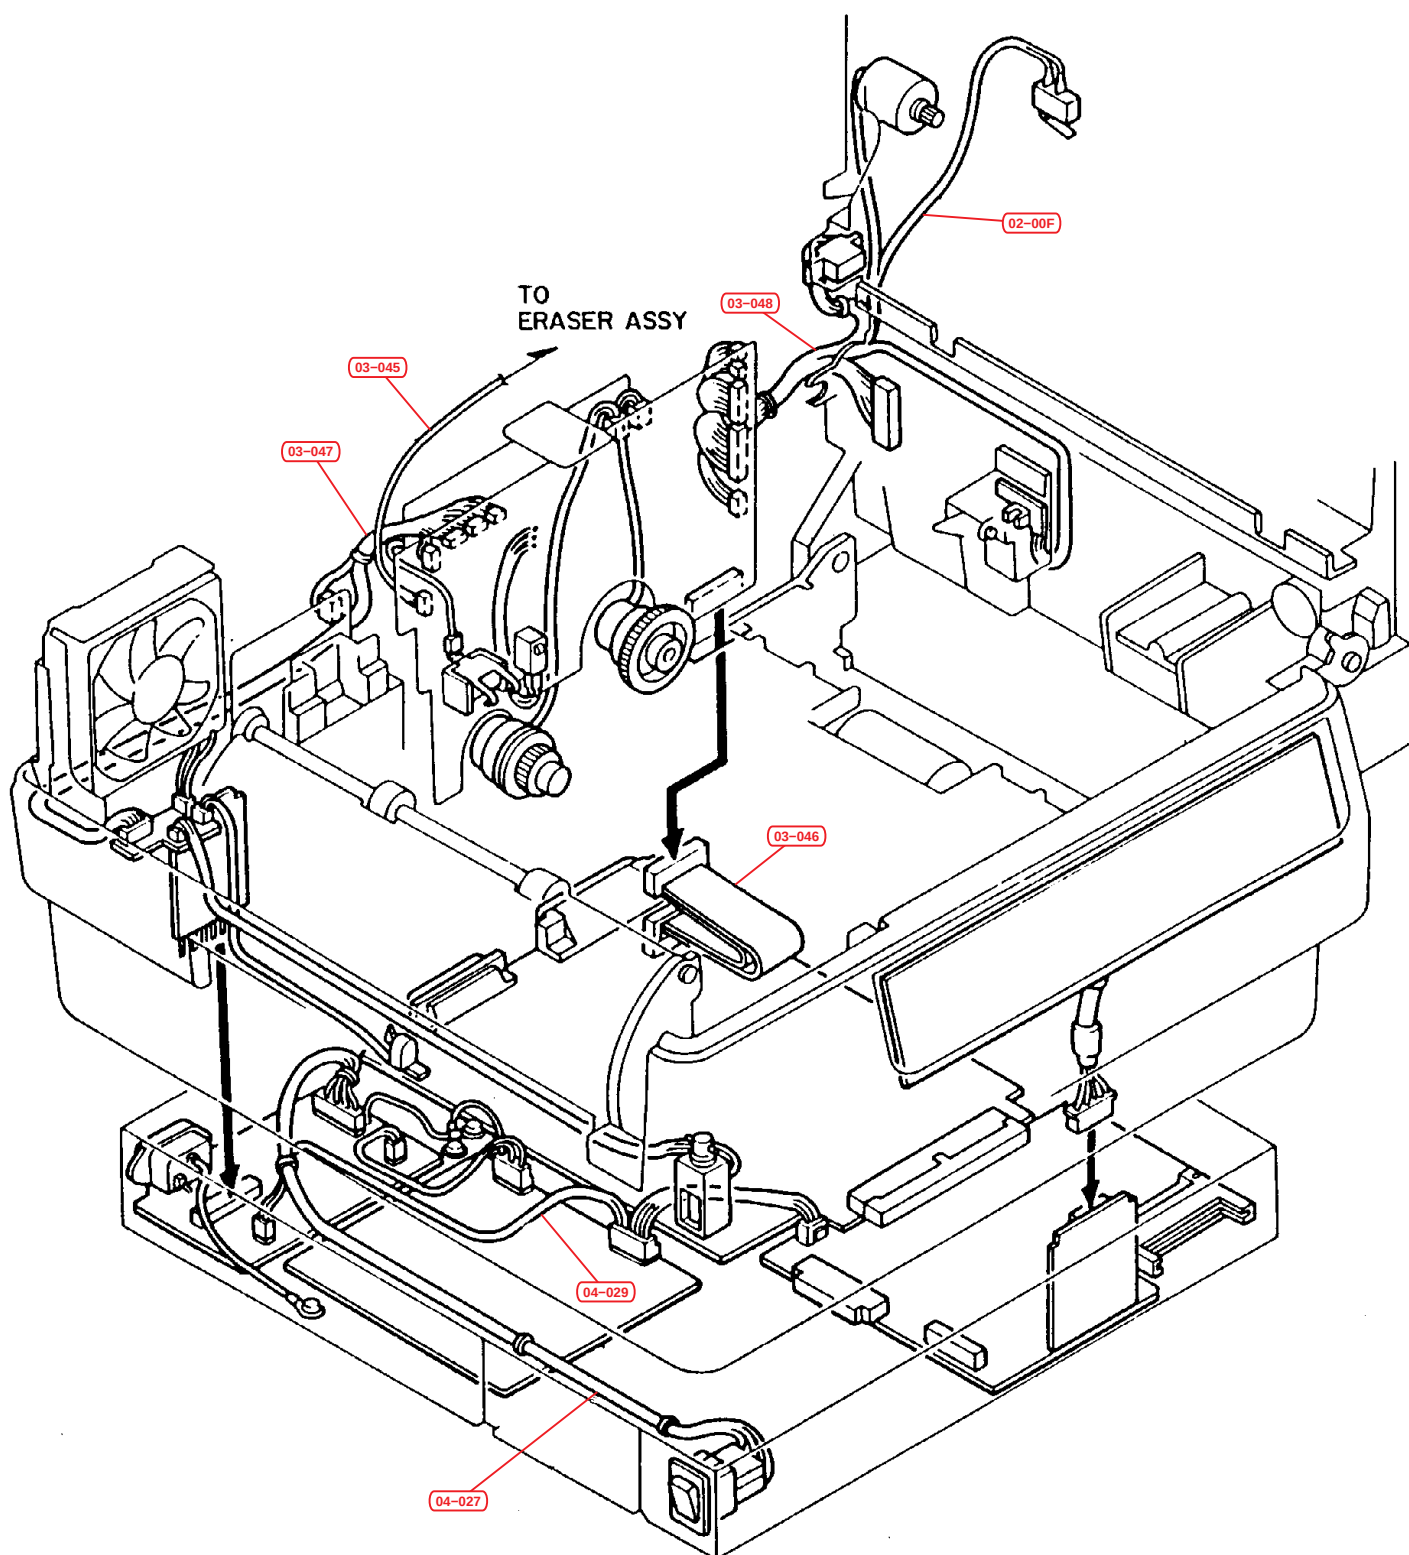


Fig.7 - Connexion

N°	Référence	Description
03-045	ACCNHZ8GEA	CONN CORD S00482
03-047	ACCNHF5GEA	CONN CORD S00459
03-048	ACCNHF6GEA	CONN CORD S00460
04-027	ACCNHE7GEA	CONN CORD ASSY
04-029	ACCNHE6GEA	CONN CORD ASSY
08-018	ACCNHK9GEA	CONN CORD ASSY

Fig.8 – Cassette inférieure (option)

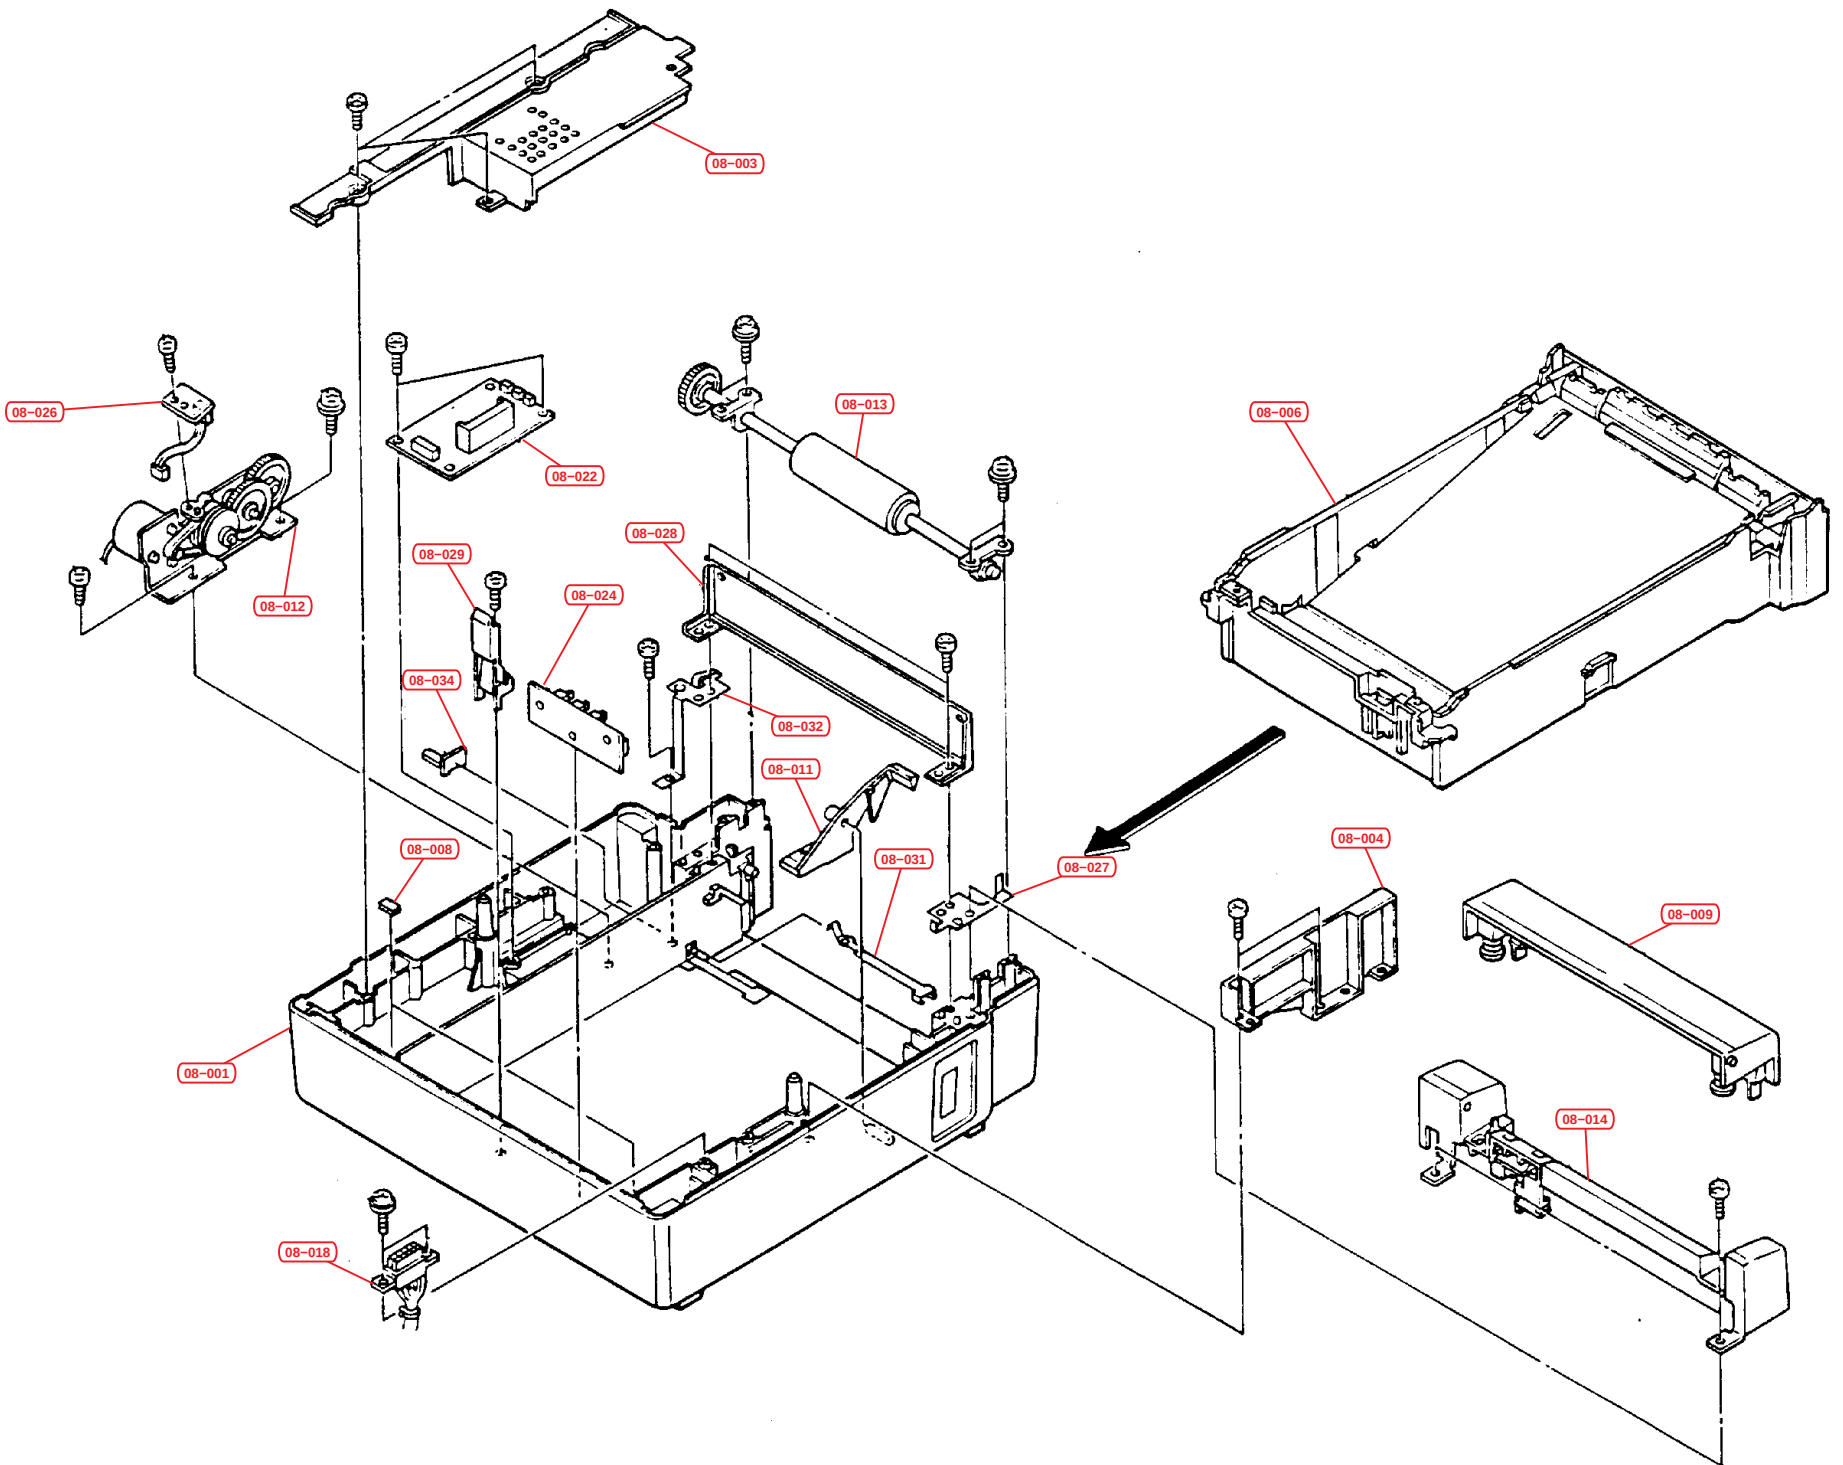

N°	Référence	Description
08-001	AYF820**54	LOWER FEEDER (PF-3)
08-003	VS838SH001	COVER REAR
08-004	VX764DD001	COVER EMPTY
08-006	PC7-A4	PAPER CASSETTE A4
08-006	PC7-LTR	PAPER CASSETTE LETTER/LEGAL
08-008	VQ211RB019	RUBBER CORD
08-009	AVCOVER167	COVER GUIDE ASSY
08-011	AYF820**30	LEVER EMPTY ASSY
08-012	AYF820**32	PLATE GEAR B ASSY
08-013	AYF820**31	LOWER FEED ASSY
08-014	AYF820**34	COVER FEEDER ASSY
08-018	ACCNHK9GEA	CONN. CORD ASSY
08-022	APRZC1024AH	PWB ASSY KP-189
08-024	APRSWC1002AH	PWB ASSY KP-140
08-026	APRZZC1025AH	PWB ASSY KP-198
08-027	ML163LD001	ROLLER EARTH F
08-028	ML683SD001	STAY RIGHT
08-029	VBRCKT051	STAY LEFT ASSY
08-031	MU771LD001	CASSETTE EARTH B
08-032	MZ663LD001	FEEDER EARTH R
08-034	MX321SM001	CORD KEEP