

Destinations

Europe	US/Canada	Japan	Ref. No.	Part code	Description	Remarks
					<b>STACKER ASSY</b>	
				01-001	CABINET ASSY	240V
				01-001	CABINET ASSY	120V
				01-001	CABINET ASSY	100V
				01-002	PLATE FEED B	
				01-003	PLATE EARTH	
				01-B01	BIND T.T SCREW (+)	
				01-B02	BIND T.T SCREW (+)	
				01-B03	TP TAP TITE SCREW (+)	
				01-B04	PAN T.T SCREW (+)	
					<b>CABINET ASSY</b>	
				02-001	FRAME ASSY	240V
				02-001	FRAME ASSY	120V
				02-001	FRAME ASSY	100V
				02-002	BASE ASSY	240V
				02-002	BASE ASSY	120V
				02-002	BASE ASSY	100V
				02-B01	TP DEL TITE SCREW (+)	
					<b>COVER ASSY</b>	
				03-001	COVER FRONT ASSY	
				03-002		
				03-003		
				03-004	COVER L.R	
				03-005	COVER REAR ASSY	
				03-006	TAPE STABILIZER UP	
				03-007	PLATE TOP	
					<b>FRAME ASSY</b>	
				04-001	GUIDE ENTER ASSY	
				04-002	UPPER PASS ASSY	
				04-003	SOLENOID ASSY	
				04-004	PLATE TENSION ASSY	
				04-005	FRAME MAIN ASSY	
				04-006	PLATE PWB	
				04-007	PLATE NUT	
				04-008	GUIDE FLAP	
				04-009	LEVER SAFETY	
				04-010	HOLDER	

Shaded: The part is used for the destination (above).

Destinations

Europe	US/Canada	Japan	Ref. No.	Part code	Description	Remarks
			04-011		MICRO SW	
			04-012		SPACER	
			04-013		MOTOR FEED ASSY	
			04-014		BRUSH DISCHARGE ENT	
			04-015		BUSHING FLAP	
			04-016		SPRING SOL B	
			04-017		PWB CONTROLLER	
			04-018		PWB DRIVER	240V
			04-018		PWB DRIVER	120V
			04-018		PWB DRIVER	100V
			04-019		TRANS ASSY	240V
			04-019		TRANS ASSY	120V
			04-019		TRANS ASSY	100V
			04-020		PULLEY FEED T26	
			04-021		LOCKING CARD SPACER	
			04-022		WIRE SADDLE A	
			04-023		WIRE SADDLE B	
			04-024		CONN CORD S00754	
			04-025		CONN CORD S00752	
			04-026		CONN CORD S00753	
			04-027		CONN CORD S00755	
			04-028		CONN CORD S00757	
			04-029		CONN CORD S00758	
			04-030		CONN CORD S00759	
			04-031		BELT DRIVE T360	
			04-032		BELT DRIVE T152	
			04-033		STACK TRAY	
			04-034		BACK STOP	
			04-035		GEAR Z24	
			04-036		SPACER EP-5	
			04-037		RACK	
			04-038		RACK SUPPORT	
			04-039		LOCKING CARD SPACER	
			04-040		PLATE SIDE L	
			04-041		PLATE SIDE R	
			04-042		SPACER MOTOR	
			04-043		ARM PASS CHANGE	

Shaded: The part is used for the destination (above).

Destinations

Europe	US/Canada	Japan	Ref. No.	Part code	Description	Remarks
			04-044		CHANG PASS LEVER	
			04-045		SPRING TENSION	
			04-046		PLATE SENSOR FULL A	
			04-047		PLATE SENSOR FULL B	
			04-048		KNOB PLATE SIDE	
			04-049		HOUSING SLIDER	
			04-050		SLIDER	
			04-051		PAPER STOP	
			04-052		SENSOR FULL	
			04-053		PWB SENSOR A	
			04-054		PWB SENSOR B	
			04-055		LABEL WARNING	
			04-056		LABEL SLIDER	
			04-057		LABEL STACK TRAY	
			04-058		CONN CORD S00775	
			04-B01		BIND HEAD SCREW (+)	
			04-B02		BIND HEAD SCREW (+)	
			04-B03		BIND HEAD SCREW (+)	
			04-B04		BIND T.T SCREW (+)	
			04-B05		BIND T.T SCREW (+)	
			04-B06		BIND T.T SCREW (+)	
			04-B07		TP TAP TITE SCREW (+)	
			04-B08		TP TAP TITE SCREW (+)	
			04-B09		BIND T.T SCREW (+)	
			04-B10		CAGE SCREW (+)	
			04-B11		BIND T.T SCREW (+)	
			04-B12		BIND T.T SCREW (+)	
			04-B13		BIND HEAD SCREW (+)	
			04-B14		BIND HEAD SCREW (+)	
			04-B15		TP TAP TITE SCREW (+)	
			04-B16		BIND T.T SCREW (+)	
			04-B17		BIND T.T SCREW (+)	
			04-B18		BIND HEAD SCREW (+)	
			04-B19		E STOP RING	
			04-B20		E STOP RING	
			04-B21		E STOP RING	
					<b>BASE ASSY</b>	

Shaded: The part is used for the destination (above).

Destinations

Europe	US/Canada	Japan	Ref. No.	Part code	Description	Remarks	
			05-001		BASE		
			05-002		COVER BASE		
			05-003		CASTER A		
			05-004		CASTER B		
			05-005		BIND T.T SCREW (+)		
			05-006		INLET		
			05-006		INLET		
			05-006		INLET		
			05-007		BRACKET STABILIZER		
			05-008		CABLE EARTH A		
			05-009		CONN CORD S00754		
			05-010		SER. NO. PLATE (E)		
			05-010		SER. NO. PLATE (U)		
			05-010		SER. NO. PLATE (J)		
			05-011		LABEL EMI		
			05-012		LABEL CAUTION P/S		
			05-B01		BIND T.T SCREW (+)		
			05-B02		BIND T.T SCREW (+)		
			05-B03		CAGE SCREW (+)		
			05-B04		OT LOCK WASHER		
			<b>UPPER PASS ASSY</b>				
			07-001		PASS GUIDE UP		
			07-002		PASS GUIDE LOW		
			07-003		SHAFT UPPER PASS UP		
			07-004		SHAFT UPPER PASS EX		
			07-005		KNOB		
			07-006		PINCH ROLLER ASSY		
			07-007		PULLEY FEED T26		
			07-008		MAGNET CATCH		
			07-009		BRUSH DISCHARGER STK		
			07-010		SENSOR UPPER PASS		
			07-011		BELT PASS T280		
			07-012		BUSHING FLANGE		
			07-013		SHAFT MIDDLE		
			07-014		BELT PASS T122		
			07-015		SHAFT ENT LOW		
			07-016		SP SHAFT ENT LOW		

Shaded: The part is used for the destination (above).

Destinations

Europe	US/Canada	Japan	Ref. No.	Part code	Description	Remarks
				07-017	BUSH ENT LOW	
				07-018	SHEET ENT LOW	
				07-B01	BIND T.T SCREW (+)	
				07-B02	E STOP RING	
				07-B03	BIND T.T SCREW (+)	
				<b>COVER FRONT ASSY</b>		
				08-001	COVER FRONT	
				08-002		
				08-003	SPACER COVER FRONT	
				08-004	COVER PANEL ASSY	
				<b>COVER REAR ASSY</b>		
				10-001	COVER REAR	
				10-002	SHAFT DRIVE REAR	
				10-003	PINCH ROLLER ASSY 2	
				10-004	STAY COVER REAR	
				10-005	PLATE MAGNET	
				10-006	BUSHING REAR COVER	
				10-B01	BIND T.T SCREW (+)	
				10-B02	FLAT T.T SCREW (+)	
				10-B03	E STOP RING	
				<b>COVER PANEL ASSY</b>		
				12-001	COVER PANEL	
				12-002	PWB PANEL	
				12-003	SHEET PANEL	
				12-004	CONN. CORD S00756	
				12-B01	BIND T.T SCREW (+)	
				<b>ACCESSORIES</b>		
				30-001		
				30-002		
				30-003		
				30-004		
				30-005	TAPE STABILIZER LOW	

Shaded: The part is used for the destination (above).

