

7 Parts and diagrams



NOTE In this chapter, part numbers are only listed for available replaceable parts.

This section contains the following information.

- [Overview](#)
- [Assembly locations](#)
- [Covers](#)
- [Internal assemblies](#)
- [Input devices](#)
- [Diagrams](#)
- [Alphabetical parts list](#)
- [Numerical parts list](#)

Overview

Replaceable parts

The following table lists the replaceable parts available for this printer.

Table 7-1 Replaceable parts

Description	Part number	Diagram
FORMATTER PCB-base	Q7803-60002	
FORMATTER PCB-network	Q5966-60001	
FLAT FLEX CABLE DCC-FORMATTER	Q6456-60101	
FLAT FLEX CABLE-MEMORY CARD ASSEMBLY	Q6456-60102	
ARM, PAPER RETAINER, LEFT	RC2-0253-000CN (simplex)	See Figure 7-11 Fuser assembly (simplex) on page 200.
ARM, PAPER RETAINER, LEFT	RC2-0215-000CN (duplex)	See Figure 7-12 Fuser assembly (duplex) on page 202.
ARM, PAPER RETAINER, RIGHT	RC2-0254-000CN (simplex)	See Figure 7-11 Fuser assembly (simplex) on page 200.
ARM, PAPER RETAINER, RIGHT	RC2-0216-000CN (duplex)	See Figure 7-12 Fuser assembly (duplex) on page 202.
RETAINER, PAPER	RC1-5062-000CN	See Figure 7-11 Fuser assembly (simplex) on page 200.
CABLE COVER UNIT	RC1-5147-000CN	See Figure 7-7 Internal components (2 of 3) on page 194.
COVER, LEFT	RC1-5183-000CN	See Figure 7-3 External panels and covers on page 186.
COVER, CASSETTE, LEFT	RC1-5184-000CN	See Figure 7-3 External panels and covers on page 186.
COVER, CASSETTE, RIGHT	RC1-5188-030CN	See Figure 7-3 External panels and covers on page 186.
COVER, CASSETTE, DUST	RC1-5200-000CN	See Figure 7-3 External panels and covers on page 186. and Figure 7-18 250-sheet input tray internal components on page 214.
PLATE, REAR	RC1-5227-020CN	See Figure 7-3 External panels and covers on page 186.
ROLLER, PICK UP	RC1-5440-000CN	See Figure 7-19 Paper pick-up feeder assembly (Tray 2) on page 216 and Figure 7-21 Paper pickup feeder assembly (Tray 3) on page 220.
COVER, FACE DOWN	RC1-5173-000CN	See Figure 7-3 External panels and covers on page 186.
FUSER ASSEMBLY - SIMPLEX	RM1-1828-000CN 110-127V	See Figure 7-11 Fuser assembly (simplex) on page 200.

Table 7-1 Replaceable parts (continued)

Description	Part number	Diagram
FUSER ASSEMBLY - SIMPLEX	RM1-1829-000CN 220-240V	See Figure 7-11 Fuser assembly (simplex) on page 200.
FUSER ASSEMBLY - DUPLEX	RM1-1824-000CN 110-127V	See Figure 7-12 Fuser assembly (duplex) on page 202.
FUSER ASSEMBLY - DUPLEX	RM1-1825-000CN 220-240V	See Figure 7-12 Fuser assembly (duplex) on page 202.
DUPLEXING DRIVE ASSEMBLY	RM1-1832-000CN	See Figure 7-6 Internal components (1 of 3) on page 192.
MEMORY-CARD READER ASSEMBLY	Q7821-67901 (DTN)	See Figure 7-14 Memory-card reader assembly on page 206.
FRONT DOOR ASSEMBLY	RM1-1856-000CN (simplex)	See Figure 7-3 External panels and covers on page 186.
FRONT DOOR ASSEMBLY	RM1-1857-000CN (duplex)	See Figure 7-3 External panels and covers on page 186.
RIGHT COVER ASSEMBLY	RM1-1860-000CN	See Figure 7-3 External panels and covers on page 186.
PAPER DELIVERY TRAY ASSEMBLY	RM1-1859-020CN	See Figure 7-3 External panels and covers on page 186.
UPPER COVER ASSEMBLY	RM1-1862-000CN (simplex)	See Figure 7-4 Upper cover assembly - simplex model on page 188.
UPPER COVER ASSEMBLY	RM1-1855-000CN (duplex)	See Figure 7-5 Upper cover assembly - duplex models on page 190.
COVER, INSIDE, UPPER	RC1-5178-040CN	See Figure 7-4 Upper cover assembly - simplex model on page 188.
COVER, INSIDE, UPPER	RC1-5179-000CN	See Figure 7-5 Upper cover assembly - duplex models on page 190.
ETB UNIT - SIMPLEX	RM1-1891-000CN	See Figure 7-7 Internal components (2 of 3) on page 194.
ETB UNIT - DUPLEX	RM1-1892-000CN	See Figure 7-7 Internal components (2 of 3) on page 194.
TRAY 1 & 2 CASSETTE (tray only)	RM1-1916-050CN	See Figure 7-16 Tray 2 input tray (cassette) on page 210.
SEPARATION ASSEMBLY	RM1-1922-000CN	See Figure 7-16 Tray 2 input tray (cassette) on page 210 and Figure 7-20 Tray 3 input tray (cassette) on page 218.
FEED ASSEMBLY	RM1-1923-000CN	See Figure 7-16 Tray 2 input tray (cassette) on page 210.
TRAY 3 CASSETTE (tray only)	RM1-1945-000CN	See Figure 7-20 Tray 3 input tray (cassette) on page 218.
DC CONTROLLER PCA ASSEMBLY	RM1-3423-000CN	See Figure 7-8 Internal components (3 of 3) on page 196 and Figure 7-15 PCA assembly location on page 208.

Table 7-1 Replaceable parts (continued)

Description	Part number	Diagram
CONTROL PANEL ASSEMBLY	RM1-1861-000CN	See Figure 7-9 Control panel assembly on page 198 .
Black Toner Cartridge	Q6000A	
Cyan Toner Cartridge	Q6001A	
Yellow Toner Cartridge	Q6002A	
Magenta Toner Cartridge	Q6003A	
Replacement-Toner-Black	Q6000–67902	
Replacement-Toner-Cyan	Q6001–67902	
Replacement-Toner-Yellow	Q6002–67902	
Replacement-Toner-Magenta	Q6003–67902	
Tray 3 paper feeder	Q6459–69001	
Replacement Whole Printer Units (Base)	Q7821-67056 110v Simplex	
Replacement Whole Printer Units (Base)	Q7821-67055 220v Simplex	
Replacement Whole Printer Units (DN)	Q7822-67056 110v DN	
Replacement Whole Printer Units (DN)	Q7822-67055 220v DN	
Replacement Whole Printer Units (DTN)	Q7823-67056 110v DTN	
Replacement Whole Printer Units (DTN)	Q7823-67055 220v DTN	
Refurbished Whole Printer Units (Base)	Q7821-69056 110v Simplex	
Refurbished Whole Printer Units (Base)	Q7821-69055 220v Simplex	
Refurbished Whole Printer Units (DN)	Q7822-69056 110v DN	
Refurbished Whole Printer Units (DN)	Q7822-69055 220v DN	
Refurbished Whole Printer Units (DTN)	Q7823-69056 110v DTN	
Refurbished Whole Printer Units (DTN)	Q7823-69055	

Table 7-1 Replaceable parts (continued)

Description	Part number	Diagram
	220v DTN	
Optional Tray 3	Q6459A	
Replacement Tray 3 (tray and assembly)	Q6459-69002	

Order replacement parts from the following Web site:

<http://www.partsdirect.hp.com>

Related documentation and software

Documentation and software are available at the following Web sites.

Table 7-2 Technical support Web sites

HP Customer Care Online	http://www.hp.com/support
Software drivers, support documentation, and answers to frequently asked questions	
HP Technical Training	http://www.hp.com/education

Supplies

Printer supplies are listed in [Supplies life on page 32](#). Consumables are available directly from HP at the following numbers.

- US: 1-800-538-8787
- Canada: 1-800-387-3154

Contact your local HP Parts Coordinator for other local phone numbers.

Accessories

Table 7-3 Accessories

Product name	Description	Product number	Part number	Exchange number (replacement number)
Optional 250-sheet tray	Optional Tray 3	Q6459A	Q6459-69002	RM1-1945-000CN

Assembly locations

ASSEMBLY LOCATION DIAGRAM - Simplex Model


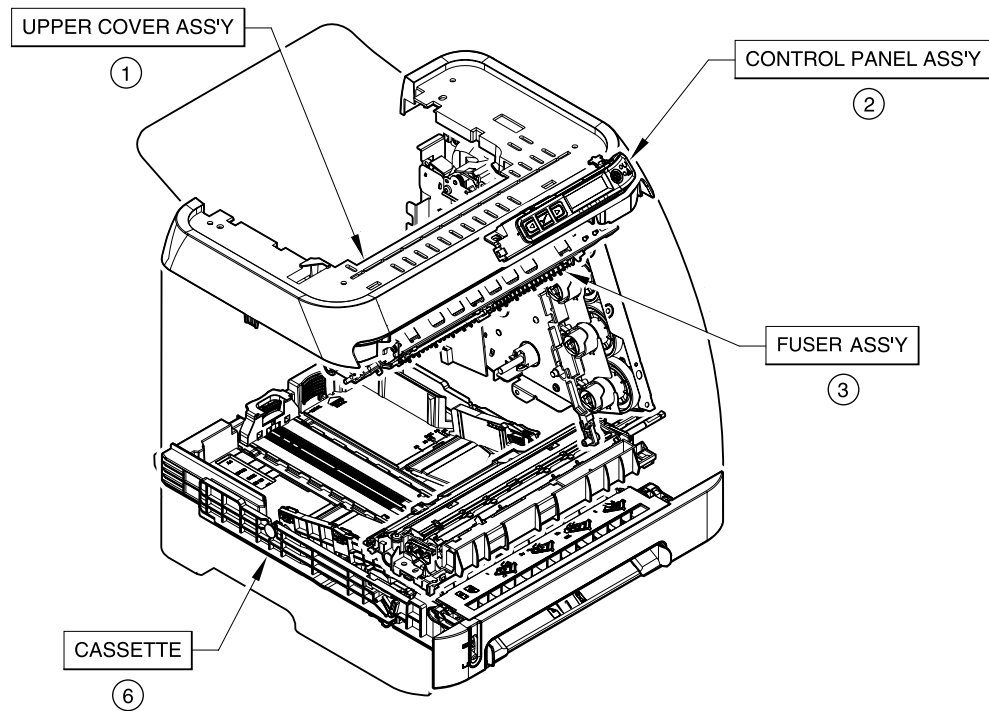


Figure 7-1 Assembly location diagram - simplex model

Table 7-4 Assembly locations - simplex model

Ref	Description	Part number	Qty
1	UPPER COVER ASSEMBLY	RM1-1862-000CN (simplex)	
2	CONTROL PANEL ASSEMBLY	RM1-1861-000CN	
3	FUSER ASSEMBLY	RM1-1828-000CN (110v) or RM1-1829-000CN (220v)	
6	CASSETTE	RM1-1916-050CN	

ASSEMBLY LOCATION DIAGRAM - DUPLEX MODELS

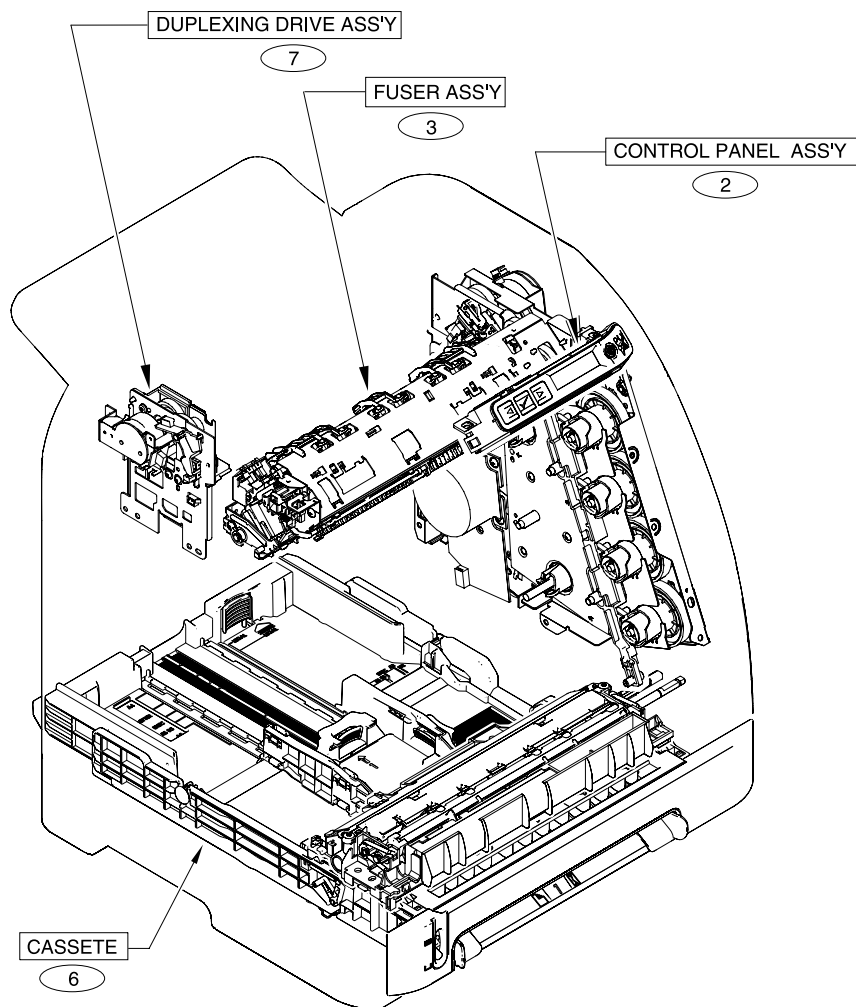

UPPER COVER ASS'Y - See figure 7-5

MEMORY CARD READER ASS'Y - See figure 7-14

Figure 7-2 Assembly location diagram - duplex models

Table 7-5 Assembly locations - duplex models

Ref	Description	Part number	Qty
	UPPER COVER ASSEMBLY	RM1-1855-000CN (duplex)	
	MEMORY-CARD READER ASSEMBLY	Q7821-67901 (DTN model only)	
2	CONTROL PANEL ASSEMBLY	RM1-1861-000CN	
3	FUSER ASSEMBLY	RM1-1824-000CN (110v) or RM1-1825-000CN (220v)	
6	CASSETTE	RM1-1916-050CN	
7	DUPLEXING DRIVE ASSEMBLY	RM1-1832-000CN (duplex)	

EXTERNAL PANELS AND COVERS

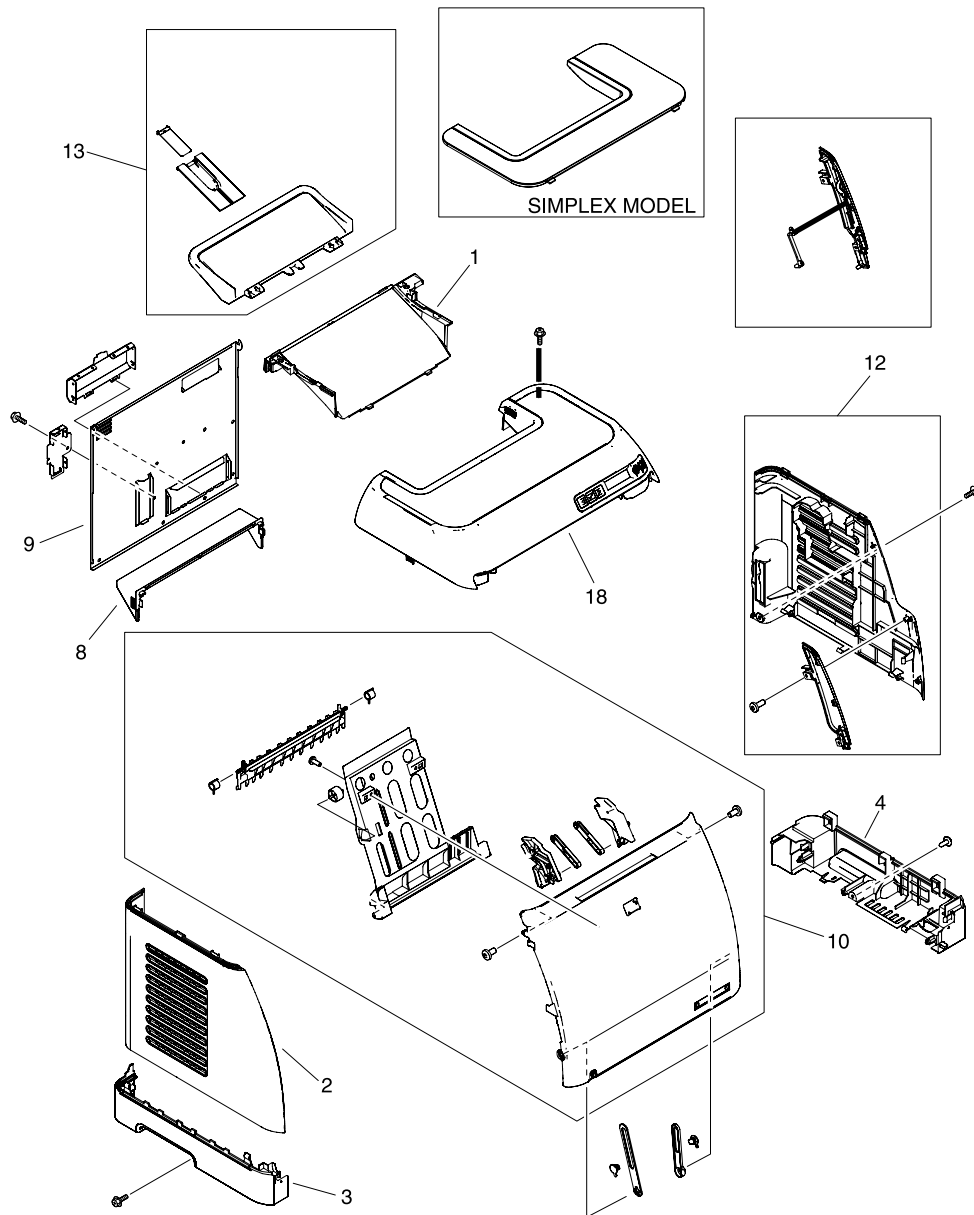


Figure 7-3 External panels and covers

Table 7-6 External panels and covers

Ref	Description	Part number	Qty
1	COVER, FACE-DOWN	RC1-5173-000CN	1
2	COVER, LEFT	RC1-5183-000CN	1
3	COVER, CASSETTE, LEFT	RC1-5184-000CN	1
4	COVER, CASSETTE, RIGHT	RC1-5188-030CN	1
8	COVER, CASSETTE DUST	RC1-5200-000CN	1
9	PLATE, REAR	RC1-5227-020CN	1
10	FRONT DOOR ASSEMBLY	RM1-1856-000CN (simplex)	1
10	FRONT DOOR ASSEMBLY	RM1-1857-000CN (duplex)	1
12	RIGHT COVER ASSEMBLY	RM1-1860-000CN	1
13	PAPER DELIVERY TRAY ASSEMBLY	RM1-1859-020CN	1
18	UPPER COVER ASSEMBLY	RM1-1855-000CN (duplex)	1

Covers

UPPER COVER ASS'Y

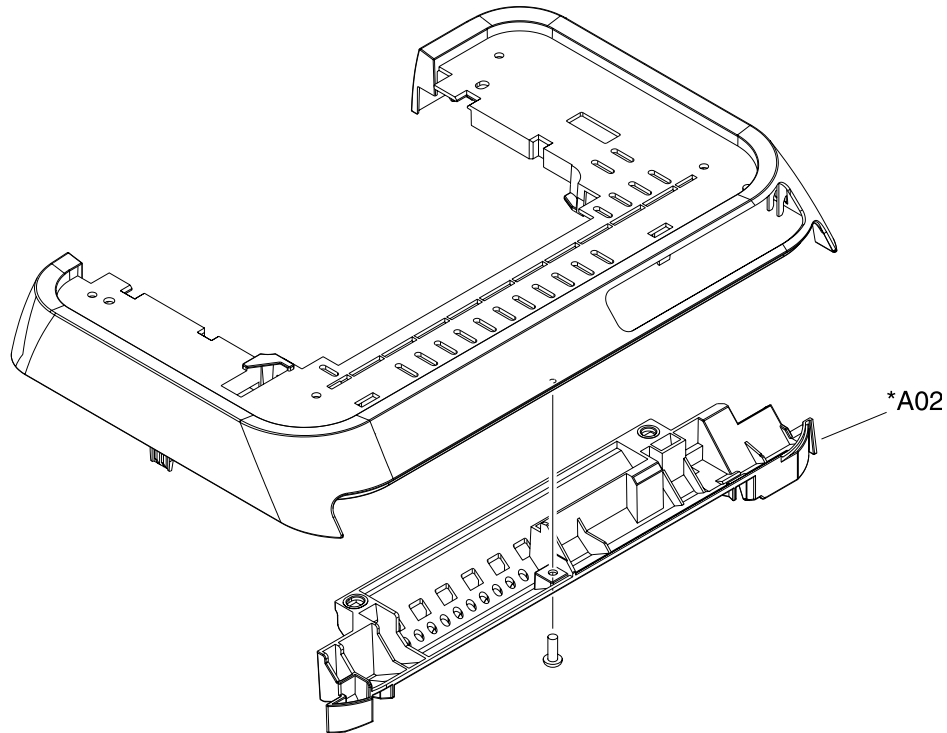


Figure 7-4 Upper cover assembly - simplex model

Table 7-7 Upper assembly cover - simplex model

Ref	Description	Part number	Qty
	UPPER COVER ASSEMBLY	RM1-1862-000CN (simplex)	
A02	COVER, INSIDE, UPPER	RC1-5178-040CN	1

UPPER COVER ASS'Y

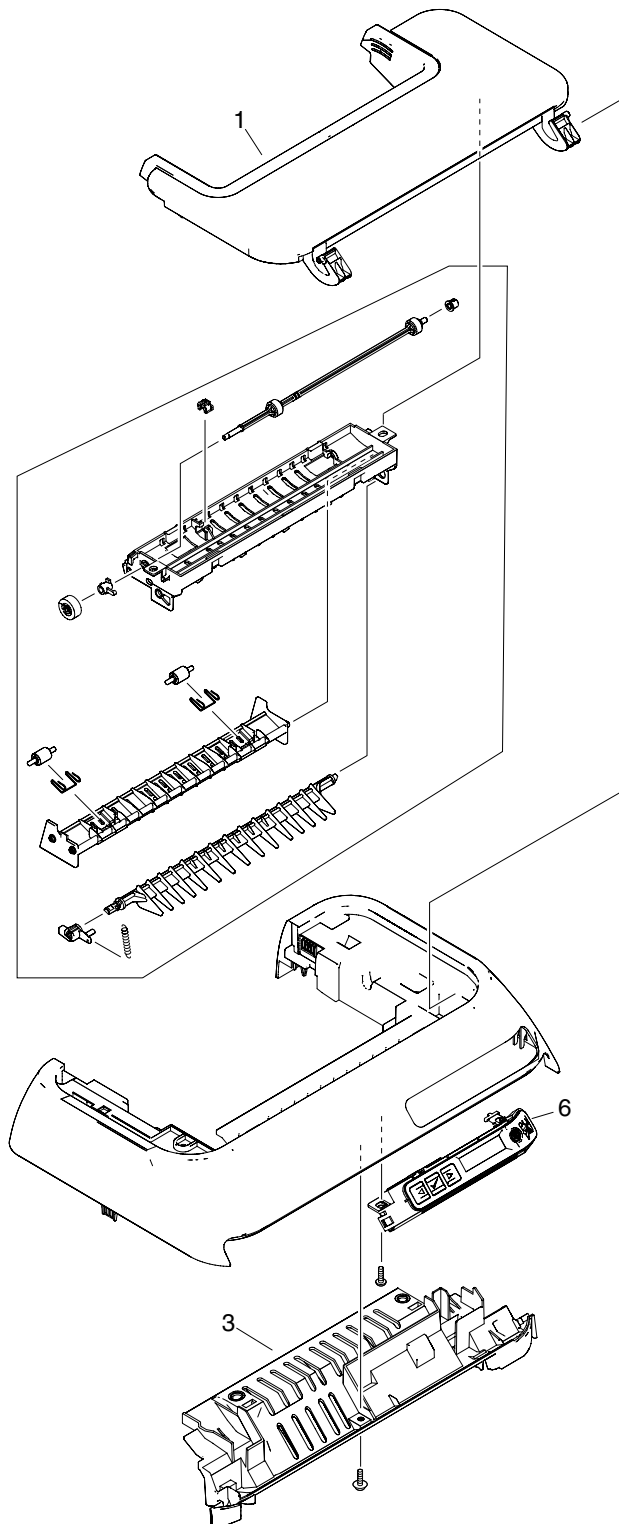


Figure 7-5 Upper cover assembly - duplex models

Table 7-8 Upper assembly cover - duplex models

Ref	Description	Part number	Qty
	UPPER COVER ASSEMBLY	RM1-1855-000CN (duplex)	
1	COVER, UPPER FACE	RC1-5175-000CN	1
3	COVER, INSIDE, UPPER	RC1-5179-000CN	1
6	CONTROL PANEL ASSEMBLY	RM1-1861-000CN	1

Internal assemblies

INTERNAL COMPONENTS 1

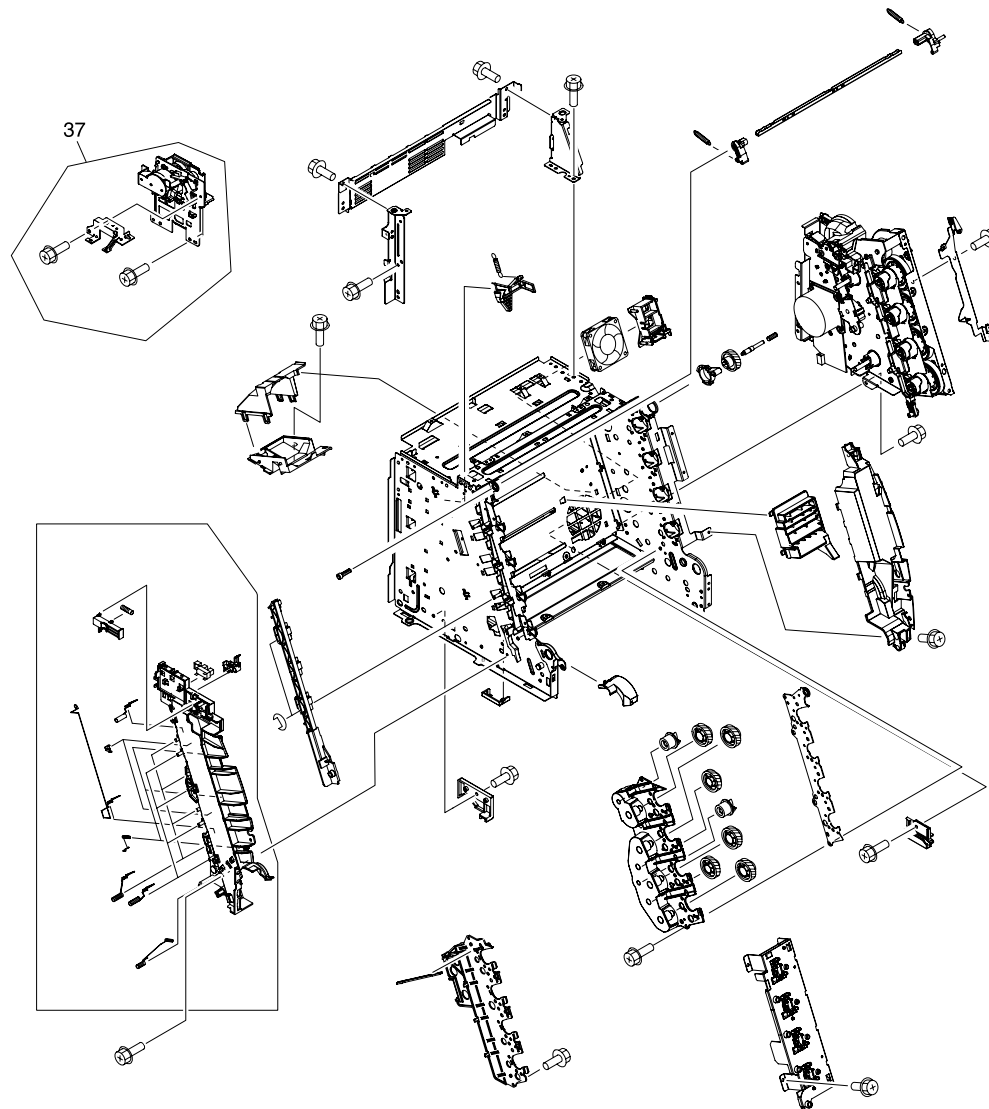


Figure 7-6 Internal components (1 of 3)

Table 7-9 Internal components (1 of 3)

Ref	Description	Part number	Qty
37	DUPLEXING DRIVE ASSEMBLY	RM1-1832-000CN	1

INTERNAL COMPONENTS 2

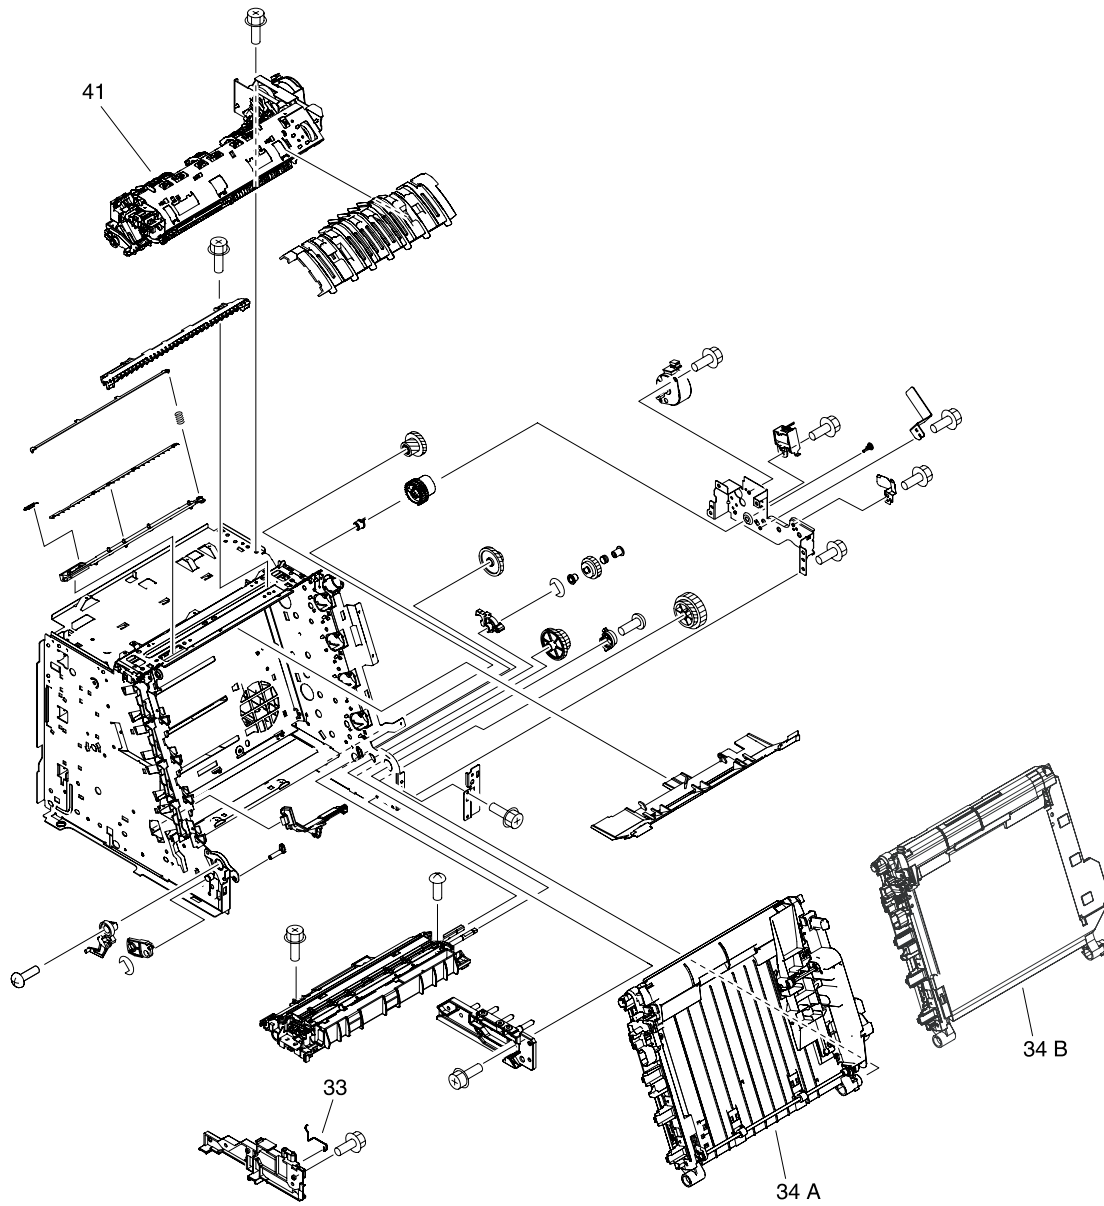


Figure 7-7 Internal components (2 of 3)

Table 7-10 Internal components (2 of 3)

Ref	Description	Part number	Qty
33	SPRING, GROUNDING	RC1-5147-000CN	1
34A	ELECT.TRANSPORT BELT (ETB) ASSEMBLY	RM1-1892-000CN (duplex)	1
34B	ELECT.TRANSPORT BELT (ETB) ASSEMBLY	RM1-1891-000CN (simplex)	1
41	FUSER ASSEMBLY	RM1-1828-000CN (110v simplex)	1
41	FUSER ASSEMBLY	RM1-1829-000CN (220v simplex)	1
41	FUSER ASSEMBLY	RM1-1824-000CN (110v duplex)	1
41	FUSER ASSEMBLY	RM1-1825-000CN (220v duplex)	1

INTERNAL COMPONENTS 3

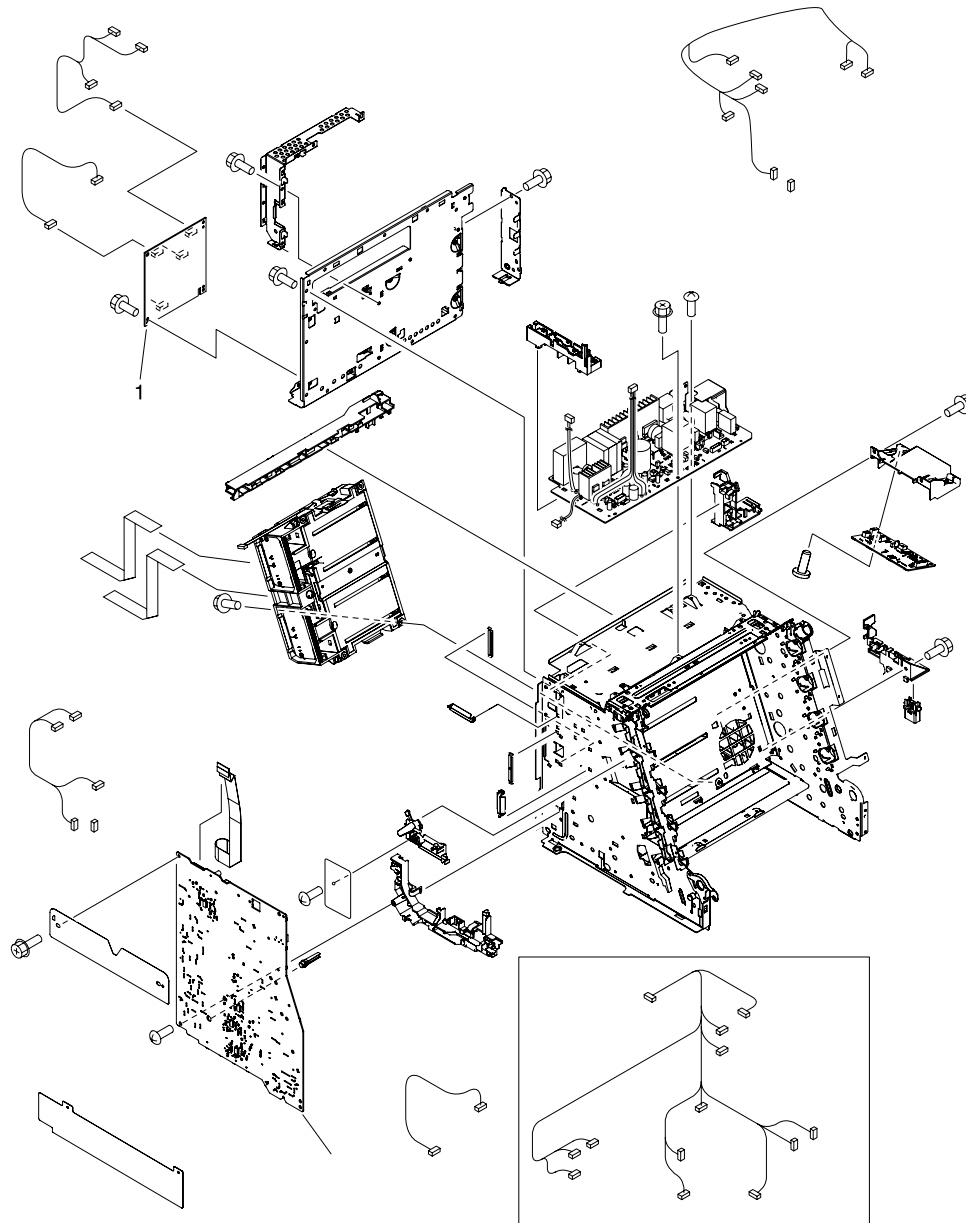


Figure 7-8 Internal components (3 of 3)

Table 7-11 Internal components (3 of 3)

Ref	Description	Part number	Qty
1	DC CONTROLLER PCA ASSEMBLY	RM1-3423-000CN	1

CONTROL PANEL ASS'Y

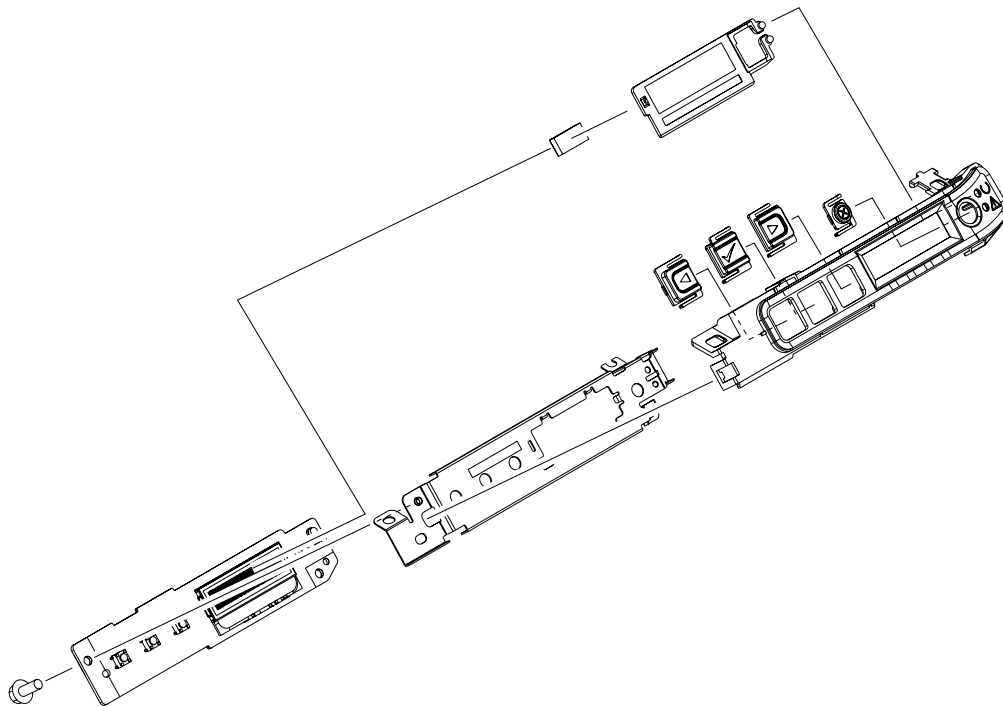


Figure 7-9 Control panel assembly

Table 7-12 Control panel assembly

Ref	Description	Part number	Qty
	CONTROL PANEL ASSEMBLY	RM1-1861-000CN	1

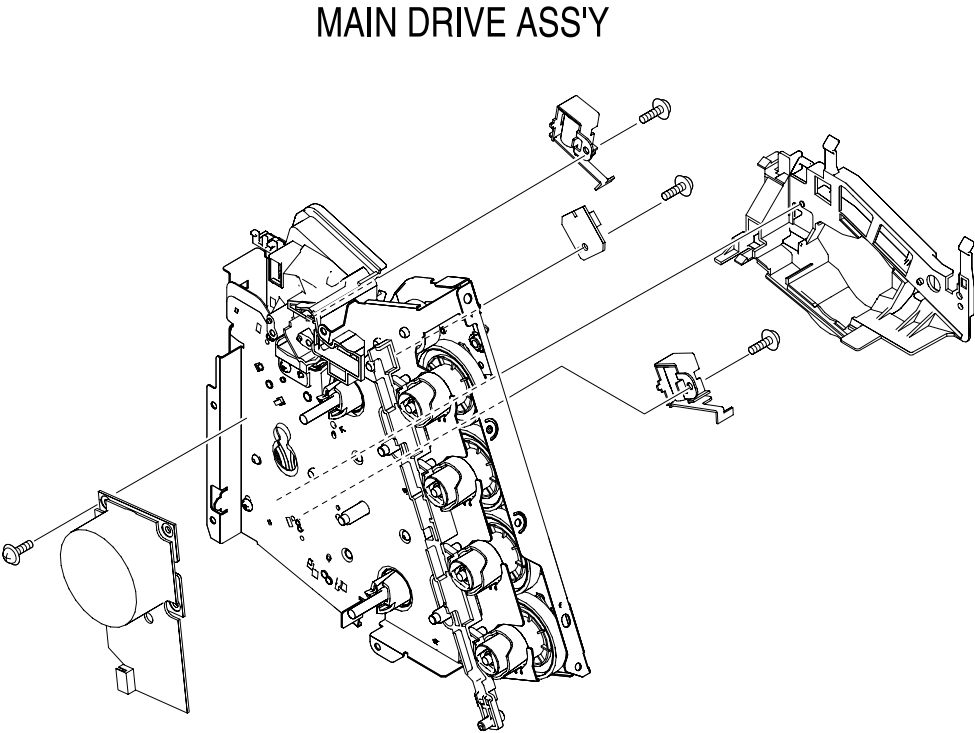


Figure 7-10 Main drive assembly

No parts in this assembly set up for service. Replace the entire printer.

FUSER ASS'Y (SIMPLEX)

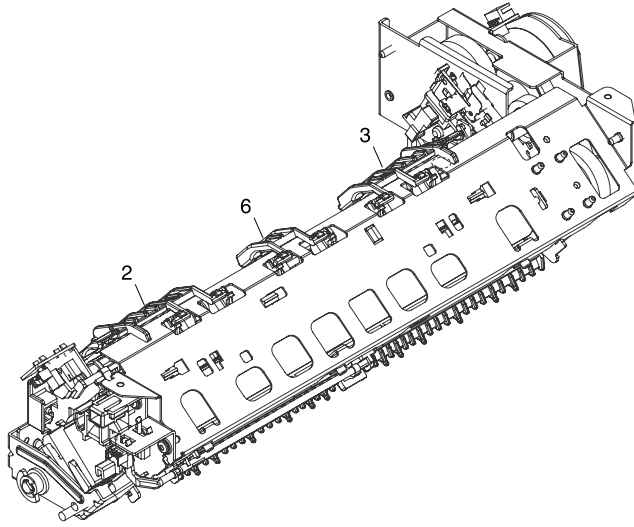


Figure 7-11 Fuser assembly (simplex)

Table 7-13 Fuser assembly (simplex)

Ref	Description	Part number	Qty
	FUSER ASSEMBLY	RM1-1828-000CN (110v simplex)	1
	FUSER ASSEMBLY	RM1-1829-000CN (220v simplex)	1
2	ARM, PAPER RETAINER, LEFT	RC2-0253-000CN	1
3	ARM, PAPER RETAINER, RIGHT	RC2-0254-000CN	1
6	RETAINER, PAPER	RC2-0269-000CN	1

FUSER ASS'Y (DUPLEX)

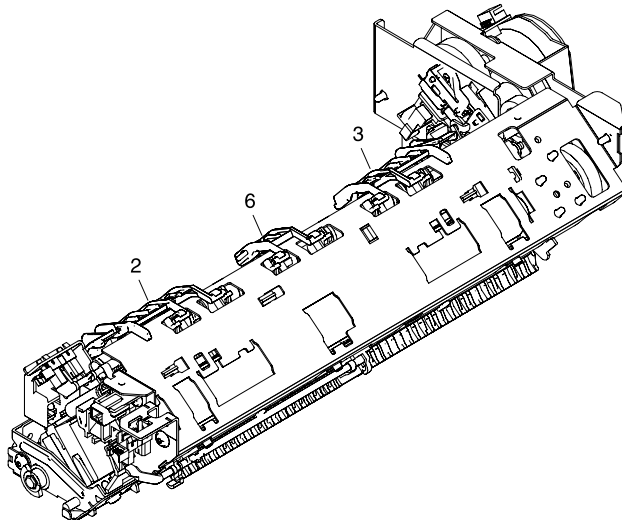


Figure 7-12 Fuser assembly (duplex)

Table 7-14 Fuser assembly (duplex)

Ref	Description	Part number	Qty
	FUSER ASSEMBLY	RM1-1824-000CN (110v duplex)	
	FUSER ASSEMBLY	RM1-1825-000CN (220v duplex)	
2	ARM, PAPER RETAINER, LEFT	RC2-0215-000CN	1
3	ARM, PAPER RETAINER, RIGHT	RC2-0216-000CN	1
6	RETAINER, PAPER	RC2-0269-000CN	1

DUPLEXING DRIVE ASS'Y

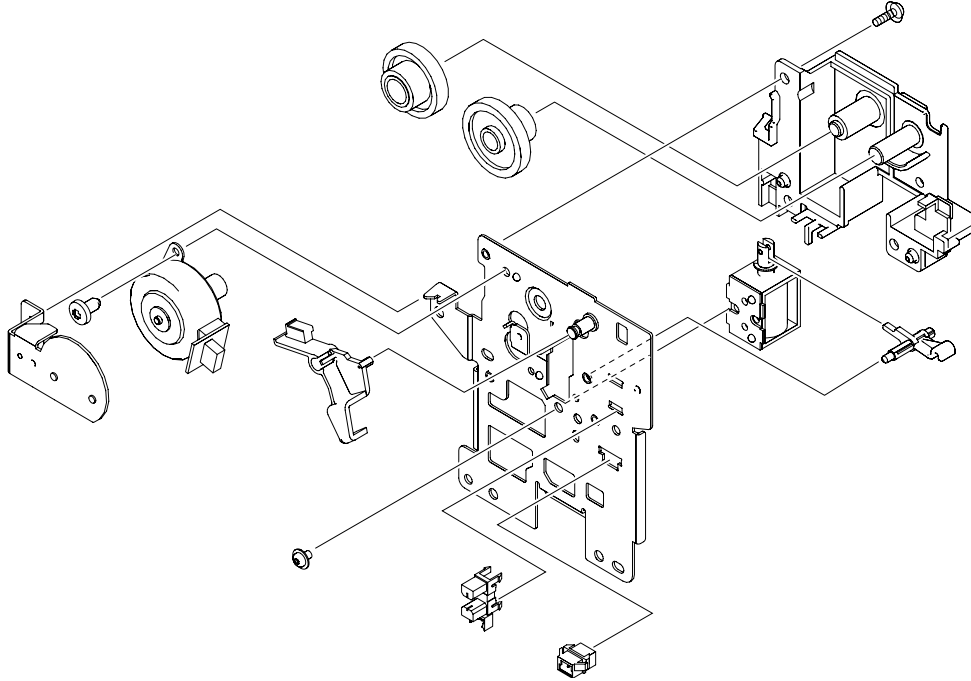


Figure 7-13 Duplexing drive assembly

Table 7-15 Duplexing drive assembly

Ref	Description	Part number	Qty
	DUPLEXING DRIVE ASSEMBLY	RM1-1832-000CN	1

MEMORY-CARD READER ASS'Y

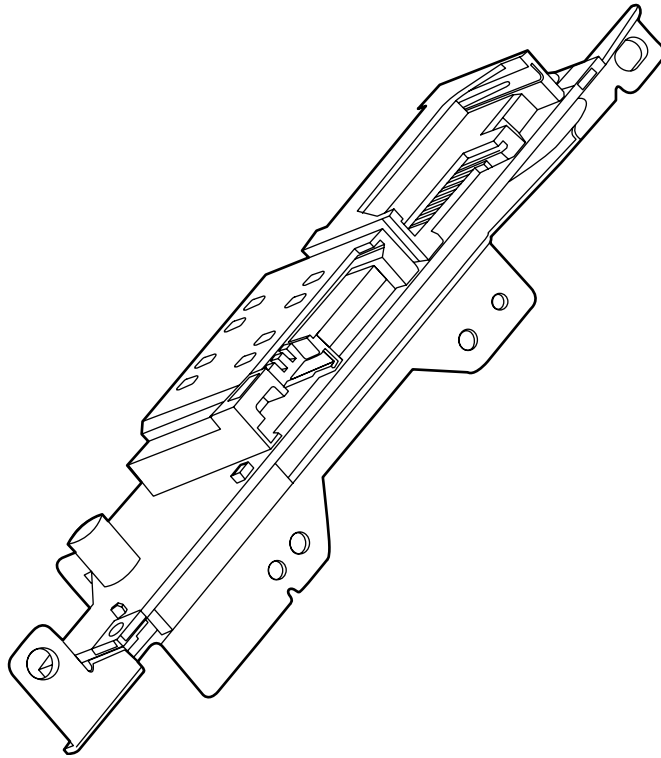


Figure 7-14 Memory-card reader assembly

Table 7-16 Memory-card reader assembly

Ref	Description	Part number	Qty
	MEMORY-CARD READER ASSEMBLY	Q7821-67901 (DTN model only)	

PCB ASS'Y LOCATION DIAGRAM

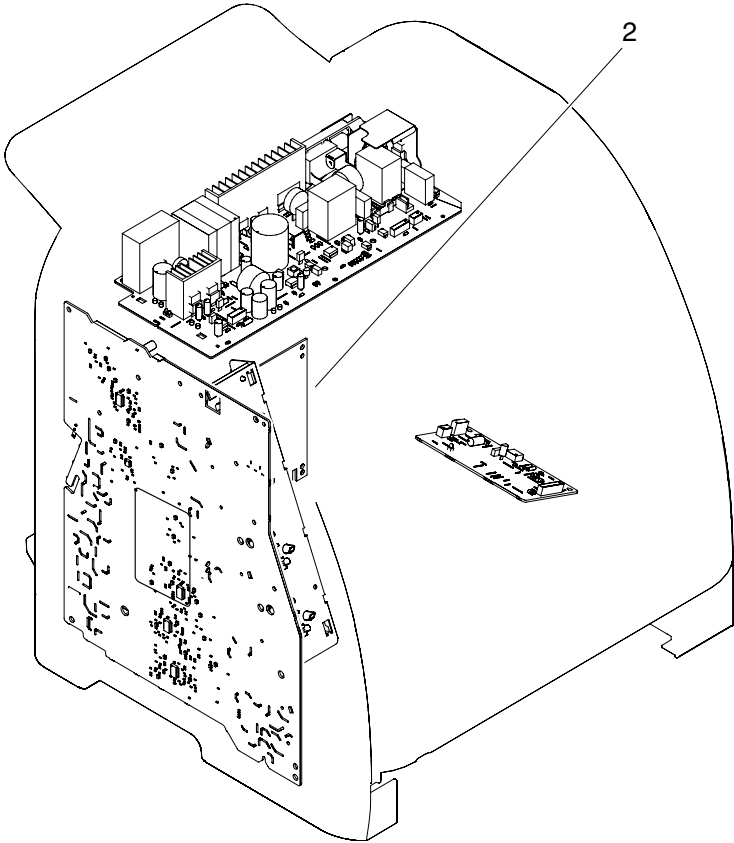


Figure 7-15 PCA assembly location

Table 7-17 PCA assembly location

Ref	Description	Part number	Qty
2	DC CONTROLLER PCA ASSEMBLY	RM1-3423-000CN	1

Input devices

CASSETTE

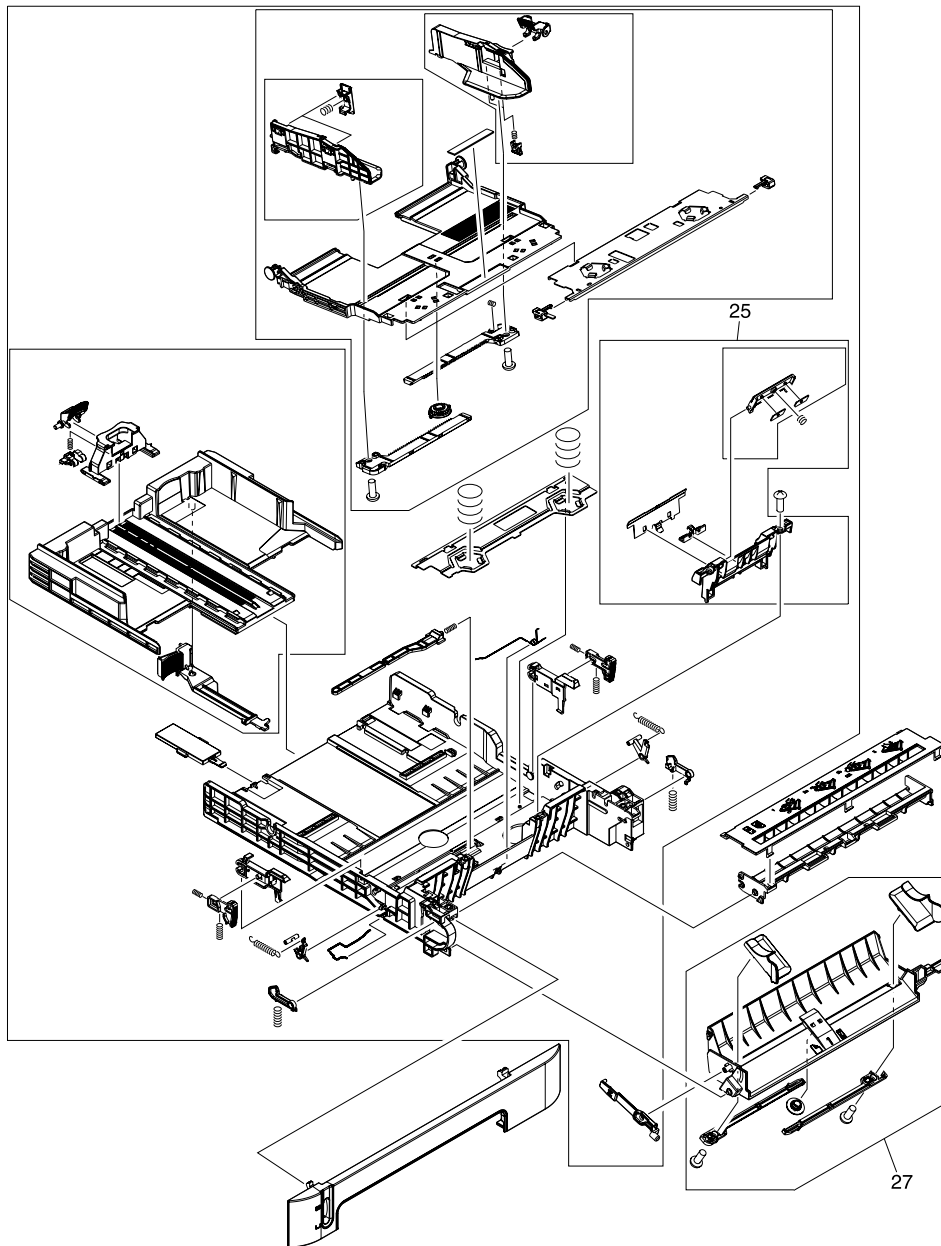


Figure 7-16 Tray 2 input tray (cassette)

Table 7-18 Tray 2 input tray (cassette)

Ref	Description	Part number	Qty
	CASSETTE	RM1-1916-050CN	1
25	SEPARATION ASSEMBLY	RM1-1922-000CN	1
27	FEED ASSEMBLY	RM1-1923-000CN	1

ASSEMBLY LOCATION DIAGRAM

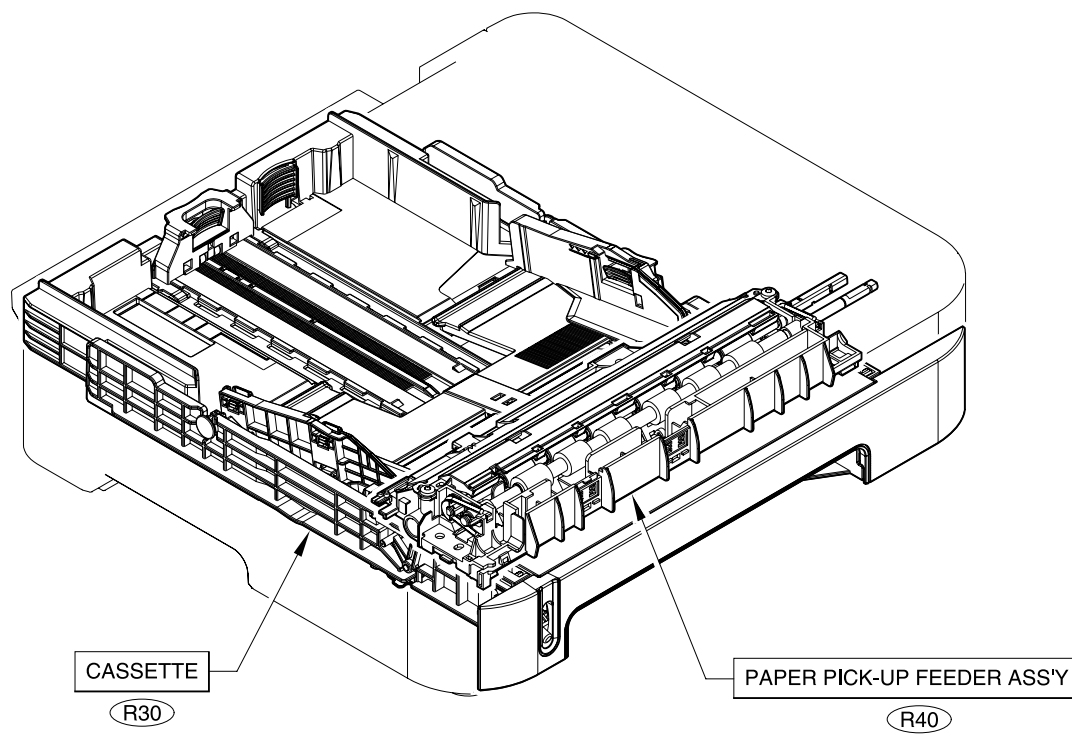


Figure 7-17 250-sheet input tray (cassette)

Table 7-19 250-sheet input tray (cassette)

Ref	Description	Part number	Qty
R30	CASSETTE	RM1-1945-000CN	RF
R40	PAPER PICKUP ROLLER	RC1-5440-000CN	RF

INTERNAL COMPONENTS

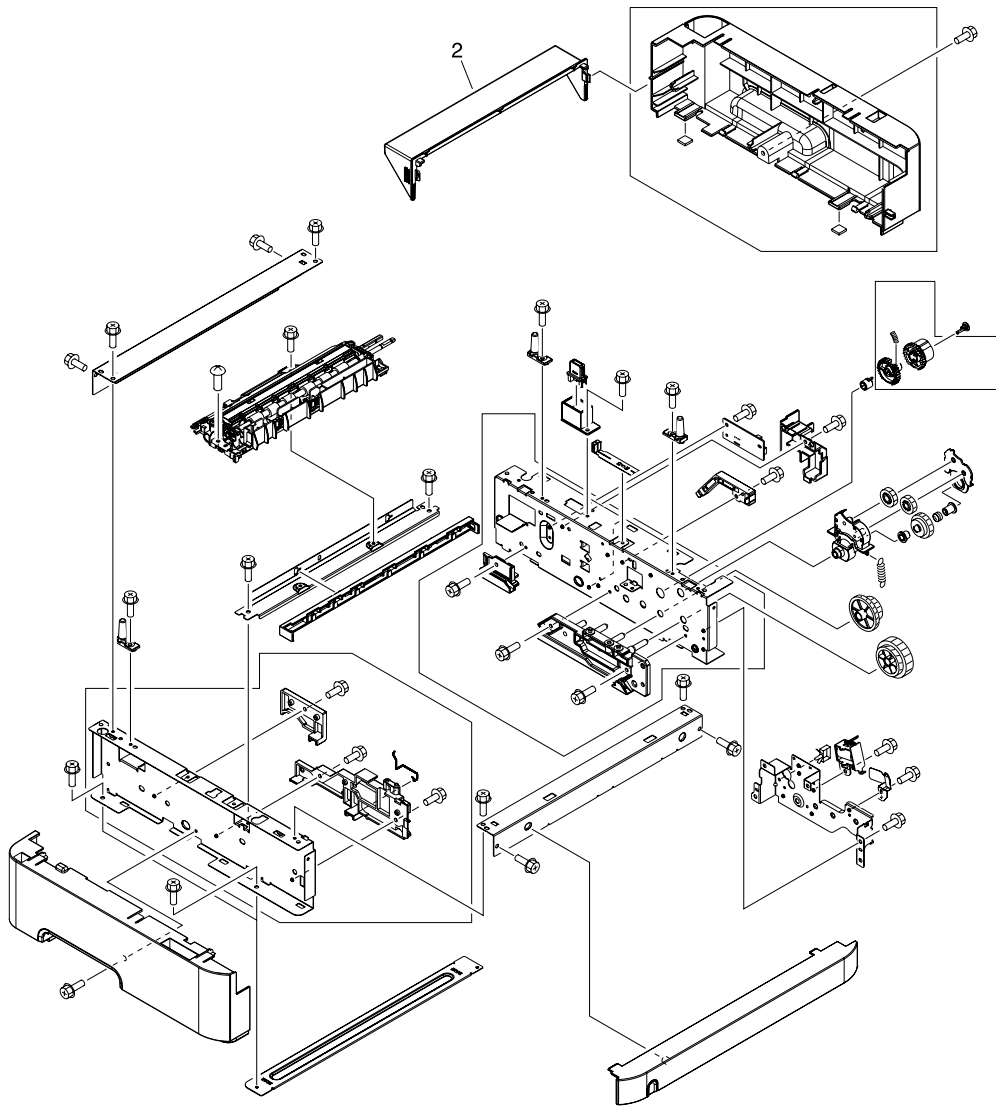


Figure 7-18 250-sheet input tray internal components

Table 7-20 250-sheet input tray internal components

Ref	Description	Part number	Qty
2	COVER, CASSETTE DUST	RC1-5200-000CN	1

PAPER PICK-UP FEEDER ASS'Y

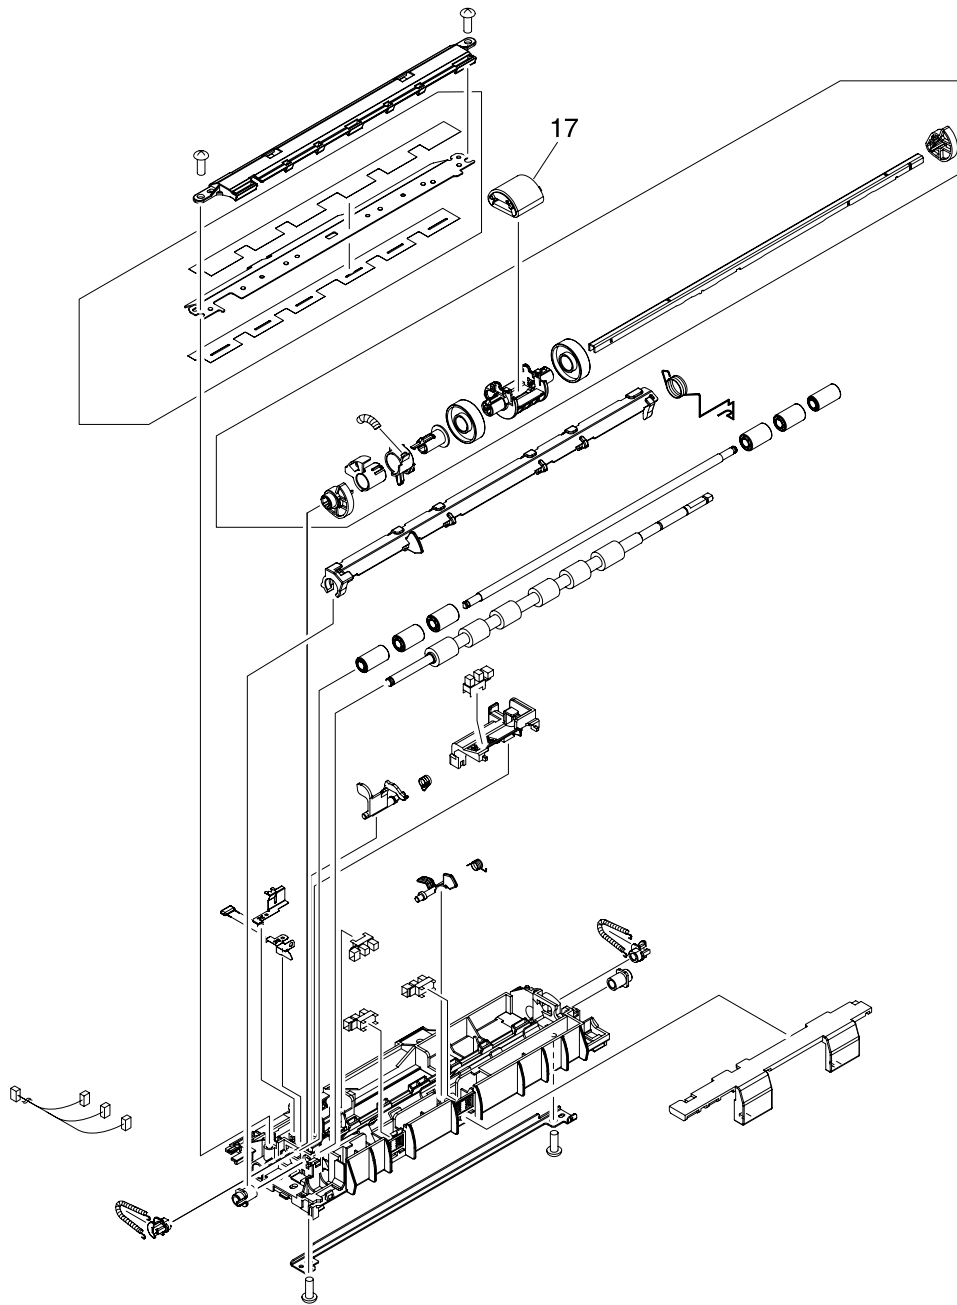


Figure 7-19 Paper pick-up feeder assembly (Tray 2)

Table 7-21 Paper pick-up feeder assembly for Tray 2

Ref	Description	Part number	Qty
17	ROLLER, PAPER PICKUP	RC1-5440-000CN	1

CASSETTE

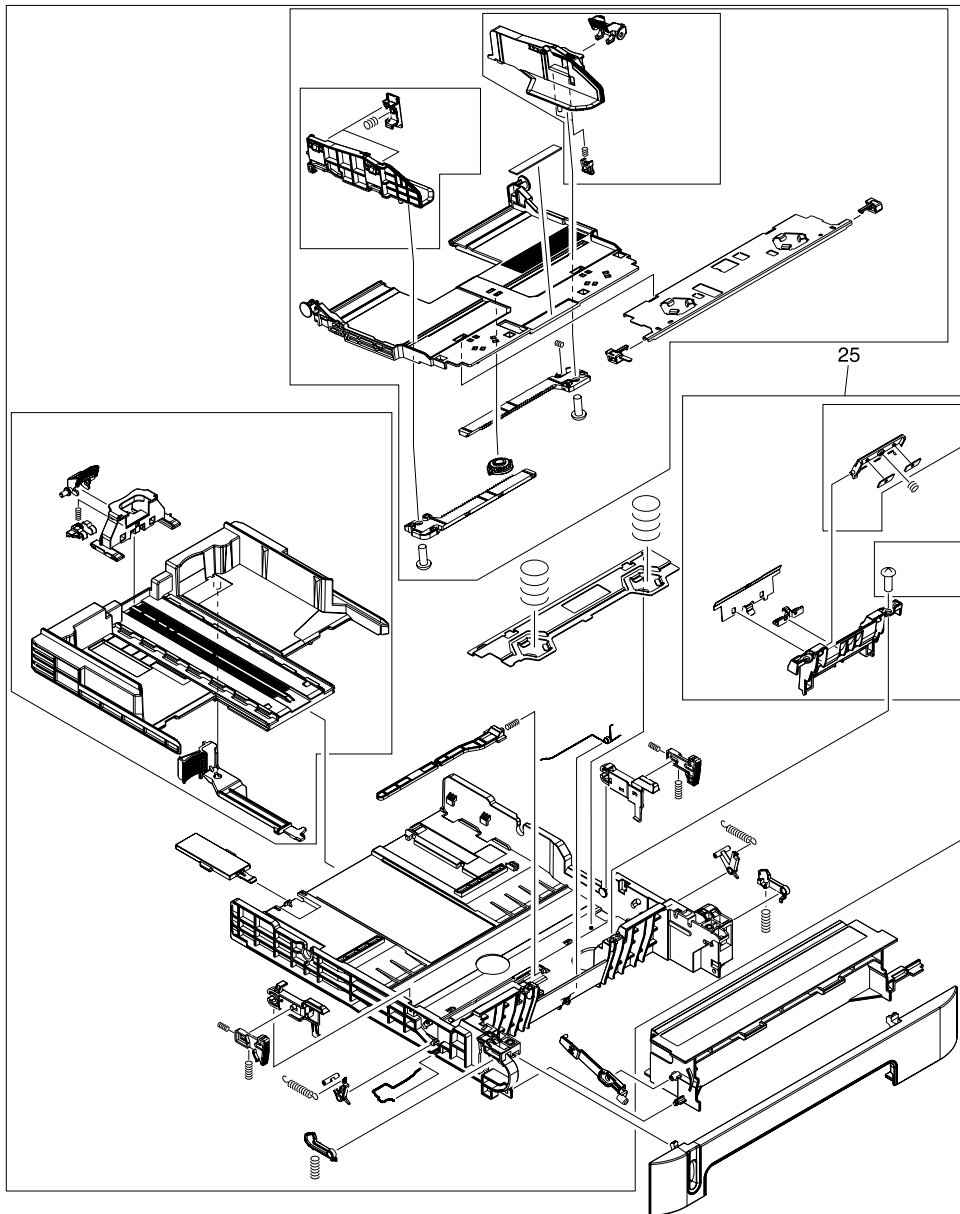


Figure 7-20 Tray 3 input tray (cassette)

Table 7-22 Tray 3 input tray (cassette)

Ref	Description	Part number	Qty
25	CASSETTE	RM1-1945-000CN	1
	PAPER PICKUP ROLLER	RC1-5440-000CN	
	SEPARATION ASSEMBLY	RM1-1922-000CN	1

PAPER PICK-UP FEEDER ASS'Y (Tray 3)

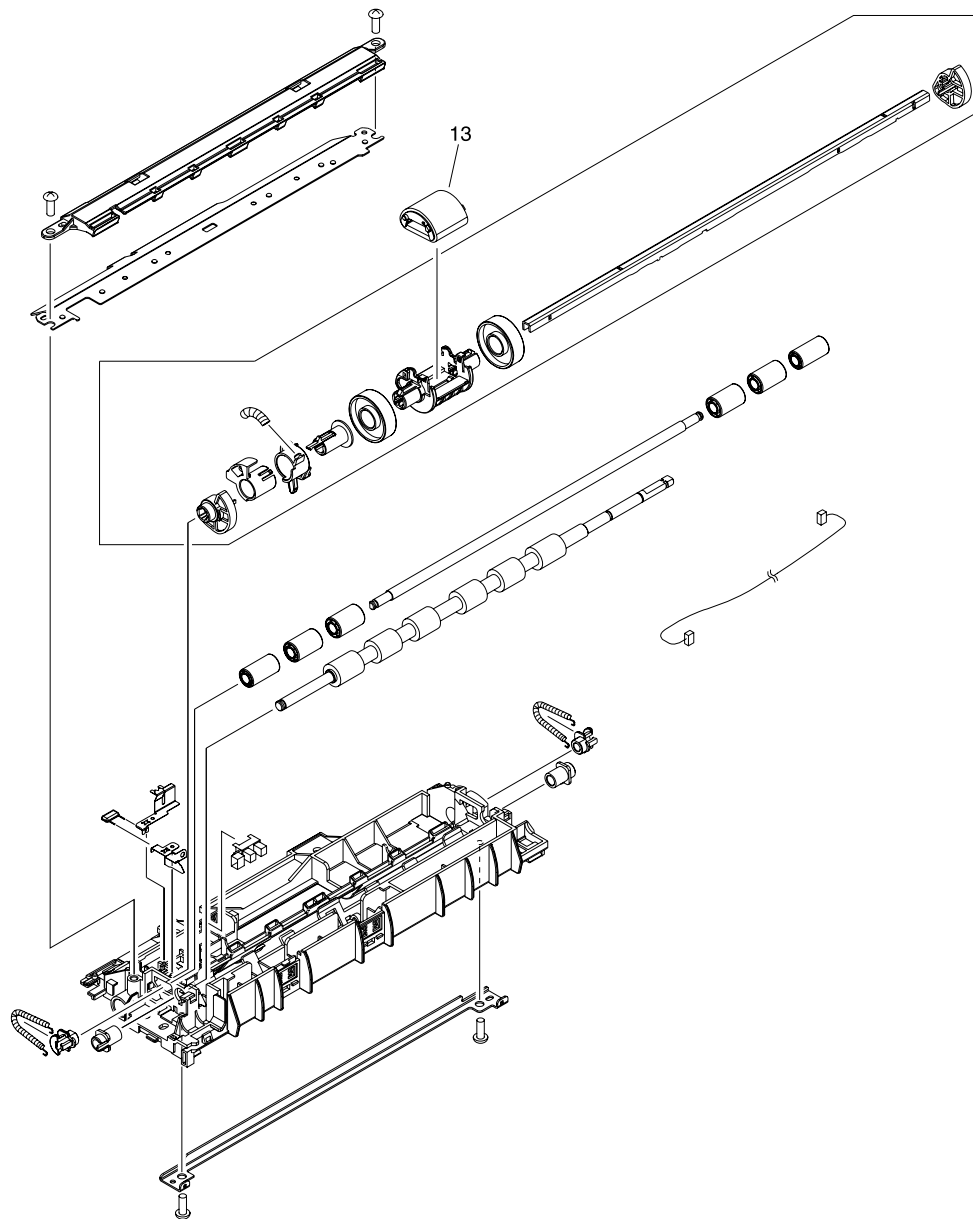


Figure 7-21 Paper pickup feeder assembly (Tray 3)

Table 7-23 Paper pickup feeder assembly (Tray 3)

Ref	Description	Part number	Qty
13	ROLLER, PAPER PICKUP	RC1-5440-000CN	1

PCB ASS'Y LOCATION DIAGRAM (Tray 3)

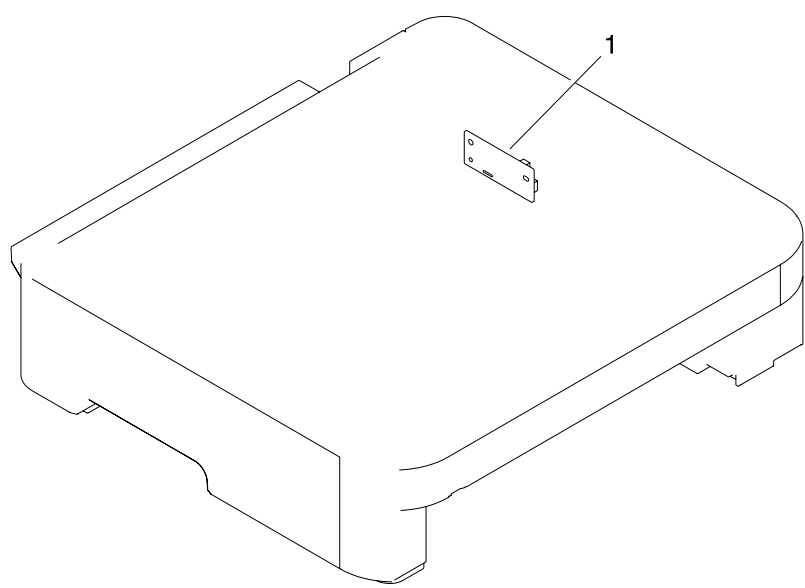


Figure 7-22 PCA assembly location in optional Tray 3

Diagrams

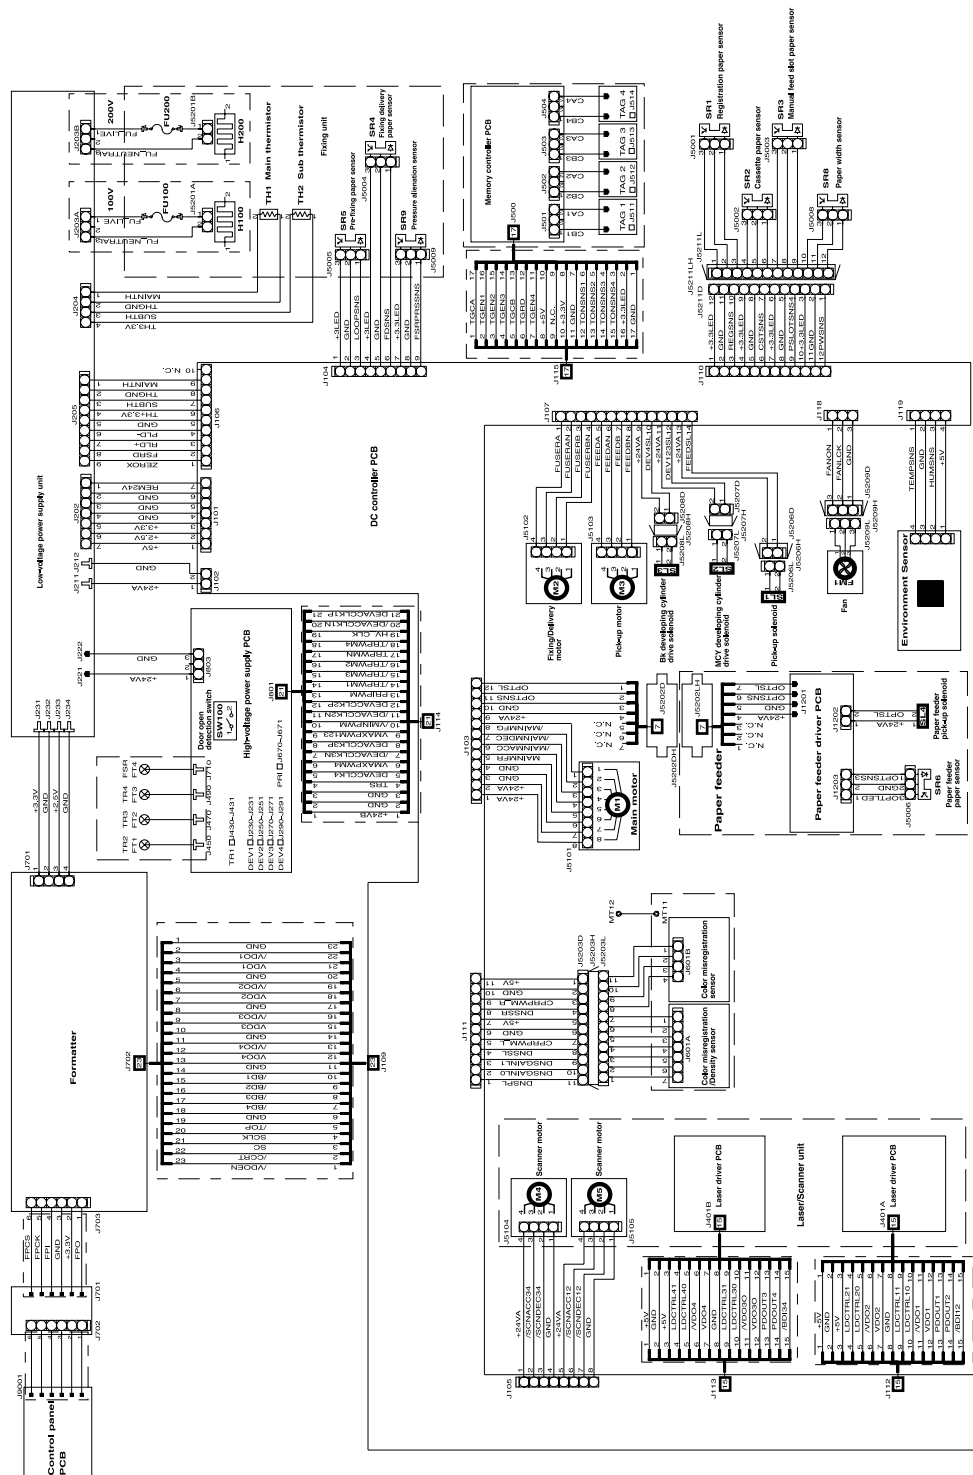


Figure 7-23 General circuit diagram

Alphabetical parts list

Table 7-24 Alphabetical parts list

Description	Part number	Table and page
ARM, PAPER RETAINER, LEFT	RC2-0253-000CN	Fuser assembly (simplex) on page 201
ARM, PAPER RETAINER, LEFT	RC2-0215-000CN	Fuser assembly (duplex) on page 203
ARM, PAPER RETAINER, RIGHT	RC2-0254-000CN	Fuser assembly (simplex) on page 201
ARM, PAPER RETAINER, RIGHT	RC2-0216-000CN	Fuser assembly (duplex) on page 203
CASSETTE	RM1-1916-050CN	Assembly locations - simplex model on page 183
CASSETTE	RM1-1916-050CN	Assembly locations - duplex models on page 185
CASSETTE	RM1-1916-050CN	Tray 2 input tray (cassette) on page 211
CASSETTE	RM1-1945-000CN	250-sheet input tray (cassette) on page 213
CASSETTE	RM1-1945-000CN	Tray 3 input tray (cassette) on page 219
CONTROL PANEL ASSEMBLY	RM1-1861-000CN	Assembly locations - simplex model on page 183
CONTROL PANEL ASSEMBLY	RM1-1861-000CN	Assembly locations - duplex models on page 185
CONTROL PANEL ASSEMBLY	RM1-1861-000CN	Upper assembly cover - duplex models on page 191
CONTROL PANEL ASSEMBLY	RM1-1861-000CN	Control panel assembly on page 199
COVER, CASSETTE DUST	RC1-5200-000CN	External panels and covers on page 187
COVER, CASSETTE DUST	RC1-5200-000CN	250-sheet input tray internal components on page 215
COVER, CASSETTE, LEFT	RC1-5184-000CN	External panels and covers on page 187
COVER, CASSETTE, RIGHT	RC1-5188-030CN	External panels and covers on page 187
COVER, FACE-DOWN	RC1-5173-000CN	External panels and covers on page 187
COVER, INSIDE, UPPER	RC1-5178-040CN	Upper assembly cover - simplex model on page 189
COVER, INSIDE, UPPER	RC1-5179-000CN	Upper assembly cover - duplex models on page 191

Table 7-24 Alphabetical parts list (continued)

Description	Part number	Table and page
COVER, LEFT	RC1-5183-000CN	External panels and covers on page 187
COVER, UPPER FACE	RC1-5175-000CN	Upper assembly cover - duplex models on page 191
DC CONTROLLER PCA ASSEMBLY	RM1-3423-000CN	Internal components (3 of 3) on page 197
DC CONTROLLER PCA ASSEMBLY	RM1-3423-000CN	PCA assembly location on page 209
DUPLEXING DRIVE ASSEMBLY	RM1-1832-000CN (duplex)	Assembly locations - duplex models on page 185
DUPLEXING DRIVE ASSEMBLY	RM1-1832-000CN	Internal components (1 of 3) on page 193
DUPLEXING DRIVE ASSEMBLY	RM1-1832-000CN	Duplexing drive assembly on page 205
ELECT.TRANSPORT BELT (ETB) ASSEMBLY	RM1-1892-000CN (duplex)	Internal components (2 of 3) on page 195
ELECT.TRANSPORT BELT (ETB) ASSEMBLY	RM1-1891-000CN (simplex)	Internal components (2 of 3) on page 195
FEED ASSEMBLY	RM1-1923-000CN	Tray 2 input tray (cassette) on page 211
FRONT DOOR ASSEMBLY	RM1-1856-000CN (simplex)	External panels and covers on page 187
FRONT DOOR ASSEMBLY	RM1-1857-000CN (duplex)	External panels and covers on page 187
FUSER ASSEMBLY	RM1-1828-000CN (110v) or RM1-1829-000CN (220v)	Assembly locations - simplex model on page 183
FUSER ASSEMBLY	RM1-1824-000CN (110v) or RM1-1825-000CN (220v)	Assembly locations - duplex models on page 185
FUSER ASSEMBLY	RM1-1828-000CN (110v simplex)	Internal components (2 of 3) on page 195
FUSER ASSEMBLY	RM1-1829-000CN (220v simplex)	Internal components (2 of 3) on page 195
FUSER ASSEMBLY	RM1-1824-000CN (110v duplex)	Internal components (2 of 3) on page 195
FUSER ASSEMBLY	RM1-1825-000CN (220v duplex)	Internal components (2 of 3) on page 195
FUSER ASSEMBLY	RM1-1828-000CN (110v simplex)	Fuser assembly (simplex) on page 201
FUSER ASSEMBLY	RM1-1829-000CN (220v simplex)	Fuser assembly (simplex) on page 201
FUSER ASSEMBLY	RM1-1824-000CN (110v duplex)	Fuser assembly (duplex) on page 203

Table 7-24 Alphabetical parts list (continued)

Description	Part number	Table and page
FUSER ASSEMBLY	RM1-1825-000CN (220v duplex)	Fuser assembly (duplex) on page 203
MEMORY-CARD READER ASSEMBLY	Q7821-67901 (DTN model only)	Assembly locations - duplex models on page 185
MEMORY-CARD READER ASSEMBLY	Q7821-67901 (DTN model only)	Memory-card reader assembly on page 207
PAPER DELIVERY TRAY ASSEMBLY	RM1-1859-020CN	External panels and covers on page 187
PAPER PICKUP ROLLER	RC1-5440-000CN	250-sheet input tray (cassette) on page 213
PAPER PICKUP ROLLER	RC1-5440-000CN	Tray 3 input tray (cassette) on page 219
PLATE, REAR	RC1-5227-020CN	External panels and covers on page 187
RETAINER, PAPER	RC2-0269-000CN	Fuser assembly (simplex) on page 201
RETAINER, PAPER	RC2-0269-000CN	Fuser assembly (duplex) on page 203
RIGHT COVER ASSEMBLY	RM1-1860-000CN	External panels and covers on page 187
ROLLER, PAPER PICKUP	RC1-5440-000CN	Paper pick-up feeder assembly for Tray 2 on page 217
ROLLER, PAPER PICKUP	RC1-5440-000CN	Paper pickup feeder assembly (Tray 3) on page 221
SEPARATION ASSEMBLY	RM1-1922-000CN	Tray 2 input tray (cassette) on page 211
SEPARATION ASSEMBLY	RM1-1922-000CN	Tray 3 input tray (cassette) on page 219
SPRING, GROUNDING	RC1-5147-000CN	Internal components (2 of 3) on page 195
UPPER COVER ASSEMBLY	RM1-1862-000CN (simplex)	Assembly locations - simplex model on page 183
UPPER COVER ASSEMBLY	RM1-1855-000CN (duplex)	Assembly locations - duplex models on page 185
UPPER COVER ASSEMBLY	RM1-1855-000CN (duplex)	External panels and covers on page 187
UPPER COVER ASSEMBLY	RM1-1862-000CN (simplex)	Upper assembly cover - simplex model on page 189
UPPER COVER ASSEMBLY	RM1-1855-000CN (duplex)	Upper assembly cover - duplex models on page 191

Numerical parts list

Table 7-25 Numerical parts list

Part number	Description	Table and page
Q7821-67901 (DTN model only)	MEMORY-CARD READER ASSEMBLY	Assembly locations - duplex models on page 185
Q7821-67901 (DTN model only)	MEMORY-CARD READER ASSEMBLY	Memory-card reader assembly on page 207
RC1-5147-000CN	SPRING, GROUNDING	Internal components (2 of 3) on page 195
RC1-5173-000CN	COVER, FACE-DOWN	External panels and covers on page 187
RC1-5175-000CN	COVER, UPPER FACE	Upper assembly cover - duplex models on page 191
RC1-5178-040CN	COVER, INSIDE, UPPER	Upper assembly cover - simplex model on page 189
RC1-5179-000CN	COVER, INSIDE, UPPER	Upper assembly cover - duplex models on page 191
RC1-5183-000CN	COVER, LEFT	External panels and covers on page 187
RC1-5184-000CN	COVER, CASSETTE, LEFT	External panels and covers on page 187
RC1-5188-030CN	COVER, CASSETTE, RIGHT	External panels and covers on page 187
RC1-5200-000CN	COVER, CASSETTE DUST	External panels and covers on page 187
RC1-5200-000CN	COVER, CASSETTE DUST	250-sheet input tray internal components on page 215
RC1-5227-020CN	PLATE, REAR	External panels and covers on page 187
RC1-5440-000CN	PAPER PICKUP ROLLER	250-sheet input tray (cassette) on page 213
RC1-5440-000CN	ROLLER, PAPER PICKUP	Paper pick-up feeder assembly for Tray 2 on page 217
RC1-5440-000CN	PAPER PICKUP ROLLER	Tray 3 input tray (cassette) on page 219
RC1-5440-000CN	ROLLER, PAPER PICKUP	Paper pickup feeder assembly (Tray 3) on page 221
RC2-0215-000CN	ARM, PAPER RETAINER, LEFT	Fuser assembly (duplex) on page 203
RC2-0216-000CN	ARM, PAPER RETAINER, RIGHT	Fuser assembly (duplex) on page 203
RC2-0253-000CN	ARM, PAPER RETAINER, LEFT	Fuser assembly (simplex) on page 201

Table 7-25 Numerical parts list (continued)

Part number	Description	Table and page
RC2-0254-000CN	ARM, PAPER RETAINER, RIGHT	Fuser assembly (simplex) on page 201
RC2-0269-000CN	RETAINER, PAPER	Fuser assembly (simplex) on page 201
RC2-0269-000CN	RETAINER, PAPER	Fuser assembly (duplex) on page 203
RM1-1824-000CN (110v duplex)	FUSER ASSEMBLY	Internal components (2 of 3) on page 195
RM1-1824-000CN (110v duplex)	FUSER ASSEMBLY	Fuser assembly (duplex) on page 203
RM1-1824-000CN (110v) or RM1-1825-000CN (220v)	FUSER ASSEMBLY	Assembly locations - duplex models on page 185
RM1-1825-000CN (220v duplex)	FUSER ASSEMBLY	Internal components (2 of 3) on page 195
RM1-1825-000CN (220v duplex)	FUSER ASSEMBLY	Fuser assembly (duplex) on page 203
RM1-1828-000CN (110v simplex)	FUSER ASSEMBLY	Internal components (2 of 3) on page 195
RM1-1828-000CN (110v simplex)	FUSER ASSEMBLY	Fuser assembly (simplex) on page 201
RM1-1828-000CN (110v) or RM1-1829-000CN (220v)	FUSER ASSEMBLY	Assembly locations - simplex model on page 183
RM1-1829-000CN (220v simplex)	FUSER ASSEMBLY	Internal components (2 of 3) on page 195
RM1-1829-000CN (220v simplex)	FUSER ASSEMBLY	Fuser assembly (simplex) on page 201
RM1-1832-000CN	DUPLEXING DRIVE ASSEMBLY	Internal components (1 of 3) on page 193
RM1-1832-000CN	DUPLEXING DRIVE ASSEMBLY	Duplexing drive assembly on page 205
RM1-1832-000CN (duplex)	DUPLEXING DRIVE ASSEMBLY	Assembly locations - duplex models on page 185
RM1-1855-000CN (duplex)	UPPER COVER ASSEMBLY	Assembly locations - duplex models on page 185
RM1-1855-000CN (duplex)	UPPER COVER ASSEMBLY	External panels and covers on page 187
RM1-1855-000CN (duplex)	UPPER COVER ASSEMBLY	Upper assembly cover - duplex models on page 191
RM1-1856-000CN (simplex)	FRONT DOOR ASSEMBLY	External panels and covers on page 187
RM1-1857-000CN (duplex)	FRONT DOOR ASSEMBLY	External panels and covers on page 187

Table 7-25 Numerical parts list (continued)

Part number	Description	Table and page
RM1-1859-020CN	PAPER DELIVERY TRAY ASSEMBLY	External panels and covers on page 187
RM1-1860-000CN	RIGHT COVER ASSEMBLY	External panels and covers on page 187
RM1-1861-000CN	CONTROL PANEL ASSEMBLY	Assembly locations - simplex model on page 183
RM1-1861-000CN	CONTROL PANEL ASSEMBLY	Assembly locations - duplex models on page 185
RM1-1861-000CN	CONTROL PANEL ASSEMBLY	Upper assembly cover - duplex models on page 191
RM1-1861-000CN	CONTROL PANEL ASSEMBLY	Control panel assembly on page 199
RM1-1862-000CN (simplex)	UPPER COVER ASSEMBLY	Assembly locations - simplex model on page 183
RM1-1862-000CN (simplex)	UPPER COVER ASSEMBLY	Upper assembly cover - simplex model on page 189
RM1-1891-000CN (simplex)	ELECT.TRANSPORT BELT (ETB) ASSEMBLY	Internal components (2 of 3) on page 195
RM1-1892-000CN (duplex)	ELECT.TRANSPORT BELT (ETB) ASSEMBLY	Internal components (2 of 3) on page 195
RM1-1916-050CN	CASSETTE	Assembly locations - simplex model on page 183
RM1-1916-050CN	CASSETTE	Assembly locations - duplex models on page 185
RM1-1916-050CN	CASSETTE	Tray 2 input tray (cassette) on page 211
RM1-1922-000CN	SEPARATION ASSEMBLY	Tray 2 input tray (cassette) on page 211
RM1-1922-000CN	SEPARATION ASSEMBLY	Tray 3 input tray (cassette) on page 219
RM1-1923-000CN	FEED ASSEMBLY	Tray 2 input tray (cassette) on page 211
RM1-1945-000CN	CASSETTE	250-sheet input tray (cassette) on page 213
RM1-1945-000CN	CASSETTE	Tray 3 input tray (cassette) on page 219
RM1-3423-000CN	DC CONTROLLER PCA ASSEMBLY	Internal components (3 of 3) on page 197
RM1-3423-000CN	DC CONTROLLER PCA ASSEMBLY	PCA assembly location on page 209