

7.7.4 SPOOL Error

• **Description**

SPOOL (simultaneous peripheral operations online) is the process Windows uses to manage print jobs. Jobs are processed and then stored on the hard disk until the printer is ready to accept them

Check and Cause	Solution
1. Insufficient space on the hard disk in the directory assigned for the basic spool.	1. Delete any unnecessary files to provide more space for spool storage.
2. If previous printing errors were not solved.	2. There may be files from previous failed print jobs on the hard disk with the name in the form '*.jnl'. Delete these files and Reboot Windows to restart the printer.
3. There may be conflict with other drivers or programs.	3. Shut down all other programs except the current one, if possible.
4. When an application program or the printer driver is damaged.	4. Delete the printer driver completely and reinstall it.
5. When some files related to the OS are damaged or virus infected.	5. After rebooting the computer, check for viruses, restore the damaged files and reinstall the application program which is not working properly.
6. Memory is less than suggested.	6. Add up more memory to the PC.



How to delete the data in the spool manager.

In the spool manager, the installed drivers and the list of the documents waiting to be printed are shown. Select the document to be deleted and check delete in the menu.

If the job you are deleting is the current job when you delete the job data that has already been transferred to the printer's memory will still be printed. If there is a problem with the printer (out of toner, offline, out of paper etc.) the job may take a long time to delete as it must wait for a time out.

8. Exploded Views and Parts List


8.1 Main Exploded View	page(8-2)
8.2 Top Cover Exploded View	page(8-5)
8.3 OPE Ass'y Exploded View	page(8-7)
8.4 Scan Upper Ass'y Exploded View	page(8-9)
8.5 Main Frame Exploded View	page(8-11)
8.6 Fuser Unit Exploded View	page(8-14)
8.7 Exit Cover Exploded View	page(8-16)
8.8 Cassette Unit Exploded View	page(8-18)

- Deal drawings and service parts are declared for the items with higher rate of inferiority and replaceable in the level of service description only.
- If inferiority occurs, you can replace the parts by the unit declared in deal drawings and service items.

Way to observe Part Code & Description

Part code and Description is quoted and controlled by determined standard. Refer to this determined standard, it will help with ordering Part.

- There are two kinds of Part code inscription type.

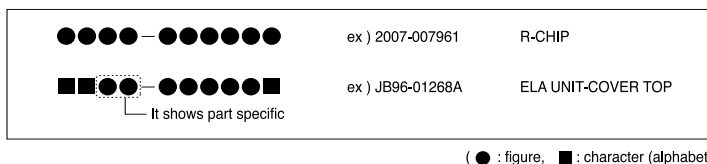


Type 1 : Controlled by Company : It can be commonly used for all kinds of product SEC produce. Mostly, electronics Parts.

Type 2 : Controlled by Division : It is used or one produce. Mostly, Mostly, mechanical Parts.

- **A/S privately used part** : It is only used for A/S .
- **Ass'y part** : Assembled by more than 2 Parts. If necessary part is not A/S Part, Ass'y part including necessary par can be used. It is shown in the diagram and drawing of SVC manual.
- Ass'y part and A/S privately used Part is distinguished by part Code and Description. The are inscription type 2. It is recognized by Part character and front side of description.

DIVISION	PART CODE	DESCRIPTION
A/S Private	**81-***** (JB81-00039A)	AS-***** (AS-USE)
ASS'Y Part	**75-***** (JB75-00068A)	MEC-***** (MEC-CHUTE)
ASS'Y Part	**92-***** (JB92-01131A)	PBA ***** (PBA MAIN-CONTROLLER)
ASS'Y Part	**97-***** (JB97-01089A)	MEA ***** (MEA UNIT-PULLEY IDLE)

8.1 Main Exploded View

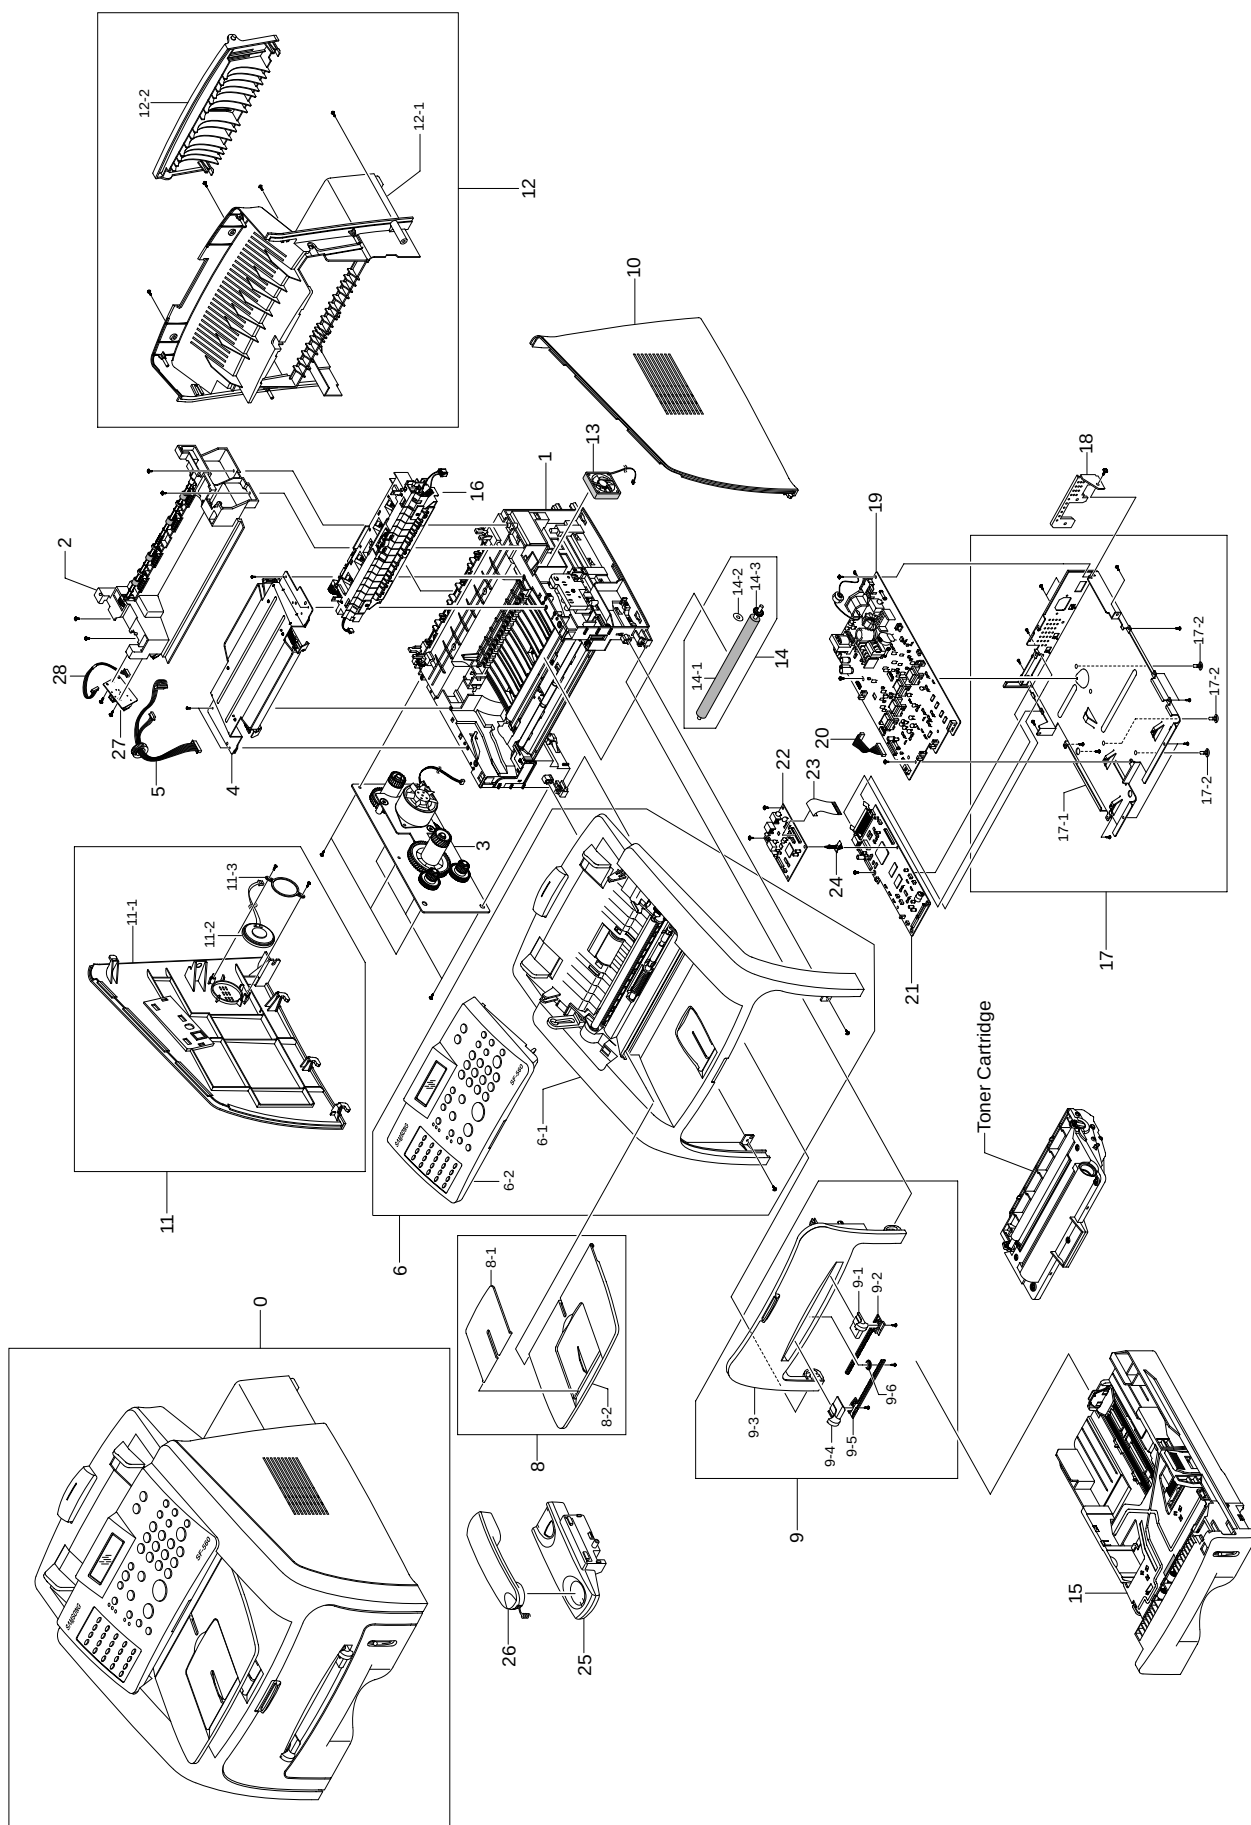

Main Exploded View Parts List

SA : Service Available

O : Service available X : Service not available

No.	Description	SEC.Code	Q'ty	SA	Remark
0	SF560 / SF-565P				
1	ELA HOU-UNIT FRAME_220V	JC96-02710A	1	O	⚠ 220V
	ELA HOU-UNIT FRAME_110V	JC96-02731A	1	O	⚠ 110V
2	MEA UNIT-COVER EXIT	JC97-01854A	1	O	
3	ELA UNIT-RX DRIVE	JC96-02733A	1	O	
4	UNIT-LSU	JC59-00018A	1	O	
5	CBF HARNESS-LSU	JC39-00242A	1	O	
6	ELA HOU-SCAN	*appendix reference	1	O	
6-1	ELA HOU-COVER TOP	JC96-02950A	1	O	
6-2	ELA HOU-OPE	JC96-02952A	1	O	
8	MEA UNIT-STACKER	JC97-01856A	1	O	
8-1	TRAY-M-STACKER A	JC63-00324A	1	X	
8-2	TRAY-M-STACKER B	JC63-00325A	1	X	
9	MEA UNIT-COVER FRONT	JC97-01746K	1	O	
9-1	ADJUST-M-MANUAL_R	JC70-00303F	1	O	
9-2	ADJUST RACK M-MANUAL	JC70-00304A	2	O	
9-3	COVER-M_FRONT	JC63-00103H	1	O	
9-4	ADJUST M-MANUAL-L	JC70-00302F	1	O	
9-5	GEAR-RACK_PINION	JC66-00387A	1	O	
10	COVER-M-SIDE R	JC63-00320A	1	O	
11	ELA HOU-COVER SIDE L	JC96-02974A	1	O	
11-1	COVER-M-SIDE L	JC63-00319A	1	X	
11-2	SPEAKER	3001-001494	1	O	
11-3	IPR-UNIT FIXING BRAC	GB70-10500A	1	O	
12	MEA UNIT-COVER REAR	JC97-01855A	1	O	
12-1	COVER-M-REAR	JC63-00321A	1	X	
12-2	COVER-M-FACE UP	JC63-00142D	1	X	
13	FAN-DC	JC31-00027A	1	O	
14	MEA ETC-TR	JC97-01793A	1	O	
14-1	ROLLER-TRANSFER ROLLER	JC66-00528A	1	O	
14-2	PPR-STACER_TR	JC72-00851A	1	X	
14-3	GEAR-TRANSFER	JC66-00395A	1	O	
15	MEA UNIT-CASSETTE	JC97-01750E	1	O	
16	ELA HOU-FUSER, 220V	JC96-02813A	1	O	⚠ 220V
	ELA HOU-FUSER, 110V	JC96-02812A	1	O	⚠ 110V
17	MEA UNIT-SHIELD ENGINE	JC97-01794A	1	O	
17-1	SHIELD-ENGINE, ROCKY	JC63-00144A	1	O	
17-2	SUPPORTER	6103-001056	3	O	


Main Exploded View Parts List

SA : Service Available

O : Service available X : Service not available

No.	Description	SEC.Code	Q'ty	SA	Remark
18	BRACKET-P-INLET, ROCKEY	JC61-00693A	1	O	
19	SMPS(V1), 110V	JC44-00060A	1	O	⚠ 110V
	SMPS(V2), 220V	JC44-00063A	1	O	⚠ 220V
20	CBF HARNESS-ENGINE	JC39-00240B	1	O	
21	PBA MAIN-NIKE2_LOW	JC92-01590A	1	O	SF-560
	PBA MAIN-NIKE2_LOW	JC92-01576A	1	O	SF-565P
22	PBA-LIU-NIKE2-LOW	*appendix reference	1	O	
23	CBF SIGNAL-LIU FFC	JC39-00317A	1	O	
24	SUPPORTER	6103-001047	2	O	
25	MEA-UNIT-CRADLE	JC97-01858A	1	O	
26	ELA HOU-HANDSET	JC96-01629F	1	O	
27	HOOK PBA	JC92-01570A	1	O	
28	HOOK HANESS	JC39-00311A	1	X	

8.2 Top Cover Exploded View

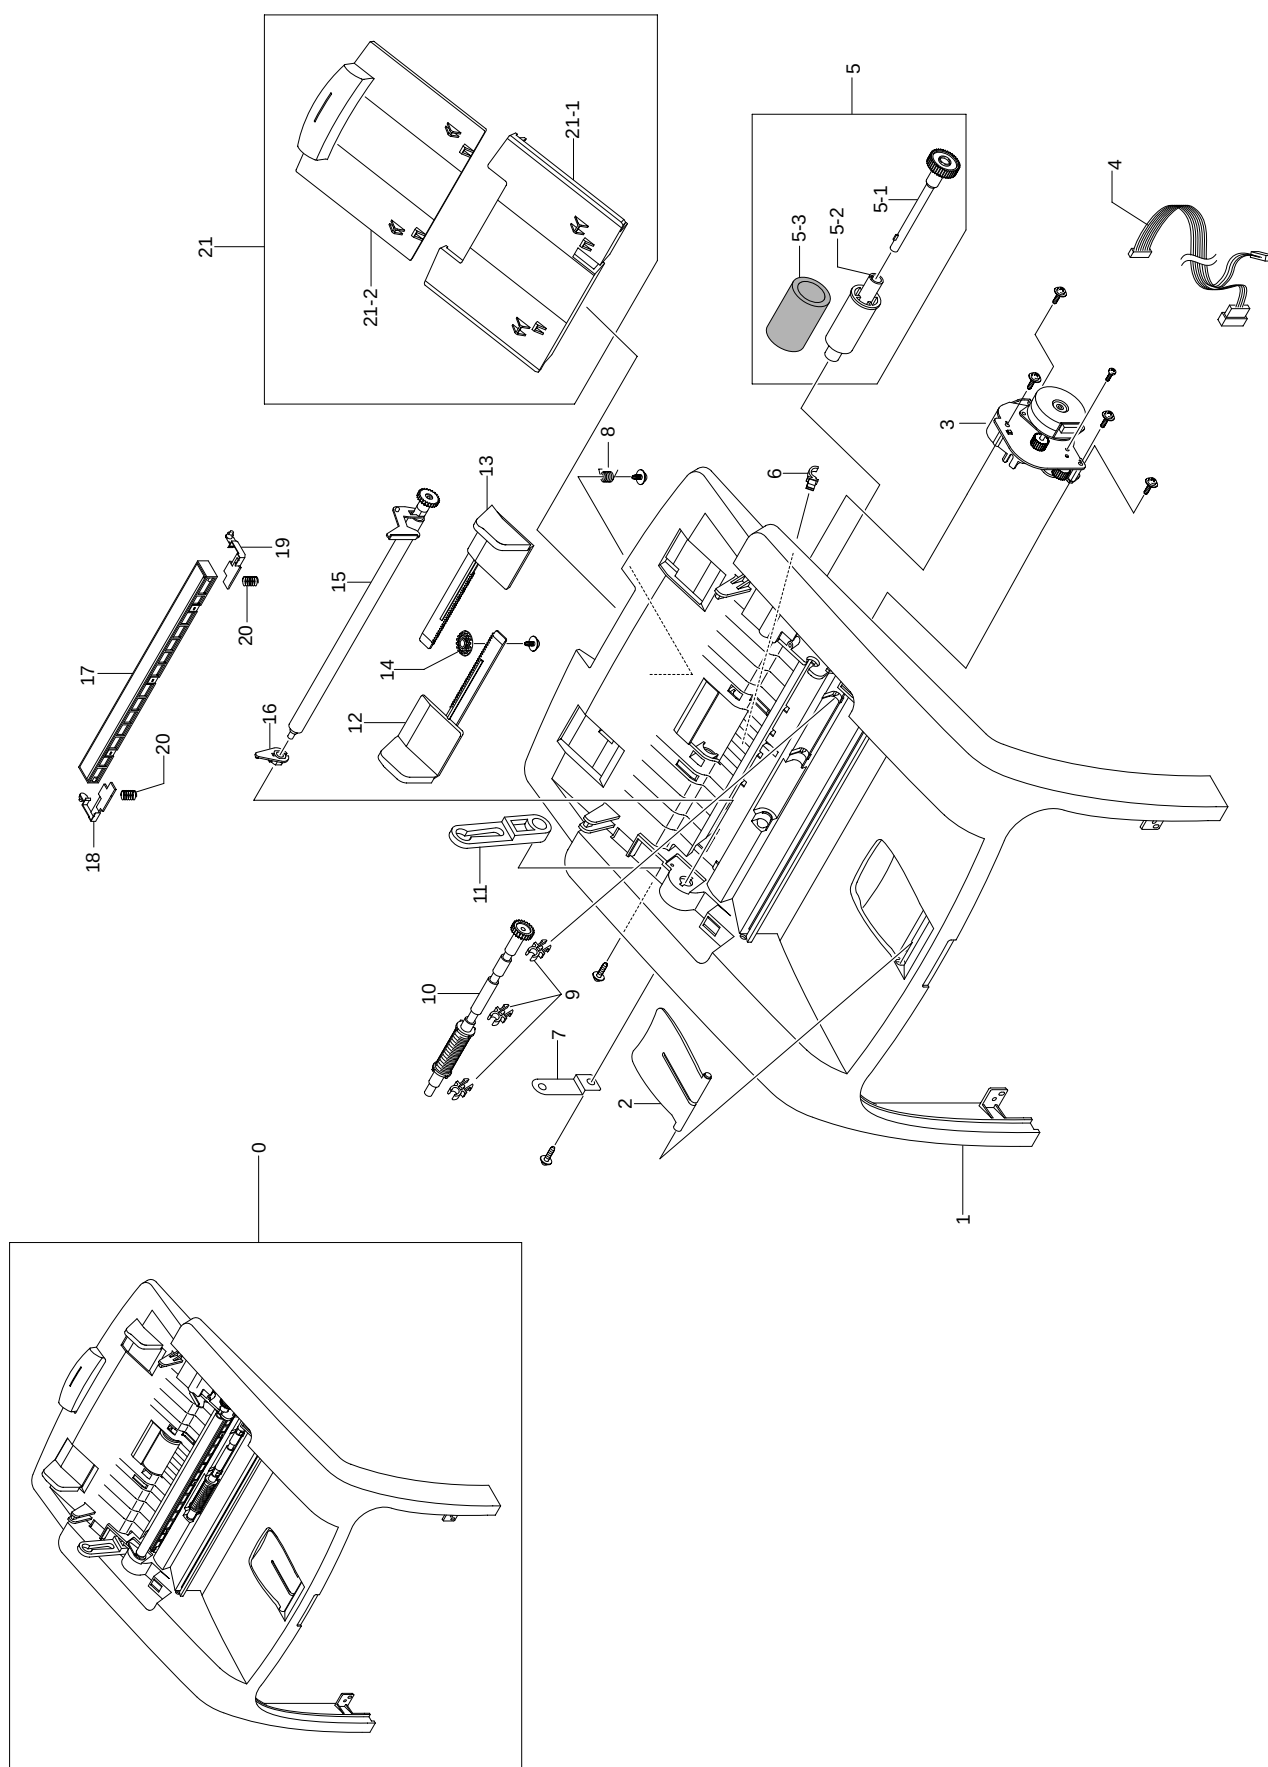


Top Cover Exploded View Parts List

SA : Service Available

O : Service available X : Service not available

No.	Description	SEC.Code	Q'ty	SA	Remark
0	ELA-HOU COVER TOP	JC96-02950A	1	O	
1	COVER-M_TOP	JC63-00323A	1	O	
2	PMO-STACKER RX	JC72-00973A	1	O	
3	ELA HOU-SCAN MOTOR	JC96-02949A	1	O	
4	CBF HARNESS-MOTOR	JC31-00032A	1	O	
5	ADF-SUB	*	1	X	
5-1	SHAFT-M-DRIVER ADF	JC66-00680A	1	O	
5-2	PMO-SLEEVE ADF	JB72-00136A	1	O	
5-3	MEC-ROLLER ADF	JB75-00052A	1	O	
6	PMO-BUSHING_F/DOWN	JC72-00387A	1	O	
7	PLATE-P_GROUND CIS	JC61-00865A	1	O	
8	SPRING-TS	6107-001224	1	X	
9	PMO-BUSHING TX	JC72-40744A	3	O	
10	SHAFT-M_EXIT 21	JB66-00204A	1	O	
11	LINK-M_SCAN OPEN	JC66-00681A	1	O	
12	GUIDE-M_DOC L	JC61-00858A	1	O	
13	GUIDE-M_DOC R	JC61-00859A	1	O	
14	GEAR-PINION	JB66-00126A	1	O	
15	MEC-ROLLER WHITE	JB75-00053A	1	O	
16	PMO-BEARING SHAFT	JC72-41191B	1	O	
17	CONTACT IMAGE SENSOR	0609-001174	1	O	
18	GUIDE-M_CIS L	JB61-00138A	1	O	
19	GUIDE-M_CIS R	JB61-00137A	1	O	
20	SPRING ETC-CIS	JB61-70938A	2	O	
21	MEA UNIT-CHUTE	JC97-01865A	1	O	
21-1	CHUTE-M_A	JC61-00860A	1	O	
21-2	CHUTE-M_B	JC61-00861A	1	O	

8.3 OPE Ass'y Exploded View

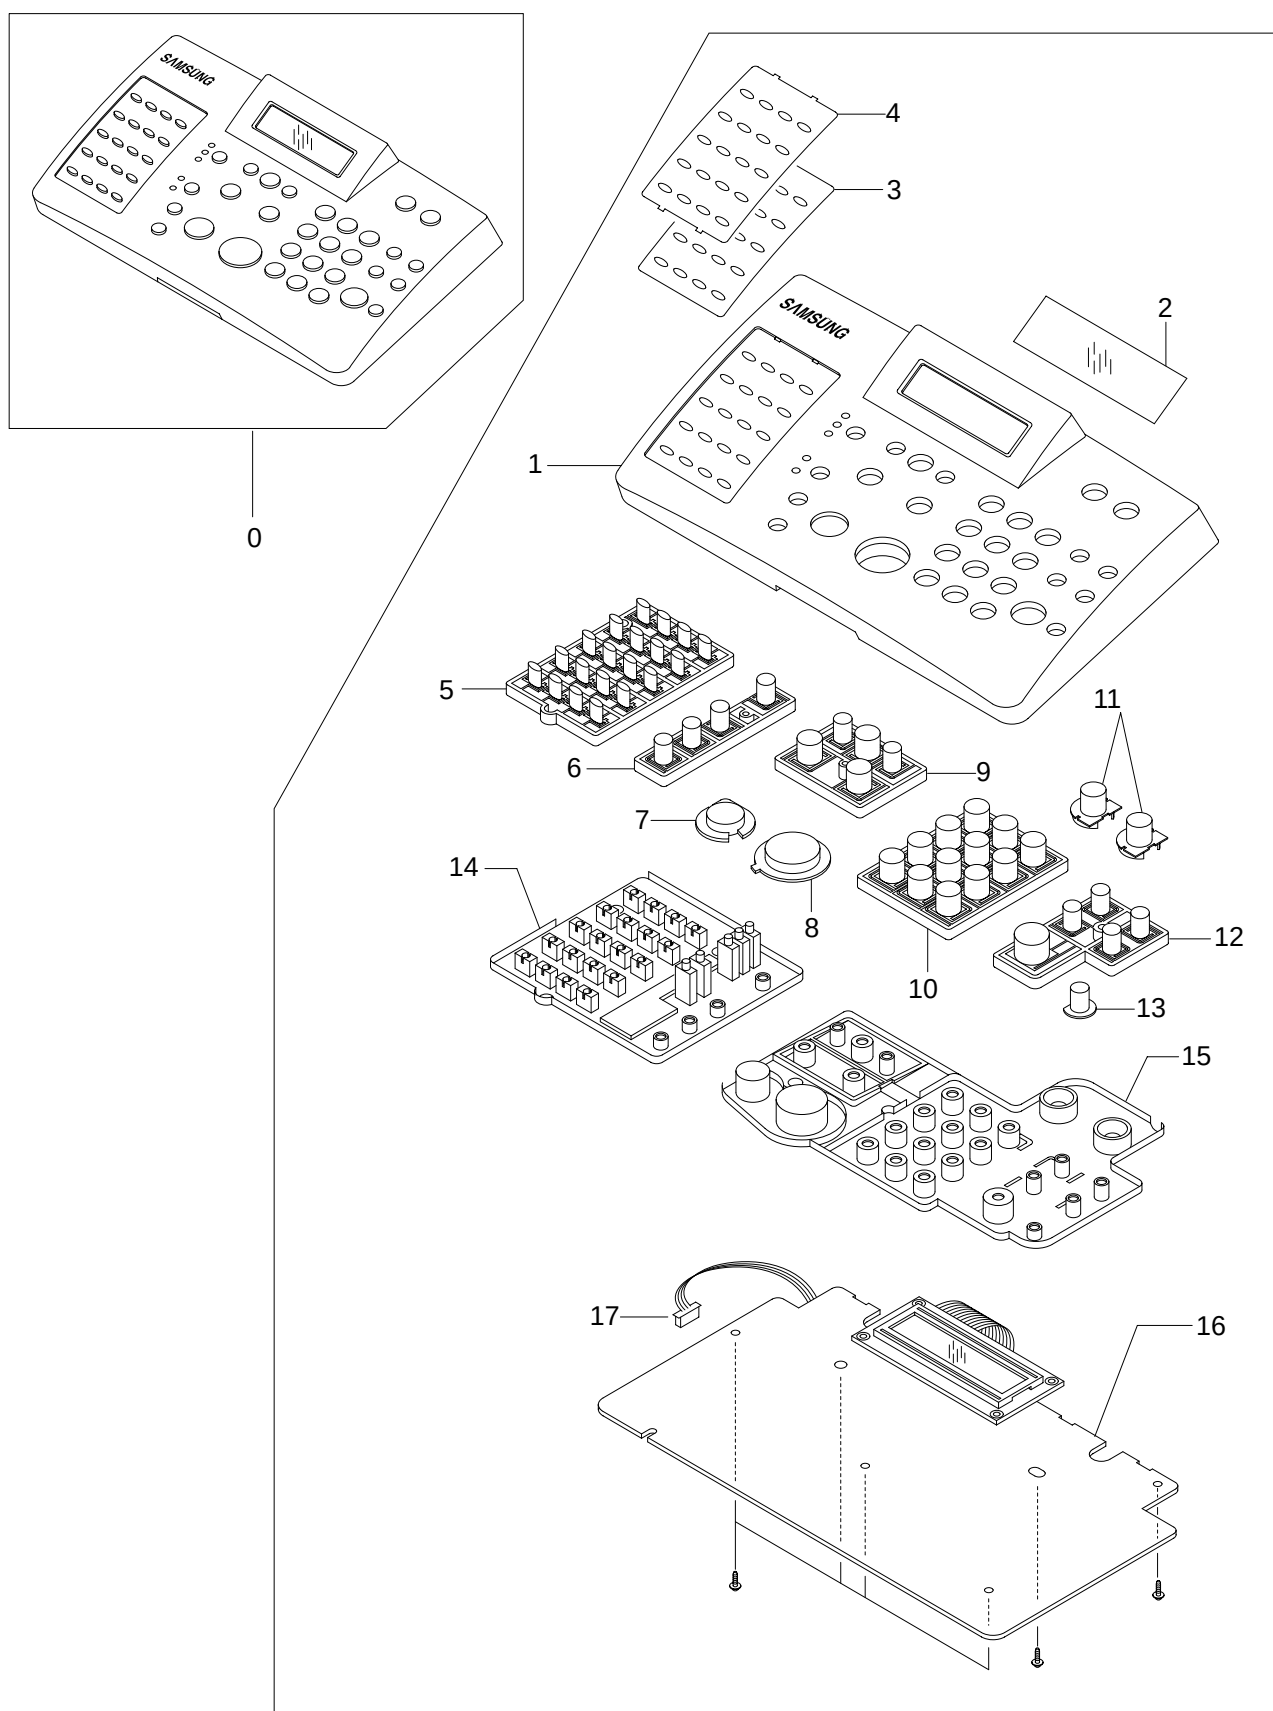


OPE Ass'y Exploded View Parts List

SA : Service Available

O : Service available X : Service not available

No.	Description	SEC.Code	Q'ty	SA	Remark
0	ELA HOU-OPE	*appendix reference	1	O	SF-565P
	ELA HOU-OPE	*appendix reference	1	O	SF-560
1	COVER-M_OPE	*appendix reference	1	O	SF-565P
	COVER-M_OPE	*appendix reference	1	O	SF-560
2	PCT-LCD WINDOW	JC72-00672A	1	O	
3	SHEET-ONE TOUCH	JC63-00328A	1	O	
4	LABEL(P)-ONE TOUCH	JC68-01221A	1	X	
5	KEY-M_ONE TOUCH	JC64-00113A	1	O	
6	KEY-M_COPY	JC64-00112A	1	O	
7	PMO-KEY STOP	JB72-00103B	1	O	
8	KEY-M_START	JC64-00114A	1	O	
9	KEY-M_SCROLL	JC64-00056A	1	O	
10	KEY-M_TEL	JC64-00053A	1	O	
11	KEY-M_TONER SAVE	JC64-00058A	2	O	
12	KEY-M_FAX	JC64-00060A	1	O	
13	KEY-M_SHIFT	JC64-00115A	1	O	
14	RUBBER-ONE TOUCH	JC73-00172A	1	O	
15	RUBBER-TEL	JC73-00171A	1	O	
16	PBA SUB-OPE(LOW)	JC92-01558A	1	O	
17	OPE HARNESS	JC39-00310A	1	O	

8.4 Scan Upper Ass'y Exploded View

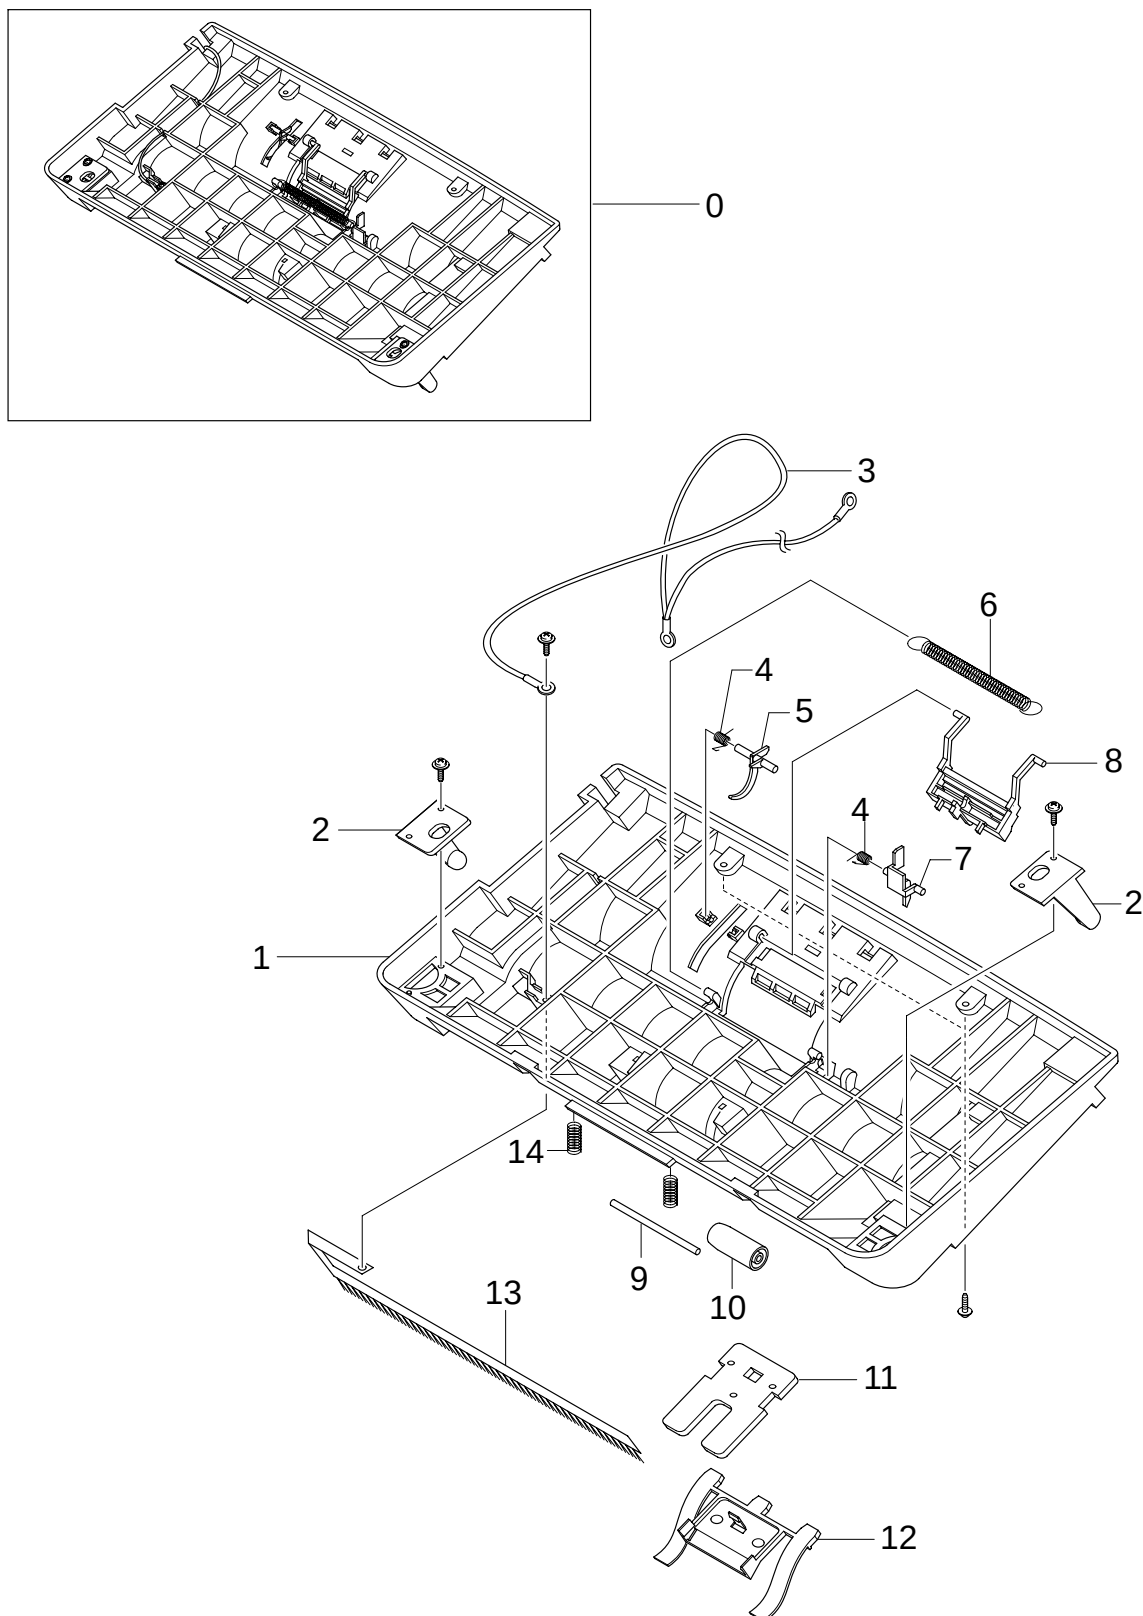


Scan Upper Ass'y Exploded View Parts List

SA : Service Available

O : Service available X : Service not available

No.	Description	SEC.Code	Q'ty	SA	Remark
0	MEA UNIT-SCAN UPPER	JC97-01857A	1	O	
1	FRAME-M_SCAN UPPER	JC61-00864A	1	O	
2	PMO-LOCKER MP	JC72-41398A	1	O	
3	CBF HARNESS-SCAN GND	JC39-00319A	1	O	
4	SPRING ETC-LEVER SENSOR	JB61-00107A	2	O	
5	LEVER-M-SENSOR DOC	JB66-00219A	1	O	
6	SPRING-ETC-ADF	JB61-00084A	1	O	
7	PMO-LOCKER_MP	JC70-41398A	1	O	
8	PMO-SUPPORT ADF	JG72-41083A	1	O	
9	SHAFT-IDLE FEED	JC66-00558A	1	O	
10	PMO-RILL PINCH	JG72-40663A	1	O	
11	RPR-RUBBER ADF	JC73-00032A	1	O	
12	PMO-HOLDER RUBBER	JG72-40044A	1	O	
13	BRUSH-ANTISTATIC	JC67-00055A	1	O	
14	SPRING-ETC-EXIT ROLL	JC61-70911A	2	X	

8.5 Main Frame Exploded View

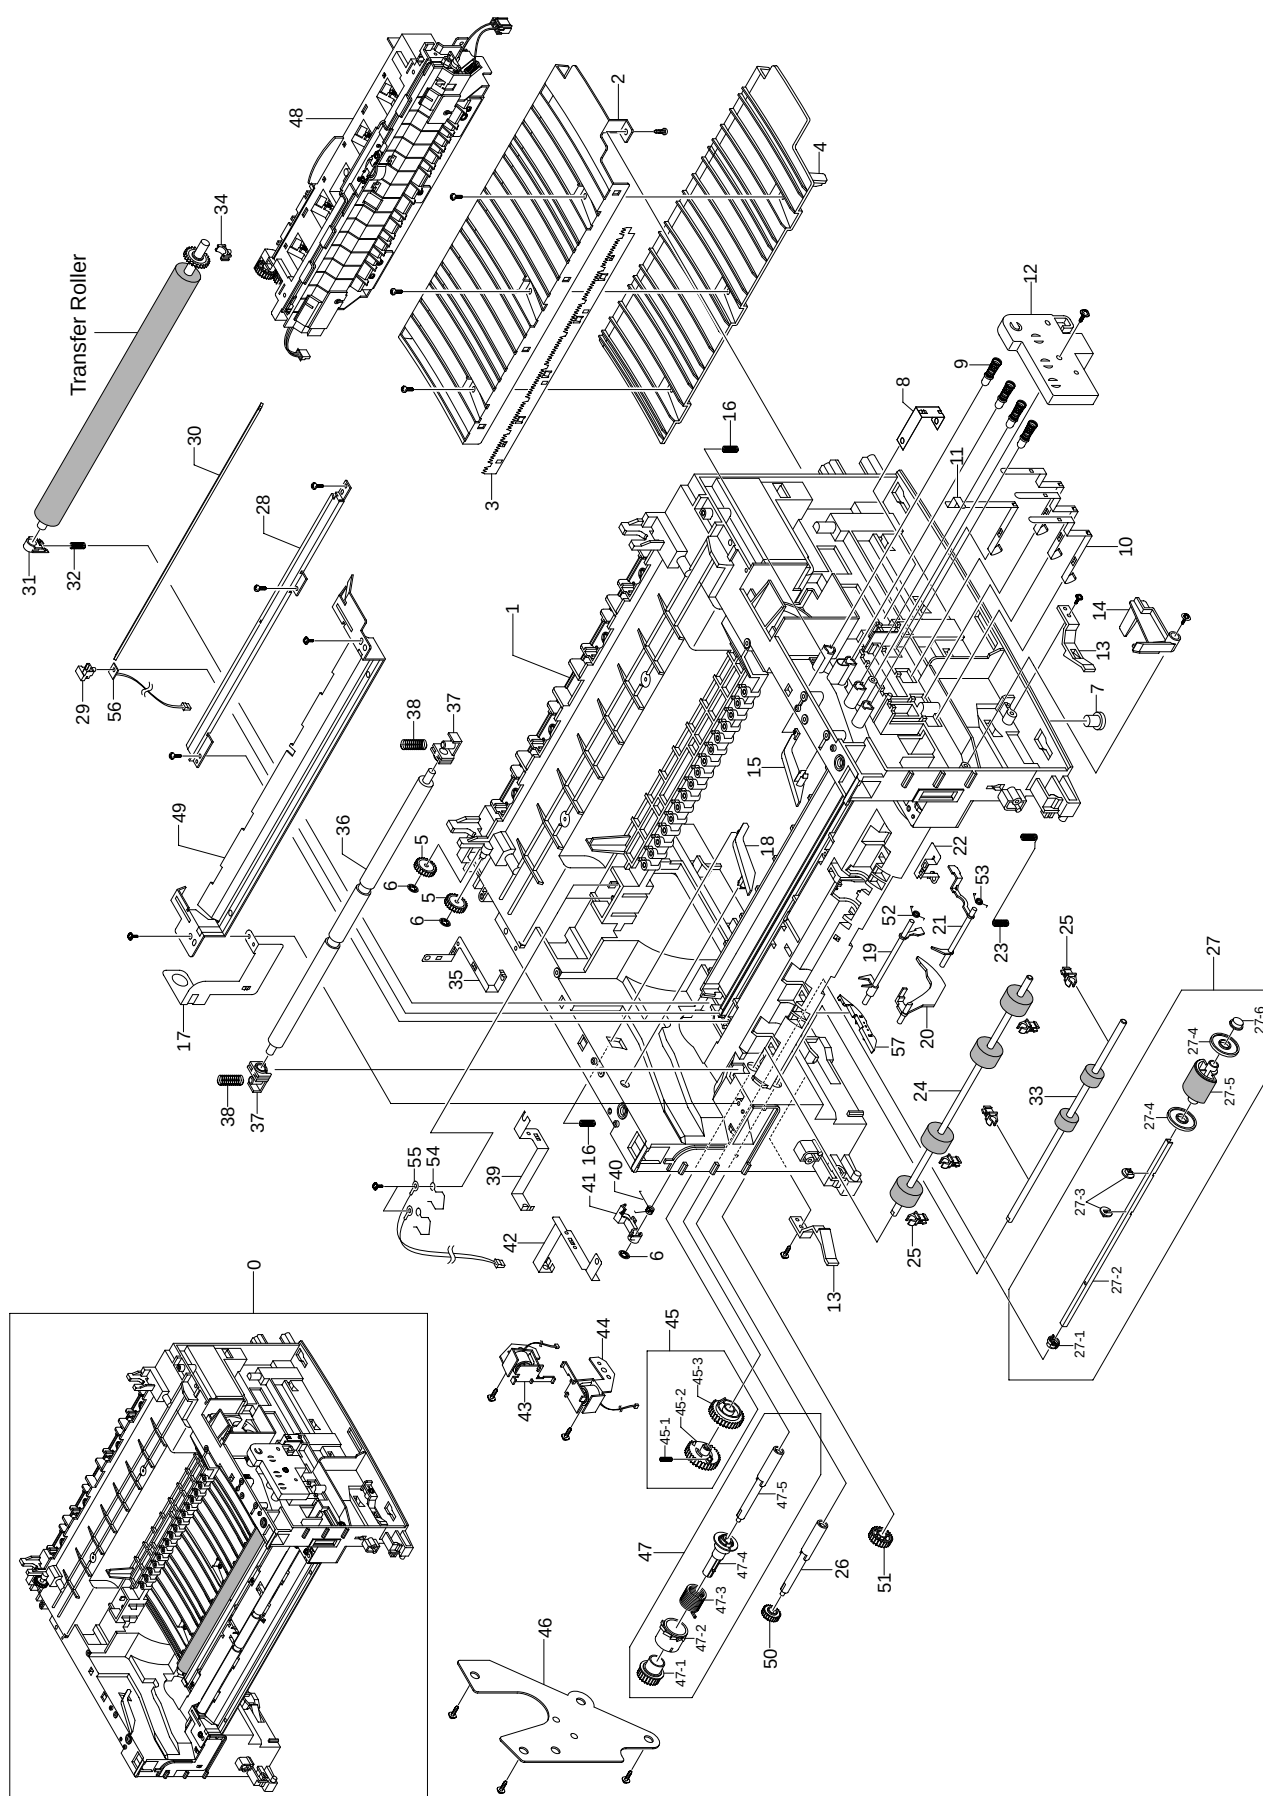

Main Frame Exploded View Parts List

SA : Service Available

O : Service available X : Service not available

No.	Description	SEC.Code	Q'ty	SA	Remark
0	ELA HOU-UNIT FRAME_220V	JC96-02710A	1	O	⚠ 220V
	ELA HOU-UNIT FRAME_110V	JC96-02731A	1	O	⚠ 110V
1	FRAME-M-BASE	JC61-00579A	1	O	
2	GUIDE-P-TR	JC61-00607A	1	O	
3	PLATE-P-SAW	JC61-00604A	1	O	
4	GUIDE-M-TR RIB	JC61-00594A	1	O	
5	PMO-GEAR_EXIT_DRV16	JC72-00143A	2	X	
6	RING-CS	6044-000001	3	X	
7	FOOT-FRONT	JC61-00836A	2	X	
8	IPR-P-GROUND_TR	JC70-00311A	1	X	
9	MEC-TERMINAL	JC75-00049A	4	O	
10	IPR-P-TERMINAL CON	JC70-00312A	3	O	
11	IPR-P-TERMINAL CR	JC70-00313A	1	O	
12	HOUSING-TERMINAL	JC61-00592A	1	O	
13	PMO-LOCKER CST	JC72-00983A	2	O	
14	PMO-ACTUATOR CVR OPEN	JC72-00974A	1	O	
15	PMO-PLATE GUIDE DEVE_R	JC72-00985A	1	O	
16	SPRING ETC-GUIDE DEVE	JC61-70932A	2	X	
17	IPR-P-GROUND_GUIDE PAPER	JC70-00458A	1	O	
18	PMO-PLATE GUIDE DEVE_L	JC72-00984A	1	O	
19	PMO-ACTUATOR FEED	JC72-00976A	1	O	
20	PMO-ACTUATOR EMPTY	JC72-00975A	1	O	
21	PMO-ACTUATOR MANUAL	JC72-00977A	1	O	
22	IPR-P-GROUND_EARTH TR	JC70-00307A	1	X	
23	SPRING-ETC	6107-001162	1	O	
24	ROLLER-FEED ROLLER 1	JC66-00526A	1	X	
25	PMO-BUSHING FEED	JC72-00382B	5	X	
26	SHAFT-FEED	JC66-00398A	1	X	
27	AS-PICK UP	JC81-01693A	1	O	
27-1	BUSH-M-PICK_UP L	JC61-00586A	1	X	
27-2	SHAFT-P-PICK_UP	JC66-00399A	1	X	
27-3	STOPPER-PICK_UP	JC61-00593A	2	X	
27-4	PMO-IDLE PICK_UP	JC72-00982A	2	O	
27-5	SPONGE-ROLLER PICK_UP	JC72-01231A	1	O	
27-6	BUSH-M-PICK_UP R	JC61-00587A	1	O	
27-7	HOUSING-M-PICK_UP	JC61-00591A	1	O	
28	IPR-P-EARTH TRANSFER	JC70-00307A	1	O	
29	HOLDER-PTL	JC61-00583A	1	O	
30	LENS-PTL	JC67-00027A	1	O	
31	BUSH-M-TR L	JC61-00588A	1	O	


Main Frame Exploded View Parts List

SA : Service Available

O : Service available X : Service not available

No.	Description	SEC.Code	Q'ty	SA	Remark
32	SPRING ETC-TR L HAWK	JC61-00047A	1	X	
33	ROLLER-FEED	JC66-00598A	1	O	
34	PMO-BUSHING_TR(L)	JC72-00102A	1	O	
35	IPR-P-GROUND_FUSER	JC70-00310A	1	O	
36	SHAFT-FEED IDLE	JC66-00527A	1	O	
37	BUSH-M-FEED IDLE	JC61-00585A	2	X	
38	SPRING ETC-TR	JC61-70958A	2	X	
39	IPR-P_GROUND_DRIVE2	JC70-00335A	1	O	
40	SPRING-TS	6107-001170	1	O	
41	CAM-M-PICK_UP	JC66-00377A	1	O	
42	IPR-P-GROUND_DRIVE	JC70-00308A	1	O	
43	SOLENOID-HB (PICK-UP)	JC33-00009A	1	O	
44	SOLENOID-HB (MANUAL)	JC33-00010A	1	O	
45	AS-GEAR PICK_UP	JC81-01692A	1	O	
45-1	PMO-GEAR PICK_UP B	JC72-00980A	1	O	
45-2	PMO-GEAR PICK_UP A	JC72-00979A	1	O	
45-3	SPRING-CS	6107-001167	1	X	
46	BRACKET-P-FEED	JC61-00602A	1	O	
47	MEA UNIT-CLUTCH	JC97-01788A	1	O	
47-1	GEAR-FEED 1	JC66-00393A	1	O	
47-2	PMO-COLLAR_SPRING	JC72-00978A	1	O	
47-3	SPRING-TS	6107-001170	1	X	
47-4	PMO-HUB CLUTCH	JC72-00981A	1	O	
47-5	SHAFT-FEED	JC66-00398A	1	X	
48	ELA HOU-FUSER 220V, ROCKY	JC96-02813A	1	O	⚠ 220V
	ELA HOU-FUSER 110V, ROCKY	JC96-02812A	1	O	⚠ 110V
49	GUIDE-P-PAPER	JC61-00718A	1	O	
50	GEAR-FEED 2	JC66-00394A	1	O	
51	GEAR-IDLE 23	JC66-00396A	1	O	
52	SPRING-TS	6107-001164	1	X	
53	SPRING-TS	6107-001165	1	X	
54	IPR-P-TERMINAL DEVE KEY	JC7000340A	2	X	
55	CBF HARNESS-OPC_FUSE	JC39-00229A	1	X	
56	PBA MAIN-PTL	JC92-01440B	1	O	
S	SCREW-TAPTITE	6003-000119	9	O	
S	SCREW-TAPTITE	6003-000196	12	O	
S	SCREW-ASS'Y TAPT	6006-001078	3	O	

8.6 Fuser Unit Exploded View

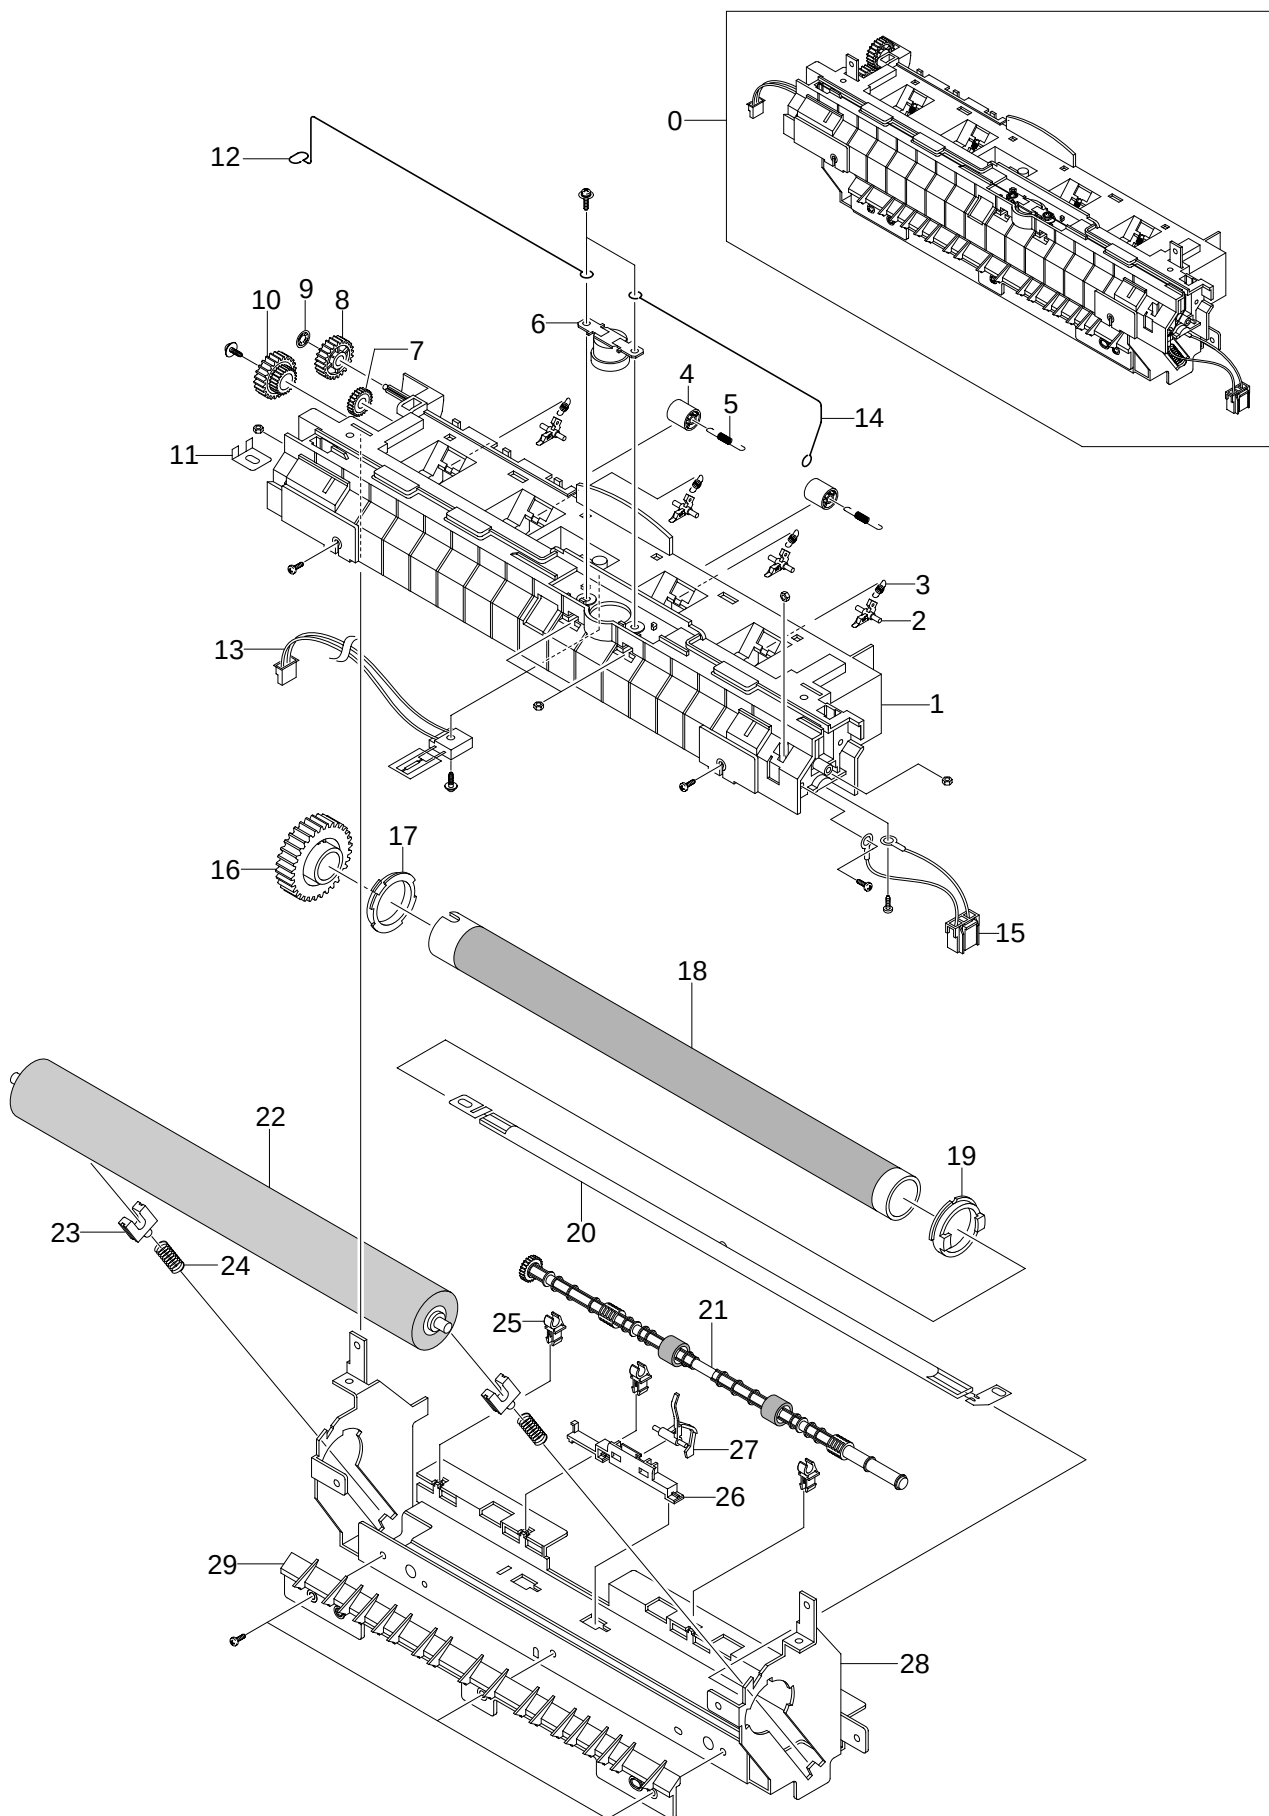


Fuser Unit Exploded View Parts List

SA : Service Available

O : Service available X : Service not available

No.	Description	SEC.Code	Q'ty	SA	Remark
0	ELA HOU-FUSER 220V	JC96-02813A	1	O	⚠ 220V
	ELA HOU-FUSER 110V	JC96-00812A	1	O	⚠ 110V
1	COVER-M-FUSER	JC63-00105A	1	X	
2	HOLDER-M-PLATE CLAW	JC61-00584A	4	X	
3	SPRING ETC-CLAW	JC61-00064A	4	X	
4	PMO-ROLLER EXIT	JC72-40361A	2	X	
5	SPRING ETC-FUSER EXIT	JC61-70976A	2	X	
6	THERMOSTAT-150	JC47-00005A	1	O	
7	PMO-GEAR_EXIT_DRV16	JC72-00143A	1	X	
8	GEAR-IDLE 23	JC66-00396A	1	X	
9	RING-CS	6044-000001	1	X	
10	GEAR-RDCN 25/15	JC66-00397A	1	O	
11	ELECTRODE_LAMP2	JC70-00466A	1	X	
12	ELECTRODE-WIRE_L	JC70-00450A	1	X	
13	THERMISTOR-NTC	1404-001298	1	O	
14	ELECTRODE-WIRE_R	JC70-00449A	1	X	
15	CBF HARNESS-FUSER 220V	JC39-00238A	1	O	⚠ 220V
	CBF HARNESS-FUSER 110V	JC39-00239A	1	O	⚠ 110V
16	GEAR-FUSER, Z37	JC66-00564A	1	O	
17	BUSH-M-HR L	JC61-00589A	1	X	
18	ROLLER-HEAT	JC66-00601A	1	O	
19	BUSH-M-HR R	JC61-00590A	1	O	
20	LAMP-HALOGEN	4713-001183	1	O	⚠ 220V
	LAMP-HALOGEN	4713-001182	1	O	⚠ 110V
21	ROLLER-M-EXIT F/UP	JC66-00380A	1	X	
22	ROLLER-PRESSURE	JC66-00600A	1	O	
23	BEARING-PRESSURE/R	JC66-10901A	2	X	
24	SPRING-CS	6107-001168	2	X	
25	PMO-BUSHING TX	JC72-00382A	3	X	
26	HOLDER-ACTUATOR	JC61-00581A	1	X	
27	PMO-ACTUATOR_EXIT	JC72-00987A	1	O	
28	IPR-P-FRAME_FUSER	JC70-00317A	1	X	
29	GUIDE-M-INPUT	JC61-00595A	1	X	
30	SPRING-TS	6107-001165	1	X	
31	RMO-RUBBER_EXIT	JC73-00017A	2	X	
32	NUT-HEXAGON	6021-000222	5	X	
33	LABEL(P)-CAUTION, HOT_FUSER	JC68-30928D	1	X	
34	COVER-M-EXIT LOWER	JC63-00244A	1	X	
35	PLATE-P-CLAW	JC61-00605A	4	X	

8.7 Exit Cover Exploded View

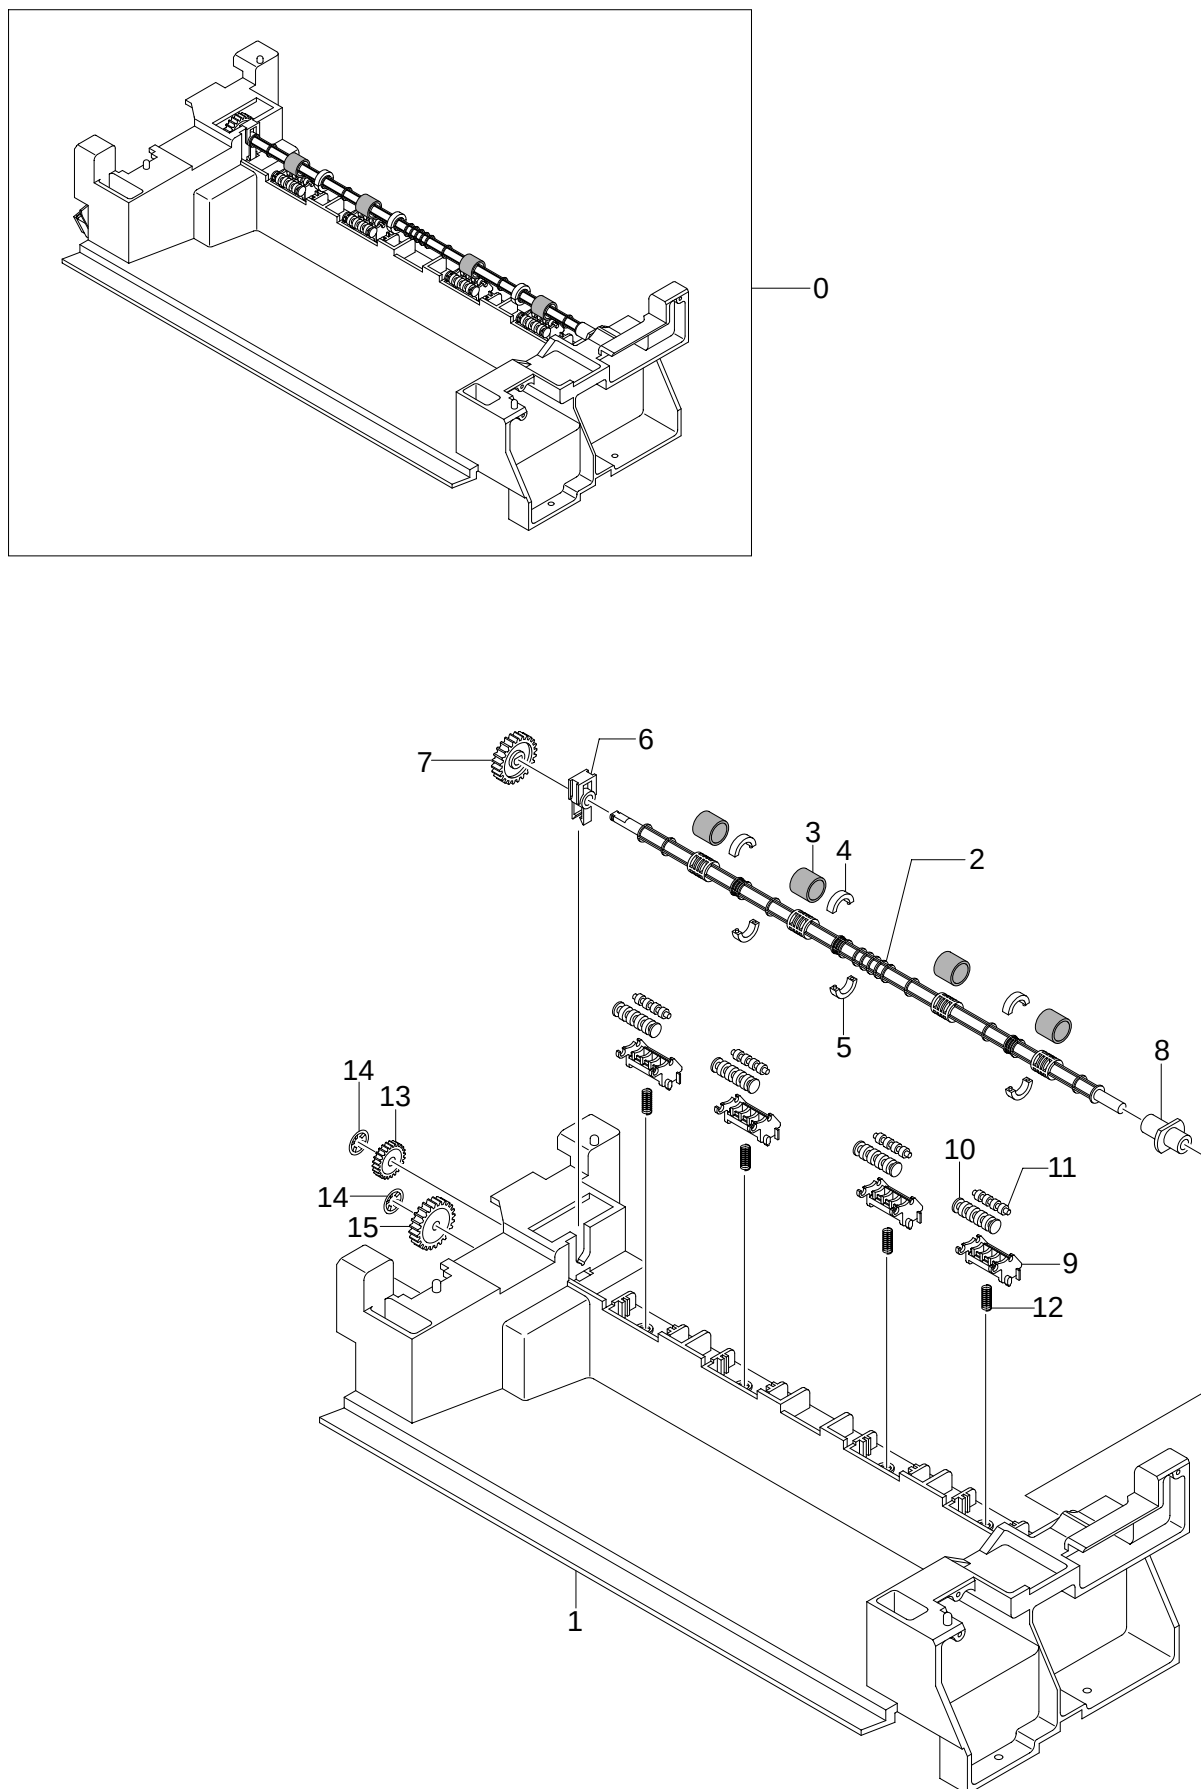


Exit Cover Exploded View Parts List

SA : Service Available

O : Service available X : Service not available

No.	Description	SEC.Code	Q'ty	SA	Remark
0	MEA UNIT-COVER EXIT	JC97-01854A	1	O	
1	COVER-M_EXIT	JC63-00322A	1	X	
2	ROLLER-EXIT_EXIT F/DOWN	JC66-00378A	1	X	
3	RMO-RUBBER EXIT	JC73-40915A	4	X	
4	ROLLER-M_DECURL	JC66-00626A	6	X	
6	MEC-BEARING, EXIT	JC75-10529A	1	X	
7	GEAR-EXIT F/DOWN	JC66-00028A	1	X	
8	BEARING-EXIT FU	JC66-10201A	1	X	
9	HOLDER-M-EXIT F/DOWN	JC61-00582A	4	X	
10	ROLLER_EXIT, MAIN	JC72-41801A	4	X	
11	ROLLER_EXIT, FR	JC72-41802A	4	X	
12	SPRING-EXIT F/DOWN	6107-001163	4	X	
13	PMO-GEAR_EXIT_DRV 16	JC72-00143A	1	X	
14	RING-CS	6044-000001	2	X	
15	GEAR-IDLE 23	JC66-00396A	1	X	

8.8 Cassette Unit Exploded View

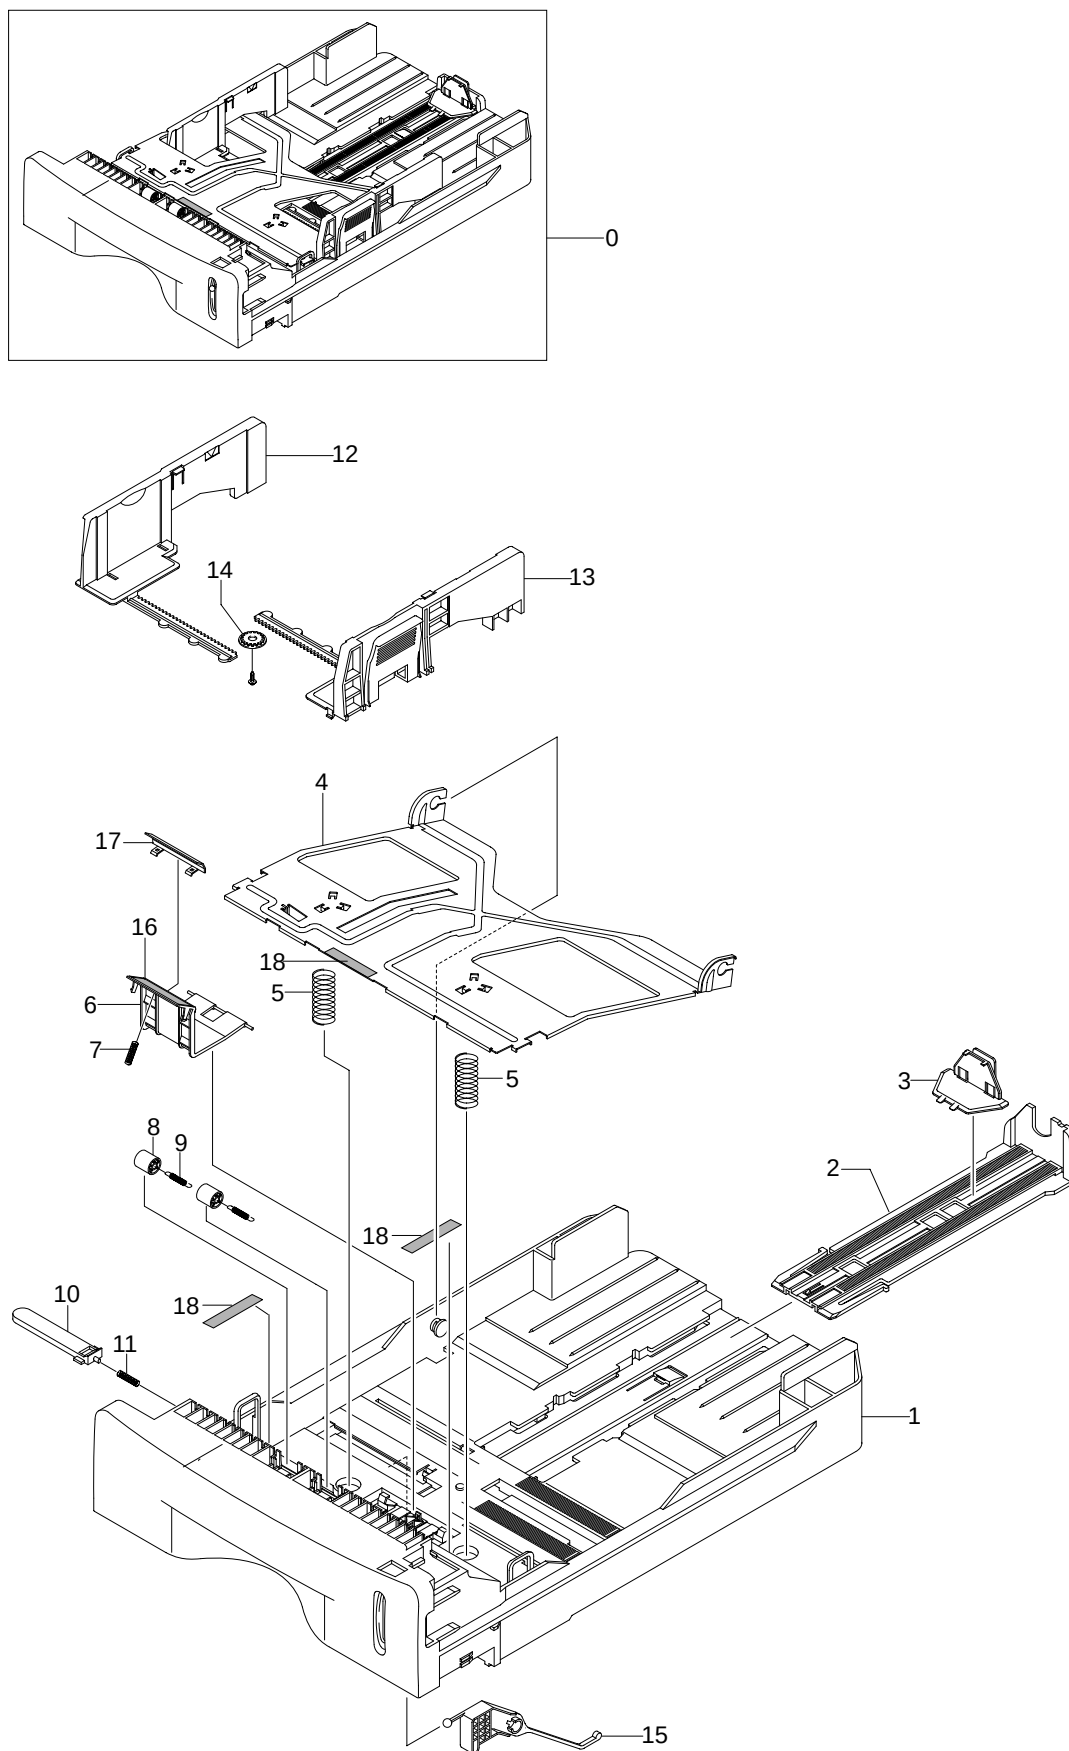

Cassette Unit Exploded View Parts List

SA : Service Available

O : Service available X : Service not available

No.	Description	SEC.Code	Q'ty	SA	Remark
0	MEA UNIT-CASSETTE, USA	JC97-01750E	1	O	
1	FRAME-M_CASSETTE	JC61-00578D	1	X	
2	GUIDE-M-EXTENSION L2	JC61-00918B	1	O	
3	PMO-EXTENSION SMALL	JC72-00971A	1	O	
4	PLATE-P-KNOCK_UP	JC61-00603A	1	X	
5	SPRING-CS	6107-001166	2	X	Spring-Knock_up
6	HOLDER-M-PAD	JC61-00580A	1	X	
7	SPRING ETC-EXIT ROLL FD	JC61-70911A	1	X	
8	ROLLER-M-IDLE FEED	JC66-00529A	2	X	
9	SPRING-ES	6107-001047	2	X	Spring-Feed
10	PMO-PLATE_LOCKER	JC72-00972A	1	X	
11	SPRING ETC-LOCKER,PLATE	JG61-70531A	1	X	
12	ADJUST-M-CASSETTE_L	JC70-00300A	1	O	
13	ADJUST-M-CASSETTE_R	JC70-00301A	1	O	
14	GEAR-PINION	JG66-40003A	1	X	
15	INDICATOR-M-LEVER INDICATOR	JC64-00040A	1	O	
16	RPR-FRICTION PAD	JC73-00140A	1	O	
17	IPR-PLATE PAD	JC70-00314A	1	X	
18	RPR-PAD CASSETTE	JC73-00141A	3	X	

Appendix - Parts code Information(SF-560/SF-565P)

MODEL CODE	COUNTRY	PBA-LIU	ELA HOU-SCAN	ELA HOU-OPE	COVER-M_OPE	MEA UNIT- COVER REAR
SF-560/XAA	USA	JC92-01578A	JC96-02977A	JC96-02951A	JC63-00424A	JC97-01855B
SF-565P/XAA			JC96-02976A	JC96-02952A	JC63-00326A	JC97-01855A
SF-560/XEC	SPAIN	JC92-01578D	JC96-02977D	JC96-02951E	JC63-00424D	JC97-01855B
SF-565P/XEC			JC96-02976D	JC96-02952E	JC63-00326E	JC97-01855A
SF-560/XEF	FRANCE	JC92-01578D	JC96-02977G	JC96-02951C	JC63-00424H	JC97-01855D
SF-560/XEG	AUSTRIA	JC92-01578D	JC96-02977B	JC96-02951B	JC63-00424B	JC97-01855D
SF-565P/XEG		JC92-01578D	JC96-02976B	JC96-02952B	JC63-00326B	JC97-01855C
SF-560/XEP	PORTUGAL	JC92-01578D	JC96-02977H	JC96-02951F	JC63-00424E	JC97-01855B
SF-565P/XEP		JC96-02976G	JC96-02976G	JC96-02952F	JC63-00326F	JC97-01855A
SF-560/XET	ITALY	JC92-01578D	JC96-02977C	JC96-02951D	JC63-00424C	JC97-01855B
SF-565P/XET		JC92-01578D	JC96-02976C	JC96-02952D	JC63-00326D	JC97-01855A
SF-560/XEU	UK	JC92-01578B	JC96-02977A	JC96-02951A	JC63-00424A	JC97-01855B
SF-565P/XEU			JC96-02976A	JC96-02952A	JC63-00326A	JC97-01855A
SF-560/XEV	RUSSIA	JC92-01578C	JC96-02977F	JC96-02951J	JC63-00424G	JC97-01855B
SF-565P/XEV			JC96-02976E	JC96-02952J	JC63-00326J	JC97-01855A
SF-560/XIL	CHINA	JC92-01578E	JC96-02977E	JC96-02951H	JC63-00424F	JC97-01855B
SF-565P/XIL			JC96-02976J	JC96-02952H	JC63-00326H	JC97-01855A
SF-560/EUE	GREECE	JC92-01578D	JC96-02977A	JC96-02951A	JC63-00424A	JC97-01855B
SF-565P/EUE			JC96-02976J	JC96-02952H	JC63-00326H	JC97-01855A