



Service Manual

**HP DesignJet
10000s Series Printers**



For HP Internal Use Only Warranty

©Copyright Hewlett-Packard Company 2006

This document contains proprietary information that is protected by copyright. All rights are reserved. No part of this document may be photocopied, reproduced, or translated to another language without the prior written consent of Hewlett-Packard Company.

First Edition, September 2006

The information contained in this document is subject to change without notice.

Hewlett-Packard makes no warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose.

Hewlett-Packard shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.

WARNING

The procedures described in this manual are to be performed by HP-qualified service personnel only.

Electrical Shock Hazard

Serious shock hazard leading to death or injury may result if you do not take the following precautions:

- Ensure that the ac power outlet (mains) has a protective earth (ground) terminal.
- Disconnect the Printer from the power source prior to performing any maintenance.
- Prevent water or any other liquids from running onto electrical components or circuits, or through openings in the enclosure.

Electrostatic Discharge

Refer to the beginning of Chapter 4 of this manual, for precautions you should take to prevent damage to the Printer circuits from electrostatic discharge.

Safety Symbols

General definitions of safety symbols are given immediately after the table of contents.

WARNING

The Warning symbol calls attention to a procedure, practice, or the like, which, if not correctly performed or adhered to, could result in personal injury. Do not proceed beyond a Warning symbol until the indicated conditions are fully understood and met.

CAUTION

The Caution symbol calls attention to an operating procedure, practice, or the like, which, if not correctly performed or adhered to, could result in damage to or destruction of part or all of the product. Do not proceed beyond a Caution symbol until the indicated conditions are fully understood and met.

Content Management Department,
Barcelona Division,
Hewlett-Packard Espanola, S.A.
Avda. Graells, 501
08190 Sant Cugat del Valles
Spain



Service Manual

HP Designjet
10000s Series Printers

Using this Manual

Purpose

This Service Manual contains information necessary to test, calibrate and service:

- HP Designjet 10000s Series Printers (Model Q6693A).

For information about using these printers, refer to the corresponding User Guide.

Readership

The procedures described in this Service Manual are to be performed by HP Certified service personnel only.

Part Numbers

Part Numbers for Printer options, accessories and service parts are located in Chapter 7.

Conventions

A small arrow \Rightarrow is used to indicate other parts of the Service Manual where you can find information related to the topic you are consulting.

Safety Precautions

The following Warnings and Cautions are presented in this Service Manual and must be observed.

Follow the instructions marked with these symbols.

 WARNING	Failure to follow the guidelines marked with this symbol could result in severe personal injury or death.
 CAUTION	Failure to follow the guidelines marked with this symbol could result in minor personal injury or product and/or peripheral damage.

WARNING

	<p>Inks used in the printer and liquids in the HP Cleaning and Maintenance kits contain an organic solvent (ethylene glycol monobutyl ether acetate, CAS No. 112-07-2). Observe all local, state, and federal regulations related to the handling, use, storage, and disposal of organic solvents.</p>
	<p>Avoid contact between ink and skin, eyes, and clothing.</p> <ul style="list-style-type: none"> ■ Immediately wash skin with soapy water. ■ Remove clothing soaked with ink from contact with skin. ■ Use an approved eye wash station if ink is splashed into eyes and consult a doctor if necessary. ■ If an approved eye wash station is unavailable, flush eyes with cold water and consult a doctor if necessary.
	<p>Be sure the printer is well-grounded. Failure to ground the printer may result in electrical shock, fire, and susceptibility to electromagnetic interference.</p>
	<p>Ink and fluids used in the Cleaning and Maintenance Kits are combustible. Do not use or store within 8 meters (25 feet) of open flames, sparks, or other sources of ignition.</p>
	<p>Switch power OFF, remove the power cords from the electric outlets and allow the printer to cool before attempting to remove any panels or covers. The printer contains high voltage and hot components. Removal of panels or covers may result in exposure to electric shock and burns.</p>
	<p>Do not allow metal or liquids (except those used in HP Cleaning and Maintenance Kits) to touch the internal parts of the printer. Doing so may cause fire, electric shock, or other serious hazards.</p>
	<p>When shutting down the entire system, always turn OFF the printer switch as well as the heater switch (breaker).</p>
	<p>Use only an HP Waste Ink Bottle. The bottle must be installed according to instructions or waste ink may overflow.</p>
	<p>An HP Waste Ink Bottle must always be installed before turning the printer ON. Automatic and manual service cycles produce waste ink that must be contained in an HP Waste Ink Bottle.</p>
	<p>Always use both hands to remove and carry an HP Waste Ink Bottle.</p>
	<p>Keep the HP Waste Ink Bottle upright. Do not place on tables or shelves where it could fall.</p>

	Waste ink is combustible. Keep an HP Waste Ink Bottle containing waste ink away from open flames, sparks, or other sources of ignition.
	Never store waste ink in a glass container.
	Never pour waste ink into a container filled with other chemicals.
	The HP Waste Ink Bottle contains organic solvents and must be disposed of in compliance with all local, state, and federal regulations.
	Always securely replace the cap on a full or partially-full the HP Waste Ink Bottle after removing it from the printer to prevent ink spills.

CAUTION

	Treat any media, paper, used cleaning and maintenance supplies, and wipes soaked with ink as combustible materials. Handle and dispose of properly.
	Do not clean the printer with benzene or paint thinner. This may damage the paint.
	Wipe the printer clean with a soft cloth. A cloth moistened with a neutral detergent may be used. Do not allow liquid to enter the printer. This may create risk of fire and electrical shock and cause a malfunction.
	Never touch the printhead nozzles. They can be easily damaged or clogged.
	Do not touch heater surfaces in the paper path. This may cause burns. Take care when touching printer components near the heaters.
	HP Ink Cartridges must be installed before the "Install By" printed on the cartridge. Use of the Ink Cartridge 3 months beyond the "Install By" date may cause deterioration in print quality or a printer malfunction.
	Do not separate the cap from a new HP Waste Ink Bottle. The cap is needed to properly seal the HP Waste Ink Bottle for disposal.
	The level in the HP Waste Ink Bottle should be checked by visual inspection to prevent overflow. If the waste ink level is above the indication line, the bottle must be replaced with an empty HP Waste Ink Bottle.
	The use of safety glasses and gloves is recommended when performing cleaning and maintenance operations.

Table of Contents

Troubleshooting 1-1

System Error Codes 2-1

Head Adjustment 3-1

Maintenance Mode 4-1

Adjustments and Calibrations 5-1

Print Quality 6-1

Parts and Diagrams 7-1

Removal and Installation 8-1

Preventive Maintenance 9-1

Troubleshooting

7

Introduction	1-2
Troubleshooting System Error Codes	1-2
Performing a Service Test on a Failed Assembly	1-2
Performing the Necessary Service Calibrations or Adjustments	1-3
Solving Print Quality Problems	1-3
The Printer does not Power ON	1-3
Cover Sensors are not Working	1-3
The File Sent is Not Processed Immediately	1-3
Troubleshooting Media Jam Messages	1-4
Media Jams Occur Frequently	1-5
Print Speed is Very Slow	1-5
No Ink Message when there is Enough Ink	1-5
Abnormal Sound Coming from the Printer	1-5
Front Panel is Not Working	1-5
Heater Panel is Not Working	1-5
Solving Heater Problems	1-6
"Power ON Heater Power Switch" appears on Heater Panel	1-6
Heater Does NOT become Hot	1-6
Abnormal Temperature is Displayed	1-6
The Heater Temperature Becomes Extremely High	1-6
"Initializing" Continuously Appears on the Heater Panel	1-6
"Power Save Mode" Continuously Appears on the Heater Panel	1-7
Special Power On Procedure	1-7
Both NVRAM and Main PCA are Replaced Together	1-8

Guide to Troubleshooting the Printer

Introduction

This chapter will guide you through the relevant steps to take when troubleshooting the Printer.

Troubleshooting System Error Codes

Chapter 2 - *System Error Codes* contains a list of system error codes and their respective descriptions and recommended corrective actions. Only try one recommended action at a time and check if the error code has disappeared.

If you have an error code which is not documented in this Service Manual or you have an error which you cannot resolve, then report the error to the HP Response Center or the nearest HP Support Office. When reporting the error, have the following information ready:

- Model and Serial Number of the printer.
- Which firmware revision the printer is using.
- The complete error number.
- The System and History Prints.
- Which software application the customer is using (name, version, etc.).

Whenever an Error Message is displayed, you should try to switch the Printer Off and then On again to see if the error disappears. If the error disappears, there is no need to troubleshoot the Printer any further.

Performing a Service Test on a Failed Assembly

If possible, always perform a Service Test on the component/assembly that you are about to replace, just to make sure that is the actual component/assembly that has failed.

If the test on that component/assembly passes, you should NOT replace it.

For information on the Service Tests and how to use them see Chapter 4 - *Maintenance Mode*.

Performing the Necessary Service Calibrations or Adjustments

Is the printer calibrated or adjusted correctly after replacing a component? For information on the Service Calibrations and Adjustments and how to use them, see Chapter 5 - *Adjustments and Calibrations*.

Remember that certain Calibrations or Adjustments are required even if an Assembly has been disassembled to gain access to another Assembly or Component.

Solving Print Quality Problems

Whenever a Print Quality problem appears, it is advisable to print the Test Print to help diagnose the problem. The Test Print will help you differentiate between possible Printhead errors or mechanical problems. For information on solving Print Quality problems see Chapter 6 - *Print Quality*.

The Printer does not Power ON

- 1 Check that the power cord is connected correctly to the Printer and to the Power Socket.
- 2 Check that the Power Switch on the BACK of the Printer is in the ON position.
- 3 Replace the Power Supply Unit ⇒ Page 8-45.

Cover Sensors are not Working

- 1 Perform the Sensors Test ⇒ Page 4-53.
- 2 Check if the cable for the faulty sensor is not damaged and is connected correctly.
- 3 Replace the faulty Sensor.

The File Sent is Not Processed Immediately

- 1 Check that the USB Cable is connected correctly to the Computer and the Printer and that it is NOT damaged.
- 2 Check that the Data LED on the Front Panel is flashing. If it is flashing and nothing is printed, then maybe the file sent is corrupted or too big.
- 3 Make sure that the Printer is in the Online state when the file is sent. The file will be rejected if the file is sent when the Printer is in the Offline state.

Troubleshooting Media Jam Messages

There are three different messages that appear on the Front Panel if a media Jam occurs in the Printer:

- Warning (0) Clear Media Jam.
- Warning (1) Clear Media Jam.
- Warning (2) Clear Media Jam.

Warning (0) Clear Media Jam

Over-current has been detected in the use of the Paper-Axis Motor. Try the following:

- 1 Open the Rear Cover and check for any visible obstacles in the paper path. If there is a wrinkled mass of paper inside the paper path, lift the Pinchwheels (using the Media Lever) and clear the obstruction.
- 2 Check the Tension Bar to make sure that it is not applying too much weight on the Media (check the User's Guide for information on the correct usage of the Tension Bars).
- 3 If sticky media is being used, then either use different media or use it with the Liner.
- 4 Clean the Drive Roller and make sure that there is no paper dust or other dirt trapped around the Drive Roller.
- 5 Check the tension of the Paper-Axis Belt and adjust it if necessary ⇒ Page 5-14.
- 6 If this problem continues, replace the Paper-Axis Motor ⇒ Page 8-68.

Warning (1) Clear Media Jam

Over-current has been detected in the use of the Scan-Axis Motor. Try the following:

- 1 Open the Rear Cover and check for any visible obstacles in the paper path. If there is a wrinkled mass of paper inside the paper path, lift the Pinchwheels (using the Media Lever) and clear the obstruction.
- 2 Check the Ink Supply Tubes Rail to make sure that it is correctly positioned (if not correctly positioned, it could cause extra friction on the Carriage).
- 3 Check the tension of the Carriage Belt and adjust it if necessary.
- 4 Check the Encoder Strip to make sure that it is not dirty or damaged.
- 5 Check the Slider Rod to make sure that it not dirty.
- 6 Check the tension of the Scan-Axis Belt and adjust it if necessary ⇒ Page 5-12.
- 7 If this problem continues, replace the Scan-Axis Motor ⇒ Page 8-72.

Warning (2) Clear Media Jam

This problem could be caused by a firmware error. Try the following:

- 1 Switch the Printer OFF and ON again and check if the message still appears.

Media Jams Occur Frequently

- 1 Make sure that the paper type setting matches the type of paper loaded into the Printer.
- 2 Open the Rear Cover and check for any visible obstacles in the paper path. If there is a wrinkled mass of paper inside the paper path, lift the Pinchwheels (using the Media Lever) and clear the obstruction.
- 3 Make sure that the Vacuum Fans are working correctly.

Print Speed is Very Slow

- 1 Make sure that the Printer is being used at temperatures of 20°C or higher.

No Ink Message when there is Enough Ink

- 1 Make sure that the Ink Cartridge is installed correctly.
- 2 Check that the connector in the Ink Cartridge is NOT damaged.
- 3 Make sure that the Ink Cartridge Sensors are working correctly. Perform the Ink Sensor Test ⇒ Page 4-54.

Abnormal Sound Coming from the Printer

- 1 One of the Motors in the Printer might be defective. Check that the Motors are working correctly ⇒ Page 4-72.
- 2 Check that there are no foreign or loose objects inside the Printer.

Front Panel is Not Working

- 1 Make sure that the Front Panel Cable is connected correctly to the Front Panel and to the Main PCA.
- 2 Make sure that the Front Panel Cable is NOT damaged.
- 3 Replace the Front Panel ⇒ Page 8-25.

Heater Panel is Not Working

- 1 Make sure that ALL Heater Panel Cables are connected correctly to the Heater Panel.
- 2 Make sure that the Heater Panel Cables are NOT damaged.
- 3 Replace the Heater Panel ⇒ Page 8-27.

Solving Heater Problems

"Power ON Heater Power Switch" appears on Heater Panel

- 1 Check that the Heater Power Cable is connected and that the heater Power Switch is switched On.
- 2 Replace the Heater Relay Assembly ⇒ Page 8-52.
- 3 Replace the Heater Panel ⇒ Page 8-27.

Heater Does NOT become Hot

- 1 Try performing the Heater Test ⇒ Page 4-97. If the Heater **does not** work during the test, try the following:
 - Make sure that the Cable between the Heater Panel and the Heater Relay Assembly is connected correctly and NOT damaged.
 - Make sure that the Heaters are connected correctly to the power voltage alternation switch.
 - Replace the Heater Relay Assembly ⇒ Page 8-52.
 - Replace the Heater Panel ⇒ Page 8-27.
- 2 If the Heater **does** work during the Heater test, try the following:
 - Make sure that ALL Heater Panel Cables are connected correctly to the Heater Panel.
 - Make sure that the Heater Panel Cables are NOT damaged.
 - Replace the Heater Panel ⇒ Page 8-27.
 - Replace the Main PCA ⇒ Page 8-36.

Abnormal Temperature is Displayed

- 1 Make sure that the Heater that is experiencing the abnormal temperature is installed correctly. Check that the Heater Cable is connected correctly.
- 2 Replace the Heater Panel ⇒ Page 8-27.
- 3 Replace the Heater that is experiencing the abnormal temperature.

The Heater Temperature Becomes Extremely High

- 1 Make sure that the Heater that is experiencing the high temperature is installed correctly. Check that the Heater Cable is connected correctly.
- 2 Replace the Heater Panel ⇒ Page 8-27.
- 3 Replace the Heater Relay Assembly ⇒ Page 8-52.

"Initializing" Continuously Appears on the Heater Panel

- 1 Make sure that the Cable between the Heater Panel and the Main PCA is connected correctly and NOT damaged.
- 2 Replace the Heater Panel ⇒ Page 8-27.
- 3 Replace the Main PCA ⇒ Page 8-36.

"Power Save Mode" Continuously Appears on the Heater Panel

- 1 Make sure that the Cable between the Heater Panel and the Power Supply Unit is connected correctly and NOT damaged.
- 2 Replace the Heater Panel ⇒ Page 8-27.
- 3 Replace the Power Supply Unit ⇒ Page 8-45.
- 4 Replace the Main PCA ⇒ Page 8-36.

Special Power On Procedure

When turning On the Printer, the Printer will follow the internal initialization process, turning on the different systems and making the necessary system checks. In order to troubleshoot the Printer the following Power On options are available:

- 1 Press the **Cancel** key and Power On button - This will allow you to skip the system check of the Printer.
- 2 Press the **Cancel** and **Shift** keys and Power On button - This will allow you to skip the error recovery check of the Printer. You will be given the option to enter the Maintenance Mode in order to troubleshoot the Printer by entering a password: ◀, ▶, **Shift** and **OK**.

MAINTENANCE MODE
PASSWORD?

- This option is useful if you want to perform the following:
 - Ink purging without installing media. In a normal power On situation, the Printer cannot function without the media loaded.
 - Recovery of a damaged NVRAM. By powering in the special power On situation, the NVRAM can be recovered by entering the Maintenance Mode and by performing the necessary steps to recover the NVRAM.

Both NVRAM and Main PCA are Replaced Together

When both the NVRAM and the Main PCA are replaced at the same time, mechanical correction value parameters, counters, calibrations, etc... are lost. Whenever possible, this must be prevented by just replacing either the NVRAM or the Main PCA. If for whatever reason, both the NVRAM and the Main PCA are replaced together, you need to perform the following:

- 1 Make sure that the NVRAM and the Main PCA have been installed correctly.
- 2 Press the **Cancel** key and Power On button in order to skip the system check.
- 3 Enter into the Maintenance Mode ⇒ Page 4-7.
- 4 Press the **Shift** key once and then the ◀ key to enter in to the Setup menu.
- 5 In the Setup submenu, scroll to "NVRAM Init" and press the **OK** key.

```
# NVRAM INIT
>
```

- 6 You will need to confirm that you want to initialize the NVRAM by pressing the **OK** key.

```
# NVRAM INIT
* OK?
```

- 7 In the Setup submenu, scroll to "Language" and press the **OK** key.

```
# LANGUAGE
> ENGLISH
```

- 8 In the Language submenu, select "English" or "Japanese" and press the **OK** key.

```
# LANGUAGE
* ENGLISH
```

- 9 Power Off the Printer.
- 10 Press the **Cancel** and **Shift** keys and Power On button in order to skip the error recovery check of the Printer.
- 11 Perform the Line Sensor Test (⇒ Page 4-53) to register the platen's maximum value read by the Line Sensor to the NVRAM automatically.
- 12 Power Off the Printer, wait a few seconds and power On the Printer again.
- 13 You will need to check, and if necessary perform the following:
 - Wiping Position Calibration ⇒ Page 5-55.
 - Capping Position Calibration ⇒ Page 5-57.
 - Printhead Voltage ⇒ Page 4-22.
 - Printhead Row Value ⇒ Page 4-19.
 - Printhead to Printhead Value ⇒ Page 4-19.
 - Bidirection Definitions ⇒ Page 4-21.
 - Media Advance Print ⇒ Page 4-11.

- Side Margin Position Calibration ⇒ Page 5-59.
- Top Margin Position Calibration ⇒ Page 5-60.

14 In the Printhead Maintenance submenu, scroll to "Ink Charge Done" and press the **OK** key.

```
# INK CHARGE DONE
> NO
```

15 In the Ink Charge Done submenu, select "Yes" to indicate that ink charge has been completed and then press the **OK** key.

```
# INK CHARGE DONE
* YES
```

16 In the Setup submenu, scroll to "Save Calibs" and press the **OK** key.

```
# SAVE CALIBS
>
```

17 You will need to confirm that you want to save the NVRAM Calibrations by pressing the **OK** key.

```
# SAVE CALIBS
* OK?
```

18 In the Setup submenu, scroll to "Save NVRAM" and press the **OK** key.

```
# SAVE NVRAM
>
```

19 You will need to confirm that you want to save the NVRAM contents by pressing the **OK** key.

```
# SAVE NVRAM
* OK?
```

20 Power Off the Printer, wait a few seconds and power On the Printer again.





System Error Codes

2

- Introduction 2-2
- Self-Diagnostic Errors at Power On 2-3
- System Error Codes 2-8
- Heater Error Codes 2-17
- System Error Codes 2-20

System Error Codes

Introduction

The following pages contain a list of error codes and their respective descriptions and recommended corrective actions. Only try one recommended action at a time and check if the error code has disappeared.

If you have an error code which is not documented in this Service Manual or you have an error which you cannot resolve, then report the error to the HP Response Center or the nearest HP Support Office. When reporting the error, have the following information ready:

- Model and Serial Number of the printer.
- Which firmware revision the printer is using.
- The complete error number.
- The Service Configuration Print.
- The Current configuration sheet.
- Which software application the customer is using (name, version, etc.).

Whenever an Error Message is displayed, you should try to switch the Printer Off and then On again to see if the error disappears. If the error disappears, there is no need to troubleshoot the Printer any further.

Self-Diagnostic Errors at Power On

When the Printer is powered up, it performs the Boot-Up sequence which initializes the major components of the Printer. If for some reason the Boot-Up sequence fails because a component has failed to initialize, an error code will appear on the Front Panel.



The Boot-Up error codes are hexa-decimal based numbers and correspond to bits which are explained in the following table:

Bit	Error Code (nnnn)	Diagnosis
0	0001	Internal RAM
1	0002	SRAM
2	0004	Flash ROM
3	0008	PIO
4	0010	NVRAM
5	0020	FPGA (Main PCA)
6	0040	FPGA (Carriage PCA)
7	0080	ASIC CONF (Main PCA)
8	0100	ASIC CONF (Carriage PCA)
9	0200	DRAM
10	0400	USB Register
11	0800	Power Supply
13	2000	Add-ON (HEB2) Control PCA
14	4000	Cap Position Adjustment Value
15	-	Reserved

When multiple errors occur during the Boot-Up sequence, the error codes are added together and only one hexa-decimal figure is displayed on the Front Panel. For example, if the **NVRAM** and the **Power Supply** fail during the Boot-Up sequence, the error code E0810 will be displayed.

NVRAM (0010) + Power Supply (0800) = 0810

Each error code and its appropriate corrective actions are explained on the following pages.

- Boot-Up Error:** Internal RAM (**0001**)
- Problem Description:** The read/write of the RAM on the Main PCA was diagnosed and an error was detected.
- Corrective Action:** Try the following:
- Replace the Main PCA ⇒ Page 8-36.
- Boot-Up Error:** SRAM (**0002**)
- Problem Description:** The read/write of the SRAM on the Main PCA was diagnosed and an error was detected.
- Corrective Action:** Try the following:
- Replace the Main PCA ⇒ Page 8-36.
- Boot-Up Error:** Flash ROM (**0004**)
- Problem Description:** The program area in the Flash ROM is sum-checked, and it could not be read, causing an error.
- Corrective Action:** Try the following:
- Reinstall the Firmware (Printer and Boot Firmware).
 - If the Error continues, replace the Main PCA ⇒ Page 8-36.
- Boot-Up Error:** PIO (**0008**)
- Problem Description:** The read/write of a specific Parallel I/O (PIO) was tested and an error was detected.
- Corrective Action:** Try the following:
- Replace the Main PCA ⇒ Page 8-36.
- Boot-Up Error:** NVRAM (**0010**)
- Problem Description:** Problems with the NVRAM detected.
- Corrective Action:** Try the following:
- If multiple errors have occurred that include the NVRAM error, try to resolve the other errors first. After resolving the other errors (except NVRAM), switch the Printer Off.
 - Switch the Printer On again and only the NVRAM error recovery will be performed.
 - If System Error Code 11Ax appears when the Printer is turned On, then refer to Page 2-11.
 - Replace NVRAM ⇒ Page 8-41.
 - Replace Main PCA ⇒ Page 8-36.

- Boot-Up Error:** FPGA (Main PCA) (**0020**)
- Problem Description:** The read/write of the FPGA-ATG (Band Memory) and FPGA-RSM (Mask Memory) registers on the Main PCA was diagnosed and an error was detected.
- Corrective Action:** Try the following:
- Replace the Main PCA ⇒ Page 8-36.
- Boot-Up Error:** FPGA (Carriage PCA) (**0040**)
- Problem Description:** The read/write of the FPGA-PTC (Print Timing Controller) and FPGA-PDD (Print Data Distributor) registers on the Carriage PCA was diagnosed and an error was detected.
- Corrective Action:** Try the following:
- Replace the Carriage PCA ⇒ Page 8-96.
 - Make sure that the Carriage Cable is correctly connected.
 - Replace the Main PCA ⇒ Page 8-36.
- Boot-Up Error:** ASIC CONF (Main PCA) (**0080**)
- Problem Description:** The program load from the Flash ROM on the Main PCA to the FPGA on the Main PCA or sum-check was not performed correctly and an error occurred.
- Corrective Action:** Try the following:
- Reload the ASIC program from the IC Card.
 - Replace the Main PCA ⇒ Page 8-36.
- Boot-Up Error:** ASIC CONF (Carriage PCA) (**0100**)
- Problem Description:** The program load from the Flash ROM on the Main PCA to the ASIC on the Carriage PCA or sum-check was not performed correctly and an error occurred.
- Corrective Action:** Try the following:
- Reload the ASIC program from the IC Card.
 - Make sure that the Carriage Cable is correctly connected.
 - Replace the Carriage PCA ⇒ Page 8-96.
 - Replace the Main PCA ⇒ Page 8-36.
- Boot-Up Error:** DRAM (**0200**)
- Problem Description:** The read/write of the image band memory on the Main PCA was diagnosed and an error was detected.
- Corrective Action:** Try the following:
- Replace the Main PCA ⇒ Page 8-36.

Boot-Up Error: USB Register (**0400**)

Problem Description: The read/write of the USB controller on the Main PCA was diagnosed and an error was detected.

Corrective Action: Try the following:

- Replace the Main PCA ⇒ Page 8-36.

Boot-Up Error: Power Supply (+36V, +24V, +12V) (**0800**)

Problem Description: The power supplies of +36, +24 and +12 V were diagnosed and could not be detected.

Corrective Action: Try the following:

- Open the Electronics Cover and check LED 11 and LED 13.
- If both LED 11 and LED 13 are OFF, then try the following:
 - Check the Interlock Switches to make sure they are installed/connected correctly. Make sure that the Rear Cover lips (that activate the Interlock Switches) are not bent and that the Rear Cover is closed correctly.
 - If the Interlock Switches are installed and connected correctly, then replace the Main PCA ⇒ Page 8-36.
- If both LED 11 and LED 13 are ON, then try the following:
 - Check whether the correct voltages are supplied from the power source (refer to the table below). If the correct voltages are not supplied, then replace the Power Supply Unit ⇒ Page 8-45.
 - It is possible that this error occurred because of a faulty Main PCA. Replace the Main PCA ⇒ Page 8-36.
 - Check whether the motors have been short-circuited by testing +24 V. If +24 V is not supplied then replace both Scan-Axis/Paper-Axis Motors. If error continues, replace the Main PCA ⇒ Page 8-36.

Power Line	Measuring Position (on the Main PCA)	Normal Value
+1.5 V	TP70	+1.45 V to +1.55 V
+3.3 V	TP69	+3.20 V to +3.40 V
+5 V REF	TP36	+4.90 V to +5.10 V
5 V	TP35	+4.75 V to +5.25 V
+12 V	TP50	+11.00 V to +13.00 V
+24 V	TP34	+23.00 V to +25.00 V
+36 V	TP93, TP33	+35.00 V to +37.00 V

Boot-Up Error: Add-On (HEB2) Control PCA (**2000**)
Problem Description: Problems with the Add-On (HEB2) Control PCA detected.
Corrective Action: Try the following:

- Make sure the HEB2 Board Interface Cable is connected correctly and is not damaged
- Replace the Add-On (HEB2) Control PCA ⇒ Page 8-45.
- If the error continues, replace the Main PCA ⇒ Page 8-36.

Boot-Up Error: Cap Position Adjustment Value (**4000**)
Problem Description: This error appears when the Cap Position Adjustment Value is set to zero.
Corrective Action: Try the following:

- To clear this error:
 - Turn the Printer ON in error skip mode by holding down the **Cancel** and **Shift** keys and pressing the ON button.
 - Enter the Password to enter the Maintenance Mode menu: ◀, ▶, **Shift** and **OK**.
 - Set the correct Cap Position value (so that it is not set at 0.0 mm) ⇒ Page 4-13.

System Error Codes

A System Error Code appears on the Front Panel when a component of the Printer has failed during normal usage. Each System Error Code and its appropriate corrective actions are explained on the following pages.

- System Error:** System Error 1110: GA_ATG Block Clear Error
- Problem Description:** The ATG band memory block erase does not end. This error is checked during Boot-Up sequence and printing.
- Corrective Action:** Try the following:
- Replace the Main PCA ⇒ Page 8-36.
- System Error:** System Error 1111: GA_ATG DMA Transfer Error
- Problem Description:** There is a problem in the data path. This error is checked during printing.
- Corrective Action:** Try the following:
- Make sure that the host PC and the Printer are connected correctly via a USB Cable.
 - Replace the Main PCA ⇒ Page 8-36.
- System Error:** System Error 112x: Vacuum Fan Error
- Problem Description:**
- x = 0: The Vacuum Fan (Wiping Side) has failed.
 - x = 1: The Vacuum Fan (2nd Fan from Wiping Side) has failed.
 - x = 2: The Vacuum Fan (Center of the Platen) has failed.
 - x = 3: The Vacuum Fan (2nd Fan from Capping Side) has failed.
 - x = 4: The Vacuum Fan (Capping Side) has failed.
- Corrective Action:** Try the following:
- Make sure that the failing Vacuum Fan Cable is connected correctly and is not damaged
 - Replace the failing Vacuum Fan ⇒ Page 8-35.
 - If the error continues, replace the Add-On (HEB2) Control PCA (for errors where x = 0 or 1) and the Main PCA (for errors where x = 2, 3 or 4).
- System Error:** System Error 1140: Flash ROM Write Error
- Problem Description:** A time-out error occurs when the NVRAM contents are being saved in the flash memory in Maintenance Mode and erasing does not end.
- Corrective Action:** Try the following:
- Replace the Main PCA ⇒ Page 8-36.

- System Error:** System Error 1150: Home Position Sensor Error
- Problem Description:** The Carriage cannot be moved to its home position.
- Corrective Action:** Try the following:
- Enter the Sensors Menu (in Maintenance Mode) and select "Printer Sensors". Then execute the "Home Position" option, which will display the state of the home position sensor. If the home position is detected, "1" will be displayed on the Front Panel. If the home position is not detected, manually move the Carriage and check the Front Panel to see if the "1" is displayed.
 - Make sure the Home Position Sensor Cable is connected correctly and is not damaged.
 - Replace the Home Position Sensor.
 - Replace the Main PCA ⇒ Page 8-36.
- System Error:** System Error 1160: Wiping Error
- Problem Description:** When the Wiping Motor has been running for a while, the sensor fails to detect that the Motor has made one turn.
- Corrective Action:** Check whether the Wiper turns once and the Wiper Sensor detects the turn when the Printer is initializing when it is powered On.
- If the Wiper **does not** turn once:
 - Check manually by turning the Wiper Gears to see if the Wiper turns. If it does not turn then replace the Wiping Station.
 - Check whether 24 V is supplied to the Main PCA with the circuit tester. If the Wiper Motor does **not** turn even though the 24 V is supplied, there is a possibility of a failure in the Wiper Motor. Replace the Wiping Station ⇒ Page 8-145.
 - Make sure the Wiper Sensor Cable is connected correctly and is not damaged.
 - If the error continues, replace the Main PCA ⇒ Page 8-36.
 - If the Wiper **does** turn once:
 - Check whether the Wiper Sensor can be switched ON and OFF by manually rotating the Wiper. Check whether the lever type switch is not loose.
 - Make sure the Wiper Sensor Cable is connected correctly and is not damaged.
 - Make sure that the Wiper Sensor is clean.
 - If the error continues, replace the Main PCA ⇒ Page 8-36.

System Error: System Error 1170: Temperature Sensor Error
Problem Description: The Temperature Sensor detects abnormal temperatures (-10°C or lower or 85°C or higher).

Corrective Action: Try the following:

- Make sure that the Printer is in an environment where the temperature is between -10°C and 85°C.
- Make sure the Ambient Temperature Sensor Cable is connected correctly and is not damaged.
- Replace the Main PCA ⇒ Page 8-36.

System Error: System Error 1180: Capping Motor Error
Problem Description: Capping Motor over current is detected.

Corrective Action: Try the following:

- When the ambient temperature is very low, the Pump Motor Tube becomes hard and the load on the Capping Motor is increased. Make sure that the Printer is in an environment where the temperature is not below -10°C or higher than +85°C.
- The Capping Station has a Torque Limiter for up and down operation so that the Capping Station does not experience any over current.
- Apply grease on the shaft of the Capping Station Gear so that it helps with rotation.
- Enter the Motors Menu (in Maintenance Mode) and open Solenoids L and R. Access the Pump Motors and check whether the Motor Drive Circuit and Motor work correctly by manually rotating the Motor. When the home position is set to "0", it is clear that the home position has not been adjusted and that capping is not available.
- Make sure that the Capping Station cables are connected correctly and are not damaged
- If the Capping Motor cannot be rotated, replace the Capping Station ⇒ Page 8-120.
- Make sure the Cap Sensor Cable is connected correctly and is not damaged.
- Replace the Main PCA ⇒ Page 8-36.

- System Error:** System Error 119x: Head Relay Variable Supply Error
- Problem Description:** Output voltages of the Head Relay Board are abnormal.
- Corrective Action:** Try the following:
- Check whether 36V is supplied to the Main PCA. If not, then:
 - Make sure that the Rear Cover is closed.
 - Replace Power Supply Unit ⇒ Page 8-45.
 - Preset the Head Relay Board Voltage from the Diagnostic Menu. Use a circuit tester to check the voltages of the channels that have an error.
 - If the voltage is supplied, it means that the voltage check circuit is defective. Replace the Main PCA ⇒ Page 8-36.
 - If the voltage is not supplied, replace the Head Relay Board ⇒ Page 8-42.
 - There is a possibility of a short circuit off the Head Relay Board output line. Perform a short circuit test on the Main PCA.
 - Make sure the Carriage Trailing Cable is connected correctly and is not damaged.
- System Error:** System Error 11Ax: NVRAM Error
- Problem Description:** The data in the NVRAM is incorrect.
- Corrective Action:** Try the following:
- Switch the Printer OFF and ON again and check if the error still appears.
 - If the error continues, skip the Power-ON Self-Diagnostic by keeping the Cancel Key pressed and powering ON the Printer. Perform NVRAM Initialization (⇒ Page 4-47) and then perform Restore Calibs (⇒ Page 4-48). Switch the Printer OFF and ON again and check if the error still appears.
 - If the error continues, restore the Printer to defaults settings. Switch the Printer OFF and ON again and check if the error still appears.
 - Check whether the NVRAM is mounted on the Main PCA correctly. If necessary, replace the NVRAM ⇒ Page 8-41.
 - If the error continues, replace the Main PCA ⇒ Page 8-36.
- System Error:** System Error 11C0: Cap Position Error
- Problem Description:** The Carriage position sensors have detected more than a 2mm gap during the capping operation.
- Corrective Action:** Try the following:
- Make sure that the Encoder Strip is **not** stained.
 - Make sure that the Encoder Sensor is mounted correctly and that the cable is connected correctly.
 - Make sure that the Trailing Cable is connected correctly.
 - Replace the Carriage PCA ⇒ Page 8-96.
 - If the error continues, replace the Main PCA ⇒ Page 8-36.

- System Error:** System Error 11D0: Cooling Fan Error
- Problem Description:** When the Printhead temperature reaches above 43°C, the Printer will check whether the temperature drops below 43°C during printing. This error will appear if the temperature does not drop below 43°C after 10 minutes.
- Corrective Action:** Try the following:
- Make sure that the Printhead Cooling Fans are working correctly. If the Printhead Cooling Fans are not working correctly, replace them ⇒ Page 8-87.
 - Make sure that the Printer Cooling Fans are connected and working correctly.
- System Error:** System Error 11E0: Long Term Storage Error
- Problem Description:** This error is displayed when the Printer has been left switched OFF for more than 31 days.
- Corrective Action:** Try the following:
- This error can be avoided if the "Store Ink System" procedure is performed before turning the Printer OFF for long periods.
 - To clear this error:
 - Turn the Printer ON in error skip mode by holding down the **Cancel** and **Shift** keys and pressing the ON button.
 - Enter the Password to clear the internal error flag: ◀, ▶, **Shift** and **OK**.
 - Switch the Printer OFF and then ON again.
- System Error:** System Error 12Ax: End of Life of Part Reached
- Problem Description:** The end of life of the Pump Tube has been reached since it has been working for more than 73 hours.
- Corrective Action:** Try the following:
- Replace the Ink Pump Assembly ⇒ Page 8-99.
- System Error:** System Error 120x: Printhead Drive IC Error
- Problem Description:** The Piezo Drive IC on a Printhead is too hot (85°C or higher) or too low (-10°C or lower).
- Corrective Action:** Try the following:
- Check whether the temperature of the Printhead voltage circuit on the Carriage PCA is extremely hot. If it is extremely high, check the short-circuit of the Printhead and the Printhead Cable using a tester. The Short-circuit may have been caused by the incorrect insertion of the Printhead Cable, internal failure of the Printhead or by a foreign object attached to the Carriage PCA.
 - Replace the Printhead ⇒ Page 8-36.
 - Replace the Carriage PCA ⇒ Page 8-96.

System Error:	System Error 121x: Printhead Temperature Error
Problem Description:	The Printhead temperature is too high (85°C or higher) or too low (-10°C or lower).
	<ul style="list-style-type: none"> ■ x = 0: Printhead Number 1 (Black). ■ x = 1: Printhead Number 2 (Light Magenta). ■ x = 2: Printhead Number 3 (Light Cyan). ■ x = 3: Printhead Number 4 (Yellow). ■ x = 4: Printhead Number 5 (Magenta). ■ x = 5: Printhead Number 6 (Cyan).
Corrective Action:	Try the following:
	<ul style="list-style-type: none"> ■ Check the failing Printhead to make sure that it is not damaged and that the cable are correctly connected ■ Replace the Carriage PCA ⇒ Page 8-96. ■ Replace the Printhead ⇒ Page 8-36.
System Error:	System Error 1220: Edge Sensor Error
Problem Description:	The Printer has problems detecting the edge of the Media.
Corrective Action:	Try the following:
	<ul style="list-style-type: none"> ■ Enter the Sensors Menu (in Maintenance Mode) and select "Printer Sensors". Then execute the "Line Sensor" option, and check if the Line Sensor is functioning correctly by inserting a white piece of paper underneath it. If the Line Sensor responds, then it is functioning correctly. ■ If the Line Sensor does not respond to the white piece of paper, then replace the Line Sensor ⇒ Page 8-106. ■ Replace the Carriage PCA ⇒ Page 8-96.
System Error:	System Error 123x: Sub-Tank Sensor Error (Full or Half)
Problem Description:	The Full and Half Sensors on the Sub-Tanks are defective.
	<ul style="list-style-type: none"> ■ x = 0: Printhead Number 1 (Black). ■ x = 1: Printhead Number 2 (Light Magenta). ■ x = 2: Printhead Number 3 (Light Cyan). ■ x = 3: Printhead Number 4 (Yellow). ■ x = 4: Printhead Number 5 (Magenta). ■ x = 5: Printhead Number 6 (Cyan).
Corrective Action:	Try the following:
	<ul style="list-style-type: none"> ■ Enter the Sensors Menu (in Maintenance Mode) and select "Sub Tank Sensor". Then execute ALL the "Full x" and "Half x" options, and check if the Sub-Tank Sensors are functioning correctly. Manually move the Sub-Tank Sensor Plate and if the Sensor responds, it means that it is working correctly. ■ If any of the Sub-Tank Sensors fail to respond, then replace the corresponding Sub-Tank Sensor ⇒ Page 8-115. ■ Make sure that the Sub-Tank Sensor Relay Cables (Left/Right) and the Sub-Tank Sensor Cables are connected correctly and are not damaged. ■ Replace the Main PCA ⇒ Page 8-36.

System Error:	System Error 124x: Ink Supply Sensor Error
Problem Description:	<p>The Ink Supply Sensor does not change even though the specified time has passed after driving the Ink Supply Motor for the Sub-Tank.</p> <ul style="list-style-type: none">■ x = 0: Printhead Number 1 (Black).■ x = 1: Printhead Number 2 (Light Magenta).■ x = 2: Printhead Number 3 (Light Cyan).■ x = 3: Printhead Number 4 (Yellow).■ x = 4: Printhead Number 5 (Magenta).■ x = 5: Printhead Number 6 (Cyan).
Corrective Action:	<p>Try the following:</p> <ul style="list-style-type: none">■ Enter the Sensors Menu (in Maintenance Mode) and select "Sub Tank Sensor". Then, execute the "XX Ink Pump" option for each color, and check if the Ink Supply Sensor is functioning correctly. Manually move the gear and if the Sensor responds, it means that it is working correctly.■ If any of the Ink Supply Sensors fail to respond, then replace the corresponding Ink Supply Station ⇒ Page 8-110.■ Enter the Motors Menu (in Maintenance Mode) and set the "X Pump Motor" option to "Normal" to drive the Ink Supply Motor. When the Sub-Tank is already full, it will not be checked and therefore ink should be discharged. Once the motor drive has been checked, set it "Stop" immediately. Repeat the process with the other colors.■ If any Ink Supply Motor fails, then replace the corresponding Ink Supply Station ⇒ Page 8-110.■ Replace the Main PCA ⇒ Page 8-36.
System Error:	System Error 125x: Sub-Tank Supply Error
Problem Description:	<p>The Sub-Tank Sensor does not switch to less than half even though ink has been consumed.</p> <ul style="list-style-type: none">■ x = 0: Printhead Number 1 (Black).■ x = 1: Printhead Number 2 (Light Magenta).■ x = 2: Printhead Number 3 (Light Cyan).■ x = 3: Printhead Number 4 (Yellow).■ x = 4: Printhead Number 5 (Magenta).■ x = 5: Printhead Number 6 (Cyan).
Corrective Action:	<p>Try the following:</p> <ul style="list-style-type: none">■ Enter the Motors Menu (in Maintenance Mode) and set the "Solenoid L" and "Solenoid R" options to "Closed" to cut the outside air. Now set the "Cap Stat Motor" to "Prime" to discharge the ink from the Sub-Tank and check if the Ink Supply Motor drives by turning the power ON again when there is a little bit of ink left. If the Motor is not driven, replace the corresponding Cable or Ink Supply Station.■ Check whether the Sub-Tank Sensor Plate works correctly and is not blocked by any foreign object.■ Enter the Sensors Menu (in Maintenance Mode) and select "Sub Tank Sensor". Then, execute the "XX Ink Pump" option for each color, and check

if the Ink Supply Sensor is functioning correctly. Manually move the gear and if the Sensor responds, it means that it is working correctly.

- If any of the Ink Supply Sensors fail to respond, then replace the corresponding Ink Supply Station ⇒ Page 8-110.
- Replace the Main PCA ⇒ Page 8-36.

System Error:	System Error 126x: Trailing Cable Connection Error
Problem Description:	The Trailing Cable connected to the one of the following connectors is faulty. <ul style="list-style-type: none"> ■ x = 0: Connector 9. ■ x = 1: Connector 10. ■ x = 2: Connector 11. ■ x = 3: Connector 12.
Corrective Action:	Try the following: <ul style="list-style-type: none"> ■ Reconnect the Trailing Cable to the Carriage PCA and the Main PCA. ■ Make sure that the Trailing Cable is not damaged. ■ Replace the Carriage PCA ⇒ Page 8-96. ■ If the error continues, replace the Main PCA ⇒ Page 8-36.
System Error:	System Error 1270: Feed Motor Error
Problem Description:	Over-current problem in the Feed Motor Drive Circuit.
Corrective Action:	Try the following: <ul style="list-style-type: none"> ■ Check the short-circuit of the internal cable of the Feed/Rewind Motor and Feed Motor Relay Cable. ■ Check the short-circuit of the Feed Motor. ■ Replace the Add-On (HEB2) Control PCA ⇒ Page 8-45.
System Error:	System Error 1280: Take-Up-Reel Motor Error
Problem Description:	Over-current problem in the Take-Up-Reel Motor Drive Circuit.
Corrective Action:	Try the following: <ul style="list-style-type: none"> ■ Check the short-circuit of the internal cable of the Feed/Take-Up-Reel Motor and Take-Up-Reel Motor Relay Cable. ■ Check the short-circuit of the Take-Up-Reel Motor. ■ Replace the Add-On (HEB2) Control PCA ⇒ Page 8-45.
System Error:	System Error 1290: End of Life of Part Reached
Problem Description:	The end of life of the Prime Assembly has been reached since it has been working for more than 58 hours.
Corrective Action:	Try the following: <ul style="list-style-type: none"> ■ Replace the Prime Assembly ⇒ Page 8-121.

System Error: System Error 170X: Servo Motor Error

- x = 0: Feed System.
- x = 1: Carriage System.
- x = 2: Servo Unit.

Problem Description: The Paper-Axis or the Scan-Axis Motor moves the Carriage, but the input from the Linear Encoder Sensor does not change.

Corrective Action: Try the following:

- Make sure that there is no paper jam blocking the Carriage path.
- Make sure that the corresponding cables are connected correctly to Connectors CN14 and CN17 on the Main PCA.
- Make sure that the Linear Encoder Sensor Cable is connected correctly to the Carriage PCA.
- Make sure that the Encoder Strip is not damaged or scratched.
- Make sure that the pinchwheels rotate correctly.
- Make sure that the Carriage gears work correctly
- Replace the Main PCA ⇒ Page 8-36.
- If the error continues, replace the Paper-Axis or Scan-Axis Motors.

Heater Error Codes

A Heater Error Code appears on the Heater Panel when a component of the Heater has failed during normal usage. Each Heater Error Code and its appropriate corrective actions are explained on the following pages.

- Heater Error:** Heater Error H01: System Error
- Problem Description:** Abnormal operation of the Heater Relay Assembly.
- Corrective Action:** Try the following:
- Replace the Heater Relay Assembly ⇒ Page 8-52.
- Heater Error:** Heater Error H02: Relay Board Error
- Problem Description:** The Heater Board and the Relay Board are not connected together.
- Corrective Action:** Try the following:
- Make sure that the Heater Board is connected correctly to the Relay Board via the Relay Cable.
 - Replace the Heater Relay Assembly ⇒ Page 8-52.
- Heater Error:** Heater Error H03: Front Heater Temperature Error
- Problem Description:** Temperature read by the Front Heater is abnormal (lower than -10°C or higher than 70°C).
- Corrective Action:** Try the following:
- Make sure that the Heater Relay Assembly is connected correctly to the Front Heater.
 - Replace the Heater Relay Assembly ⇒ Page 8-52.
 - Replace the Front Heater ⇒ Page 8-29.
- Heater Error:** Heater Error H04: Rear Heater Temperature Error
- Problem Description:** Temperature read by the Rear Heater is abnormal (lower than -10°C or higher than 70°C).
- Corrective Action:** Try the following:
- Make sure that the Heater Relay Assembly is connected correctly to the Rear Heater.
 - Replace the Heater Relay Assembly ⇒ Page 8-52.
 - Replace the Rear Heater ⇒ Page 8-32.

Heater Error:	Heater Error H05: Center Heater Temperature Error
Problem Description:	Temperature read by the Center Heater is abnormal (lower than -10°C or higher than 70°C).
Corrective Action:	Try the following: <ul style="list-style-type: none">■ Make sure that the Heater Relay Assembly is connected correctly to the Center Platen.■ Replace the Heater Relay Assembly ⇒ Page 8-52.■ Replace the Center Platen ⇒ Page 8-34.
Heater Error:	Heater Error H06: Front Heater Time-out Error
Problem Description:	The temperature of the Front Heater does not reach the preset temperature even after 15 minutes.
Corrective Action:	Try the following: <ul style="list-style-type: none">■ Make sure that the Voltage alternation switch located at the back of the Printer is set correctly to the AC voltage being used.■ Make sure that the Fuse (F2) on the Heater Relay Assembly has not blown. If the fuse has blown, replace it.■ Make sure that the Heater Board is connected correctly to the Relay Board via the Relay Cable.■ Make sure that the Heater Relay Assembly is connected correctly to the Front Heater.■ Replace the Heater Relay Assembly ⇒ Page 8-52.■ Replace the Front Heater ⇒ Page 8-29.
Heater Error:	Heater Error H07: Rear Heater Time-out Error
Problem Description:	The temperature of the Rear Heater does not reach the preset temperature even after 15 minutes.
Corrective Action:	Try the following: <ul style="list-style-type: none">■ Make sure that the Voltage alternation switch located at the back of the Printer is set correctly to the AC voltage being used.■ Make sure that the Fuse (F2) on the Heater Relay Assembly has not blown. If the fuse has blown, replace it.■ Make sure that the Heater Board is connected correctly to the Relay Board via the Relay Cable.■ Make sure that the Heater Relay Assembly is connected correctly to the Rear Heater.■ Replace the Heater Relay Assembly ⇒ Page 8-52.■ Replace the Rear Heater ⇒ Page 8-32.

- Heater Error:** Heater Error H08: Center Heater Time-out Error
- Problem Description:** The temperature of the Center Heater does not reach the preset temperature even after 15 minutes.
- Corrective Action:** Try the following:
- Make sure that the Voltage alternation switch located at the back of the Printer is set correctly to the AC voltage being used.
 - Make sure that the Fuse (F2) on the Heater Relay Assembly has not blown. If the fuse has blown, replace it.
 - Make sure that the Heater Board is connected correctly to the Relay Board via the Relay Cable.
 - Make sure that the Heater Relay Assembly is connected correctly to the Center Platen.
 - Replace the Heater Relay Assembly ⇒ Page 8-52.
 - Replace the Center Platen Heater ⇒ Page 8-34.
- Heater Error:** Heater Error H09: Operation Panel Switch Error
- Problem Description:** The specified switch is not pressed for 30 seconds or more when the diagnostics that verifies the switch action is executed.
- Corrective Action:** Try the following:
- Replace the Heater Relay Assembly ⇒ Page 8-52.
- Heater Error:** Heater Error H10: Zero Cross Error
- Problem Description:** This error occurs when the diagnostics for the AC Relay is executed.
- Corrective Action:** Try the following:
- Make sure that the Heater Board is connected correctly to the relays on the Heater Block Assembly
 - Make sure that the Heater Board is connected correctly to the Relay Board via the Relay Cable.
 - Replace the Heater Relay Assembly ⇒ Page 8-52.

System Error Codes

A System Error Code appears on the Front Panel when an unrecoverable system exception interrupt occurs in the Printer.



nnnn: System Error Code

The System Error Codes are listed in the following table:

System Error Code	Error Description
F_es: 0001	Operation Code Exception
F_es: 0002	Slot Illegal Exception
F_es: 0003	Address Exception
F_es: 0004	DMA Error
F_es: 0005	NMI Occurrence (WatchDog Error)

Corrective Action

1. Replace the Main PCA ⇒ Page 8-36.
2. Upgrade the Printer Firmware.

Printhead Adjustment

3

- Introduction 3-2
- Tools Required 3-2
- Calibrate the Printhead Adjustment Jig 3-3
- Install the Printhead Adjustment Jigs in the Carriage 3-5
- Set Printhead Voltage 3-9
- Print the Printhead Adjustment Pattern 3-10
- Perform Printhead Position Correction 3-11
- Print the Check Printhead Pattern 3-14
- Adjust the Printhead 3-15
- Tip to Speed-Up the Printhead Adjustment 3-19

Printhead Adjustment

Introduction

The mechanical adjustment of a Printhead must be done every time a Printhead is removed or replaced. If the adjustment of the Printheads is not done, you could get Print Quality problems like banding. The Printhead Adjustment should be done in the following order:

- 1 Calibrate the Printhead Adjustment Jig.
- 2 Install the Printhead Adjustment Jigs in to the Carriage.
- 3 Set Printhead Voltage.
- 4 Print the Printhead Adjustment pattern.
- 5 Perform Printhead Position correction.
- 6 Print the Check Printhead pattern.
- 7 Mechanically adjust the Printhead.

Tools Required

The Tools required to perform the Printhead Adjustment procedure are shown below. Without these tools, the Printhead Adjustment procedure cannot be completed correctly.



Printhead Adjustment Jig 1



Printhead Adjustment Reference Plate



Printhead Positioning Pins



Small Flat-Head Screwdriver



Cross-Head Screwdriver



Printhead Adjustment Jig 2




Measuring Loupe

Calibrate the Printhead Adjustment Jig


To speed up the Printhead Adjustment, you can follow the tip on Page 3-19. If the tip is followed, then it is not necessary to calibrate the Printhead Adjustment Jig.

Before installing the Printhead Adjustment Jig 1 in to the Carriage, it needs to be calibrated as follows:

- 1 Retract the datum pins located in the Printhead Adjustment Jig 1 by turning the Adjustment Screws counterclockwise using a small Flat-Head Screwdriver.

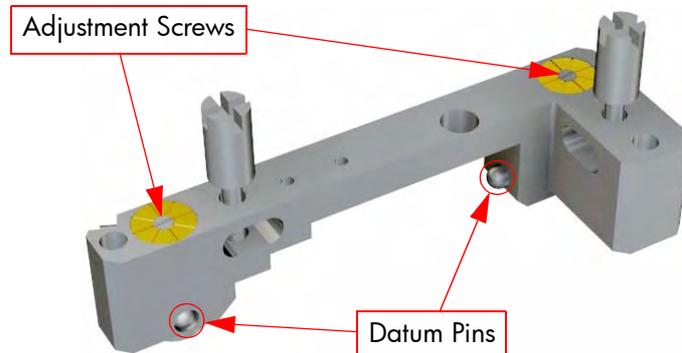


- 2 Place the Printhead Adjustment Jig 1 on top of the Printhead Adjustment Reference Plate as shown:

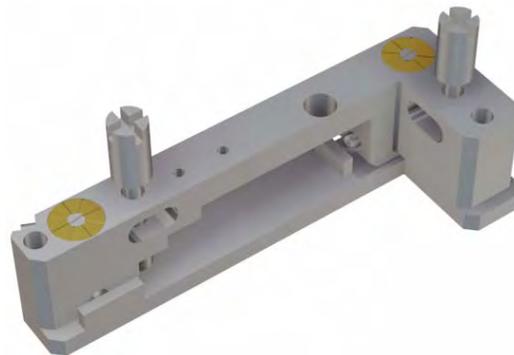


- 3 Insert the two Printhead Positioning Pins in to the Printhead Adjustment Jig 1.




- 4 Tighten the two fixing screws so that the Printhead Adjustment Jig 1 is securely attached to the Printhead Adjustment Reference Plate.

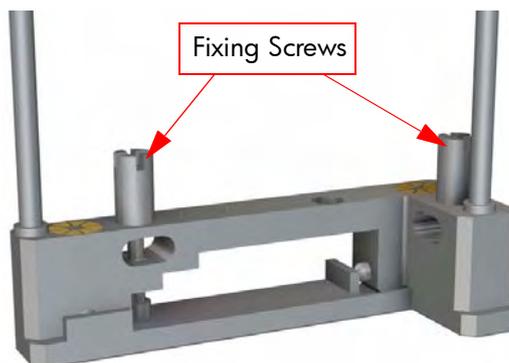

- 5 Place the Printhead Adjustment Jig on a flat surface and without holding it, gently turn the Adjustment Screws clockwise until the Printhead Adjustment Jig begins to move. Check that the Datum Pins touch the walls of the Printhead Adjustment Reference Plate. Do **NOT** force the Adjustment Screws too much as this could damage the Datum Pins.

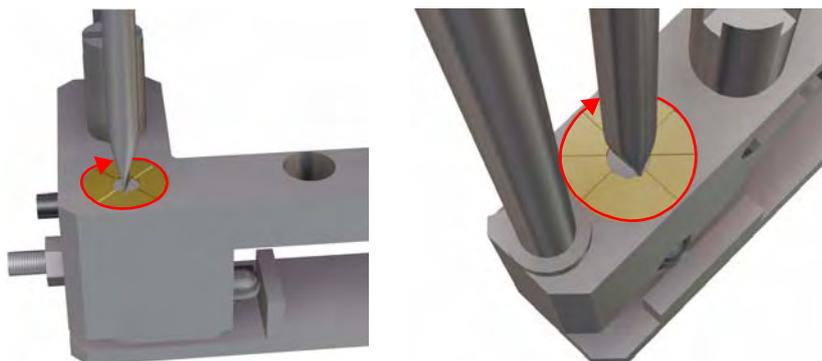

- 6 Once the Printhead Adjustment Jig 1 has been calibrated, you can loosen the fixing screws, remove the Printhead Positioning Pins and remove the Printhead Adjustment Reference Plate.

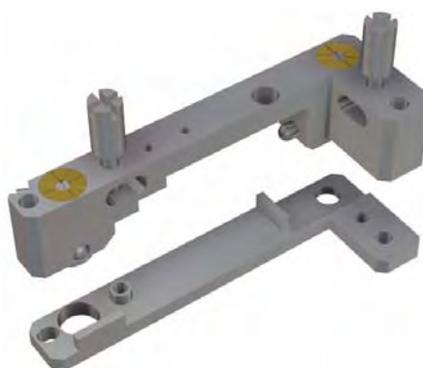

Install the Printhead Adjustment Jigs in the Carriage


The next procedure will be to install the Printhead in to the Carriage and install the Printhead Adjustment Jigs as follows:

Never touch the Printhead nozzles. They can be easily damaged or clogged. For Printhead removal information, refer to Page 8-91.


- 1 Install the new Printhead in to the Carriage and secure it with two screws. The screws should not be tightened too much, just enough so that the Printhead does not move loosely.




- 2 Install the Printhead Adjustment Jig 1 in to position against the Carriage Base Plate. Make sure that the 2 datum pins touch the Printhead as shown.

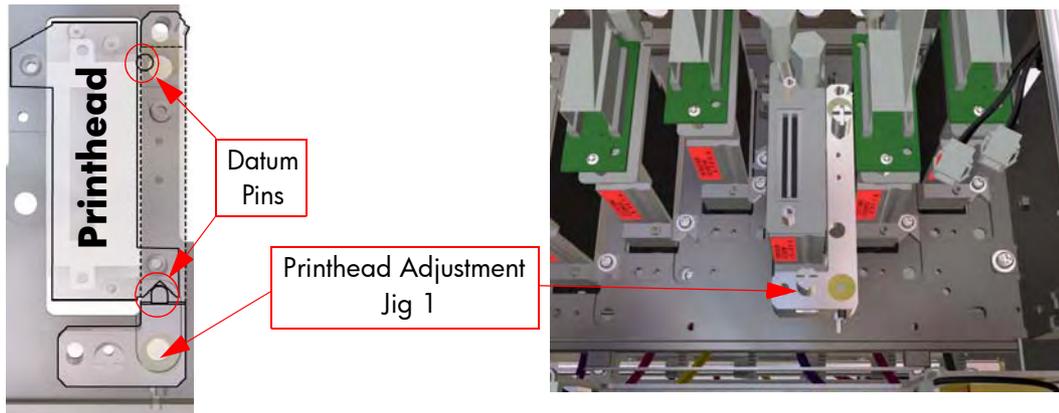


- 3 Insert the two Printhead Positioning Pins into the Printhead Adjustment Jig 1.

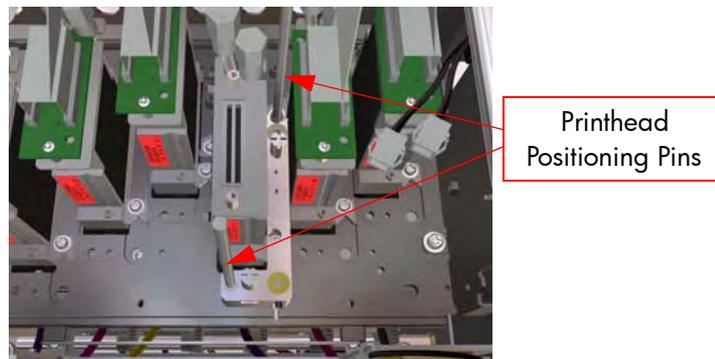


- Tighten the two fixing screws so that the Printhead Adjustment Jig 1 is securely attached to the Carriage Base Plate.

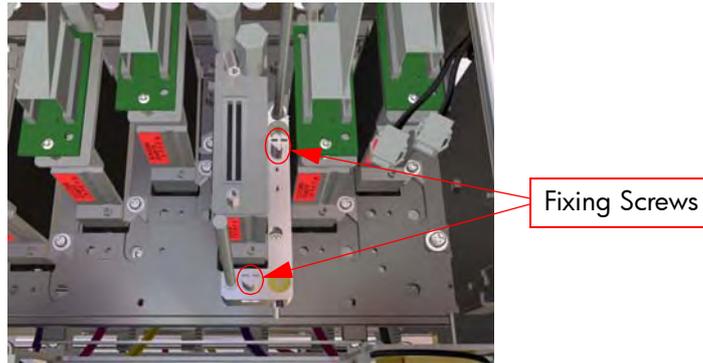


- Install the Printhead Adjustment Jig 2 in to position against the Carriage Base Plate.

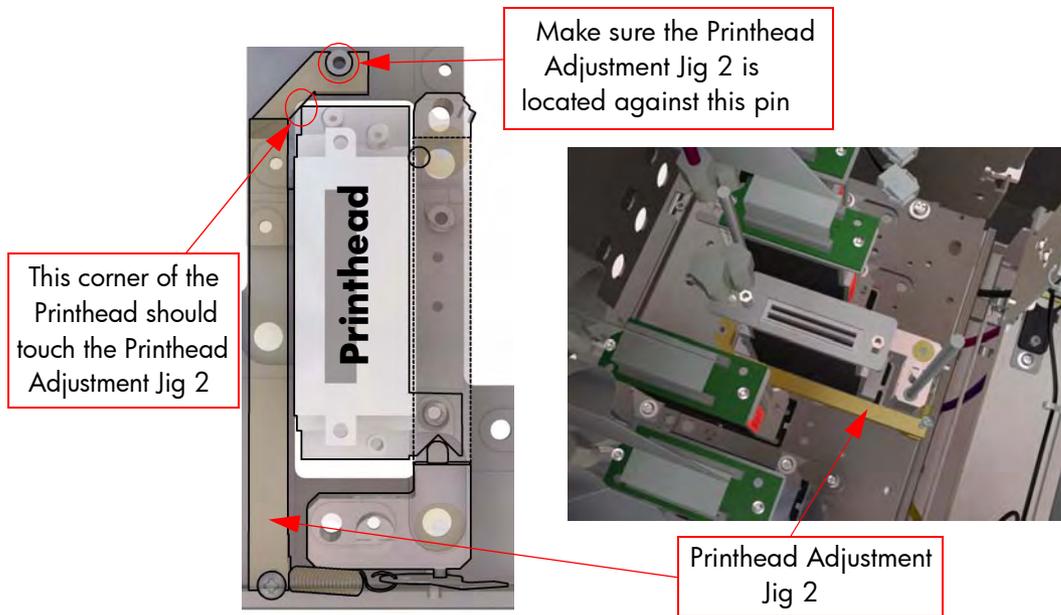


- Stretch the spring and hook the key over the top screw of the Printhead Adjustment Jig 1 as shown.

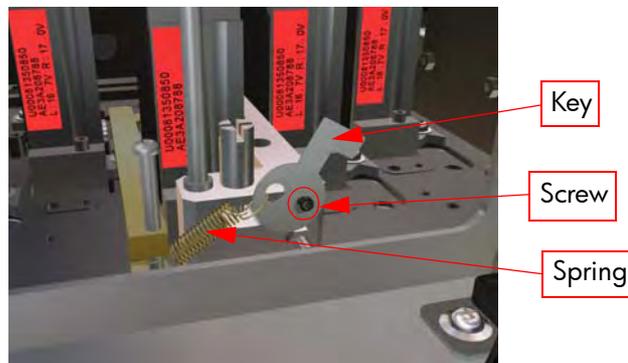


- 7** The following drawing shows the overall position of the Printhead Adjustment Jigs in relation to the Printhead (the tubes have been removed for clarity).

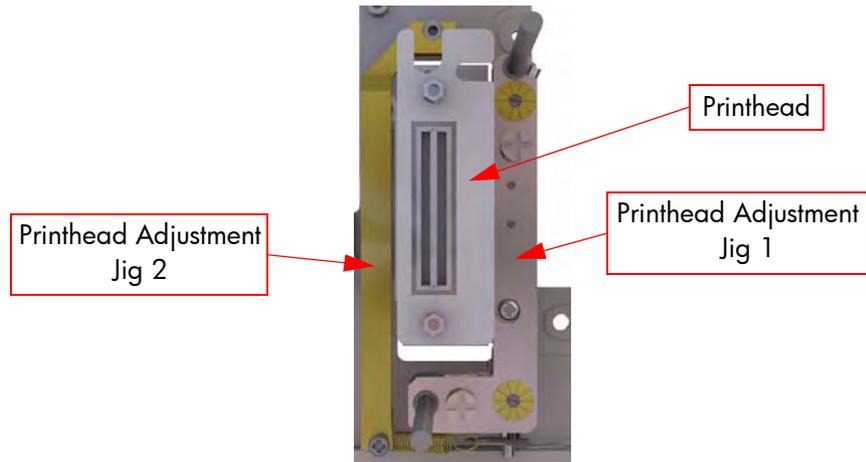


- 8** Once the Printhead Adjustment Jigs are in place, tighten the front screw that secures the Printhead to the Carriage Base Plate.

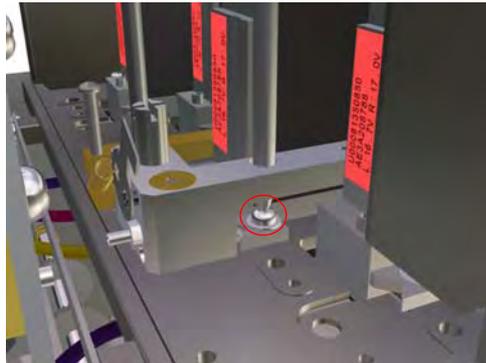


- 9** Remove the tube cap from the Printhead.

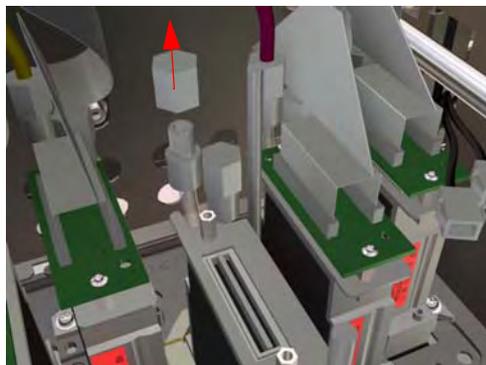


- 10** Attach the Ink Tube to the Printhead and secure it tightly.

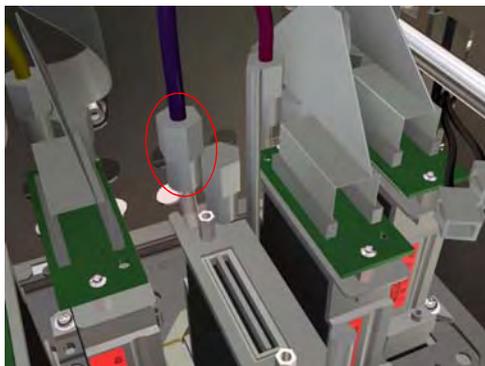

- 11** Attach the Printhead Connector Assembly to the Printhead and secure it with 2 screws.

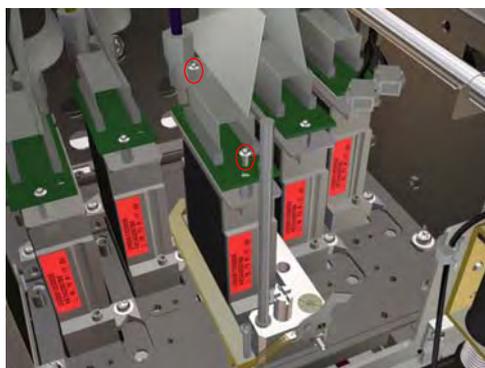

- 12** Before moving to the next stage of the Printhead Adjustment procedure, make sure that the Printhead Connector cables are safely secured with tape so that they don't hit other parts of the Printer.

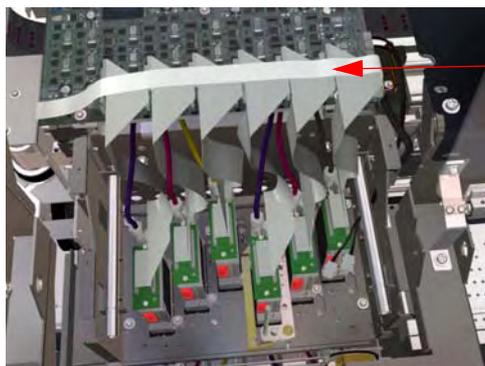

Secure with
tape


- 13** Enter into the Ink System Options submenu and select "Wash Printheads" in order to charge the replaced Printhead with ink.
- 14** Print a Nozzle Check pattern in order to verify that ink has been charged correctly into the Printhead. If any of the nozzles are not firing correctly, then perform a Normal Printhead Recovery and then retry the nozzle Check pattern.

Set Printhead Voltage

Before the Printhead can be used to print correctly, you must set the Printhead Voltage as follows:


Remember to set BOTH the left and right Printhead Voltage values for each Printhead correctly.

You can find the Printhead Voltage values on each Printhead as shown:

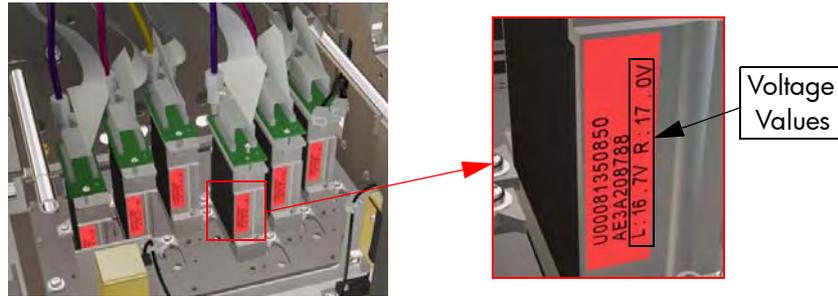

- 1 Power On the Printer and enter in to the Maintenance Mode ⇒ Page 4-7.
- 2 Press the ◀ key to enter in to the Printhead Adjustment menu.

Press the Left Arrow Key to select

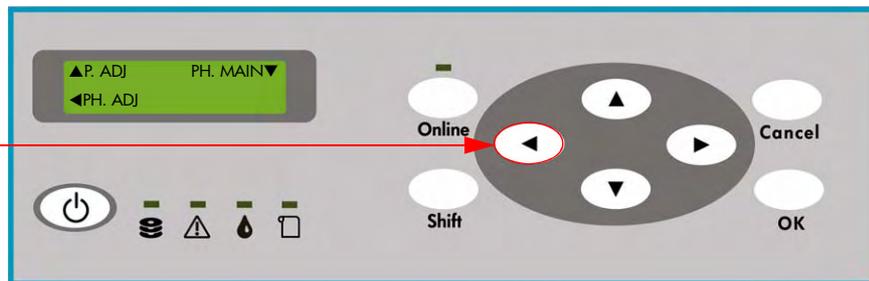

- 3 In the Printhead Adjustment submenu, scroll to "PH Voltage" and press the ▶ key.

```
# PH VOLTAGE
# Lm (L)
```

- 4 In the PH Voltage submenu, select the color of the Printhead (either left or right) for which you would like to set the Printhead Voltage and press the **OK** key. If you would like to exit the PH Voltage submenu, press the ◀ key.

```
# PH VOLTAGE
> Lm (L) > 16.0 V
```

- 5 Use the ▲ and ▼ keys to change the digits and use the ◀ and ▶ keys to select the digits. The value can be changed in a range of 12.0 V (in increments of 0.1 V). Press the **OK** key once you have entered the new value.


```
# PH VOLTAGE
> Lm (L) > 17.6 V
```

Print the Printhead Adjustment Pattern


In order to correct the Printhead position, you must first print the Printhead Adjustment pattern as follows:

- 1 Enter in to the Maintenance Mode ⇒ Page 4-7.
- 2 Press the ◀ key to enter in to the Printhead Adjustment menu.


Press the Left Arrow Key to select

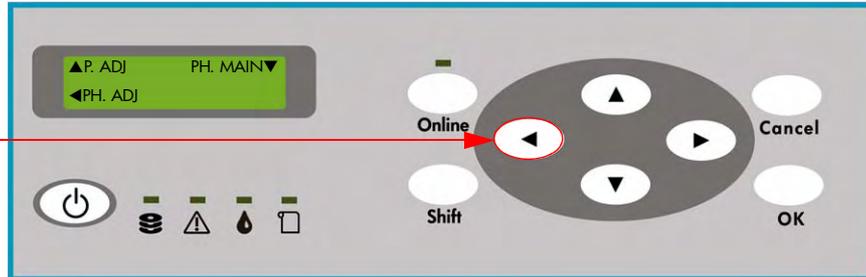


- 1 In the Printhead Adjustment submenu, scroll to "PH Adj Print" and press the **OK** key.

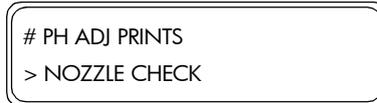

- 2 In the Printhead Adjustment Prints submenu, scroll to "Printhead Adj" and press the **OK** key.

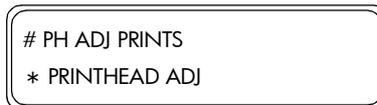

- 3 You will need to confirm that you want to print the Printhead Adjustment pattern by pressing the **OK** key.

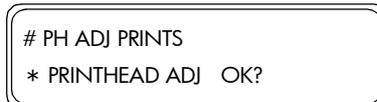


- 4 The Printer will start printing the Printhead Adjustment pattern and the following message will appear on the Front Panel.




Perform Printhead Position Correction

Once you have printed the Printhead Adjustment pattern, you can use it to correct the position of the Printhead as follows:

- 1 Locate the Printhead Row pattern in the Printhead Adjustment pattern.

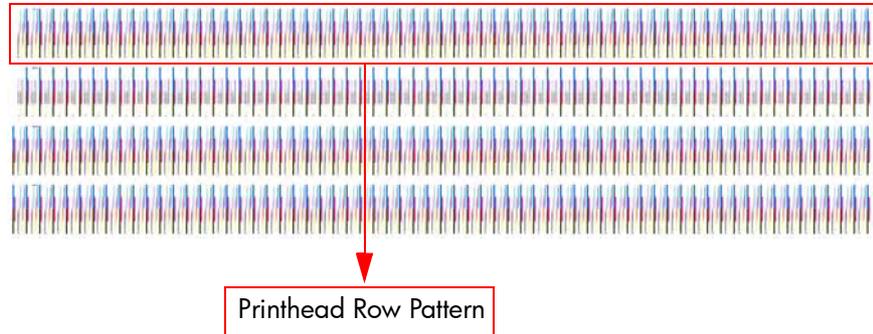

- 2 Select the pattern that looks the best aligned and note down the value (either a - value or a + value).

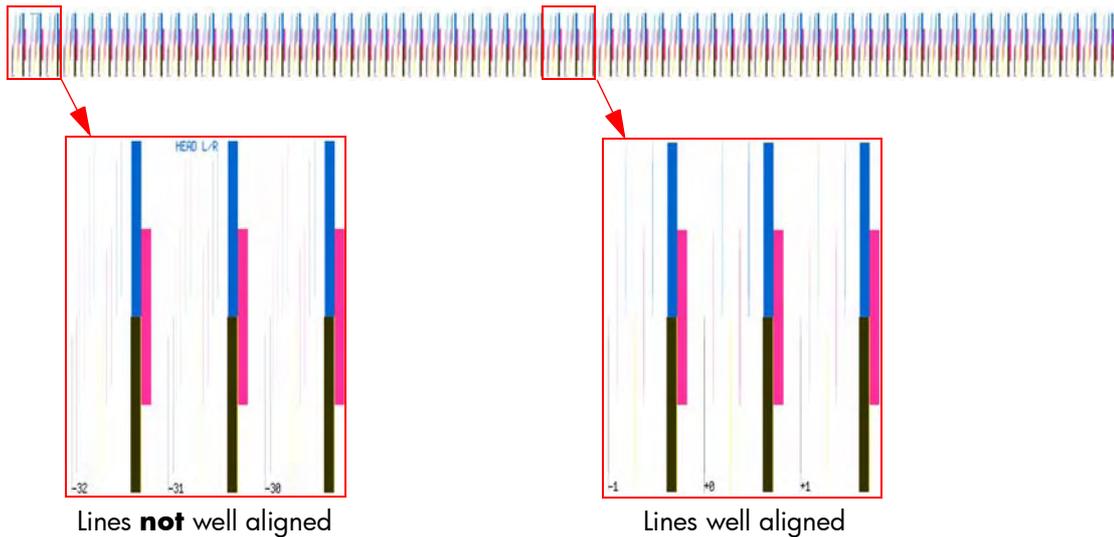

- 3 In the Printhead Adjustment submenu, scroll to "PH Row Val" and press the **▶** key.

```
# PH ROW VAL
# Lm
```


- 4 In the PH Row Val submenu, select the color of the Printhead that you would like to adjust and press the **OK** key. If you would like to exit the PH Row Val submenu, press the **◀** key.

```
# PH ROW VAL
> Lm >+00
```


- 5 Use the ▲ and ▼ keys to change the digits and use the ◀ and ▶ keys to select the digits. Enter the value that you noted down in step 2.

```
# PH ROW VAL
> Lm >+01
```

- 6 Press the **OK** key once you have entered the new value.
 7 Locate the Printhead to Printhead pattern in the Printhead Adjustment pattern.

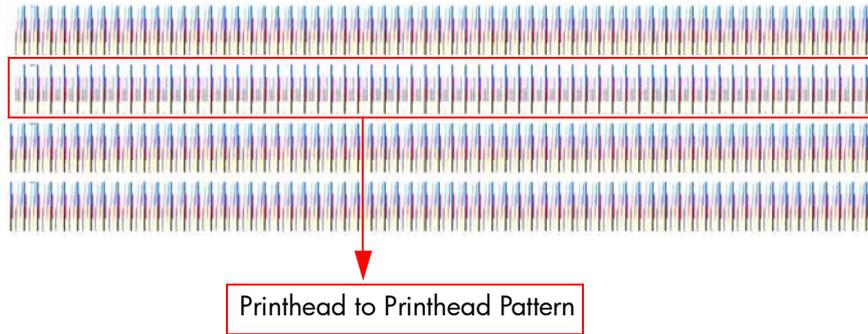

- 8 Select the pattern that looks the best aligned and note down the value (either a - value or a + value).

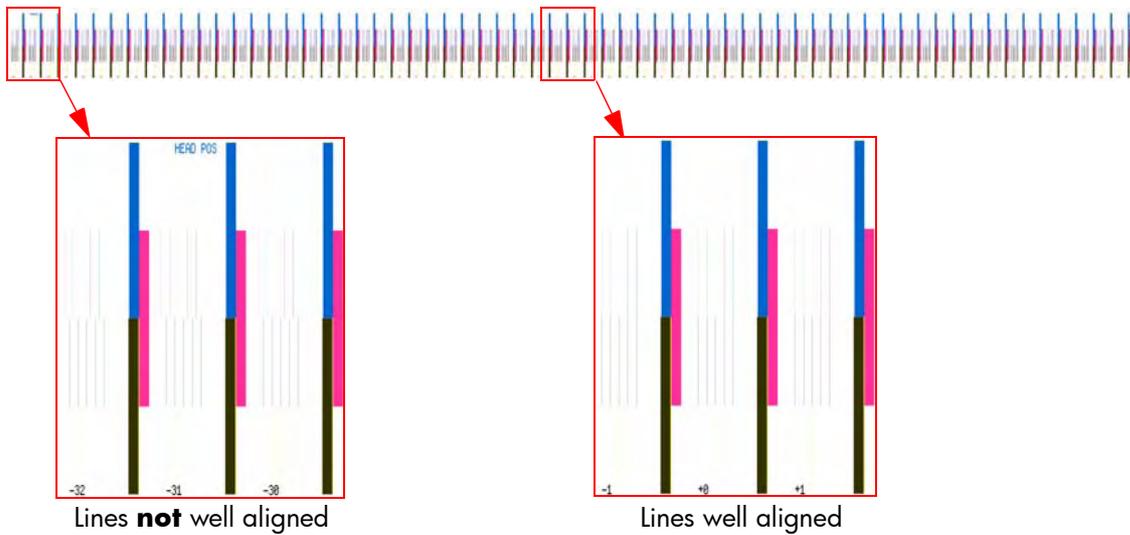

- 9 In the Printhead Adjustment submenu, scroll to "PH to PH Val" and press the ▶ key.

```
# PH TO PH VAL
# Lm
```

- 10** In the PH to PH Val submenu, select the color of the Printhead that you would like to adjust and press the **OK** key. If you would like to exit the PH to PH Val submenu, press the ◀ key.

```
# PH TO PH VAL  
> Lm >+00
```

- 11** Use the ▲ and ▼ keys to change the digits and use the ◀ and ▶ keys to select the digits. Enter the value that you noted down in step 8.

```
# PH TO PH VAL  
> Lm >+01
```


- 12** Press the **OK** key once you have entered the new value.

Print the Check Printhead Pattern

In order to adjust the Printhead, you must first print the Check Printhead pattern as follows:

- 1 Enter in to the Maintenance Mode ⇒ Page 4-7.
- 2 Press the ◀ key to enter in to the Printhead Adjustment menu.

Press the Left Arrow Key to select

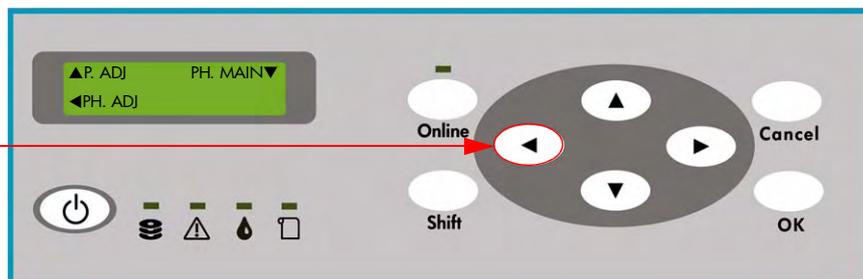

- 1 In the Printhead Adjustment submenu, scroll to "PH Adj Prints" and press the **OK** key.



- 2 In the Printhead Adjustment Prints submenu, scroll to "Check Printhead" and press the **OK** key.



- 3 You will need to confirm that you want to print the Check Printhead pattern by pressing the **OK** key.




- 4 The Printer will start printing the Check Printhead pattern and the following message will appear on the Front Panel.




Adjust the Printhead

Once you have printed the Check Printhead pattern, you can use it to adjust the Printhead as follows:


- 1 Locate the mechanical adjustment pattern in the Check Printhead pattern.

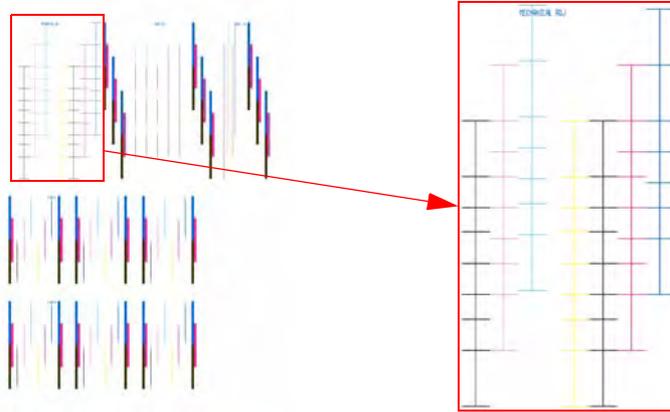


- 2 Using a Measuring Loupe, you must first measure the deviation of the Printhead in the vertical position.

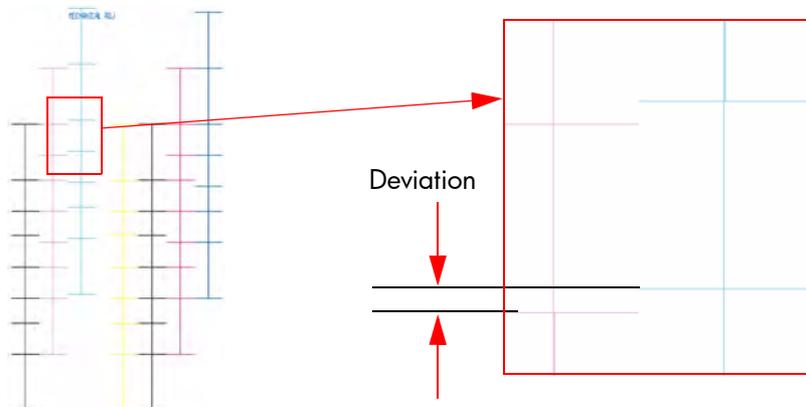

- 3 Loosen the front screw that secures the Printhead to the Carriage Base Plate.

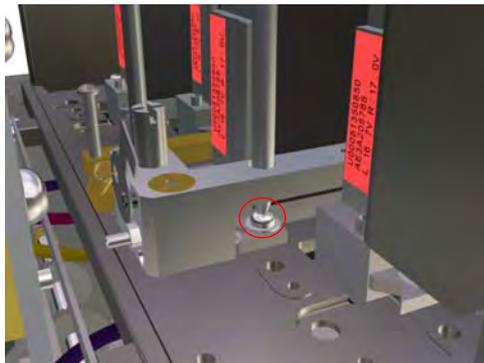


- 4** Using the measurement obtained in step 2, calculate how many scales you will need to turn the Vertical Adjustment Screw to adjust the vertical position of the Printhead.

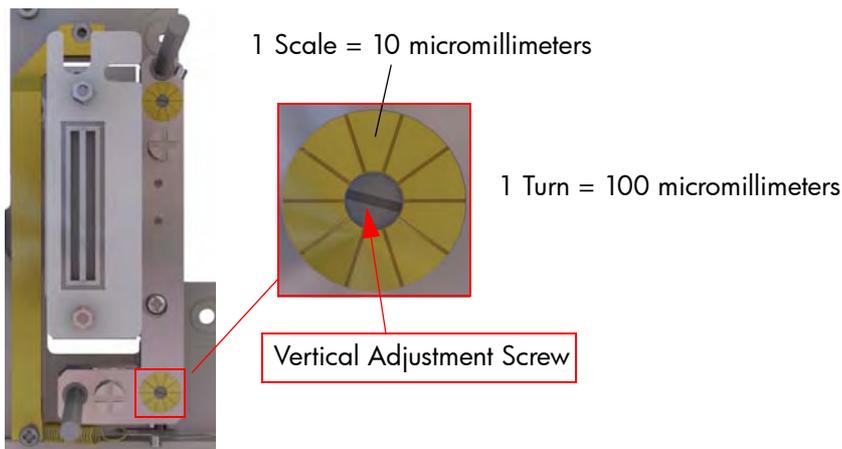

- 5** If for example, the deviation measured in step 2 was 240 micro-millimeters, you would turn the Vertical Adjustment Screw 2 full turns and 4 scales.




- 6** Tighten the front screw that secures the Printhead to the Carriage Base Plate.

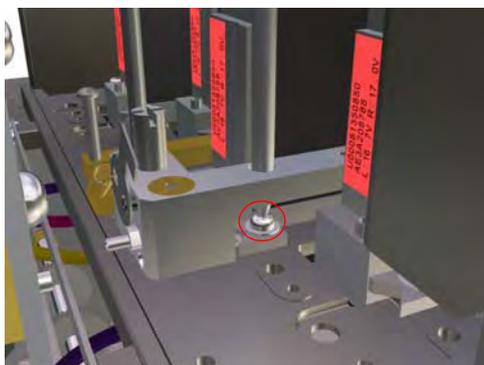


- 7** Reprint the Check Printhead pattern and measure again the deviation of the Printhead in the vertical position. If there is still deviation, repeat the instructions from step 3.


- 8** If the deviation measured is 0, you will now measure the deviation of the Printhead in the slant position.

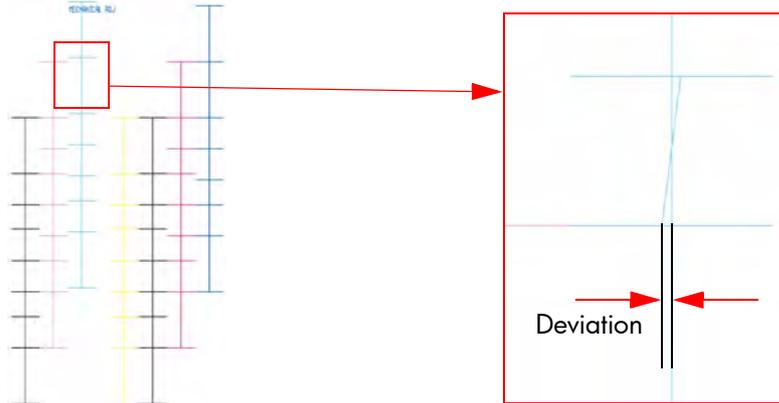

- 9** Loosen the front screw that secures the Printhead to the Carriage Base Plate.

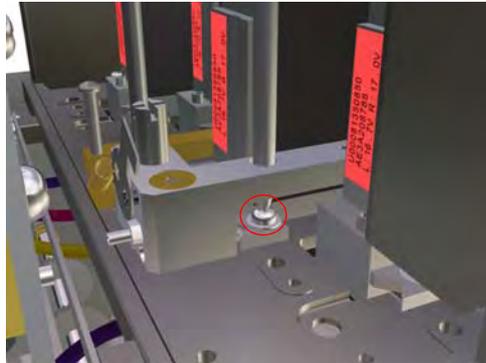


- 10** Using the measurement obtained in step 8, calculate how many scales you will need to turn the Slant Adjustment Screw to adjust the slant position of the Printhead.

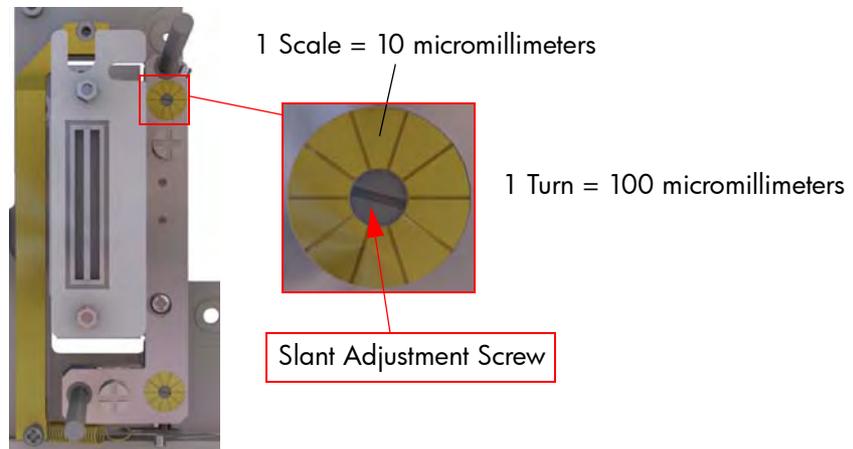

- 11** If for example, the deviation measured in step 8 was 120 micro-millimeters, you would turn the Slant Adjustment Screw 1 full turn and 2 scales.



- 12** Tighten the front screw that secures the Printhead to the Carriage Base Plate.

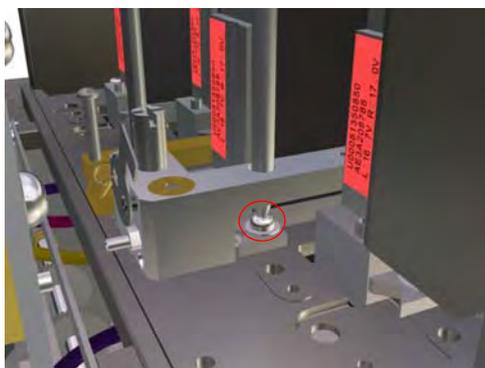


- 13** Reprint the Check Printhead pattern and measure again the deviation of the Printhead in the slant position. If there is still deviation, repeat the instructions from step 9.
- 14** If the deviation measured is 0, you can remove Printhead Adjustment Jig 2 from the Carriage.
- 15** Tighten the rear Printhead mounting screw.
- 16** Remove Printhead Adjustment Jig 1 from the Carriage.

Tip to Speed-Up the Printhead Adjustment


An alternative and faster way to adjust a new Printhead is as follows:

- 1 Before removing the **old** Printhead, install the Printhead Adjustment Jig 1 in to position against the Carriage Base Plate.

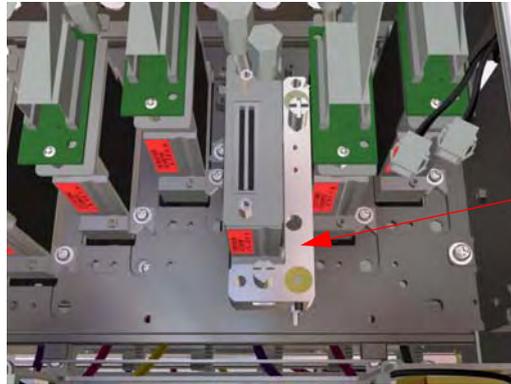


Printhead Adjustment Jig 1

- 2 Insert the two Printhead Positioning Pins into the Printhead Adjustment Jig 1.

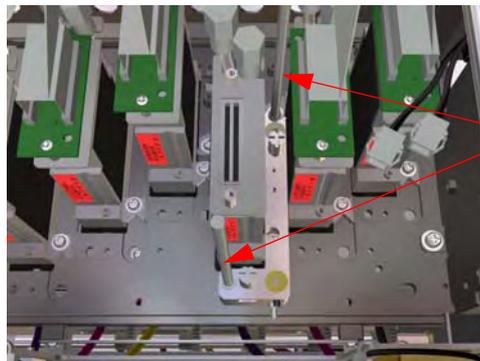


Printhead Positioning Pins

- 3 Tighten the two fixing screws so that the Printhead Adjustment Jig 1 is securely attached to the Carriage Base Plate.

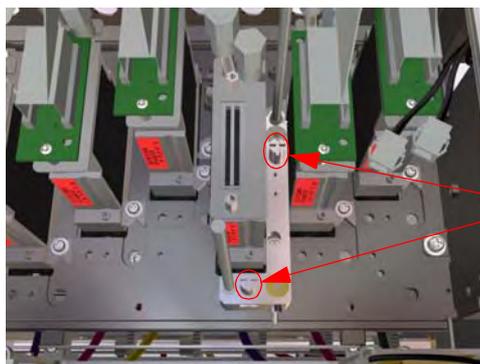


Fixing Screws


- 4 Turn both Adjustment Screws so that the 2 datum pins touch the Printhead as shown. You must **not** force the Adjustment Screws too much as this could damage the Datum Pins.

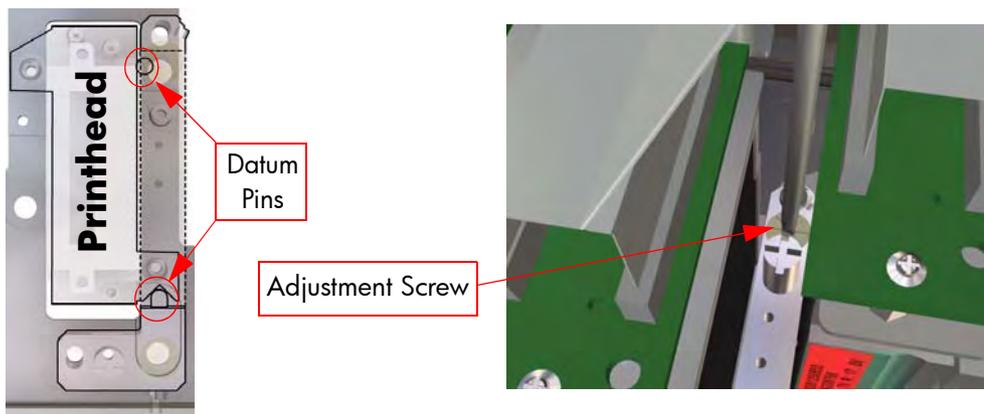


- 5 Now that the Printhead Adjustment Jig 1 is calibrated to the **old** Printhead, the Printhead can now be removed ⇒ Page 8-91.
- 6 Install a **new** Printhead in to the Carriage and position it against the Printhead Adjustment Jig 1 as shown. Make sure that the 2 datum pins touch the Printhead as shown.

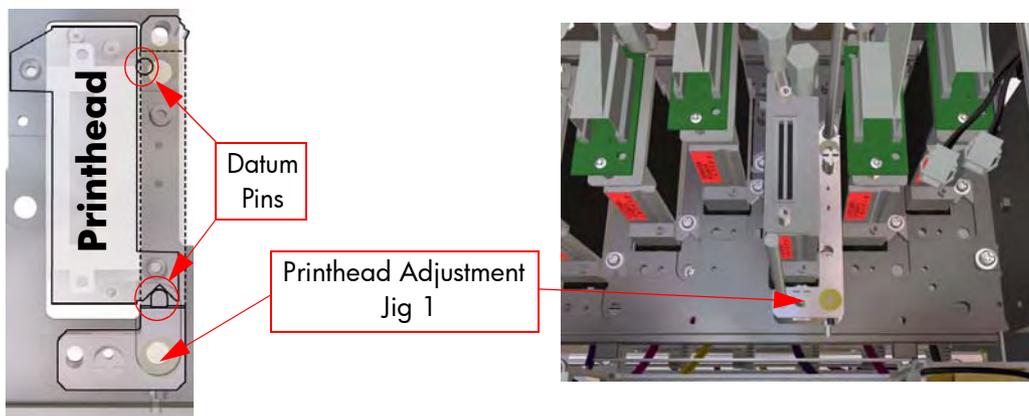


- 7 Install the two screws to secure the Printhead. The screws should **not** be tightened too much, just enough so that the Printhead does not move loosely.

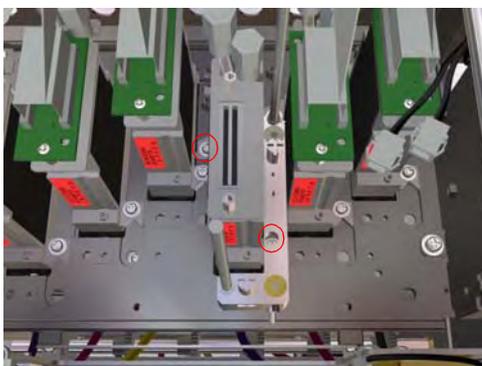

- 8** Install the Printhead Adjustment Jig 2 in to position against the Carriage Base Plate.

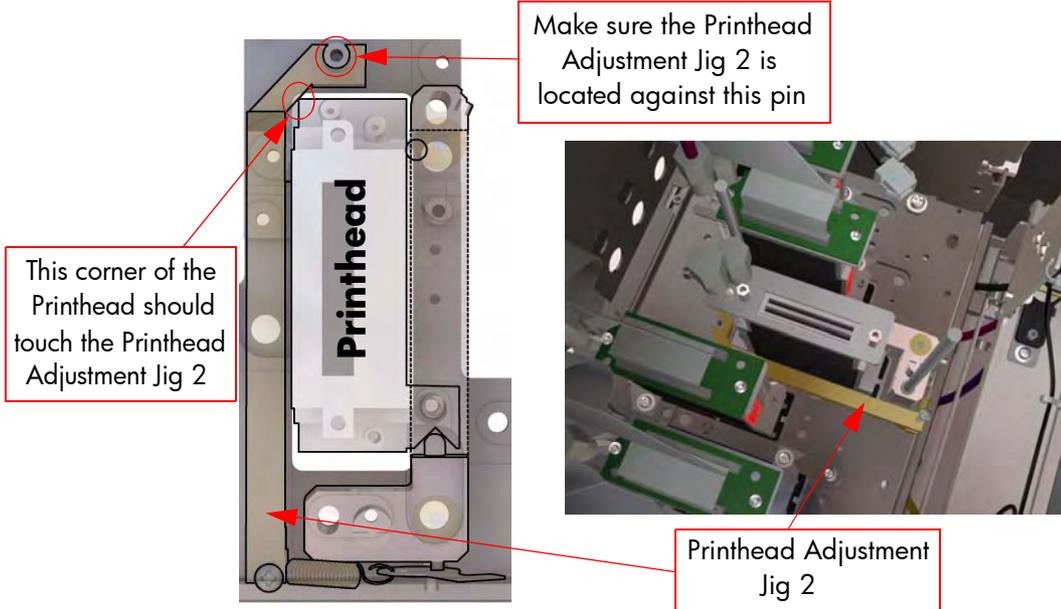

- 9** Tighten the front screw that secures the Printhead to the Carriage Base Plate.

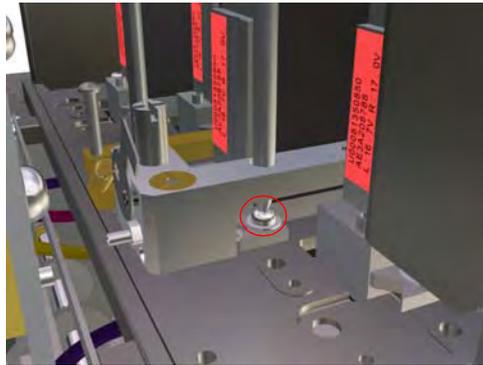

- 10** At this point the **new** Printhead should now be more or less in the same position as the **old** Printhead.
- 11** Before continuing, you should connect the Ink Tube and Printhead Connector Assembly to the Printhead.
- 12** You should now continue the Printhead Adjustment procedure from Page 3-9.



Maintenance Mode

4

Introduction	4-2
Diagnostics - Self Test	4-2
Phone Support	4-2
Maintenance Mode Menus	4-3
Entering the Maintenance Mode	4-7
Basic Menu Operation	4-8
P. ADJ. (Printer Adjustment)	4-10
PH. ADJ (Printhead Adjustment)	4-17
PH. MAIN (Printhead Maintenance)	4-23
MNFG-PRN (Manufacturing Patterns)	4-44
SETUP	4-45
FEED	4-52
SENSORS	4-53
ELECT (Electronics)	4-60
VOLT (Voltage Check)	4-71
MOTORS	4-72
SYSTEM INF	4-80
COUNTER	4-82
Heater Panel Maintenance Mode	4-90

Maintenance Mode

Introduction

This chapter explains how to use the built-in Maintenance Mode which is designed to assist Service Personnel to make any necessary factory adjustments or to perform Service Tests to verify if certain components of the Printer are functioning correctly.

If possible, always perform a Service Test on the component that you are about to replace, just to make sure that is the component that has failed. If the test on that component passes, there is no need to replace it.

Diagnostics - Self Test

Initialization Sequences

Whenever the Printer is switched ON, it automatically performs a series of internal self tests and mechanical initialization sequences. If any of the parts fail, a system error will appear and you should consult Chapter 2 - *System Error Codes*.

Phone Support

In certain circumstances, a Call Agent can try and troubleshoot the Printer by requesting the Customer to perform a Service Test via the phone. Using this process, it can be determined whether the Printer requires any on-site maintenance.

Maintenance Mode Menus

The following is a list of all internal Maintenance Mode Menus available in the Printer. Instructions for entering the Maintenance Mode are explained on Page 4-7.

1 P. ADJ. (Printer Adjustment) ⇒ Page 4-10

This menu contains the necessary options to set the adjustment parameters of the Printer so that it functions correctly. The different options available in this menu are as follows:

- Adjust Print.
- Media Advance Print.
- Manufacturing Print 1.
- Cap Position.
- Wipe Position.
- Line Sensor (Top) Adjustment.
- Line Sensor (Side) Adjustment.
- Media Advance Value.
- Back Adjust Print.
- Back Adjust Value.

2 PH. ADJ. (Printhead Adjustment) ⇒ Page 4-17

This menu contains the necessary options to set the adjustment parameters of the Printhead so that it functions correctly. The different options available in this menu are as follows:

- Printhead Adjustment Prints.
- Move Carriage.
- Printhead Row Value.
- Printhead to Printhead Value.
- Set Bidirection Media.
- Bidirection Definitions.
- Drive Voltage.
- Manufacturing Print 2.

3 PH. MAIN. (Printhead Maintenance) ⇒ Page 4-23

This menu contains the necessary options related to the actual Printheads contained in the Carriage Assembly, like cleaning or servicing. The different options available in this menu are as follows:

- Charge Ink System.
- Purge Ink System.
- Ink System Options.
- Ink Charge Done.
- Printhead Recovery.
- Uncap Carriage.
- Cap Carriage.

- 4** MNFG-PRN. (Manufacturing Test Patterns) ⇒ Page 4-44
This menu contains the test patterns which are used during the manufacturing process.
- 5** SETUP ⇒ Page 4-45
This menu contains the necessary option to set the different system parameters, like language or system time. The different options available in this menu are as follows:
- Language.
 - Beeper Settings.
 - End of Ink Beeper Settings.
 - System Date.
 - System Time.
 - Serial Number.
 - NVRAM Initialization.
 - Save Calibrations.
 - Restore Calibrations.
 - Save NVRAM.
 - Restore NVRAM.
 - Boot Version.
 - Printer Firmware Version.
 - Main PCA Version.
 - Carriage PCA Version.
 - ASIC Version.
 - Heater Hardware Version.
 - Heater Firmware Version.
 - Add-ON (HEB2) Control PCA Version.
 - Heater Upgrade.
 - Install Done.
- 6** FEED ⇒ Page 4-52
This option allows you to feed the media manually in to the Printer.
- 7** SENSORS ⇒ Page 4-53
This menu can be used to check the status of the various sensors and thermistors in the Printer in real time. The different options available in this menu are as follows:
- Printer Sensors.
 - Ink Sensor.
 - Sub Tank Sensor.
 - Bottle Sensor.
 - Media Supply Reel (MSR) Sensors.
 - TUR Sensors.
 - Temperature Sensors.

8 ELECT (Electronics) ⇒ Page 4-60

This menu contains the necessary diagnostics that can be used to test the various electronic components in the Printer. The different options available in this menu are as follows:

- Flash ROM.
- PIO.
- NVRAM.
- Ink EEPROM.
- ATG.
- DRAM.
- RSM.
- PTC.
- PDD.
- HEB.
- ALL.
- VDD.
- Front Panel.

9 VOLT (Voltage Check) ⇒ Page 4-71

This menu can be used to turn the Voltage check to high or low. The different options available in this menu are as follows:

- Voltage Check.

10 MOTORS ⇒ Page 4-72

This menu contains the necessary diagnostics that can be used to test the various Motors in the Printer. The different options available in this menu are as follows:

- Media Advance Motor.
- Capping Station Motor.
- Wiping Station Motor.
- Solenoid (Left or Right).
- Vacuum Fans (Left, Right or Center).
- Exhaust Fans.
- Printhead Cooling Fan.
- MSR Motor.
- TUR Motor.
- Pump Motors.

11 SYSTEM INF ⇒ Page 4-80

This menu can be used to print various information pages. The different options available in this menu are as follows:

- System Print.
- Error Log Print.
- History Print.

12 COUNTER ⇒ Page 4-82

This menu can be used to view and reset the different counters that are used to track the usage of various parts which need to be replaced as a preventive measure. Also, this menu can be used to check if Non-HP or Expired Ink is being used in the printer. The different options available in this menu are as follows:

- Media Used.
- Prime Assembly.
- Pump Tube.
- Wiper Cleaning.
- Wiper Belt.
- Wiper Blade.
- Capping Unit.
- Scan-Axis belt.
- Non-HP Ink Used.
- Expired Ink Used.


13 Heater Panel Maintenance Mode ⇒ Page 4-90

The Heater Panel has a separate Maintenance Mode which can be used to set certain parameters.


Entering the Maintenance Mode

Enter in to the Maintenance Mode as follows:

- 1 When the "Printer Ready" message appears on the Front Panel, press the **Online** key to take the Printer offline.

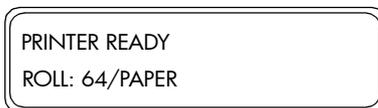

- 2 When the following screen is displayed on the Front Panel, press the following keys in this order: **Cancel, Shift, Cancel, Cancel**.

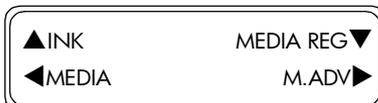

- 3 When the following screen is displayed on the Front Panel, you will be requested to enter a password. Press the following keys in this order: ◀, ▶, **Shift** and **OK**.




- 4 Once the password has been entered correctly, you will enter in to the Maintenance Mode.



Basic Menu Operation

Menu Group Selection

You can select a menu group directly with the ▲, ▼, ◀ and ▶ keys. In order to switch between the different Maintenance Mode menus, the **Shift** key has to be used. The order of the different menus is as follows:

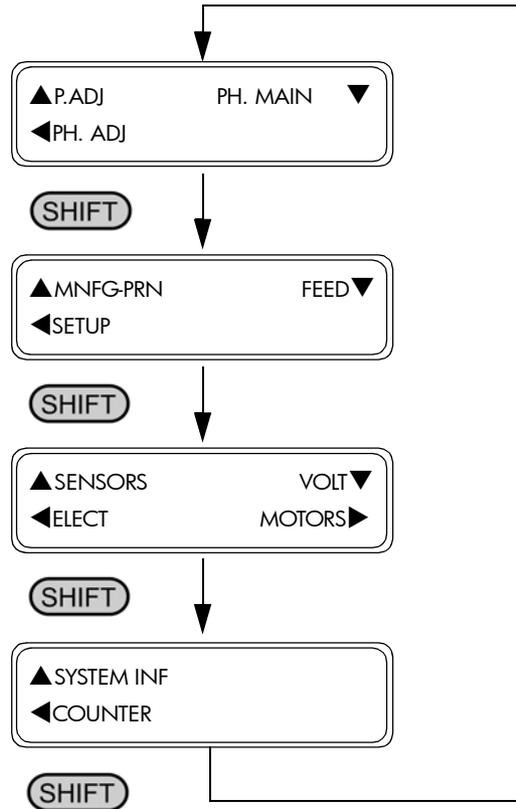

Menu Selection

Use the ▲ and ▼ keys to change between the menus at the same level.

Use the ◀ key to move to a higher level menu and use the ▶ key to move to a lower level menu.

Use the **OK** key to select a menu.

Parameter Setting

Use the ▲ and ▼ keys to switch between the parameters and to change the value of the digits.

Use the ◀ and ▶ keys to move between the digits when entering a parameter.

Use the **OK** key to confirm the parameter.

Use the **Cancel** key to cancel the parameter (without changing it) and return to the menu selection level.

Exiting Maintenance Mode

Use the **Online** key at anytime to immediately exit the Maintenance Mode.


P. ADJ. (Printer Adjustment)

This menu contains the necessary options to set the adjustment parameters of the Printer so that it functions correctly. The different options available in this menu are as follows:

- Adjust Print ⇒ Page 4-10.
- Media Advance Print ⇒ Page 4-11.
- Manufacturing Print 1 ⇒ Page 4-13.
- Cap Position ⇒ Page 4-13.
- Wipe Position ⇒ Page 4-13.
- Line Sensor Adjust Top Value ⇒ Page 4-14.
- Line Sensor Adjust Side Value ⇒ Page 4-14.
- Media Advance Value ⇒ Page 4-15.
- Back Adjust Print ⇒ Page 4-15.
- Back Adjust Value ⇒ Page 4-16.

To enter in to the Printer Adjustment menu, enter in to the Maintenance Mode and press the ▲ key.

Press the Up Arrow
Key to select

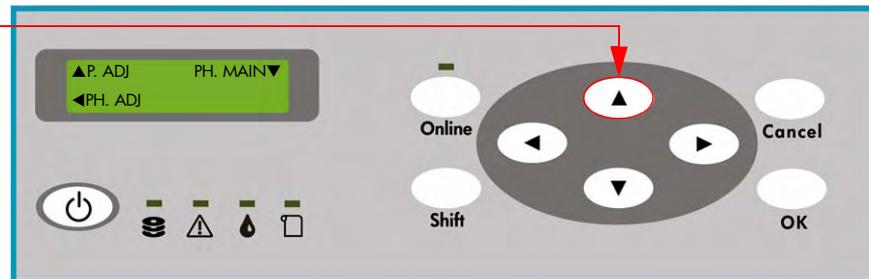

Adjust Print

This option allows you to print an adjustment print that is then used to calibrate the Line Sensor:

- 1 In the Printer Adjustment submenu, scroll to "Adjust Print" and press the **OK** key.

```
# ADJUST PRINT
> LS ADJ PRINT
```

- 2 In the Adjust Print submenu, scroll to "LS Adj Print" and press the **OK** key.

```
# ADJUST PRINT
* LS ADJ PRINT
```

- 3 You will need to confirm that you want to print the Adjust Print by pressing the **OK** key.

```
# ADJUST PRINT
* OK?
```

- 4 The Printer will start printing the Adjust Print and the following message will appear on the Front Panel.

```
# ADJUST PRINT
* EXECUTING
```

- 5 After printing the Adjust Print, you will need to enter the values (if necessary) for the Line Sensor adjustment ⇒ Page 4-14.

Media Advance Print

This option allows you to print the media advance pattern which is then used to calibrate the media advance for the different media used in the printer:

Always set the Take-up-reel to Tension Mode when performing the Media Advance adjustment.

- 1 In the Printer Adjustment submenu, scroll to "Media Adv Print" and press the **OK** key.

```
# MEDIA ADV PRINT
> ROUGH (NORMAL)
```

- 2 In the Media Adv Print submenu, scroll to "Rough (Normal)" and press the **OK** key.

```
# MEDIA ADV PRINT
* ROUGH (NORMAL)
```

The other Media Advance Prints available in this menu are as follows:

- Rough (Normal) - Prints the media advance adjustment pattern every 0.25% in the 99.0 to 101.1% range (Standard 4-pass printmode).
- Rough (H-Qual) - Prints the media advance adjustment pattern every 0.25% in the 99.0 to 101.1% range (High Quality 8-pass printmode).
- Rough (H-Dens) - Prints the media advance adjustment pattern every 0.25% in the 99.0 to 101.1% range (High Density 8-pass printmode).
- Rough (3 Times) - Prints the media advance adjustment pattern every 0.25% in the 99.0 to 101.1% range (Triple Density 12-pass printmode).
- Rough (H-Qual2) - Prints the media advance adjustment pattern every 0.25% in the 99.0 to 101.1% range (High Quality2 16-pass printmode).
- Rough (H-Dens2) - Prints the media advance adjustment pattern every 0.25% in the 99.0 to 101.1% range (High Density2 16-pass printmode).
- Rough (Draft) - Prints the media advance adjustment pattern every 0.25% in the 99.0 to 101.1% range (Draft 2-pass printmode).
- Detail (Normal) - Prints the media advance adjustment pattern every 0.06% in the current setting value \pm 0.12% range (Standard 4-pass printmode).
- Detail (H-Qual) - Prints the media advance adjustment pattern every 0.06% in the current setting value \pm 0.12% range (High Quality 8-pass printmode).
- Detail (H-Dens) - Prints the media advance adjustment pattern every 0.06% in the current setting value \pm 0.12% range (High Density 8-pass printmode).
- Detail (3 Times) - Prints the media advance adjustment pattern every 0.06%

in the current setting value $\pm 0.12\%$ range (Triple Density 12-pass printmode).

- Detail (H-Qual2) - Prints the media advance adjustment pattern every 0.06% in the current setting value $\pm 0.12\%$ range (High Quality2 16-pass printmode).
- Detail (H-Dens2) - Prints the media advance adjustment pattern every 0.06% in the current setting value $\pm 0.12\%$ range (High Density2 16-pass printmode).
- Detail (Draft) - Prints the media advance adjustment pattern every 0.06% in the current setting value $\pm 0.12\%$ range (Draft 2-pass printmode).
- **Detail 2** prints are only used in the Manufacturing process, so should not be used.


- 3 You will need to confirm that you want to print the selected Media Advance print by pressing the **OK** key.

MEDIA ADV PRINT
* OK?

- 4 The Printer will start printing the selected Media Advance Print and the following message will appear on the Front Panel. You can press the **Cancel** key at any time to stop printing.

MEDIA ADV PRINT
* EXECUTING

- 5 The Media Advance Print will show 9 patterns printed in 0.25% steps in a range from 99.00% to 101.00% (example shown using Black color).

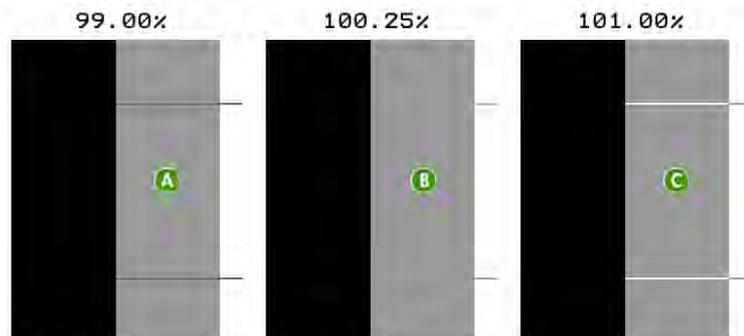

- A** Dark lines are visible, so the value is too low.
- B** No line are visible, so the value is correct.
- C** Light lines are visible, so the value is too high.

- 6 From the printed pattern, select the best media advance calibration value.
- 7 Enter the "Media Adv Value" submenu and enter the value selected in the previous step \Rightarrow Page 4-15.
- 8 Repeat the process from step 2, but this time selecting "Detail (Normal)" instead.

MEDIA ADV PRINT
* DETAIL (NORMAL)

Manufacturing Print 1

This option is ONLY used for manufacturing purposes.

Cap Position

This option allows you to correct the value of the capping position:

Please refer to the instructions on Page 5-57 for the full instructions on how to calibrate the capping position.

- 1 In the Printer Adjustment submenu, scroll to "Cap Position" and press the **OK** key.

CAP POSITION
> +0.0 mm

The value of the Cap Position should never be set as 0.0 mm as this means that the Cap Position has not been adjusted.

- 2 Use the ▲ and ▼ keys to change the digits and use the ◀ and ▶ keys to select the digits. The value can be changed in a range of -5.0 to +5.0 mm.

CAP POSITION
* +0.3 mm

- 3 Press the **OK** key once you have entered the new value.

Wipe Position

This option allows you to correct the value of the wiping position:

Please refer to the instructions on Page 5-55 for the full instructions on how to calibrate the wiping position.

- 1 In the Printer Adjustment submenu, scroll to "Wipe Position" and press the **OK** key.

WIPE POSITION
> +0.0 mm

- 2 Use the ▲ and ▼ keys to change the digits and use the ◀ and ▶ keys to select the digits. The value can be changed in a range of -5.0 to +5.0 mm.

WIPE POSITION
* -0.5 mm

- 3 Press the **OK** key once you have entered the new value.

Line Sensor Adjust Top Value

This option allows you to correct the value for the Line Sensor (top margin position), according to the print results of the Adjust Print:

Please refer to the instructions on Page 5-60 for the full instructions on how to calibrate the Line Sensor Top Margin.

- 1 In the Printer Adjustment submenu, scroll to "LS Adj Top Val" and press the **OK** key.

LS ADJ TOP VAL
> +0.0 mm

- 2 Use the ▲ and ▼ keys to change the digits and use the ◀ and ▶ keys to select the digits. The value can be changed in a range of -5.0 to +5.0 mm.

LS ADJ TOP VAL
* +0.8 mm

- 3 Press the **OK** key once you have entered the new value.

Line Sensor Adjust Side Value

This option allows you to correct the value for the Line Sensor (side margin position), according to the print results of the Adjust Print:

Please refer to the instructions on Page 5-59 for the full instructions on how to calibrate the Line Sensor Side Margin.

- 1 In the Printer Adjustment submenu, scroll to "LS Adj Side Val" and press the **OK** key.

LS ADJ SIDE VAL
> +0.0 mm

- 2 Use the ▲ and ▼ keys to change the digits and use the ◀ and ▶ keys to select the digits. The value can be changed in a range of -5.0 to +5.0 mm.

LS ADJ SIDE VAL
* +1.1 mm

- 3 Press the **OK** key once you have entered the new value.

Media Advance Value

This option allows you to enter the media advance value which is needed to calibrate the media advance for the different media used in the printer:

Do NOT change the MNFG value as this is ONLY used during the manufacturing process.

- 1 In the Printer Adjustment submenu, scroll to "Media Adv Value" and press the **▶** key.

```
# MEDIA ADV VALUE
# MNFG
```

- 2 In the Media Adv Value submenu, select the media that you would like to correct and press the **OK** key. If you would like to exit the Media Adv Value submenu, press the **◀** key.

```
# MEDIA ADV VALUE
# PAPER >099.80%
```

- 3 Use the **▲** and **▼** keys to change the digits and use the **◀** and **▶** keys to select the digits. The value can be changed in a range of 097.00% to 103.00%.

```
# MEDIA ADV VALUE
# PAPER >098.40%
```

- 4 Press the **OK** key once you have entered the new value.

Back Adjust Print

This option allows you to print an adjustment pattern so that the media back feed can be mechanically adjusted:

- 1 In the Printer Adjustment submenu, scroll to "Back Adj Print" and press the **OK** key.

```
# BACK ADJ PRINT
> NORMAL
```

- 2 In the Back Adj Print submenu, scroll to the pattern that you would like to print and press the **OK** key.

```
# BACK PATTERN
* NORMAL
```

The Back Adjust patterns available in this menu are as follows:

- Normal - Prints using a Standard 4-pass printmode.
- H-Quality - Prints using a High Quality 8-pass printmode.
- H-Density - Prints using a High Density 8-pass printmode.
- 3 Times - Prints using a Triple Density 12-pass printmode.

- H-Quality2 - Prints using a High Quality2 16-pass printmode.
 - H-Density2 - Prints using a High Density2 16-pass printmode.
 - Draft - Prints using a Draft 2-pass printmode.
- 3 You will need to confirm that you want to print the selected Back Adjust pattern by pressing the **OK** key.

```
# BACK ADJ PRINT
* OK?
```

- 4 The Printer will start printing the selected Back Adjust pattern and the following message will appear on the Front Panel.

```
# BACK ADJ PRINT
* EXECUTING
```

Back Adjust Value

Do NOT change the MNFG value as this is ONLY used during the manufacturing process.

This option allows you to correct the media back feed value based on the back adjust print:

- 1 In the Printer Adjustment submenu, scroll to "Back Adj Value" and press the **▶** key.

```
# BACK ADJ VALUE
# MNFG
```

- 2 In the Back Adj Value submenu, select the media that you would like to correct and press the **OK** key. If you would like to exit the Back Adj Value submenu, press the **◀** key.

```
# BACK ADJ VALUE
# PAPER >+0000P
```

- 3 Use the **▲** and **▼** keys to change the digits and use the **◀** and **▶** keys to select the digits. The value can be changed in a range of $\pm 2000P$ (± 5 mm). 1 pulse = 2.5 micromillimeters.

```
# BACK ADJ VALUE
# PAPER >+0100P
```

- 4 Press the **OK** key once you have entered the new value.


PH. ADJ (Printhead Adjustment)

This menu contains the necessary options to set the adjustment parameters of the Printhead so that it functions correctly. The different options available in this menu are as follows:

- Printhead Adjustment Prints ⇒ Page 4-17.
- Move Carriage ⇒ Page 4-18.
- Printhead Row Value ⇒ Page 4-19.
- Printhead to Printhead Value ⇒ Page 4-19.
- Set Bidirection Media ⇒ Page 4-20.
- Bidirection Definitions ⇒ Page 4-21.
- Printhead Voltage ⇒ Page 4-22.
- Manufacturing Print 2 ⇒ Page 4-22.

To enter in to the Printhead Adjustment menu, enter in to the Maintenance Mode and press the ◀ key.


Press the Left Arrow Key to select

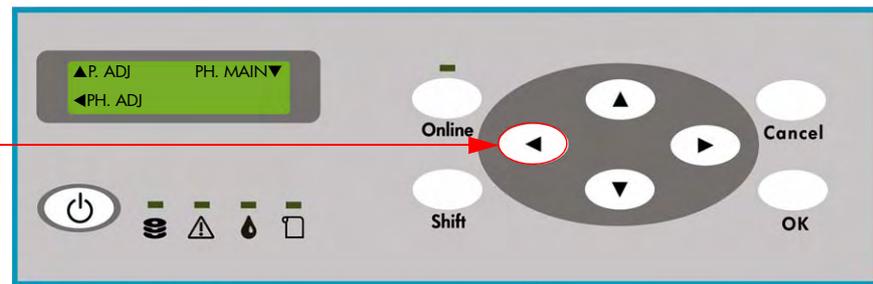

Printhead Adjustment Prints

This option allows you to print the different adjustment patterns that need to be used to adjust the Printhead:

- 1 In the Printhead Adjustment submenu, scroll to "PH Adj Prints" and press the **OK** key.

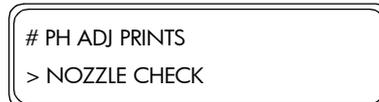

- 2 In the Printhead Adjustment Prints submenu, scroll to the pattern that you would like to print and press the **OK** key.



The Printhead Adjustment Prints available in this menu are as follows:

- Nozzle Check - Prints a nozzle check pattern that can be used to determine which nozzles are missing (if any).
- Printhead Adj - Prints a Printhead adjustment pattern that can be used to adjust the printhead (used when installing a new Printhead).
- Check Printhead - Prints a Printhead adjustment check pattern.
- PH Row - Prints a Printhead alignment pattern.

- PH to PH - Prints a Printhead to Printhead alignment pattern.
 - Bidirection Def - Prints a Bi-directional adjustment pattern.
 - Bidirection F.D - Prints a Bi-directional adjustment pattern for the Fine Draft print mode.
 - Check PH to PH - Prints a Printhead to Printhead check pattern
 - Check Bidir Def - Prints a Bi-directional check pattern.
 - Check Bidir F.D - Prints a Bi-directional check pattern for the Fine Draft print mode.
- 3** You will need to confirm that you want to print the selected printhead Adjustment Pattern by pressing the **OK** key.

```
# PH ADJ PRINTS
* OK?
```

- 4** The Printer will start printing the selected Printhead Adjustment Pattern and the following message will appear on the Front Panel.

```
# PH ADJ PRINTS
* EXECUTING
```

Move Carriage

This option allows you to move the Carriage when adjusting the Printhead:

- 1** In the Printhead Adjustment submenu, scroll to "Move Carriage" and press the **OK** key.

```
# MOVE CARRIAGE
> HOME
```

- 2** In the Move Carriage submenu, scroll to the position that you would like the Carriage to move to and press the **OK** key.

```
# MOVE CARRIAGE
* HOME
```

The positions that the Carriage can move to are as follows:

- Home - Moves the Carriage to the home position.
 - Cap - Moves the Carriage to the capping position.
 - Center - Moves the Carriage to the center of the Printer.
 - Wipe - Moves the Carriage to the wiping position.
- 3** You will need to confirm that you want to move the Carriage to the selected position by pressing the **OK** key.

```
# MOVE CARRIAGE
* WIPE OK?
```

Printhead Row Value

This option allows you to adjust the left and right position of each Printhead by entering the correction values according to the results obtained from the Printhead Adjustment Print:

- 1 In the Printhead Adjustment submenu, scroll to "PH Row Val" and press the **▶** key.

```
# PH ROW VAL
# K
```

- 2 In the PH Row Val submenu, select the color of the Printhead that you would like to adjust and press the **OK** key. If you would like to exit the PH Row Val submenu, press the **◀** key.

```
# PH ROW VAL
# K >+00
```

The different colors of the Printheads are as follows:

- K - Black.
- Lm - Light Magenta.
- Lc - Light Cyan.
- Y - Yellow.
- M - Magenta.
- C - Cyan.

- 3 Use the **▲** and **▼** keys to change the digits and use the **◀** and **▶** keys to select the digits. The numerical value can be changed in a range of -32 to +31 (1 unit = 1 dot).

```
# PH ROW VAL
# Lc >+04
```

- 4 Press the **OK** key once you have entered the new value.

Printhead to Printhead Value

This option allows you to adjust the Printhead position in the main scanning direction of each head by entering the correction values according to the results obtained from the Printhead Adjustment Print:

- 1 In the Printhead Adjustment submenu, scroll to "PH to PH Val" and press the **▶** key.

```
# PH TO PH VAL
# Lm
```

- 2 In the PH to PH Val submenu, select the color of the Printhead that you would like to adjust and press the **OK** key. If you would like to exit the PH to PH Val submenu, press the ◀ key.

```
# PH TO PH VAL
# Lm >+00
```

The different colors of the Printheads are as follows:

- Lm - Light Magenta.
 - Lc - Light Cyan.
 - Y - Yellow.
 - M - Magenta.
 - C - Cyan.
- 3 Use the ▲ and ▼ keys to change the digits and use the ◀ and ▶ keys to select the digits. The numerical value can be changed in a range of -32 to +31 (1 unit = 1 dot).

```
# PH TO PH VAL
# Lm >+03
```

- 4 Press the **OK** key once you have entered the new value.

Set Bidirection Media

Do NOT use the MNFG value as this is ONLY used during the manufacturing process.

This option allows you to select the target media that will be used to adjust the Bidirectional values (media selected here will be used in the Bidirection Definition):

- 1 In the Printhead Adjustment submenu, scroll to "Set Bidir Media" and press the **OK** key.

```
# SET BIDIR MEDIA
> MNFG
```

- 2 In the Set Bidir Media submenu, scroll to the media that you would like to use for Bidirection adjustment and press the **OK** key.

```
# SET BIDIR MEDIA
* PAPER
```

Bidirection Definition

The example on this page explains how to enter the correction values for the left Bidirection position. Use the same procedure in order to correct the right Bidirection value and the Bidirection values for Fine Draft (left and right positions).

This option allows you to adjust the left Bidirection position of each head for the selected media by entering the correction values according to the results obtained from the Printhead Adjustment Print:

- 1 In the Printhead Adjustment submenu, scroll to "Bi-Def/L xxxxxx" and press the **▶** key.

```
# Bi-DEF/L xxxxxx
# K
```

- 2 In the Bi-Def/L submenu, select the color of the Printhead that you would like to adjust and press the **OK** key. If you would like to exit the Bi-Def/L submenu, press the **◀** key.

```
# Bi-DEF/L xxxxxx
# K >+00
```

xxxxxx = media selected in "Set Bidir Media"

The different colors of the Printheads are as follows:

- K - Black.
- Lm - Light Magenta.
- Lc - Light Cyan.
- Y - Yellow.
- M - Magenta.
- C - Cyan.

- 3 Use the **▲** and **▼** keys to change the digits and use the **◀** and **▶** keys to select the digits. The numerical value can be changed in a range of -32 to +31 (1 unit = 1 dot).

```
# Bi-DEF/L xxxxxx
> K >+02
```

- 4 Press the **OK** key once you have entered the new value.

Printhead Voltage

This option allows you to enter the drive voltage value for each Printhead:

You MUST enter the drive voltage value of a new Printhead after installing it, or else it will NOT print correctly. Remember to set BOTH the left and right values for each Printhead.

- 1 In the Printhead Adjustment submenu, scroll to "PH Voltage" and press the **▶** key.

```
# PH VOLTAGE
# K (L)
```

- 2 In the PH Voltage submenu, select the color of the Printhead (either left or right) for which you would like to set the Printhead Voltage and press the **OK** key. If you would like to exit the PH Voltage submenu, press the **◀** key.

```
# PH VOLTAGE
# Lc (L) >16.0 V
```

The different colors of the Printheads are as follows:

- K - Black.
- Lm - Light Magenta.
- Lc - Light Cyan.
- Y - Yellow.
- M - Magenta.
- C - Cyan.

- 3 Use the **▲** and **▼** keys to change the digits and use the **◀** and **▶** keys to select the digits. The value can be changed in a range of 12.0 to 20.0 V (in increments of 0.1 V).

```
# PH VOLTAGE
# Lc (L) >16.6 V
```

- 4 Press the **OK** key once you have entered the new value.

Manufacturing Print 2

This option is ONLY used for manufacturing purposes.


PH. MAIN (Printhead Maintenance)

This menu contains the necessary options related to the actual Printheads contained in the Carriage Assembly, like cleaning or servicing. The different options available in this menu are as follows:

- Charge Ink System ⇒ Page 4-23.
- Purge Ink System ⇒ Page 4-25.
- Ink System Options:
 - Store Ink System ⇒ Page 4-27.
 - Clean Ink System ⇒ Page 4-33.
- Ink Charge Done ⇒ Page 4-42.
- Printhead Recovery ⇒ Page 4-42.
- Uncap Carriage ⇒ Page 4-43.
- Cap Carriage ⇒ Page 4-43.

To enter in to the Printhead Maintenance menu, enter in to the Maintenance Mode and press the ▼ key.

Press the Down Arrow Key to select

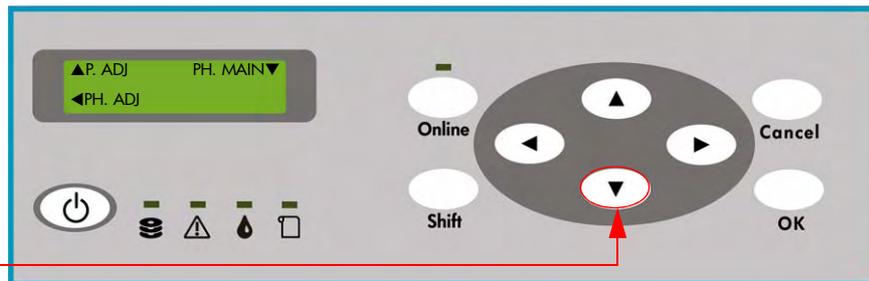

Charge Ink System

This option allows you to charge the complete ink system (e.g. when the Ink Tubes are empty) or individual inks (e.g. after replacing a Printhead):

- 1 In the Printhead Maintenance submenu, scroll to "Charge Ink Sys" and press the **OK** key.



- 2 In the Charge Ink System submenu, select whether you would like to charge the complete Ink System, part of the Ink System or individual inks and then press the **OK** key.



The different options available in this submenu are as follows:

- ALL - Charges the complete Ink System.
- Left (K, Lm, Lc) - Charges the Black, Light Magenta and Light Cyan inks.
- Right (Y, M, C) - Charges the Yellow, Magenta and Cyan inks.
- K - Charges the Black ink.

- Lm - Charges the Light Magenta ink.
- Lc - Charges the Light Cyan ink.
- Y - Charges the Yellow ink.
- M - Charges the Magenta ink.
- C - Charges the Cyan ink.

It is not possible to charge the ink for individual colors without a special tool, so this should NOT be tried.

- 3** When the following message appears on the Front Panel, check whether the Waste Ink Bottle is present and is NOT full. Press the **OK** key once the Waste Ink Bottle has been checked.

```
# CHARGE INK SYS
* BOTTLE OK?
```

- 4** If any of the Ink Cartridges contain **less** than 350cc of Ink or if a Purging Cartridge has been installed, the following message will be displayed on the Front Panel. Install a correct Ink Cartridge that contains more than 350cc of Ink in the indicated slot in order to continue.

```
LOAD NEW INK CAR
LOAD XX SLOT
```

- 5** The Charge Ink System process will start and you will need to recheck whether the Waste Ink Bottle is present and is NOT full. Press the **OK** key once the Waste Ink Bottle has been checked.

```
START INK FILL
* BOTTLE OK?
```

- 6** The Printer will charge the ink and the following message will be displayed on the Front Panel:

```
INK FILLING
xxx
```

- 7** Once the Ink Charge process has been completed, the Front Panel will return to the Charge Ink System submenu.

```
# CHARGE INK SYS
> ALL
```

Purge Ink System

This option allows you to remove the ink from the complete system or individual inks so that any relevant repair can be done to the Printer (e.g. replace the Ink Pump Assembly):

- 1 In the Printhead Maintenance submenu, scroll to "Purge Ink Sys" and press the **OK** key.

```
# PURGE INK SYS
> ALL
```

- 2 In the Purge Ink System submenu, select whether you would like to purge the complete Ink System, part of the Ink System or individual inks and then press the **OK** key.

```
# PURGE INK SYS
* ALL
```

The different options available in this submenu are as follows:

- ALL - Purges the complete Ink System.
- Left (K, Lm, Lc) - Purges the Black, Light Magenta and Light Cyan inks.
- Right (Y, M, C) - Purges the Yellow, Magenta and Cyan inks.
- K - Purges the Black ink.
- Lm - Purges the Light Magenta ink.
- Lc - Purges the Light Cyan ink.
- Y - Purges the Yellow ink.
- M - Purges the Magenta ink.
- C - Purges the Cyan ink.

It is not possible to purge the ink for individual colors without a special tool, so this should NOT be tried.

- 3 When the following message appears on the Front Panel, check whether the Waste Ink Bottle is present and is NOT full. Press the **OK** key once the Waste Ink Bottle has been checked.

```
# PURGE INK SYS
* BOTTLE OK?
```

- 4 When the following message is displayed on the Front Panel, open the Left Ink Cartridge Door and remove ALL 3 Ink Cartridges.

```
OPEN L INKCOVER
REMOVE CARTRIDGE
```

- 5 Once the Ink Cartridges have been removed, install a Purging Cartridge in to each slot and close the Left Ink Cartridge Door.

```
LOAD PURGING CAR
CLOSE L INKCOVER
```

- 6** If the Printer detects that a Purging Cartridge has been installed incorrectly or if an invalid Cartridge has been installed, one of the following messages will be displayed on the Front Panel. You will need to make sure that a valid Purging Cartridge has been installed correctly before you can continue.

OPEN L INKCOVER
LOAD XX SLOT

LOAD PURGING CAR
LOAD XX SLOT

- 7** When the following message is displayed on the Front Panel, open the Right Ink Cartridge Door and remove ALL 3 Ink Cartridges.

OPEN R INKCOVER
REMOVE CARTRIDGE

- 8** Once the Ink Cartridges have been removed, install a Priming Cartridge in to each slot and close the Right Ink Cartridge Door.

LOAD PURGING CAR
CLOSE R INKCOVER

- 9** If the Printer detects that a Purging Cartridge has been installed incorrectly or if an invalid Cartridge has been installed, one of the following messages will be displayed on the Front Panel. You will need to make sure that a valid Purging Cartridge has been installed correctly before you can continue.

OPEN R INKCOVER
LOAD XX SLOT

LOAD PURGING CAR
LOAD XX SLOT

- 10** The Ink Purging process will start and you will need to recheck whether the Waste Ink Bottle is present and is NOT full. Press the **OK** key once the Waste Ink Bottle has been checked.

START PURGING
* BOTTLE OK?

- 11** The Printer will extract the ink (which could take at least 10 minutes) and the following message will be displayed on the Front Panel:

PURGING
xxx

- 12** Once the ink has been extracted from the system, the following message will be displayed on the Front Panel. Power Off the Printer by pressing the **Cancel** and the **Power Off** keys together.

INK PURGE END
POWER OFF

Ink System Options - Store Ink System

This option allows you to fill the ink system with Storage Liquid so that the Printer can be stored for a period of up to four weeks while switched Off:

Opening or closing of the rear covers or levers should be avoided while the Store Ink System process is being performed or the operation may have to be restarted from the beginning. This will result in the Storage Liquid being wasted. If the Store Ink System process has to be restarted, NEW Storage Liquid Cartridges will be needed.

Once the Store Ink System procedure has been completed, the Storage Liquid Cartridges must be left installed in the Printer.

In order to perform the Store Ink System procedure, you will need to have the HP 790 Ink System Storage Kit available.

- 1 In the Printhead Maintenance submenu, scroll to "Ink System Opt" and press the **OK** key.

```
# INK SYSTEM OPT
> STORE INK SYS
```

- 2 In the Ink System Opt submenu, scroll to the "Store Ink Sys" option and press the **OK** key.

```
# INK SYSTEM OPT
* STORE INK SYS
```

- 3 When the following message appears on the Front Panel, check whether the Waste Ink Bottle is present and is NOT full. Press the **OK** key once the Waste Ink Bottle has been checked.

```
# INK SYSTEM OPT
* BOTTLE OK?
```

- 4 When the following message is displayed on the Front Panel, open the Left Ink Cartridge Door and remove ALL 3 Ink Cartridges.

```
OPEN L INKCOVER
REMOVE CARTRIDGE
```

- 5 Once the Ink Cartridges have been removed, install a Purging Cartridge in to each slot and close the Left Ink Cartridge Door.

```
LOAD PURGING CAR
CLOSE L INKCOVER
```

- 6** If the Printer detects that a Purging Cartridge has been installed incorrectly or if an invalid Cartridge has been installed, one of the following messages will be displayed on the Front Panel. You will need to make sure that a valid Purging Cartridge has been installed correctly before you can continue.

OPEN L INKCOVER
LOAD XX SLOT

LOAD PURGING CAR
LOAD XX SLOT

- 7** When the following message is displayed on the Front Panel, open the Right Ink Cartridge Door and remove ALL 3 Ink Cartridges.

OPEN R INKCOVER
REMOVE CARTRIDGE

- 8** Once the Ink Cartridges have been removed, install a Purging Cartridge in to each slot and close the Right Ink Cartridge Door.

LOAD PURGING CAR
CLOSE R INKCOVER

- 9** If the Printer detects that a Purging Cartridge has been installed incorrectly or if an invalid Cartridge has been installed, one of the following messages will be displayed on the Front Panel. You will need to make sure that a valid Purging Cartridge has been installed correctly before you can continue.

OPEN R INKCOVER
LOAD XX SLOT

LOAD PURGING CAR
LOAD XX SLOT

- 10** The Ink extraction process will start and you will need to recheck whether the Waste Ink Bottle is present and is NOT full. Press the **OK** key once the Waste Ink Bottle has been checked.

START PURGING
* BOTTLE OK?

- 11** The Printer will purge the ink (which could take at least 10 minutes) and the following message will be displayed on the Front Panel:

PURGING
xxx

- 12** Once the ink has been purged from the system, the following message will be displayed on the Front Panel. Open the Left Ink Cartridge Door and remove ALL 3 Purging Cartridges.

OPEN L INKCOVER
LOAD SL CART

- 13** Once the Purging Cartridges have been removed, install a NEW Storage Liquid Cartridge in to each slot and close the Left Ink Cartridge Door.

LOAD SL CART
CLOSE L INKCOVER

- 14** If the Printer detects that a Storage Liquid Cartridge has been installed incorrectly, or if any of the Storage Liquid Cartridges contain less than 500cc of liquid or if an invalid Storage Liquid Cartridge has been installed, one of the following messages will be displayed on the Front Panel. You will need to make sure that a valid Storage Liquid Cartridge has been installed correctly before you can continue.

OPEN L INKCOVER
LOAD XX SLOT

LOAD SL CART
LOAD XX SLOT

LOAD NEW SL CART
LOAD XX SLOT

- 15** When the following message is displayed on the Front Panel, open the Right Ink Cartridge Door and remove ALL 3 Purging Cartridges.

OPEN R INKCOVER
LOAD SL CART

- 16** Once the Purging Cartridges have been removed, install a NEW Storage Liquid Cartridge in to each slot and close the Right Ink Cartridge Door.

LOAD SL CART
CLOSE R INKCOVER

- 17** If the Printer detects that a Storage Liquid Cartridge has been installed incorrectly, or if any of the Storage Liquid Cartridges contain less than 500cc of liquid or if an invalid Storage Liquid Cartridge has been installed, one of the following messages will be displayed on the Front Panel. You will need to make sure that a valid Storage Liquid Cartridge has been installed correctly before you can continue.

OPEN R INKCOVER
LOAD XX SLOT

LOAD SL CART
LOAD XX SLOT

LOAD NEW SL CART
LOAD XX SLOT

- 18** The Storage Liquid charge process will start and you will need to recheck whether the Waste Ink Bottle is present and is NOT full. Press the **OK** key once the Waste Ink Bottle has been checked.

START FILLING SL
* BOTTLE OK?

- 19** The Printer will charge the Storage Liquid and the following message will be displayed on the Front Panel:

FILLING SL
xxx

- 20** Once the Storage Liquid has been charged, the following message will be displayed on the Front Panel. Open the Left Ink Cartridge Door and remove ALL 3 Storage Liquid Cartridges.

OPEN L INKCOVER
REMOVE CARTRIDGE

- 21** Once the Storage Liquid Cartridges have been removed, install a Purging Cartridge in to each slot and close the Left Ink Cartridge Door.

LOAD PURGING CAR
CLOSE L INKCOVER

- 22** If the Printer detects that a Purging Cartridge has been installed incorrectly or if an invalid Cartridge has been installed, one of the following messages will be displayed on the Front Panel. You will need to make sure that a valid Purging Cartridge has been installed correctly before you can continue.

OPEN L INKCOVER
LOAD XX SLOT

LOAD PURGING CAR
LOAD XX SLOT

- 23** When the following message is displayed on the Front Panel, open the Right Ink Cartridge Door and remove ALL 3 Storage Liquid Cartridges.

OPEN R INKCOVER
REMOVE CARTRIDGE

- 24** Once the Storage Liquid Cartridges have been removed, install a Purging Cartridge in to each slot and close the Right Ink Cartridge Door.

LOAD PURGING CAR
CLOSE R INKCOVER

- 25** If the Printer detects that a Purging Cartridge has been installed incorrectly or if an invalid Cartridge has been installed, one of the following messages will be displayed on the Front Panel. You will need to make sure that a valid Purging Cartridge has been installed correctly before you can continue.

OPEN R INKCOVER
LOAD XX SLOT

LOAD PURGING CAR
LOAD XX SLOT

- 26** The Storage Liquid purge process will start and you will need to recheck whether the Waste Ink Bottle is present and is NOT full. Press the **OK** key once the Waste Ink Bottle has been checked.

START PURGING
* BOTTLE OK?

- 27** The Printer will extract the Storage Liquid (which could take at least 10 minutes) and the following message will be displayed on the Front Panel:

PURGING
xxx

- 28** Once the Storage Liquid has been extracted from the system, the following message will be displayed on the Front Panel. Open the Left Ink Cartridge Door and remove ALL 3 Purging Cartridges.

OPEN L INKCOVER
LOAD SL CART

- 29** Once the Purging Cartridges have been removed, install a used Storage Liquid Cartridge in to each slot and close the Left Ink Cartridge Door.

LOAD SL CART
CLOSE L INKCOVER

- 30** If the Printer detects that a Maintenance Liquid Cartridge has been installed incorrectly, or if any of the Maintenance Liquid Cartridges contain less than 250cc of liquid or if an invalid Maintenance Liquid Cartridge has been installed, one of the following messages will be displayed on the Front Panel. You will need to make sure that a valid Maintenance Liquid Cartridge has been installed correctly before you can continue.

OPEN L INKCOVER
LOAD XX SLOT

LOAD SL CART
LOAD XX SLOT

LOAD NEW SL CART
LOAD XX SLOT

- 31** When the following message is displayed on the Front Panel, open the Right Ink Cartridge Door and remove ALL 3 Purging Cartridges.

OPEN R INKCOVER
LOAD SL CART

- 32** Once the Purging Cartridges have been removed, install a used Storage Liquid Cartridge in to each slot and close the Right Ink Cartridge Door.

LOAD SL CART
CLOSE R INKCOVER

- 33** If the Printer detects that a Maintenance Liquid Cartridge has been installed incorrectly, or if any of the Maintenance Liquid Cartridges contain less than 250cc of liquid or if an invalid Maintenance Liquid Cartridge has been installed, one of the following messages will be displayed on the Front Panel. You will need to make sure that a valid Maintenance Liquid Cartridge has been installed correctly before you can continue.

OPEN R INKCOVER
LOAD XX SLOT

LOAD SL CART
LOAD XX SLOT

LOAD NEW SL CART
LOAD XX SLOT

- 34** The Storage Liquid charge process will start and you will need to recheck whether the Waste Ink Bottle is present and is NOT full. Press the **OK** key once the Waste Ink Bottle has been checked.

START FILLING SL
* BOTTLE OK?

- 35** The Printer will charge the Storage Liquid and the following message will be displayed on the Front Panel:

FILLING SL
xxx

- 36** Once the Storage Liquid has been charged, the Capping Station will be filled and the following message will be displayed:

WASH PRINTHEADS
EXECUTING

- 37** Once the Store Ink System process has been completed, the Front Panel will return to the Ink SYstem Opt submenu.

INK SYSTEM OPT
> STORE INK SYS

Ink System Options - Clean Ink System

This option allows you to clean the ink system with Cleaning Liquid after the Printer is powered On after being stored for a long period:

Opening or closing of the rear covers or levers should be avoided while the Clean Ink System process is being performed or the operation may have to be restarted from the beginning. This will result in the Cleaning Liquid being wasted. If the Clean Ink System process has to be restarted, NEW Cleaning Liquid Cartridges will be needed.

In order to perform the Store Ink System procedure, you will need to have the HP 790 Ink System Cleaning Kit available.

- 1 In the Printhead Maintenance submenu, scroll to "Ink System Opt" and press the **OK** key.

```
# INK SYSTEM OPT
> STORE INK SYS
```

- 2 In the Ink System Opt submenu, scroll to the "Clean Ink Sys" option and press the **OK** key.

```
# INK SYSTEM OPT
* CLEAN INK SYS
```

- 3 When the following message appears on the Front Panel, check whether the Waste Ink Bottle is present and is NOT full. Press the **OK** key once the Waste Ink Bottle has been checked.

```
# INK SYSTEM OPT
* BOTTLE OK?
```

- 4 When the following message is displayed on the Front Panel, open the Left Ink Cartridge Door and remove ALL 3 Storage Liquid Cartridges.

```
OPEN L INKCOVER
REMOVE CARTRIDGE
```

- 5 Once the Storage Liquid Cartridges have been removed, install a Purging Cartridge in to each slot and close the Left Ink Cartridge Door.

```
LOAD PURGING CAR
CLOSE L INKCOVER
```

- 6** If the Printer detects that a Purging Cartridge has been installed incorrectly or if an invalid Cartridge has been installed, one of the following messages will be displayed on the Front Panel. You will need to make sure that a valid Purging Cartridge has been installed correctly before you can continue.

OPEN L INKCOVER
LOAD XX SLOT

LOAD PURGING CAR
LOAD XX SLOT

- 7** When the following message is displayed on the Front Panel, open the Right Ink Cartridge Door and remove ALL 3 Storage Liquid Cartridges.

OPEN R INKCOVER
REMOVE CARTRIDGE

- 8** Once the Storage Liquid Cartridges have been removed, install a Purging Cartridge in to each slot and close the Right Ink Cartridge Door.

LOAD PURGING CAR
CLOSE R INKCOVER

- 9** If the Printer detects that a Purging Cartridge has been installed incorrectly or if an invalid Cartridge has been installed, one of the following messages will be displayed on the Front Panel. You will need to make sure that a valid Purging Cartridge has been installed correctly before you can continue.

OPEN R INKCOVER
LOAD XX SLOT

LOAD PURGING CAR
LOAD XX SLOT

- 10** The Storage Liquid purge process will start and you will need to recheck whether the Waste Ink Bottle is present and is NOT full. Press the **OK** key once the Waste Ink Bottle has been checked.

START PURGING
* BOTTLE OK?

- 11** The Printer will purge the Storage Liquid (which could take at least 10 minutes) and the following message will be displayed on the Front Panel:

PURGING
xxx

- 12** Once the Storage Liquid has been purged from the system, the following message will be displayed on the Front Panel. Open the Left Ink Cartridge Door and remove ALL 3 Purging Cartridges.

OPEN L INKCOVER
LOAD CL CART

- 13** Once the Purging Cartridges have been removed, install a NEW Cleaning Liquid Cartridge in to each slot and close the Left Ink Cartridge Door.

LOAD CL CART
CLOSE L INKCOVER

- 14** If the Printer detects that a Cleaning Liquid Cartridge has been installed incorrectly, or if any of the Cleaning Liquid Cartridges contain less than 500cc of liquid or if an invalid Cleaning Liquid Cartridge has been installed, one of the following messages will be displayed on the Front Panel. You will need to make sure that a valid Cleaning Liquid Cartridge has been installed correctly before you can continue.

OPEN L INKCOVER
LOAD XX SLOT

LOAD CL CART
LOAD XX SLOT

LOAD NEW CL CART
LOAD XX SLOT

- 15** When the following message is displayed on the Front Panel, open the Right Ink Cartridge Door and remove ALL 3 Purging Cartridges.

OPEN R INKCOVER
LOAD CL CART

- 16** Once the Purging Cartridges have been removed, install a NEW Cleaning Liquid Cartridge in to each slot and close the Right Ink Cartridge Door.

LOAD CL CART
CLOSE R INKCOVER

- 17** If the Printer detects that a Cleaning Liquid Cartridge has been installed incorrectly, or if any of the Cleaning Liquid Cartridges contain less than 500cc of liquid or if an invalid Cleaning Liquid Cartridge has been installed, one of the following messages will be displayed on the Front Panel. You will need to make sure that a valid Cleaning Liquid Cartridge has been installed correctly before you can continue.

OPEN R INKCOVER
LOAD XX SLOT

LOAD CL CART
LOAD XX SLOT

LOAD NEW CL CART
LOAD XX SLOT

- 18** The Cleaning Liquid charge process will start and you will need to recheck whether the Waste Ink Bottle is present and is NOT full. Press the **OK** key once the Waste Ink Bottle has been checked.

START FILLING CL
* BOTTLE OK?

- 19** The Printer will charge the Cleaning Liquid and the following message will be displayed on the Front Panel:

FILLING CL
xxx

- 20** Once the Cleaning Liquid has been charged, the following message will be displayed on the Front Panel. Open the Left Ink Cartridge Door and remove ALL 3 Cleaning Liquid Cartridges.

OPEN L INKCOVER
REMOVE CARTRIDGE

- 21** Once the Cleaning Liquid Cartridges have been removed, install a Purging Cartridge in to each slot and close the Left Ink Cartridge Door.

LOAD PURGING CAR
CLOSE L INKCOVER

- 22** If the Printer detects that a Purging Cartridge has been installed incorrectly or if an invalid Cartridge has been installed, one of the following messages will be displayed on the Front Panel. You will need to make sure that a valid Purging Cartridge has been installed correctly before you can continue.

OPEN L INKCOVER
LOAD XX SLOT

LOAD PURGING CAR
LOAD XX SLOT

- 23** When the following message is displayed on the Front Panel, open the Right Ink Cartridge Door and remove ALL 3 Cleaning Liquid Cartridges.

OPEN R INKCOVER
REMOVE CARTRIDGE

- 24** Once the Cleaning Liquid Cartridges have been removed, install a Purging Cartridge in to each slot and close the Right Ink Cartridge Door.

LOAD PURGING CAR
CLOSE R INKCOVER

- 25** If the Printer detects that a Purging Cartridge has been installed incorrectly or if an invalid Cartridge has been installed, one of the following messages will be displayed on the Front Panel. You will need to make sure that a valid Purging Cartridge has been installed correctly before you can continue.

OPEN R INKCOVER
LOAD XX SLOT

LOAD PURGING CAR
LOAD XX SLOT

- 26** The Cleaning Liquid purge process will start and you will need to recheck whether the Waste Ink Bottle is present and is NOT full. Press the **OK** key once the Waste Ink Bottle has been checked.

START PURGING
* BOTTLE OK?

- 27** The Printer will extract the Cleaning Liquid (which could take at least 10 minutes) and the following message will be displayed on the Front Panel:

PURGING
xxx

- 28** Once the Cleaning Liquid has been purged from the system, the following message will be displayed on the Front Panel. Open the Left Ink Cartridge Door and remove ALL 3 Purging Cartridges.

OPEN L INKCOVER
LOAD CL CART

- 29** Once the Purging Cartridges have been removed, install a used Cleaning Liquid Cartridge in to each slot and close the Left Ink Cartridge Door.

LOAD CL CART
CLOSE L INKCOVER

- 30** If the Printer detects that a Cleaning Liquid Cartridge has been installed incorrectly, or if any of the Cleaning Liquid Cartridges contain less than 500cc of liquid or if an invalid Cleaning Liquid Cartridge has been installed, one of the following messages will be displayed on the Front Panel. You will need to make sure that a valid Cleaning Liquid Cartridge has been installed correctly before you can continue.

OPEN L INKCOVER
LOAD XX SLOT

LOAD CL CART
LOAD XX SLOT

LOAD NEW CL CART
LOAD XX SLOT

- 31** When the following message is displayed on the Front Panel, open the Right Ink Cartridge Door and remove ALL 3 Purging Cartridges.

OPEN R INKCOVER
LOAD CL CART

- 32** Once the Purging Cartridges have been removed, install a used Cleaning Liquid Cartridge in to each slot and close the Right Ink Cartridge Door.

LOAD CL CART
CLOSE R INKCOVER

- 33** If the Printer detects that a Cleaning Liquid Cartridge has been installed incorrectly, or if any of the Cleaning Liquid Cartridges contain less than 500cc of liquid or if an invalid Cleaning Liquid Cartridge has been installed, one of the following messages will be displayed on the Front Panel. You will need to make sure that a valid Cleaning Liquid Cartridge has been installed correctly before you can continue.

OPEN R INKCOVER
LOAD XX SLOT

LOAD CL CART
LOAD XX SLOT

LOAD NEW CL CART
LOAD XX SLOT

- 34** The Cleaning Liquid charge process will start and you will need to recheck whether the Waste Ink Bottle is present and is NOT full. Press the **OK** key once the Waste Ink Bottle has been checked.

START FILLING CL
* BOTTLE OK?

- 35** The Printer will charge the Cleaning Liquid and the following message will be displayed on the Front Panel:

FILLING CL
xxx

- 36** Once the Cleaning Liquid has been charged, the Printheads and the Sub-Tank will be flushed and the following message will be displayed:

FLUSHING
xxx

- 37** Once the printheads and the Sub-Tank have been flushed, the following message will be displayed on the Front Panel. Open the Left Ink Cartridge Door and remove ALL 3 Cleaning Liquid Cartridges.

OPEN L INKCOVER
REMOVE CARTRIDGE

- 38** Once the Cleaning Liquid Cartridges have been removed, install a Purging Cartridge in to each slot and close the Left Ink Cartridge Door.

LOAD PURGING CAR
CLOSE L INKCOVER

- 39** If the Printer detects that a Purging Cartridge has been installed incorrectly or if an invalid Cartridge has been installed, one of the following messages will be displayed on the Front Panel. You will need to make sure that a valid Purging Cartridge has been installed correctly before you can continue.

OPEN L INKCOVER
LOAD XX SLOT

LOAD PURGING CAR
LOAD XX SLOT

- 40** When the following message is displayed on the Front Panel, open the Right Ink Cartridge Door and remove ALL 3 Cleaning Liquid Cartridges.

OPEN R INKCOVER
REMOVE CARTRIDGE

- 41** Once the Cleaning Liquid Cartridges have been removed, install a Purging Cartridge in to each slot and close the Right Ink Cartridge Door.

LOAD PURGING CAR
CLOSE R INKCOVER

- 42** If the Printer detects that a Purging Cartridge has been installed incorrectly or if an invalid Cartridge has been installed, one of the following messages will be displayed on the Front Panel. You will need to make sure that a valid Purging Cartridge has been installed correctly before you can continue.

OPEN R INKCOVER
LOAD XX SLOT

LOAD PURGING CAR
LOAD XX SLOT

- 43** The Cleaning Liquid purge process will start and you will need to recheck whether the Waste Ink Bottle is present and is NOT full. Press the **OK** key once the Waste Ink Bottle has been checked.

START PURGING
* BOTTLE OK?

- 44** The Printer will extract the Cleaning Liquid (which could take at least 10 minutes) and the following message will be displayed on the Front Panel:

PURGING
xxx

- 45** Once the Cleaning Liquid has been purged from the system, the following message will be displayed on the Front Panel. Open the Left Ink Cartridge Door and remove ALL 3 Purging Cartridges.

OPEN L INKCOVER
LOAD CL CART

- 46** Once the Purging Cartridges have been removed, install a used Cleaning Liquid Cartridge in to each slot and close the Left Ink Cartridge Door.

LOAD CL CART
CLOSE L INKCOVER

- 47** If the Printer detects that a Cleaning Liquid Cartridge has been installed incorrectly, or if any of the Cleaning Liquid Cartridges contain less than 500cc of liquid or if an invalid Cleaning Liquid Cartridge has been installed, one of the following messages will be displayed on the Front Panel. You will need to make sure that a valid Cleaning Liquid Cartridge has been installed correctly before you can continue.

OPEN L INKCOVER
LOAD XX SLOT

LOAD CL CART
LOAD XX SLOT

LOAD USED CL CART
LOAD XX SLOT

- 48** When the following message is displayed on the Front Panel, open the Right Ink Cartridge Door and remove ALL 3 Purging Cartridges.

OPEN R INKCOVER
LOAD CL CART

- 49** Once the Purging Cartridges have been removed, install a used Cleaning Liquid Cartridge in to each slot and close the Right Ink Cartridge Door.

LOAD CL CART
CLOSE R INKCOVER

- 50** If the Printer detects that a Cleaning Liquid Cartridge has been installed incorrectly, or if any of the Cleaning Liquid Cartridges contain less than 500cc of liquid or if an invalid Cleaning Liquid Cartridge has been installed, one of the following messages will be displayed on the Front Panel. You will need to make sure that a valid Cleaning Liquid Cartridge has been installed correctly before you can continue.

OPEN R INKCOVER
LOAD XX SLOT

LOAD CL CART
LOAD XX SLOT

LOAD USED CL CART
LOAD XX SLOT

- 51** The Sub-Tank priming process will start and you will need to recheck whether the Waste Ink Bottle is present and is NOT full. Press the **OK** key once the Waste Ink Bottle has been checked.

PRIME SUBTANK
* BOTTLE OK?

- 52** The Printer will extract the Sub-Tank and the following message will be displayed on the Front Panel:

PURGING

xxx

- 53** Once the Clean Ink System process has been completed, the Front Panel will return to the Ink System Opt submenu.

INK SYSTEM OPT
> CLEAN INK SYS

- 54** Remove the Cleaning Liquid Cartridges from the Printer.
- 55** Install normal Ink Cartridges into the Printer and perform the Charge Ink System procedure ⇒ Page 4-23.

Ink Charge Done

This option allows you to check or indicate whether ink charge has been completed:

- 1 In the Printhead Maintenance submenu, scroll to "Ink Charge Done" and press the **OK** key.



```
# INK CHARGE DONE
> NO
```

- 2 In the Ink Charge Done submenu, select "Yes" if ink charge has been completed or "No" if ink charge has not been completed yet and then press the **OK** key.



```
# INK CHARGE DONE
* YES
```

Printhead Recovery


This option allows you to activate the Printhead Recovery process:

- 1 In the Printhead Maintenance submenu, scroll to "PH Recovery" and press the **OK** key.



```
# PH RECOVERY
> NORMAL ALL
```

- 2 In the PH Recovery submenu, select the level of Printhead recovery you would like to activate and then press the **OK** key.

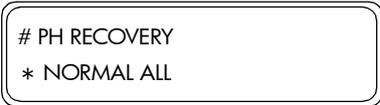

```
# PH RECOVERY
* NORMAL ALL
```

The different options in this submenu are as follows:

- Normal All - Activates a normal recovery for all Printheads.
 - Strong All - Activates a strong recovery for all colors.
 - Strong K, Lm, Lc - Activates a strong recovery for the Black, Light Magenta and Light Cyan Printheads.
 - Strong Y, M, C - Activates a strong recovery for the Yellow, Magenta and Cyan Printheads.
- 3 The Carriage will begin to perform the printhead recovery process, which can take a few minutes.

Uncap Carriage

This option allows you to uncap the Carriage from the Capping Station:

Never try to move the Carriage out of the Capping Station without first uncapping the Carriage.

- 1 In the Printhead Maintenance submenu, scroll to "Uncap Carriage" and press the **OK** key. The Capping Station will move downwards, uncapping the Carriage.

UNCAP CARRIAGE

>

Cap Carriage

This option allows you to cap the Carriage in the Capping Station:

Never leave the Carriage uncapped for long periods of time since this can seriously damage the Printheads.

- 1 In the Printhead Maintenance submenu, scroll to "Cap Carriage" and press the **OK** key. The Capping Station will move upwards, capping the Carriage.

CAP CARRIAGE


>

MNFG-PRN (Manufacturing Patterns)

This menu contains the necessary test patterns to check that the Printer is functioning correctly. The different options available in this menu are as follows:

- MNFG Pattern 0.
- MNFG Pattern 1.
- MNFG Pattern 2.
- MNFG Pattern 3.
- MNFG Pattern 4.
- MNFG Pattern 5.
- MNFG Pattern 6.
- MNFG Pattern 7.
- MNFG Pattern 8.
- MNFG Pattern 9.
- MNFG Pattern 10.
- MNFG Pattern 11.
- MNFG Pattern 12.

To enter in to the Manufacturing Pattern menu, enter in to the Maintenance Mode and press the **Shift** key once and then the **▲** key.

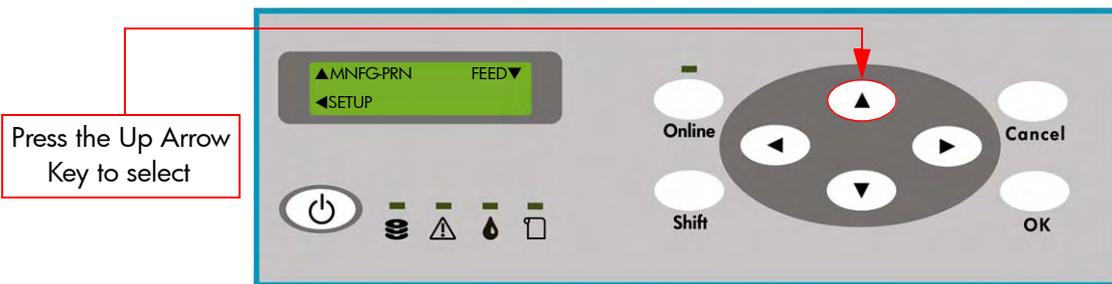

The MNFG Patterns in this menu are for Manufacturing purposes ONLY and should not be used for troubleshooting purposes.


SETUP

This menu contains the necessary option to set the different system parameters, like language or system time. The different options available in this menu are as follows:

- Language ⇒ Page 4-45.
- Beeper Settings ⇒ Page 4-46.
- End of Ink Beeper Settings ⇒ Page 4-46.
- System Date ⇒ Page 4-46.
- System Time ⇒ Page 4-47.
- OEM or HP Serial Number ⇒ Page 4-47.
- NVRAM Initialization ⇒ Page 4-47.
- Save Calibrations ⇒ Page 4-48.
- Restore Calibrations ⇒ Page 4-48.
- Save NVRAM ⇒ Page 4-48.
- Restore NVRAM ⇒ Page 4-49.
- Boot Version ⇒ Page 4-49.
- Printer Firmware Version ⇒ Page 4-49.
- Main PCA Version ⇒ Page 4-49.
- Carriage PCA Version ⇒ Page 4-49.
- ASIC version ⇒ Page 4-50.
- Heater Hardware Version ⇒ Page 4-50.
- Heater Firmware Version ⇒ Page 4-50.
- Add-ON (HEB2) Control PCA Version ⇒ Page 4-50.
- Heater Upgrade ⇒ Page 4-50.
- Install Done ⇒ Page 4-52.

To enter in to the Setup menu, enter in to the Maintenance Mode and press the **Shift** key once and then the ◀ key.

Press the Left Arrow Key to select

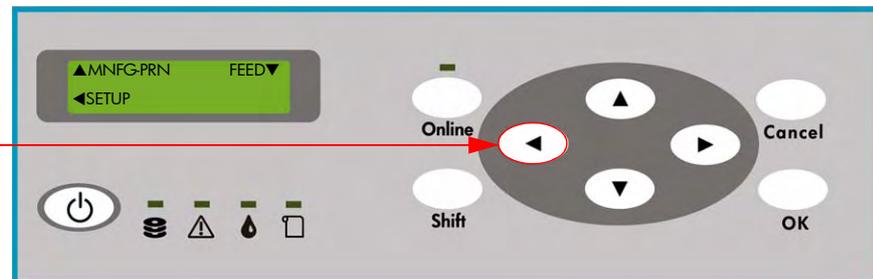

Language

This option allows you to select the language of the Front Panel display:

- 1 In the Setup submenu, scroll to "Language" and press the **OK** key.



- In the Language submenu, select "English" or "Japanese" and press the **OK** key.

```
# LANGUAGE
* JAPANESE
```

Beeper Settings

This option allows you to turn On/Off the beeper:

- In the Setup submenu, scroll to "Beep" and press the **OK** key.

```
# BEEP
> ON
```

- In the Beep submenu, select "On" or "Off" and then press the **OK** key.

```
# BEEP
* OFF
```

End of Ink Beeper Settings

This option allows you to turn On/Off the beeper that alerts you to end of ink during printing:

- In the Setup submenu, scroll to "End of Ink Beep" and press the **OK** key.

```
# END OF INK BEEP
> ON
```

- In the End of Ink Beep submenu, select "On" or "Off" and then press the **OK** key.

```
# END OF INK BEEP
* OFF
```

System Date

This option allows you to set the current date:

- In the Setup submenu, scroll to "Date (yy/mm/dd)" and press the **OK** key.

```
# DATE (YY/MM/DD)
> 05/05/08
```

- Use the ▲ and ▼ keys to change the digits and use the ◀ and ▶ keys to select the digits.

```
# DATE (YY/MM/DD)
> 05/10/01
```

- Press the **OK** key once you have entered the new date.

System Time

This option allows you to set the current time:

- 1 In the Setup submenu, scroll to "System Time" and press the **OK** key.

SYSTEM TIME
> 01:01

- 2 Use the ▲ and ▼ keys to change the digits and use the ◀ and ▶ keys to select the digits.

SYSTEM TIME
> 09:30

Format: Hour:Minute

- 3 Press the **OK** key once you have entered the new time.

OEM or HP Serial Number

This option allows you to set the Serial Number of the Printer:

- 1 In the Setup submenu, scroll to "HP Serial No." or "OEM Serial No." and press the **OK** key.

HP SERIAL No.
> 0000000000

- 2 Use the ▲ and ▼ keys to change the digits and use the ◀ and ▶ keys to select the digits.

HP SERIAL No.
> 012345678A

HP: 10 Digits
 OEM: 8 Digits

- 3 Press the **OK** key once you have entered the new serial number.

NVRAM Initialization

This option allows you to initialize the NVRAM with the default values. The Printer correction values are returned to the values before adjustment:

- 1 In the Setup submenu, scroll to "NVRAM Init" and press the **OK** key.

NVRAM INIT
>

- 2 You will need to confirm that you want to initialize the NVRAM by pressing the **OK** key.

NVRAM INIT
* OK?

After the NVRAM has been initialized, you must set the option Ink Charge Done to "Yes" (refer to Page 4-42).

Save Calibrations

This option allows you to save the Calibrations stored in the NVRAM into the Factory Defaults area in the flash memory:

- 1 In the Setup submenu, scroll to "Save Calibs" and press the **OK** key.

```
# SAVE CALIBS
>
```

- 2 You will need to confirm that you want to save the NVRAM Calibrations by pressing the **OK** key.

```
# SAVE CALIBS
* OK?
```

Restore Calibrations

This option allows you to restore the Calibrations stored in the Factory Defaults area to the NVRAM:

- 1 In the Setup submenu, scroll to "Restore Calibs" and press the **OK** key.

```
# RESTORE CALIBS
>
```

- 2 You will need to confirm that you want to restore the contents to the NVRAM by pressing the **OK** key.

```
# RESTORE CALIBS
* OK?
```

Save NVRAM

This option allows you to save the contents stored in the NVRAM into the NVRAM backup area in the flash memory:

- 1 In the Setup submenu, scroll to "Save NVRAM" and press the **OK** key.

```
# SAVE NVRAM
>
```

- 2 You will need to confirm that you want to save the NVRAM contents by pressing the **OK** key.

```
# SAVE NVRAM
* OK?
```

Restore NVRAM

This option allows you to restore the contents stored in the NVRAM backup area to the NVRAM:

- 1 In the Setup submenu, scroll to "Restore NVRAM" and press the **OK** key.

```
# RESTORE NVRAM
>
```

- 2 You will need to confirm that you want to restore the NVRAM contents by pressing the **OK** key.

```
# RESTORE NVRAM
* OK?
```

Boot Version

This option allows you to view the version of the Boot ROM:

- 1 In the Setup submenu, scroll to "Boot Version" and press the **OK** key.

```
# BOOT VERSION
* X.XX
```

X.XX: Version Number

Printer Firmware Version

This option allows you to view the version of the Printer Firmware:

- 1 In the Setup submenu, scroll to "Printer FW Ver" and press the **OK** key.

```
# PRINTER FW VER
* X.XX_YY
```

X.XX: Version Number
YY: Control Code

Main PCA Version

This option allows you to view the version of the Main PCA:

- 1 In the Setup submenu, scroll to "Main PCA Ver" and press the **OK** key.

```
# MAIN PCA VER
* X.X
```

X.X: Version Number

Carriage PCA Version

This option allows you to view the version of the Carriage PCA:

- 1 In the System submenu, scroll to "Carriage PCA Version" and press the **OK** key.

```
# CARRIAGE PCA
* XX.X
```

XX.X: Version Number

ASIC Version

This option allows you to view the version of the ASIC:

- 1 In the Setup submenu, scroll to "ASIC Ver" and press the **OK** key.

```
# ASIC VER
* XX.X
```

XX.X: Version Number

Heater Hardware Version

This option allows you to view the hardware version of the Heater:

- 1 In the System submenu, scroll to "Heater HW Ver" and press the **OK** key.

```
# HEATER HW VER
* X.X
```

X.X: Version Number

If the Heater cannot be recognized, "_._" will be displayed.

Heater Firmware Version

This option allows you to view the firmware version of the Heater:

- 1 In the Setup submenu, scroll to "Heater FW Ver" and press the **OK** key.

```
# HEATER FW VER
* X.X
```

X.X: Version Number

If the Heater cannot be recognized, "_._" will be displayed.

Add-On (HEB2) Control PCA Version

This option allows you to view the version of the Add-On (HEB2) Control PCA:

- 1 In the Setup submenu, scroll to "HEB Ver" and press the **OK** key.

```
# HEB VER
* X.X
```

X.X: Version Number

Heater Upgrade

This option allows you to update the firmware version of the Heater:

- 1 In the Setup submenu, scroll to "Heater Upgrade" and press the **OK** key.

```
# HEATER UPGRADE
>
```

- 2 You will need to confirm that you want to upgrade the firmware version of the Heater by pressing the **OK** key.

```
# HEATER UPGRADE
* OK?
```

- 3 You will need to insert the IC Card containing the latest version of the firmware into the Main PCA. Press the **OK** key once the IC Card has been inserted.



- 4 The Printer will start upgrading the Heater firmware and the following message will appear on the Front Panel.



* Flashes while the firmware is being updated

Do NOT power Off the Printer while the firmware is being upgraded as this may cause the upgrade process to fail.

- 5 Once the upgrade has been completed, the following message will appear on the Front Panel.



- 6 Power Off the Printer and power it On again and check the Heater firmware version once the Printer has initialized ⇒ Page 4-50.

The following messages could appear during the Heater firmware upgrade procedure:

- The Printer does not recognize the Heater Control Panel.



- Try powering Off the Printer and On again and retry the firmware upgrade procedure. If the message continues to appear after rebooting several times, then replace the Heater Panel ⇒ Page 8-27.

- There is a problem with the IC Card.



- Check that the IC Card contains the actual firmware image.
- Make sure that the IC Card is inserted into the Main PCA correctly.
- Try powering Off the Printer and On again and retry the firmware upgrade procedure. If the message continues to appear after rebooting several times, then replace the Heater Panel ⇒ Page 8-27.

- There is a communication problem between the Main PCA and the Heater Panel.



- Try powering Off the Printer and On again and retry the firmware upgrade procedure. If the message continues to appear after rebooting several times, then replace the Heater Panel ⇒ Page 8-27.

- The upgrade procedure cannot be performed because the Heater firmware has been deleted.



- Replace the Heater Panel ⇒ Page 8-27.

Install Done

This option allows you to indicate whether the Printer Installation has been performed correctly so that the preventive maintenance counters can be activated:

- 1 In the Setup submenu, scroll to "Install Done" and press the **OK** key.



- 2 In the Install Done submenu, scroll to "Yes" and press the **OK** key. This will indicate that the Printer has been successfully installed.




FEED

This option allows you to feed the media manually in to the Printer.

To feed the media manually:

- 1 Enter in to the Maintenance Mode and press the **Shift** key once and then keep the **▼** key pressed in order to manually feed the media.

Press the Down Arrow Key to select

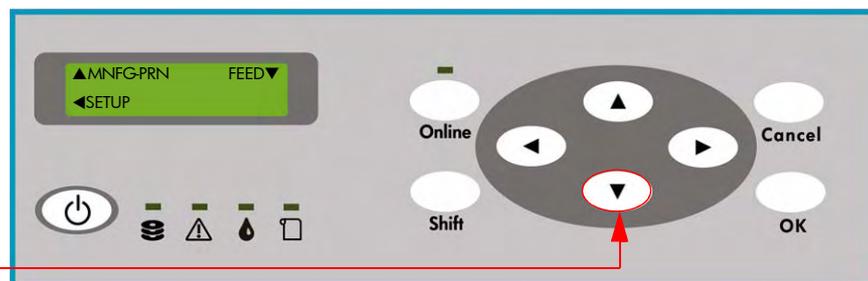

- 2 During the manual feed process, the following message will appear on the Front Panel:




- 3 Once the **▼** key is released, the media stops feeding and the top menu will appear on the Front Panel.

SENSORS

This menu can be used to check the status of the various sensors and thermistors in the Printer in real time. The different options available in this menu are as follows:

- Printer Sensors ⇒ Page 4-53.
- Ink Sensor ⇒ Page 4-54.
- Sub Tank Sensor ⇒ Page 4-55.
- Bottle Sensor ⇒ Page 4-56.
- Media Supply Reel (MSR) Sensors ⇒ Page 4-57.
- TUR Sensors ⇒ Page 4-58.
- Temperature Sensors ⇒ Page 4-59.

To enter in to the Sensors menu, enter in to the Maintenance Mode and press the **Shift** key twice and then the **▲** key.

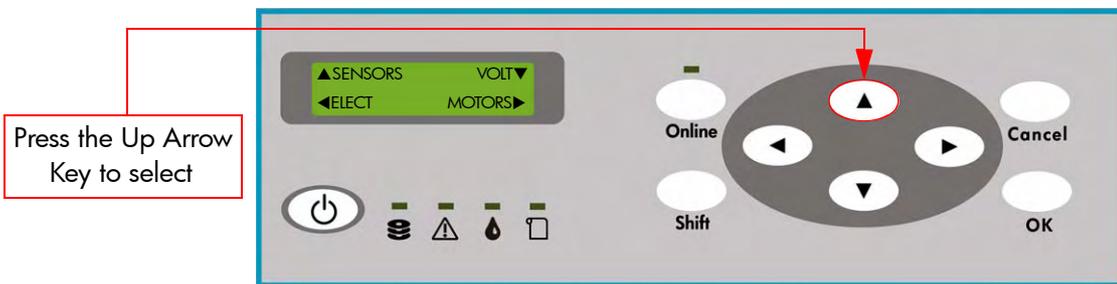


Printer Sensors

This option allows you to check the status of the Printers sensors in real time so that faulty sensors can be replaced as necessary:


- 1 In the Sensors submenu, scroll to "Printer Sensors" and press the **▶** key.



- 2 In the Printer Sensors submenu, select the Sensor that you would like to test and press the **OK** key. If you would like to exit the Printer Sensors submenu, press the **◀** key.

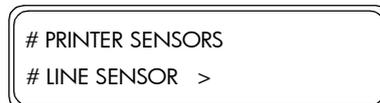

- 3 The Front Panel will show the status of the selected Sensor. By activating and deactivating the selected Sensor, the status will change and a buzzer will make a sound.

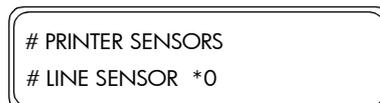

The Sensors that can be tested in this menu are as follows:

- Line Sensor - Displays the status of the Line Sensor located in the Carriage Assembly (0 = No media, 1 = Media present).
 - Front Media - Displays the status of the Front Media Sensor located under the Front Heater (0 = Not blocked, 1 = blocked).
 - Rear Media - Displays the status of the Rear Media Sensor located under the Rear Heater (0 = Not blocked, 1 = blocked).
 - Home Position - Displays the status of the Home Position Sensor (0 = Home position not detected, 1 = Home position detected).
 - Wiper Blade - Displays the status of the Wiper Sensor (0 = blocked, 1 = Not blocked).
 - Media Lever - Displays the status of the Media Lever Sensor located (0 = Lowered, 1 = Raised).
 - Rear Cover-L - Displays the status of the Capping Door Sensor (0 = Closed, 1 = Open).
 - Rear Cover-R - Displays the status of the Wiping Door Sensor (0 = Closed, 1 = Open).
- 4 If you would like to exit the Printer Sensors submenu, first press the **Cancel** key and then press the ◀ key.

Ink Sensor

This option allows you to check the status of the sensors related to the Ink Cartridges in real time so that faulty sensors can be replaced as necessary:

- 1 In the Sensors submenu, scroll to "Ink Sensor" and press the ▶ key.

```
# INK SENSOR
# K INK CART
```

- 2 In the Ink Sensor submenu, select the Sensor that you would like to test and press the **OK** key. If you would like to exit the Ink Sensor submenu, press the ◀ key.

```
# INK SENSOR
# K INK CART >
```

- 3 The Front Panel will show the status of the selected Sensor. By activating and deactivating the selected Sensor, the status will change and a buzzer will make a sound.

```
# INK SENSOR
# K INK CART *0
```

The Sensors that can be tested in this menu are as follows:

- K Ink Cart - Displays the status of the Black Ink Cartridge Sensor (0 = Ink Cartridge installed, 1 = Ink Cartridge not installed).
 - Lm Ink Cart - Displays the status of the Light Magenta Ink Cartridge Sensor (0 = Ink Cartridge installed, 1 = Ink Cartridge not installed).
 - Lc Ink Cart - Displays the status of the Light Cyan Ink Cartridge Sensor (0 = Ink Cartridge installed, 1 = Ink Cartridge not installed).
 - Y Ink Cart - Displays the status of the Yellow Ink Cartridge Sensor (0 = Ink Cartridge installed, 1 = Ink Cartridge not installed).
 - M Ink Cart - Displays the status of the Magenta Ink Cartridge Sensor (0 = Ink Cartridge installed, 1 = Ink Cartridge not installed).
 - C Ink Cart - Displays the status of the Cyan Ink Cartridge Sensor (0 = Ink Cartridge installed, 1 = Ink Cartridge not installed).
 - Inkcover-L - Displays the status of the Left Ink Cartridge Door Sensor (0 = Closed, 1 = Open).
 - Inkcover-R - Displays the status of the Right Ink Cartridge Door Sensor (0 = Closed, 1 = Open).
- 4** If you would like to exit the Ink Sensor submenu, first press the **Cancel** key and then press the ◀ key.

Sub Tank Sensor

This option allows you to check the status of the sensors related to the Sub-Tank system in real time so that faulty sensors can be replaced as necessary:

- 1** In the Sensors submenu, scroll to "Sub Tank Sensor" and press the ▶ key.

```
# SUB TANK SENSOR
# K FULL
```

- 2** In the Sub Tank Sensor submenu, select the Sensor that you would like to test and press the **OK** key. If you would like to exit the Sub Tank Sensor submenu, press the ◀ key.

```
# SUB TANK SENSOR
# K FULL >
```

- 3** The Front Panel will show the status of the selected Sensor. By activating and deactivating the selected Sensor, the status will change and a buzzer will make a sound.

```
# SUB TANK SENSOR
# K FULL *0
```

The Sensors that can be tested in this menu are as follows:

- K Full - Displays the status of the Black Sub-Tank Full Sensor.
- Lm Full - Displays the status of the Light Magenta Sub-Tank Full Sensor.
- Lc Full - Displays the status of the Light Cyan Sub-Tank Full Sensor.

- Y Full - Displays the status of the Yellow Sub-Tank Full Sensor.
- M Full - Displays the status of the Magenta Sub-Tank Full Sensor.
- C Full - Displays the status of the Cyan Sub-Tank Full Sensor.
- K Half - Displays the status of the Black Sub-Tank Half Sensor.
- Lm Half - Displays the status of the Light Magenta Sub-Tank Half Sensor.
- Lc Half - Displays the status of the Light Cyan Sub-Tank Half Sensor.
- Y Half - Displays the status of the Yellow Sub-Tank Half Sensor.
- M Half - Displays the status of the Magenta Sub-Tank Half Sensor.
- C Half - Displays the status of the Cyan Sub-Tank Half Sensor.
- K Ink Pump - Displays the status of the Black Ink Pump Sensor.
- Lm Ink Pump - Displays the status of the Light Magenta Ink Pump Sensor.
- Lc Ink Pump - Displays the status of the Light Cyan Ink Pump Sensor.
- Y Ink Pump - Displays the status of the Yellow Ink Pump Sensor.
- M Ink Pump - Displays the status of the Magenta Ink Pump Sensor.
- C Ink Pump - Displays the status of the Cyan Ink Pump Sensor.

You will need to manually move the Full/Half Sensors and the Ink Pump Motor to change the status of the Sensors. If the status changes from "0" to "1", it means that the Sensor is working correctly.

- 4 If you would like to exit the Sub Tank Sensor submenu, first press the **Cancel** key and then press the ◀ key.

Bottle Sensor

This option allows you to check the status of the Waste Bottle Sensor in real time so that if it is faulty, it can be replaced as necessary:

- 1 In the Sensors submenu, scroll to "Bottle Sensor" and press the ▶ key.

```
# BOTTLE SENSOR
# PRESENT
```

- 2 In the Bottle Sensor submenu, press the **OK** key. If you would like to exit the Bottle Sensor submenu, press the ◀ key.

```
# BOTTLE SENSOR
# PRESENT >
```

- 3 The Front Panel will show the status of the Waste Bottle Sensor. By activating and deactivating the Waste Bottle Sensor, the status will change (0 = Present, 1 = Not present) and a buzzer will make a sound.

```
# BOTTLE SENSOR
# PRESENT *0
```

- 4 If you would like to exit the Bottle Sensor submenu, first press the **Cancel** key and then press the ◀ key.

Media Supply Reel (MSR) Sensors

This option allows you to check the status of the sensors related to the Media Supply Reel in real time so that faulty sensors can be replaced as necessary:

- 1 In the Sensors submenu, scroll to "MSR Sensors" and press the ► key.

```
# MSR SENSORS
# DIRECTION
```

- 2 In the MSR Sensors submenu, select the Sensor that you would like to test and press the **OK** key. If you would like to exit the MSR Sensors submenu, press the ◀ key.

```
# MSR SENSORS
# ME SENSOR >
```

- 3 The Front Panel will show the status of the selected Sensor. By activating and deactivating the selected Sensor, the status will change and a buzzer will make a sound.

```
# MSR SENSORS
# ME SENSOR *0
```

The Sensors that can be tested in this menu are as follows:

- Direction - Displays the status of the Direction Switch on the Media Feed Drive Unit (0 = Inner winding direction, 1 = Outer winding direction).
- ME Sensor - Displays the status of the Media End Sensor (0 = Sensor blocked, 1 = Sensor not blocked).
- Loose - Displays the status of the Media Slack Sensor (1 = Sensor blocked, 0 = Sensor not blocked).
- Feeder SW - Displays the status of the Black Media Feed Switch on the Media Feed Drive Unit (1 = Switch not pressed, 0 = Switch pressed).
- Winder SW - Displays the status of White Media Rewind Switch on the Media Feed Drive Unit (1 = Switch not pressed, 0 = Switch pressed).

The Feeder SW and Winder SW tests can also be used to test the Foot Switches.

- 4 If you would like to exit the Media Supply Reel Sensors submenu, first press the **Cancel** key and then press the ◀ key.

TUR Sensors

This option allows you to check the status of the sensors related to the Take-Up-Reel in real time so that faulty sensors can be replaced as necessary:

- 1 In the Sensors submenu, scroll to "TUR Sensors" and press the ► key.

```
# TUR SENSORS
# BACKWARDS
```

- 2 In the TUR Sensors submenu, select the Sensor that you would like to test and press the **OK** key. If you would like to exit the TUR Sensors submenu, press the ◀ key.

```
# TUR SENSORS
# UPPER >
```

- 3 The Front Panel will show the status of the selected Sensor. By activating and deactivating the selected Sensor, the status will change and a buzzer will make a sound.

```
# TUR SENSORS
# UPPER *0
```

The Sensors that can be tested in this menu are as follows:



- Backwards - Displays the status of the Backwards Direction Switch on the TUR Drive Unit (0 = Switch activated, 1 = Switch deactivated).
- Forwards - Displays the status of the Forwards Direction Switch on the TUR Drive Unit (0 = Switch activated, 1 = Switch deactivated).
- Upper - Displays the status of the Upper TUR Sensor (0 = Sensor blocked, 1 = Sensor not blocked).
- Lower - Displays the status of the Lower TUR Sensor (1 = Sensor blocked, 0 = Sensor not blocked).
- Feeder SW - Displays the status of the White TUR Feed Switch on the TUR Drive Unit (1 = Switch not pressed, 0 = Switch pressed).
- Winder SW - Displays the status of Black TUR Rewind Switch on the TUR Drive Unit (1 = Switch not pressed, 0 = Switch pressed).

The Feeder SW and Winder SW tests can also be used to test the Foot Switches.

- 4 If you would like to exit the TUR Sensors submenu, first press the **Cancel** key and then press the ◀ key.


Temperature Sensors

This option allows you to check the status of the temperature sensors located in the Printer in real time so that faulty sensors can be replaced as necessary:


- 1 In the Sensors submenu, scroll to "Temp Sensors" and press the **▶** key.



- 2 In the Temp Sensors submenu, select the Sensor that you would like to test and press the **OK** key. If you would like to exit the Temp Sensors submenu, press the **◀** key.

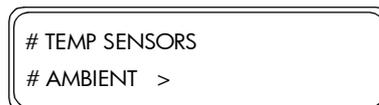

- 3 The Front Panel will show the temperature read by the selected Sensor.

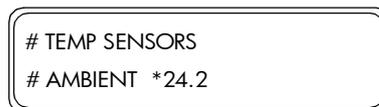

The Temperature Sensors that can be tested in this menu are as follows:

- Ambient - Displays the environment temperature.
 - K PH - Displays the temperature of the Black Head.
 - Lm PH - Displays the temperature of the Light Magenta Head.
 - Lc PH - Displays the temperature of the Light Cyan Head.
 - Y PH - Displays the temperature of the Yellow Head.
 - M PH - Displays the temperature of the Magenta Head.
 - C PH - Displays the temperature of the Cyan Head.
 - Carriage1 - Displays the temperature read by the sensor located at position 1 on the Carriage PCA.
 - Carriage2 - Displays the temperature read by the sensor located at position 2 on the Carriage PCA.
 - Carriage3 - Displays the temperature read by the sensor located at position 3 on the Carriage PCA.
 - Carriage4 - Displays the temperature read by the sensor located at position 4 on the Carriage PCA.
 - Carriage5 - Displays the temperature read by the sensor located at position 5 on the Carriage PCA.
 - Carriage6 - Displays the temperature read by the sensor located at position 6 on the Carriage PCA.
 - Carriage7 - Displays the temperature read by the sensor located at position 7 on the Carriage PCA.
- 4 If you would like to exit the Temp Sensors submenu, first press the **Cancel** key and then press the **◀** key.


ELECT (Electronics)

This menu contains the necessary diagnostics that can be used to test the various electronic components in the Printer. The different options available in this menu are as follows:

- Flash ROM ⇒ Page 4-60.
- PIO ⇒ Page 4-61.
- NVRAM ⇒ Page 4-62.
- Ink EEPROM ⇒ Page 4-63.
- ATG ⇒ Page 4-63.
- DRAM ⇒ Page 4-64.
- RSM ⇒ Page 4-65.
- PTC ⇒ Page 4-65.
- PDD ⇒ Page 4-66.
- HEB ⇒ Page 4-66.
- ALL ⇒ Page 4-68.
- VDD ⇒ Page 4-68.
- Front Panel ⇒ Page 4-69.

To enter in to the Electronics menu, enter in to the Maintenance Mode and press the **Shift** key twice and then the ◀ key.

Press the Left Arrow
Key to select

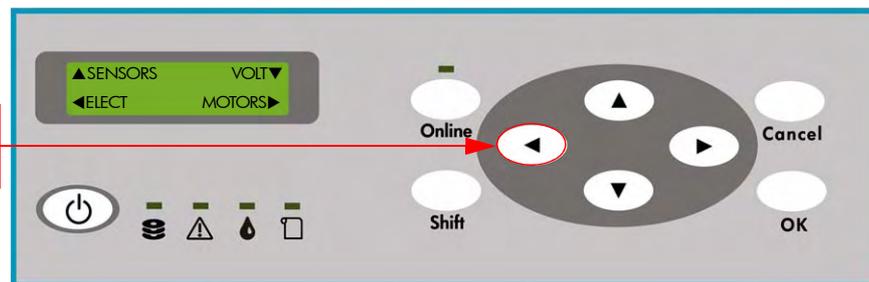

Flash ROM

This option allows you to test the Flash ROM contained in the Main PCA:

- 1 In the Elect submenu, scroll to "Flash ROM" and press the **OK** key.

```
# FLASH ROM
>
```

- 2 You will need to confirm that you want to test the Flash ROM by pressing the **OK** key.

```
# FLASH ROM
* OK?
```

- 3** While the Flash ROM is being tested, the following message will be displayed on the Front Panel.

```
# FLASH ROM
* EXECUTING
```

- 4** If the Flash ROM test **passes**, the Front Panel will display the following message:

```
# FLASH ROM
* PASS
```

- 5** If the Flash ROM test **fails**, the Front Panel will display the following message:

```
# FLASH ROM
* FLASH ERR
```

If the Flash ROM test fails, try the following:

- Replace the Main PCA ⇒ Page 8-36.

PIO (Parallel Input/Output)

This option allows you to test the Parallel Input/Output contained in the Main PCA:

- 1** In the Elect submenu, scroll to "PIO" and press the **OK** key.

```
# PIO
>
```

- 2** You will need to confirm that you want to test the PIO by pressing the **OK** key.

```
# PIO
* OK?
```

- 3** While the PIO is being tested, the following message will be displayed on the Front Panel.

```
# PIO
* EXECUTING
```

- 4** If the PIO test **passes**, the Front Panel will display the following message:

```
# PIO
* PASS
```

- 5 If the PIO test **fails**, the Front Panel will display the following message:

```
# PIO
* PIO ERR
```

If the PIO test fails, try the following:

- Replace the Main PCA ⇒ Page 8-36.

NVRAM

This option allows you to test the NVRAM contained in the Main PCA:

- 1 In the Elect submenu, scroll to "NVRAM" and press the **OK** key.

```
# NVRAM
>
```

- 2 You will need to confirm that you want to test the NVRAM by pressing the **OK** key.

```
# NVRAM
* OK?
```

- 3 While the NVRAM is being tested, the following message will be displayed on the Front Panel.

```
# NVRAM
* EXECUTING
```

- 4 If the NVRAM test **passes**, the Front Panel will display the following message:

```
# NVRAM
* PASS
```

- 5 If the NVRAM test **fails**, the Front Panel will display the following message:

```
# NVRAM
* NVRAM ERR
```

If the NVRAM test fails, try the following:

- Replace the NVRAM ⇒ Page 8-41.
- If the test fails again after replacing the NVRAM, replace the Main PCA ⇒ Page 8-36.

Ink EEPROM

This option allows you to test the Ink EEPROM contained in the Ink Cartridge:

- 1 In the Elect submenu, scroll to "Ink EEPROM" and press the **OK** key.

```
# INK EEPROM
>
```

- 2 You will need to confirm that you want to test the Ink EEPROM by pressing the **OK** key.

```
# INK EEPROM
* OK?
```

- 3 While the Ink EEPROM is being tested, the following message will be displayed on the Front Panel.

```
# INK EEPROM
* EXECUTING
```

- 4 If the Ink EEPROM test **passes**, the Front Panel will display the following message:

```
# INK EEPROM
* PASS
```

- 5 If the Ink EEPROM test **fails**, the Front Panel will display the following message:

```
# INK EEPROM
* INK ERR
```

If the Ink EEPROM test fails, try the following:

- Replace the Ink Cartridge(s).
- Replace the Ink Supply Station (Left or Right) ⇒ Page 8-110.
- Replace the Main PCA ⇒ Page 8-36.

ATG (Band Memory Address Generator)

This option allows you to test the ATG contained in the Main PCA:

- 1 In the Elect submenu, scroll to "ATG" and press the **OK** key.

```
# ATG
>
```

- 2** You will need to confirm that you want to test the ATG by pressing the **OK** key.

```
# ATG
* OK?
```

- 3** While the ATG is being tested, the following messages will be displayed on the Front Panel.

```
# ATG
FILL 00
```

```
# ATG
CHECK 00 00 00
```

- 4** If the ATG test **passes**, the Front Panel will display the following message:

```
# ATG
* PASS
```

- 5** If the ATG test **fails**, the Front Panel will display the following message:

```
# ATG
* ATG ERR
```

If the ATG test fails, try the following:

- Replace the Main PCA ⇒ Page 8-36.

DRAM

This option allows you to test the DRAM contained in the Main PCA:

- 1** In the Elect submenu, scroll to "DRAM" and press the **OK** key.

```
# DRAM
>
```

- 2** You will need to confirm that you want to test the DRAM by pressing the **OK** key.

```
# DRAM
* OK?
```

- 3** While the DRAM is being tested, the following messages will be displayed on the Front Panel.

```
# DRAM
WRITE 00 00
```

```
# DRAM
READ 00 00
```

- 4** If the DRAM test **passes**, the Front Panel will display the following message:

```
# DRAM
* PASS
```

- 5** If the DRAM test **fails**, the Front Panel will display the following message:

```
# DRAM
* DRAM ERR
```

If the DRAM test fails, try the following:

- Replace the Main PCA ⇒ Page 8-36.

RSM

This option allows you to test the RSM contained in the Main PCA:

- 1** In the Elect submenu, scroll to "RSM" and press the **OK** key.

```
# RSM
>
```

- 2** You will need to confirm that you want to test the RSM by pressing the **OK** key.

```
# RSM
* OK?
```

- 3** While the RSM is being tested, the following message will be displayed on the Front Panel.

```
# RSM
* EXECUTING
```

- 4** If the RSM test **passes**, the Front Panel will display the following message:

```
# RSM
* PASS
```

- 5** If the RSM test **fails**, the Front Panel will display the following message:

```
# RSM
* RSM ERR
```

If the RSM test fails, try the following:

- Replace the Main PCA ⇒ Page 8-36.

PTC

This option allows you to test the PTC contained in the Carriage PCA:

- 1** In the Elect submenu, scroll to "PTC" and press the **OK** key.

```
# PTC
>
```

- 2** You will need to confirm that you want to test the PTC by pressing the **OK** key.

```
# PTC
* OK?
```

- 3** While the PTC is being tested, the following message will be displayed on the Front Panel.

```
# PTC
* EXECUTING
```

- 4** If the PTC test **passes**, the Front Panel will display the following message:

```
# PTC
* PASS
```

- 5** If the PTC test **fails**, the Front Panel will display the following message:

```
# PTC
* PTC ERR
```

If the PTC test fails, try the following:

- Replace the Carriage PCA ⇒ Page 8-36.
- Replace the Trailing Cable ⇒ Page 8-79.
- Replace the Main PCA ⇒ Page 8-36.

PDD

This option allows you to test the PDD contained in the Carriage PCA:

- 1** In the Elect submenu, scroll to "PDD" and press the **OK** key.

```
# PDD
>
```

- 2** You will need to confirm that you want to test the PDD by pressing the **OK** key.

```
# PDD
* OK?
```

- 3** While the PDD is being tested, the following message will be displayed on the Front Panel.

```
# PDD
* EXECUTING
```

- 4** If the PDD test **passes**, the Front Panel will display the following message:

```
# PDD
* PASS
```

- 5** If the PDD test **fails**, the Front Panel will display the following message:

```
# PDD
* PDD ERR
```

If the PDD test fails, try the following:

- Replace the Carriage PCA ⇒ Page 8-36.
- Replace the Trailing Cable ⇒ Page 8-79.
- Replace the Main PCA ⇒ Page 8-36.

HEB

This option allows you to test the Add-On (HEB2) Control PCA:

- 1** In the Elect submenu, scroll to "HEB" and press the **OK** key.

```
# HEB
>
```

- 2** You will need to confirm that you want to test the HEB by pressing the **OK** key.

```
# HEB
* OK?
```

- 3** While the HEB is being tested, the following message will be displayed on the Front Panel.

```
# HEB
* EXECUTING
```

- 4** If the HEB test **passes**, the Front Panel will display the following message:

```
# HEB
* PASS
```

- 5** If the HEB test **fails**, the Front Panel will display the following message:

```
# HEB
* HEB ERR
```

If the HEB test fails, try the following:

- Replace the Add-On (HEB2) Control PCA ⇒ Page 8-45.

ALL

This option allows you to perform **all** the previous tests in one go:

- 1 In the Elect submenu, scroll to "ALL" and press the **OK** key.

```
# ALL
>
```

- 2 You will need to confirm that you want to perform **all** the test by pressing the **OK** key.

```
# ALL
* OK?
```

- 3 While **all** the tests are being performed, the following message will be displayed on the Front Panel.

```
# ALL
* EXECUTING
```

- 4 If **all** the tests **pass**, the Front Panel will display the following message:

```
# ALL
* PASS
```

- 5 If any of the tests **fails**, the Front Panel will display the name of the part that has failed. In this case, refer to the corrective action for the failing part.

VDD

This option allows you to test the VDD voltage (either 24V, 17V or 6V) of the Carriage PCA:

- 1 In the Elect submenu, scroll to "VDD" and press the **OK** key.

```
# VDD
> 24V
```

- 2 Select the Voltage of the Head Relay Board that you want to test and press the **OK** key.

```
# VDD
* 17V
```

- 3** Measure the voltage (using a tester) of the different points on the Head Relay Board to verify that the voltage settings are correct. Measuring points and expected values on the Carriage PCA should be as follows:

Measuring point on the carriage PCA						Voltage Selected			Usage
						24V	17V	6V	
K	Lm	Lc	Y	M	C	Expected Voltage (V)			
TP22	TP32	TP40	TP48	TP56	TP64	24	17	6	Left-On Voltage
TP25	TP24	TP42	TP50	TP58	TP66	12	8.5	3	Left-Off Voltage
TP28	TP36	TP44	TP52	TP60	TP68	24	17	6	Right-On Voltage
TP30	TP38	TP46	TP54	TP62	TP70	12	8.5	3	Right-Off Voltage

If the VDD test fails, try the following:

- Replace the Carriage PCA ⇒ Page 8-96.

Front Panel

This option allows you to test the Display and keys of the Front Panel:

- 1** In the Elect submenu, scroll to "Front Panel" and press the **OK** key.

```
# FRONT PANEL
> KEYS
```

- 2** Select whether you want to test the "Display" or "Keys" and press the **OK** key.

```
# FRONT PANEL
* KEYS
```

- 3** If you select to test the "Display", the Front Panel will turn ON and Off the LED's in sequence, display the different character strings and activate the buzzer.

- 4** If you select to test the "Keys", you will need to confirm that you want to perform the test by pressing the **OK** key.

```
# FRONT PANEL
* KEYS OK?
```

- 5** When the following message is displayed on the Front Panel, press the different keys on the Front Panel to test if they are working correctly.

```
KEY TEST
off
```

- 6 If the key is pressed correctly, the Front Panel will display the name of the key that was pressed. Press the **OK** key to exit.



If the Front Panel test fails, try the following:


- Replace the Front Panel Assembly ⇒ Page 8-25.

VOLT (Voltage Check)

This menu can be used to turn the Voltage check to high or low.

- 1 To enter in to the Volt menu, enter in to the Maintenance Mode and press the **Shift** key twice and then the **▼** key.

Press the Down Arrow Key to select

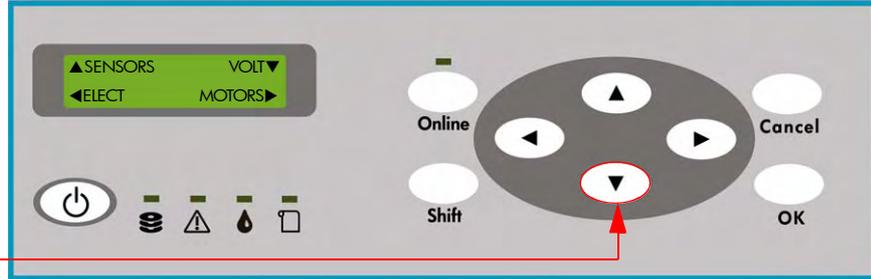

- 2 Once in the Voltage Check submenu, press the **OK** key.

```
# VOLTAGE CHECK
> HIGH
```

- 3 In the Voltage Check submenu, select either "High" or "Low" and then press the **OK** key.

```
# VOLTAGE CHECK
* LOW
```


MOTORS

This menu contains the necessary diagnostics that can be used to test the various Motors in the Printer. The different options available in this menu are as follows:

- Media Advance Motor ⇒ Page 4-72.
- Capping Station Motor ⇒ Page 4-73.
- Wiping Station Motor ⇒ Page 4-74.
- Solenoid (Left or Right) ⇒ Page 4-74.
- Vacuum Fans ⇒ Page 4-75.
- Exhaust Fans ⇒ Page 4-76.
- Printhead Cooling Fans ⇒ Page 4-76.
- MSR Motor ⇒ Page 4-77.
- TUR Motor ⇒ Page 4-77.
- Pump Motors ⇒ Page 4-78.

To enter in to the Motors menu, enter in to the Maintenance Mode and press the **Shift** key twice and then the **▶** key.

Press the Right
Arrow Key to select

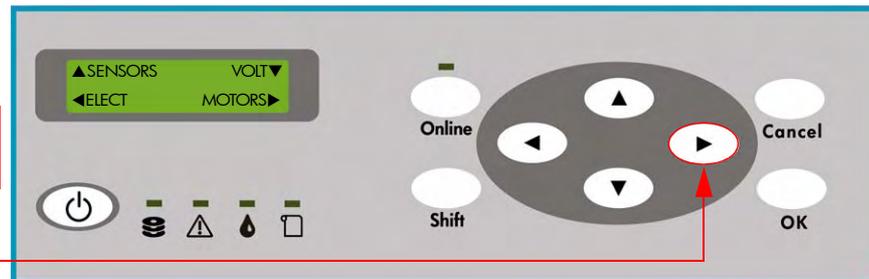

Media Advance Motor

Make sure you unload Media from the Printer before attempting to turn the Media Advance Motor.

This option allows you to turn the Media Advance Motor:

- 1 In the Motors submenu, scroll to "Media Adv Motor" and press the **OK** key.



- 2 In the Media Adv Motor submenu, select the direction that you would like the Media Advance Motor to turn and then press the **OK** key.



The different directions that you can turn the Media Advance Motor are as follows:

- Off - Stops the Motor turning.
- Forwards - Turns the Motor in the media feeding direction.
- Backwards - Turns the Motor in the reverse direction.

- 3** You will need to confirm that you want to turn the Media Advance Motor in the selected direction by pressing the **OK** key.

```
# MEDIA ADV MOTOR
* FORWARDS OK?
```

- 4** To stop the motor turning, select "Off" in the Media Adv Motor submenu and then press the **OK** key.

```
# MEDIA ADV MOTOR
* OFF
```

Capping Station Motor

This option allows you to control the Capping Station Motor:

- 1** In the Motors submenu, scroll to "Cap Stat Motor" and press the **OK** key.

```
# CAP STAT MOTOR
> STOP
```

- 2** In the Cap Stat Motor submenu, select the direction that you would like the Capping Station Motor to run and then press the **OK** key.

```
# CAP STAT MOTOR
* UNCAP
```

The different directions that you can run the Pump Motor are as follows:

- Stop - Stops the Motor running.
- Prime - Runs the Motor in the normal direction (causes priming).
- Uncap - Moves the Capping Station downwards and then turns the Motor in the reverse direction.

It is recommended to select "Uncap" first before trying to select "Prime". If the Printheads are capped when "Prime" is selected, it may cause damage to the Printheads.

- 3** You will need to confirm that you want to run the Capping Station Motor in the selected direction by pressing the **OK** key.

```
# CAP STAT MOTOR
* UNCAP OK?
```

- 4** To stop the Capping Station Motor turning, select "Stop" in the Camp Stat Motor submenu and then press the **OK** key.

```
# CAP STAT MOTOR
* STOP
```

Wiping Station Motor

This option allows you to control the Wiping Station Motor:

- 1 In the Motors submenu, scroll to "Wipe Stat Motor" and press the **OK** key.

```
# WIPE STAT MOTOR
> STOP
```

- 2 In the Wipe Stat Motor submenu, select the direction that you would like the Wiping Station Motor to run and then press the **OK** key.

```
# WIPE STAT MOTOR
* NORMAL
```

The different directions that you can run the Wiping Station Motor are as follows:

- Stop - Stops the Motor running.
 - Normal - Runs the Motor in the normal direction.
 - Reverse - Turns the Motor in the reverse direction.
- 3 You will need to confirm that you want to run the Wiping Station Motor in the selected direction by pressing the **OK** key.

```
# WIPE STAT MOTOR
* NORMAL OK?
```

- 4 To stop the Wiping Station Motor turning, select "Stop" in the Wipe Stat Motor submenu and then press the **OK** key.

```
# WIPE STAT MOTOR
* STOP
```

Solenoid (Left or Right)

This option allows you to control the Solenoid (left or right):

- 1 In the Motors submenu, scroll to "Solenoid L" or "Solenoid R" and press the **OK** key.

```
# SOLENOID L
> CLOSED
```

- 2 In the Solenoid submenu, select "Open" to start the selected Solenoid and then press the **OK** key.

```
# SOLENOID L
* OPEN
```

- 3 You will need to confirm that you want to start the selected Solenoid by pressing the **OK** key.

```
# SOLENOID L
* OPEN OK?
```

- 4 To stop the Pump Solenoid, select "Off" in the Pump Solenoid submenu and then press the **OK** key.

```
# SOLENOID L
* CLOSED
```

Vacuum Fans

This option allows you to control the five Vacuum Fans (left, left-center, center, right or right-center).

- 1 In the Motors submenu, scroll to "Vacuum Fan L", "Vacuum Fan L-C", "Vacuum Fan C" or "Vacuum Fan R-C" or "Vacuum Fan R" and press the **OK** key.

```
# VACUUM FAN L
> OFF
```

- 2 In the Vacuum Fan submenu, select "On" to start the selected Vacuum Fan and then press the **OK** key.

```
# VACUUM FAN L
* ON
```

- 3 You will need to confirm that you want to start the selected Vacuum Fan by pressing the **OK** key.

```
# VACUUM FAN L
* ON OK?
```

- 4 To stop the Vacuum Fan, select "Off" in the Vacuum Fan submenu and then press the **OK** key.

```
# VACUUM FAN L
* OFF
```

Exhaust Fans

This option allows you to control the Exhaust Fans:

- 1 In the Motors submenu, scroll to "Exhaust Fans" and press the **OK** key.

```
# EXHAUST FANS  
> OFF
```

- 2 In the Exhaust Fans submenu, select "On" to start the Exhaust Fans and then press the **OK** key.

```
# EXHAUST FANS  
* ON
```

- 3 You will need to confirm that you want to start the Exhaust Fans by pressing the **OK** key.

```
# EXHAUST FANS  
* ON OK?
```

- 4 To stop the Exhaust Fans, select "Off" in the Exhaust Fans submenu and then press the **OK** key.

```
# EXHAUST FANS  
* OFF
```

PH Cooling Fans

This option allows you to control the Printhead Cooling Fans:

- 1 In the Motors submenu, scroll to "PH Cooling Fan" and press the **OK** key.

```
# PH COOLING FAN  
> OFF
```

- 2 In the PH Cooling Fan submenu, select "On" to start the PH Cooling Fans and then press the **OK** key.

```
# PH COOLING FAN  
* ON
```

- 3 You will need to confirm that you want to start the PH Cooling Fans by pressing the **OK** key.

```
# PH COOLING FAN  
* ON OK?
```

- 4 To stop the Printhead Cooling Fans, select "Off" in the PH Cooling Fan submenu and then press the **OK** key.

```
# PH COOLING FAN
* OFF
```

MSR Motor

This option allows you to control the Media Supply Reel Motor:

- 1 In the Motors submenu, scroll to "MSR Motor" and press the **OK** key.

```
# MSR MOTOR
> OFF
```

- 2 In the MSR Motor submenu, select "On" to start the MSR Motor and then press the **OK** key.

```
# MSR MOTOR
* ON
```

- 3 You will need to confirm that you want to start the MSR Motor by pressing the **OK** key.

```
# MSR MOTOR
* ON OK?
```

- 4 To stop the MSR Motor, select "Off" in the MSR Motor submenu and then press the **OK** key.

```
# MSR MOTOR
* OFF
```

TUR Motor

This option allows you to control the Take-up-reel Motor:

- 1 In the Motors submenu, scroll to "TUR Motor" and press the **OK** key.

```
# TUR MOTOR
> OFF
```

- 2 In the TUR Motor submenu, select "On" to start the TUR Motor and then press the **OK** key.

```
# TUR MOTOR
* ON
```

- 3** You will need to confirm that you want to start the TUR Motor by pressing the **OK** key.

```
# TUR MOTOR
* ON OK?
```

- 4** To stop the TUR Motor, select "Off" in the TUR Motor submenu and then press the **OK** key.

```
# TUR MOTOR
* OFF
```

Pump Motors

This option allows you to control the Ink Pump Motors:

- 1** In the Motors submenu, scroll to "XX Pump Motor" and press the **OK** key.

```
# XX PUMP MOTOR
> STOP
```

The ink colors that correspond to each Ink Pump Motor are as follows:

- K Pump Motor - Black Ink Pump Motor.
- Lm Pump Motor - Light Magenta Ink Pump Motor.
- Lc Pump Motor - Light Cyan Ink Pump Motor.
- Y Pump Motor - Yellow Ink Pump Motor.
- M Pump Motor - Magenta Ink Pump Motor.
- C Pump Motor - Cyan Ink Pump Motor.

- 2** In the Pump Motor submenu, select the direction that you would like the selected Ink Pump Motor to run and then press the **OK** key.

```
# XX PUMP MOTOR
* NORMAL
```

The different directions that you can run the Ink Pump Motor are as follows:

- Stop - Stops the Motor running.
- Normal - Runs the Motor in the normal direction.
- Reverse - Turns the Motor in the reverse direction.

Make sure you have the Subtank Station visible before running the Ink Pump Motor in the "Normal" direction. This will prevent the Subtanks from overflowing and possibly exploding the Subtanks. It is also recommended NOT to run the Ink Pump Motor in the "Reverse" direction as this will cause ink in the Subtank to be pumped back into the Ink Cartridge, which could also explode if it is already full of ink.

- 3** You will need to confirm that you want to run the selected Ink Pump Motor in the selected direction by pressing the **OK** key.

XX PUMP MOTOR
* NORMAL OK?

- 4** To stop the Ink Pump Motor turning, select "Stop" in the Pump Motor submenu and then press the **OK** key.

XX PUMP MOTOR
* STOP


SYSTEM INF

This menu can be used to print various information pages. The different options available in this menu are as follows:

- System Print ⇒ Page 4-80.
- Error Log Print ⇒ Page 4-81.
- History Print ⇒ Page 4-81.

To enter in to the System Information menu, enter in to the Maintenance Mode and press the **Shift** key three times and then the **▲** key.

Press the Up Arrow
Key to select

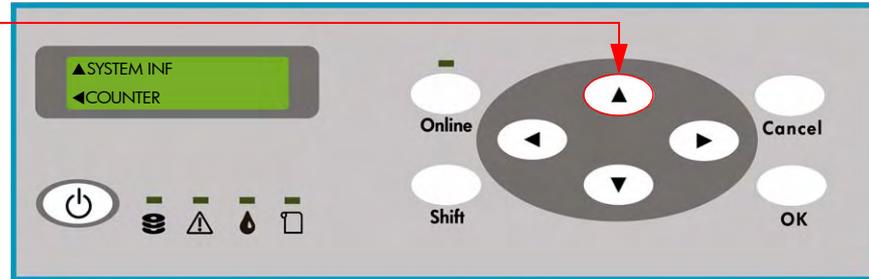

System Print

This option allows you to turn print information relating to the system, settings, mechanical parameters and ink:

- 1 In the System Inf submenu, scroll to "System Print" and press the **OK** key.

```
# SYSTEM PRINT
>
```

- 2 You will need to confirm that you want to print the System Print by pressing the **OK** key.

```
# SYSTEM PRINT
* OK?
```

- 3 While the System Print is being printed, the following message will be displayed on the Front Panel.

```
# SYSTEM PRINT
* EXECUTING
```

- 4 To cancel the print, press the **Cancel** key.

Error Log Print

This option allows you to turn print error log information stored in the Printer:

- 1 In the System Inf submenu, scroll to "Error Log Print" and press the **OK** key.



- 2 You will need to confirm that you want to print the Error Log Print by pressing the **OK** key.



- 3 While the Error Log Print is being printed, the following message will be displayed on the Front Panel.



- 4 To cancel the print, press the **Cancel** key.

History Print

This option allows you to turn print information relating to the ink system cleaning condition which is stored in the Printer:

- 1 In the System Inf submenu, scroll to "History Print" and press the **OK** key.



- 2 You will need to confirm that you want to print the History Print by pressing the **OK** key.



- 3 While the History Print is being printed, the following message will be displayed on the Front Panel.



- 4 To cancel the print, press the **Cancel** key.


COUNTER

This menu can be used to view and reset the different counters that are used to track the usage of various parts which need to be replaced as a preventive measure. Also, this menu can be used to check if Non-HP or Expired Ink is being used in the printer. The different options available in this menu are as follows:

- Media Used ⇒ Page 4-82.
- Prime Assembly ⇒ Page 4-83.
- Pump Tube ⇒ Page 4-84.
- Wiper Cleaning ⇒ Page 4-84.
- Wiper Belt ⇒ Page 4-85.
- Wiper Blade ⇒ Page 4-86.
- Capping Unit ⇒ Page 4-87.
- Scan-Axis belt ⇒ Page 4-87.
- Non-HP Ink Used ⇒ Page 4-88.
- Expired Ink Used ⇒ Page 4-89.

To enter in to the Counter menu, enter in to the Maintenance Mode and press the **Shift** key three times and then the ◀ key.

Press the Left Arrow
Key to select

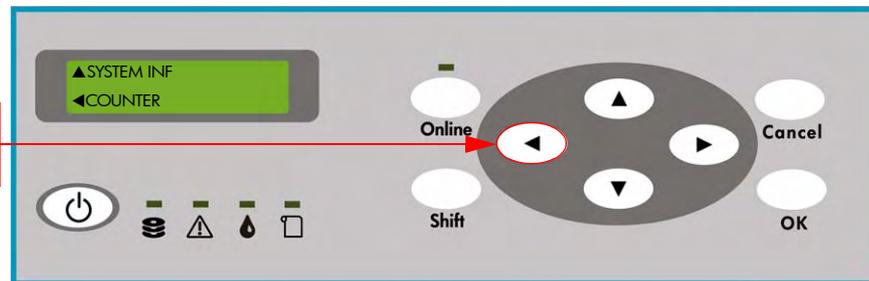


Media Used

This option allows you to view and change the amount of media used in the Printer:

- 1 In the Counter submenu, scroll to "Media Used" and press the **OK** key to view the media used since the last reset.



- 2 Use the ▲ and ▼ keys to change the digits and use the ◀ and ▶ keys to select the digits.

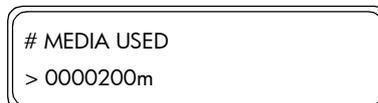

- 3 Press the **OK** key once you have entered the new usage length.

- If the Media Used counter needs to be reset, return to the Counter submenu, scroll to "Reset Media Used" and press the **OK** key.

```
# RESET MEDIA USED
>
```

- You will need to confirm that you want to reset the counter by pressing the **OK** key.

```
# RESET MEDIA USED
* OK?
```

Prime Assembly

This option allows you to view and change the usage counter related to the Prime Assemblies:

Once the counter has reached 200,000 seconds a message will appear advising you to replace the Prime Assemblies. After replacing the Prime Assemblies, make sure you reset the usage counter related to the Prime Assemblies.

- In the Counter submenu, scroll to "Prime Assy" and press the **OK** key to view the usage counter related to the Prime Assemblies.

```
# PRIME ASSY
> 000045000sec
```

- Use the ▲ and ▼ keys to change the digits and use the ◀ and ▶ keys to select the digits.

```
# PRIME ASSY
> 000053000sec
```

- Press the **OK** key once you have entered the new usage amount.
- If the Prime Assembly counter needs to be reset, return to the Counter submenu, scroll to "Reset Prime Assy" and press the **OK** key.

```
# RESET PRIME ASSY
>
```

- You will need to confirm that you want to reset the counter by pressing the **OK** key.

```
# RESET PRIME ASSY
* OK?
```

Pump Tube

This option allows you to view and change the usage counter related to the different Pump Tubes:

Once the counter has reached 250,000 seconds a message will appear advising you to replace the relevant Pump Tube. After replacing the relevant Pump Tube, make sure you reset the usage counter related to that Pump Tube.

- 1 In the Counter submenu, scroll to "YY Pump Tube" and press the **OK** key to view the usage counter related to the Pump Tube (YY relates to the ink color).

```
# YY PUMP TUBE
> 000125000sec
```

- 2 Use the ▲ and ▼ keys to change the digits and use the ◀ and ▶ keys to select the digits.

```
# YY PUMP TUBE
> 000153000sec
```

- 3 Press the **OK** key once you have entered the new usage amount.
- 4 If the Pump Tube counter needs to be reset, return to the Counter submenu, scroll to "Reset YY Pump" and press the **OK** key.

```
# RESET YY PUMP
>
```

- 5 You will need to confirm that you want to reset the counter by pressing the **OK** key.

```
# RESET YY PUMP
* OK?
```

Wiper Cleaning

This option allows you to view and change the date of when the Wiper Cleaning Assembly was last replaced:

Once 1 year has passed since the last replacement, a message will appear advising you to replace the Wiper Cleaning Assembly. After replacing the Wiper Cleaning Assembly, make sure you reset the date related to the Wiper Cleaning Assembly.

- 1 In the Counter submenu, scroll to "Wiper Cleaning" and press the **OK** key to view the date of when the Wiper Cleaning Assembly was last replaced.

```
# WIPER CLEANING
> 05/05/08
```

- Use the ▲ and ▼ keys to change the digits and use the ◀ and ▶ keys to select the digits.

```
# WIPER CLEANING
> 05/06/06
```

Format: Year/Month/Day

- Press the **OK** key once you have entered the new date.
- If the Wiper Cleaning date needs to be reset (to today's date), return to the Counter submenu, scroll to "Reset Wipe Clean" and press the **OK** key.

```
# RESET WIPE CLEAN
>
```

- You will need to confirm that you want to reset the date by pressing the **OK** key.

```
# RESET WIPE CLEAN
* OK?
```

Wiper Belt

This option allows you to view and change the date of when the Wiper Belt was last replaced:

Once 1 year has passed since the last replacement, a message will appear advising you to replace the Wiper Belt. After replacing the Wiper Belt, make sure you reset the date related to the Wiper Belt.

- In the Counter submenu, scroll to "Wiper Belt" and press the **OK** key to view the date of when the Wiper Belt was last replaced.

```
# WIPER BELT
> 05/09/09
```

- Use the ▲ and ▼ keys to change the digits and use the ◀ and ▶ keys to select the digits.

```
# WIPER BELT
> 06/05/03
```

Format: Year/Month/Day

- Press the **OK** key once you have entered the new date.
- If the Wiper Belt date needs to be reset (to today's date), return to the Counter submenu, scroll to "Reset Wiper Belt" and press the **OK** key.

```
# RESET WIPER BELT
>
```

- 5 You will need to confirm that you want to reset the date by pressing the **OK** key.

```
# RESET WIPER BELT
* OK?
```

Wiper Blade

This option allows you to view and change the usage counter related to the Wiper Blade:

Once the counter has reached 30,000 (wipes) a message will appear advising you to replace the Wiper Blade. After replacing the Wiper Blade, make sure you reset the usage counter related to the Wiper Blade.

- 1 In the Counter submenu, scroll to "Wiper Blade" and press the **OK** key to view the usage counter related to the Wiper Blade.

```
# WIPER BLADE
> 0017800
```

- 2 Use the ▲ and ▼ keys to change the digits and use the ◀ and ▶ keys to select the digits.

```
# WIPER BLADE
> 0013400
```

- 3 Press the **OK** key once you have entered the new usage amount.
- 4 If the Wiper Blade counter needs to be reset, return to the Counter submenu, scroll to "Reset Wipe Blade" and press the **OK** key.

```
# RESET WIPE BLADE
>
```

- 5 You will need to confirm that you want to reset the counter by pressing the **OK** key.

```
# RESET WIPE BLADE
* OK?
```

Capping Unit

This option allows you to view and change the usage counter related to the Capping Units:

Once the counter has reached 10,000 (up/down count) a message will appear advising you to replace the Capping Units. After replacing the Capping Units, make sure you reset the usage counter related to the Capping Units.

- 1 In the Counter submenu, scroll to "Capping Unit" and press the **OK** key to view the usage counter related to the Capping Units.

CAPPING UNIT
> 0057800

- 2 Use the ▲ and ▼ keys to change the digits and use the ◀ and ▶ keys to select the digits.

CAPPING UNIT
> 0045400

- 3 Press the **OK** key once you have entered the new usage amount.
- 4 If the Capping Unit counter needs to be reset, return to the Counter submenu, scroll to "Reset Cap Unit" and press the **OK** key.

RESET CAP UNIT
>

- 5 You will need to confirm that you want to reset the counter by pressing the **OK** key.

RESET CAP UNIT
* OK?

Scan-Axis Belt

This option allows you to view and change the usage counter related to the Scan-Axis Belt:

Once the counter has reached 1,100,000 (scans) a message will appear advising you to replace the Scan-Axis Belt. After replacing the Scan-Axis Belt, make sure you reset the usage counter related to the Scan-Axis Belt.

- 1 In the Counter submenu, scroll to "Scan Axis Belt" and press the **OK** key to view the usage counter related to the Scan-Axis Belt.

SCAN AXIS BELT
> 0057800

- 2 Use the ▲ and ▼ keys to change the digits and use the ◀ and ▶ keys to select the digits.

```
# SCAN AXIS BELT
> 0045400
```

- 3 Press the **OK** key once you have entered the new usage amount.
- 4 If the Scan-Axis Belt counter needs to be reset, return to the Counter submenu, scroll to "Reset Scan Belt" and press the **OK** key.

```
# RESET SCAN BELT
>
```

- 5 You will need to confirm that you want to reset the counter by pressing the **OK** key.

```
# RESET SCAN BELT
* OK?
```

Non-HP Ink Used

This option allows you to view whether Non-HP Ink has been used in the Printer:

- 1 In the Counter submenu, scroll to "Non-HP Ink Used" and press the **OK** key to view whether Non-HP ink has been used in the Printer.

```
# NON-HP INK USED
# XX > YES
```

XX: Ink Color

- 2 If Non-HP ink has been used in some or all of the colors, then you can check which date the Non-HP ink was used. Return to the Counter submenu, scroll to "Non-HP Ink Date" and press the **OK** key.

```
# NON-HP INK DATE
# XX > 06/12/22
```

Format: Year/Month/Day

Expired Ink Used

This option allows you to view whether expired ink has been used in the Printer:

- 1 In the Counter submenu, scroll to "Expire Ink Used" and press the **OK** key to view whether expired ink has been used in the Printer.

EXPIRE INK USED
XX > YES

XX: Ink Color

- 2 If expired ink has been used in some or all of the colors, then you can check which date the expired ink was used. Return to the Counter submenu, scroll to "Expire Ink Date" and press the **OK** key.


EXPIRE INK DATE
XX > 06/12/22

Format: Year/Month/Day

Heater Panel Maintenance Mode


Entering Heater Panel Maintenance Mode

Press the following keys on the Heater Panel in the order shown in the drawing:

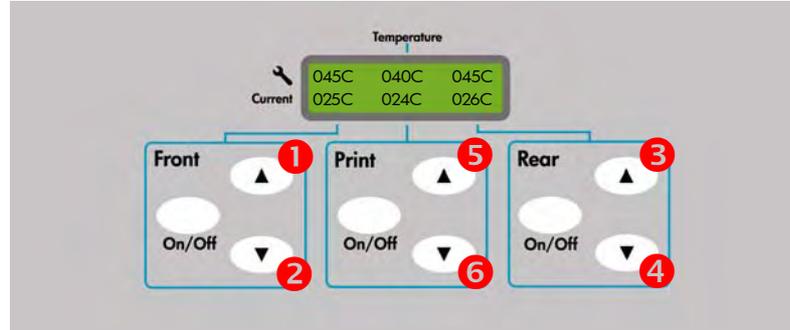

Basic Menu Operation

To operate the Heater Panel Maintenance Menu, only the "Front" keys are used.

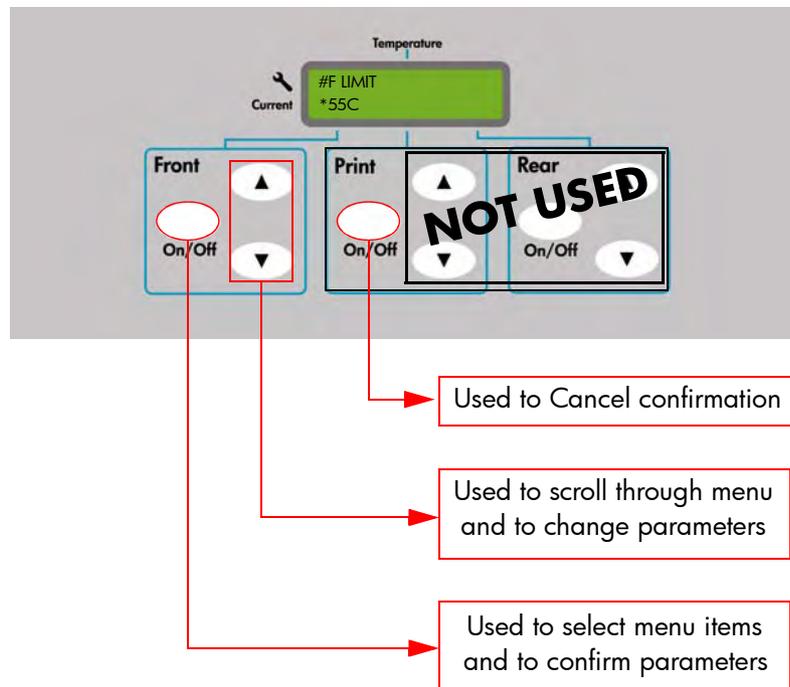

Heater Panel Maintenance Menu

The different menu options that can be selected in the Heater Panel Maintenance Mode are as follows:

Menu Item	Description	Setting Options
F LIMIT	Front Heater maximum temperature limit preset by User.	15 to 60°C
R LIMIT	Rear Heater maximum temperature limit preset by User.	15 to 60°C
P LIMIT	Print Heater maximum temperature limit preset by User.	15 to 60°C
STANDBY TEMP	Preset temperature for standby state	15 to 40°C
HEATER TEST	Turn the Heaters ON/OFF	On or OFF
RESET PARAM	Return all parameters to the factory default settings	Yes or No
EXIT	Exit from the Maintenance Mode	Yes or No

Adjustments and Calibrations

5

Adjustments and Calibrations 5-2

Adjustments 5-3

Belt Tension Adjustment 5-3

Carriage Height Adjustment 5-5

Scan-Axis Belt Tension Adjustment 5-12

Paper-Axis Belt Tension Adjustment 5-14

Timing Belt (for Feed/TUR Unit) Tension Adjustment 5-16

Wiping Station Height Adjustment 5-18

Wiper Belt Tension Adjustment 5-21

Wiper Blade Height Adjustment 5-22

Capping Station Height Adjustment 5-25

Printhead Capping Limit Adjustment 5-27

Carriage Shield Height Adjustment 5-28

Media Feed and Take-Up-Reel Unit Adjustment 5-29

Media End Sensor Adjustment 5-32

Media Slack Sensor Adjustment 5-35

Take-Up-Reel Sensors Adjustment 5-38

Platen Flatness Measurement and Adjustment 5-44

Calibrations 5-55

Wiping Position Calibration 5-55

Capping Position Calibration 5-57

Line Sensor Calibration (Side Margin) 5-59

Line Sensor Calibration (Top Margin) 5-60

Adjustments and Calibrations

The Printer requires certain adjustments and calibration procedures that must be performed under certain conditions.

REMEMBER THAT CERTAIN ADJUSTMENTS AND CALIBRATIONS ARE REQUIRED EVEN IF AN ASSEMBLY HAS BEEN DISASSEMBLED TO GAIN ACCESS TO ANOTHER ASSEMBLY OR COMPONENT.

Adjustments refer to procedures that require physical mechanical fine tuning of the different components in the Printer.

Calibrations refer to procedures that require entering values through the Front Panel in order to fine tune the components in the Printer.

All adjustment procedures that need to be done after replacing a Printhead are contained in Chapter 3.

Adjustments

- 1 Belt Tension Adjustment ⇒ Page 5-3.
- 2 Carriage Height Adjustment ⇒ Page 5-5.
- 3 Scan-Axis Belt Tension Adjustment ⇒ Page 5-12.
- 4 Paper-Axis Belt Tension Adjustment ⇒ Page 5-14.
- 5 Timing Belt (for Feed/TUR Unit) Tension Adjustment ⇒ Page 5-16.
- 6 Wiping Station Height Adjustment ⇒ Page 5-18.
- 7 Wiper Belt Tension Adjustment ⇒ Page 5-21.
- 8 Wiper Blade Height Adjustment ⇒ Page 5-22.
- 9 Capping Station Height Adjustment ⇒ Page 5-25.
- 10 Printhead Capping Limit Adjustment ⇒ Page 5-27.
- 11 Carriage Shield Height Adjustment ⇒ Page 5-28.
- 12 Media Feed and Take-Up-Reel Unit Adjustment ⇒ Page 5-29.
- 13 Media End Sensor Adjustment ⇒ Page 5-32.
- 14 Media Slack Sensor Adjustment ⇒ Page 5-35.
- 15 Take-Up-Reel Sensor Adjustment ⇒ Page 5-38.
- 16 Platen Flatness Measurement and Adjustment ⇒ Page 5-44.

Calibrations

- 1 Wiping Position Calibration ⇒ Page 5-55.
- 2 Capping Position Calibration ⇒ Page 5-57.
- 3 Side Margin Position Calibration ⇒ Page 5-59.
- 4 Top Margin Position Calibration ⇒ Page 5-60.

Belt Tension Adjustment

This adjustment must be performed whenever:

- Carriage Assembly is disassembled or replaced.
- Carriage Belt is disassembled or replaced.

Be very careful when handling the Carriage Belt because you could easily cut yourself.

Perform the Belt Tension Adjustment as follows:

- 1 Make sure that the Carriage Belt is correctly installed.

Make sure that the Carriage is Uncapped before performing the following steps. Trying to move the Carriage out of the Capping Station while it is still capped will cause damage to the Printheads.

- 2 Move the Carriage to the Wiping Station and Capping Station several times to make sure that the Carriage Belt does not move vertically on the Tension Pulley. If necessary, adjust the slant of the Tension Pulley by tightening or loosening the screws.




Make sure the Belt stays in the center of the Tension Pulley

- 3 Move the Carriage to the Capping Station.




- 4 Using the Push/Pull Gauge, measure the tension in the middle of the Carriage Belt. The tension measured should be between **3.2 N \pm 0.3 N** (between **0.300 and 0.330 kgf**).

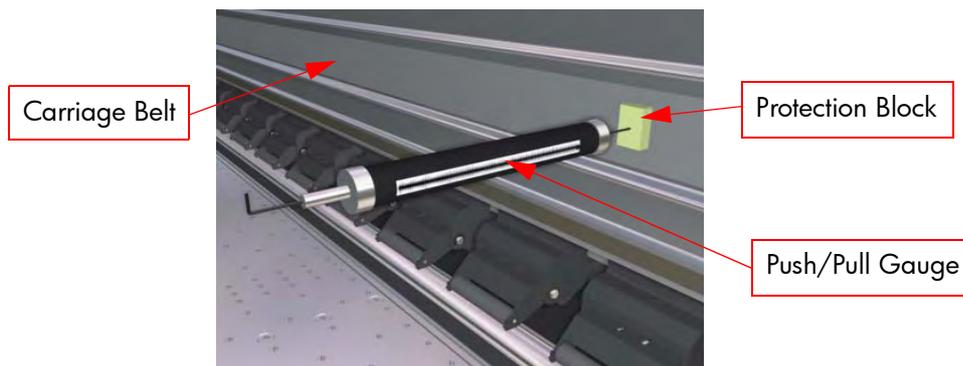

In order not to damage the Carriage Belt, please use a protection block between the Push/Pull Gauge and the belt.

- 5 If the tension is below 2.9 N (0.300 kgf), then you must tighten the Tension Pulley screws. If the tension is above 3.5 N (0.330 kgf), then you must loosen the Tension Pulley screws.

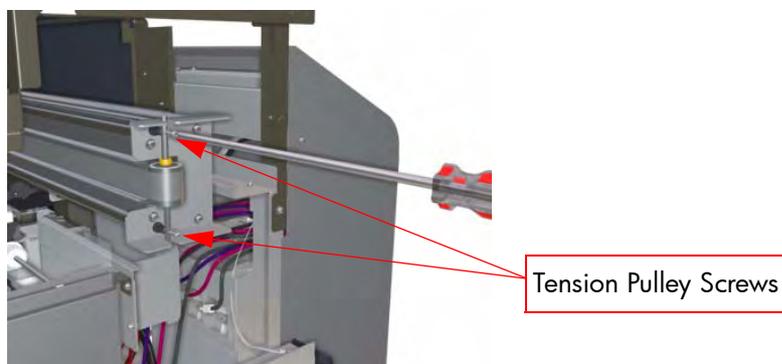

Carriage Height Adjustment

This adjustment must be performed whenever:

- Carriage Assembly is disassembled or replaced.
- Center Platen is disassembled or replaced.

For this adjustment, you will need the Carriage Height Adjustment Tools.



You must first check the Carriage height, and only if it is out of the accepted limits, you must adjust the Carriage height.

Before you check the Carriage Height, you must do the following:

- Make sure that the Media Load Lever is in the lower position and that the Media Pressure Lever is set in the "Normal" position.
- Enter the Heater Panel Maintenance Mode and activate the Heater Test ⇒ Page 4-90. Set the temperature of the Heaters at 45°C (Front), 40°C (Center) and 45°C (Rear).


Make sure you wait at least 30 minutes so that the temperature of the Heaters become stable. While waiting make sure Carriage is capped so that the Printheads do not dry out.

Check the Carriage Height


Check the Carriage height as follows:

Make sure that the Carriage is Uncapped before performing the following steps. Trying to move the Carriage out of the Capping Station while it is still capped will cause damage to the Printheads.


- 1 Move the Carriage Assembly to the middle of the Center Platen, so that it is positioned between the 6th and 7th screw position on the center Platen.

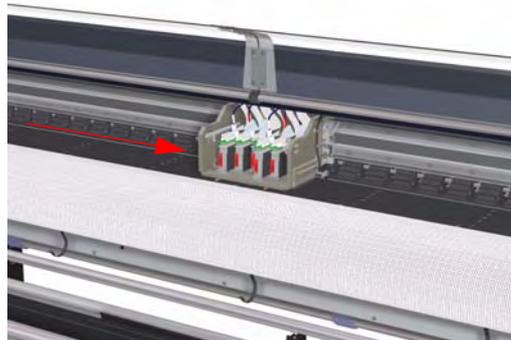


- 2 Remove the Carriage Shields from both sides of the Carriage Assembly.

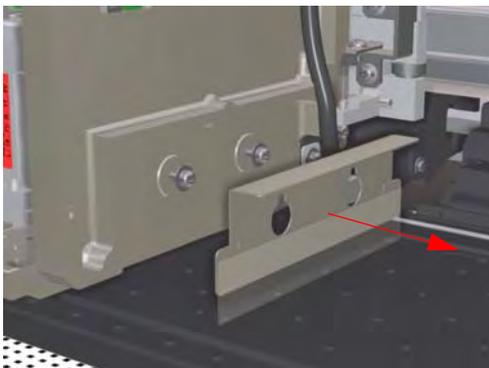


- 3 Make sure that the Printhead Height Lever is in the **upper** position (so that the Printhead height is actually in the **lower** position). Make sure you loosen the two Printhead Height Adjustment screws before trying to change the position of the Printhead Height Lever.

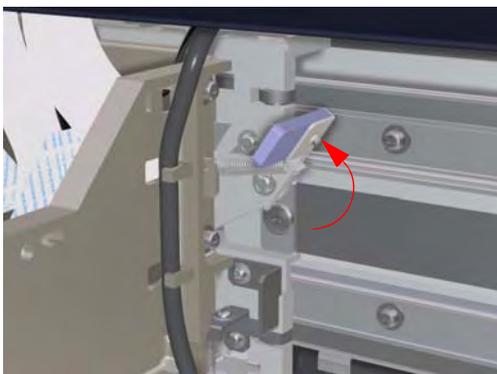

- 4 Identify the four positions that will be used to measure the Carriage height (the image below shows the Carriage viewed from underneath).

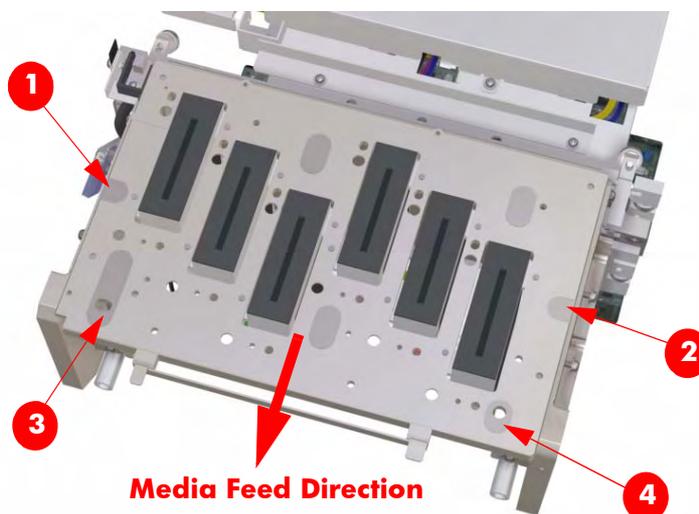

- 5** Before starting to measure the Carriage height, you should become familiar with the Carriage Height Adjustment Tools.

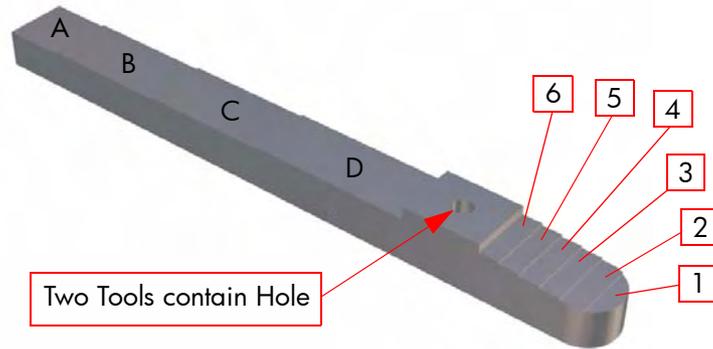


- Steps 1 thru 6 of the Tool will be used to measure the Carriage Height at positions 1 and 2.
- Steps A thru D of the Tool will be used to measure the Carriage Height at positions 3 and 4.


There are two types of Carriage Height Adjustment Tools, one with a hole and the other without a hole. As the height measured may differ at positions 3 and 4, use a corresponding step of the Tool depending on the position that you would like to measure. The thickness of each step is shown below:

	A	B	C	D	1	2	3	4	5	6
w/o Hole	5.9	6.0	6.1	6.2	6.4	6.5	6.6	6.7	6.8	6.9
with Hole	6.2	6.3	6.4	6.5	6.4	6.5	6.6	6.7	6.8	6.9


- 6** Insert the Carriage Height Adjustment Tool under the Carriage at positions 3 and 4 as shown below.

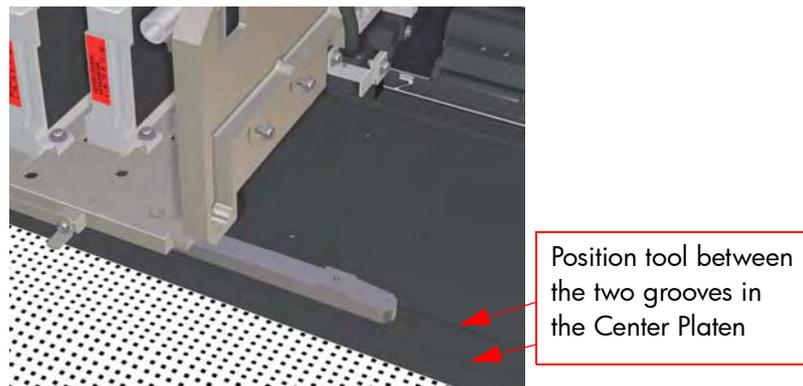

- 7** Make a mark on the side of the Tool to indicate where the Tool stops going under the Carriage. From this mark, measure 23.8 mm to locate the step that indicates the Carriage Height at that position. Make a note of this step.

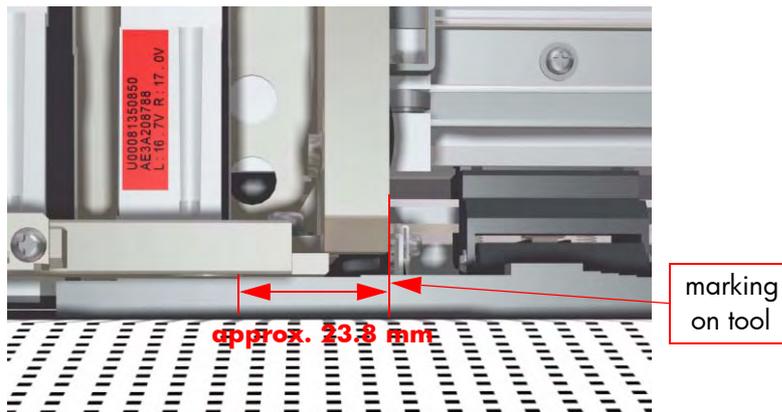

- 8** Insert the Carriage Height Adjustment Tool under the Carriage at positions 1 and 2 as shown below. As a guide, use the 3rd screw on the Center Platen to find the correct position.

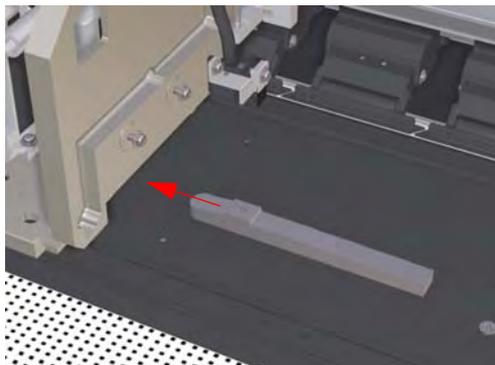

- 9** Once the Tool stops going in, make sure that it has reached the correct measuring point by moving it in the directions shown until it hits the right and left walls. Once in the correct position, check the Carriage height.



- 10** The Carriage Height is judged correct when the readings at the different positions are within the following range:
- Positions 1 and 2 = between 6.4 and 6.8 mm.
 - Positions 3 and 4 = between 6.0 and 6.4 mm.

Adjust the Carriage Height


Before you adjust the Carriage Height, you must do the following:

- Make sure that the Media Load Lever is in the lower position and that the Media Pressure Lever is set in the "Normal" position.
- Enter the Heater Panel Maintenance Mode and activate the Heater Test ⇒ Page 4-90. Set the temperature of the Heaters at 45°C (Front), 40°C (Center) and 45°C (Rear).


Make sure you wait at least 30 minutes so that the temperature of the Heaters become stable. While waiting make sure Carriage is capped so that the Printheads do not dry out.

Adjust the Carriage Height as follows:

- 1 Make sure that the following parts have been removed:
 - Upper Side Cover (Right).
 - Top Side Cover (Right).
 - Capping Door.
 - Cooling Fan Assembly.
- 1 Move the Carriage Assembly to the middle of the Center Platen, so that it is positioned between the 6th and 7th screw position on the center Platen.

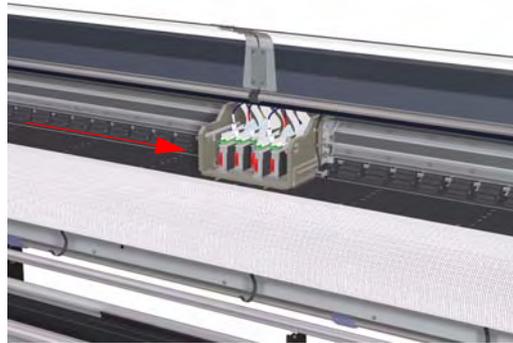

- 2 Insert the Carriage Height Adjustment Tool (with hole) under the Carriage at positions 3 and 4 as shown below.

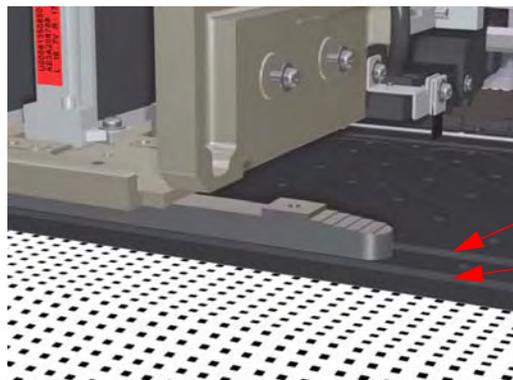

Position tool between the two grooves in the Center Platen

- 3 Insert the Carriage Height Adjustment Tool (without hole) under the Carriage at positions 1 and 2 as shown below.




- 4 Loosen the three screws that secure the Carriage base to the main Carriage Assembly and raise the Carriage Assembly.




To loosen the three screws, you will need a 3mm Allen Key that is at least 20 cm long.

- 5 Lower the Carriage onto the Carriage Height Tools inserted in the previous steps.

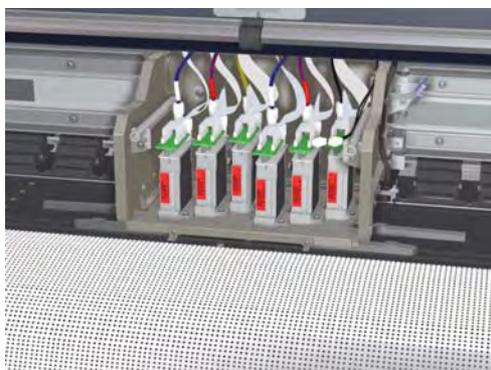

- 6** Lift the Carriage slightly and reposition the Carriage Height Tools. The front Tools should be positioned so that the Carriage is sitting on top of step C of the tool. The rear Tools should be positioned so that the Carriage is sitting on top of step 3 of the tool.

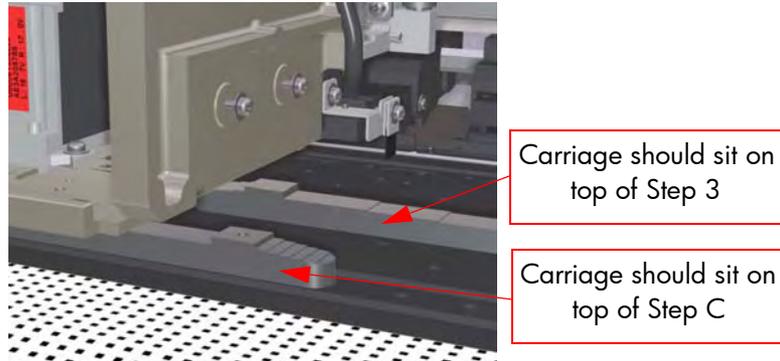

- 7** With the Carriage Height Tools still in position, tighten the three screws that secure the Carriage base to the main Carriage Assembly. Tighten the left screw first, then the right screw and then the middle screw.



Before tightening the screws, make sure you place some weight (using your finger) on the front of the Carriage. If this is NOT done, the Carriage will be incorrectly adjusted and could cause some serious Print Quality issues.

- 8** Remove the Carriage Height Tools from the Carriage base.
- 9** Insert the Carriage Height Tools again to check that readings at the different positions are within the following range:
- Positions 1 and 2 = between 6.4 and 6.8 mm.
 - Positions 3 and 4 = between 6.0 and 6.4 mm.

If the error exceeds this range, you will need to adjust the Carriage height again.

Scan-Axis Belt Tension Adjustment

This adjustment must be performed whenever:


- Scan-Axis Motor is disassembled or replaced.
- Scan-Axis Belt is disassembled or replaced.

Perform the Scan-Axis Belt Tension Adjustment as follows:

- 1 Make sure that the Scan-Axis Motor and Belt are correctly installed.



- 2 Loosen three screws that secure the Scan-Axis Motor Bracket to the Printer.

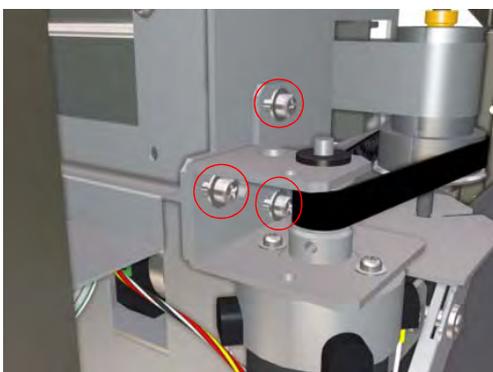

- 3 Hook the Push/Pull Gauge onto the Scan-Axis Motor Bracket and tension the Scan-Axis Belt to a force of $41.0 \text{ N} \pm 2.0 \text{ N}$ ($4.18 \text{ kgf} \pm 0.2 \text{ kgf}$).



Hook the Push/Pull Gauge onto this hole

- 4 While tensioning the Scan-Axis Belt, tighten the three screws that you loosened in step 2.



Paper-Axis Belt Tension Adjustment


This adjustment must be performed whenever:

- Paper-Axis Motor is disassembled or replaced.
- Paper-Axis Belt is disassembled or replaced.


In order to adjust the Paper-Axis Belt, you will need to first remove the Scan-Axis Motor.

Perform the Paper-Axis Belt Tension Adjustment as follows:


- 1 Make sure that the Paper-Axis Motor and Belt are correctly installed.

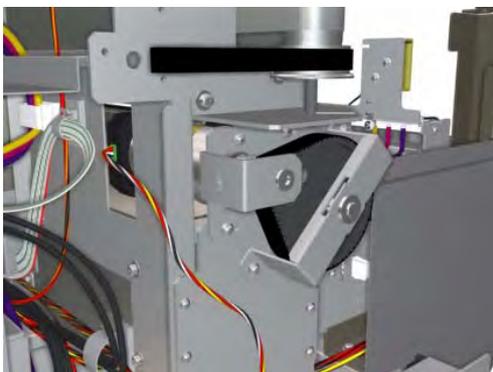

- 2 Loosen three screws that secure the Paper-Axis Motor Bracket to the Printer.

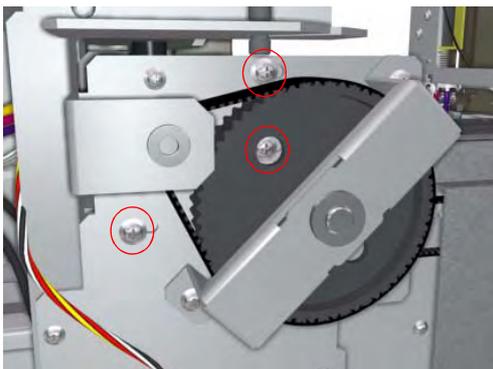


- 3 Hook the Push/Pull Gauge onto the Paper-Axis Motor Bracket and tension the Paper-Axis Belt to a force of $49.0\text{ N} \pm 2.0\text{ N}$ ($5.0\text{ kgf} \pm 0.2\text{ kgf}$).

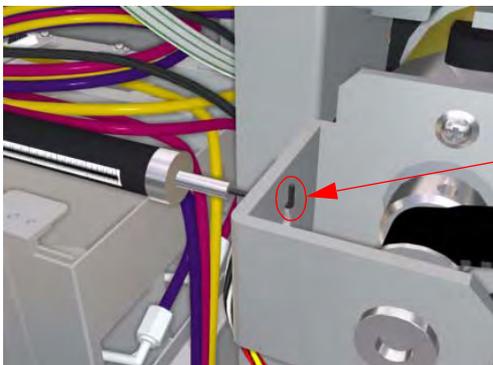

Hook the Push/Pull Gauge onto this hole

- 4 While tensioning the Paper-Axis Belt, tighten the three screws that you loosened in step 2.

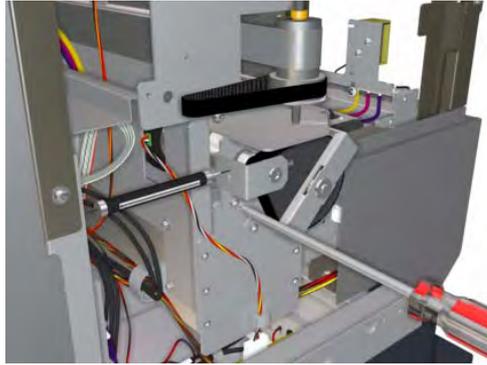

Timing Belt (for Feed/TUR Unit) Tension Adjustment

This adjustment must be performed whenever:


- Timing Belt (for Feed/TUR Unit) is disassembled or replaced.

Perform the Timing Belt (for Feed/TUR Unit) Tension Adjustment as follows:


- 1 Make sure that the Timing Belts (for Feed/TUR Unit) are correctly installed.




- 2 Loosen four screws that secure the Drive Unit Motor Bracket to the Printer.

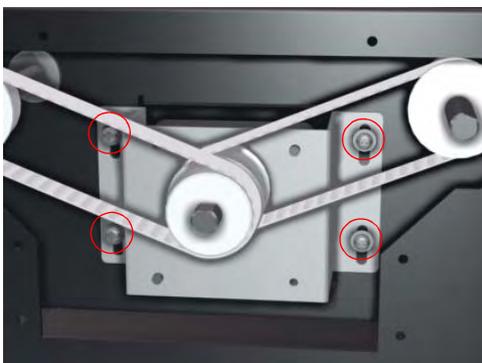

- 3 Re-install the three Bearings onto the shafts and re-install the Top Drive Motor Cover (and secure with four screws).
- 4 Position a screwdriver on top of the Drive Unit Motor (by passing it through a hole) and then Push the Push/Pull Gauge onto the Screwdriver and tension the Timing Belts to a force of 19.6 to 24.5 N (2.0 kgf to 2.5 kgf).

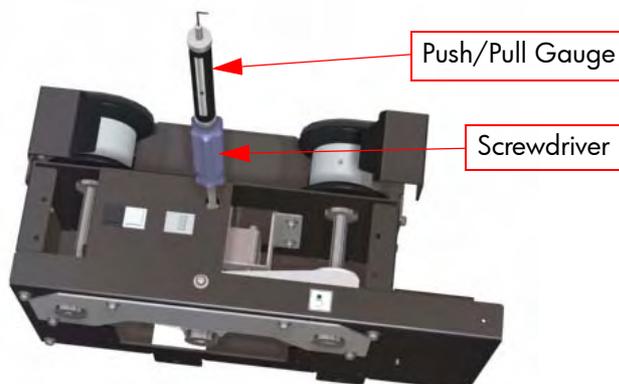

- 5** While tensioning the Timing Belts, tighten the bottom two screws in order to secure the Drive Unit Motor.

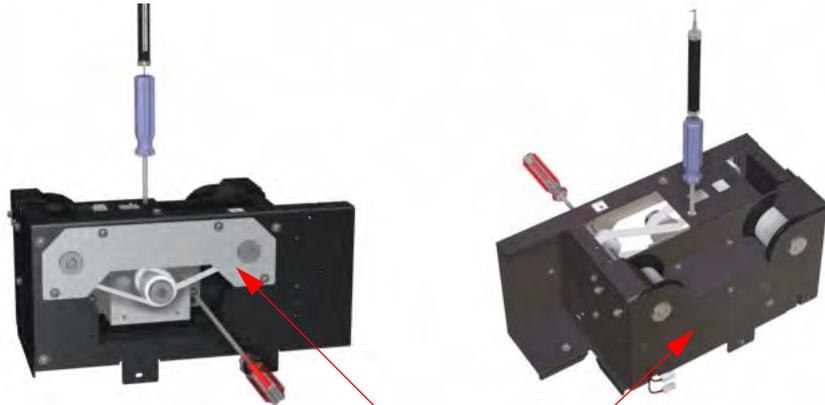

Make sure that these covers are installed before tensioning the Timing Belts

- 6** Remove the Top Drive Motor Cover and tighten the top two screws that secure the Drive Unit Motor.



- 7** Re-install all the covers.


Wiping Station Height Adjustment

This adjustment must be performed whenever:


- Wiping Station is disassembled or replaced.

Perform the Wiping Station Height Adjustment as follows:

- 1 Make sure that the Wiping Station is correctly installed.
- 2 Remove the Carriage Shields from both sides of the Carriage Assembly.

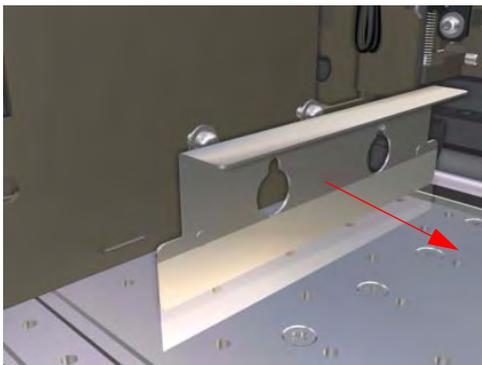

- 3 Make sure that the Printhead Height Lever is in the **upper** position (so that Printhead height is actually in the **lower** position). Make sure you loosen the two Printhead Height Adjustment screws before trying to change the position of the Printhead Height Lever.

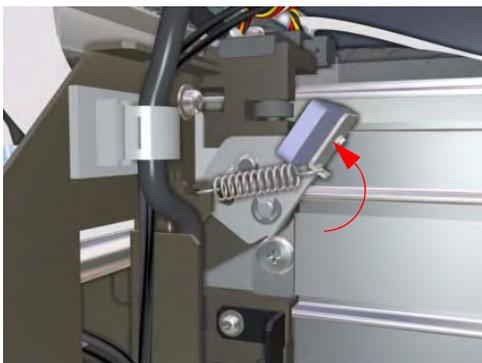


- 4 Loosen two screws that secure the Wiping Station on the right hand side.




- 5** Remove the Black Cover that is stuck over the hole in the Wiping Station.



- 6** Loosen three screws that secure the Wiping Station on the left hand side.

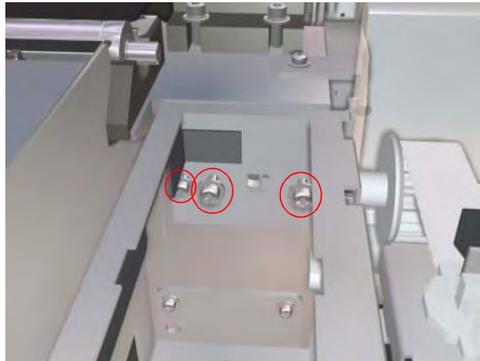

- 7** Adjust the Wiping Station so that it is level with the aluminum frame piece on the left rear of the Wiping Station. Make sure that the Wiping Station is as level as possible before tightening the screws in the next step.

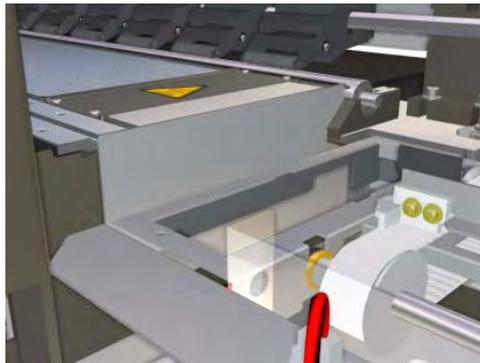


- 8 Tighten the five screws that you loosened in the previous steps and insert the black cover removed in step 5.



Make sure that the Carriage is Uncapped before performing the following step. Trying to move the Carriage out of the Capping Station while it is still capped will cause damage to the Printheads.

- 9 Gently move the Carriage to the Wiping Station, making sure that the Carriage does not hit the Wiping Station. There should be a slight gap between the Carriage and the Wiping Station.

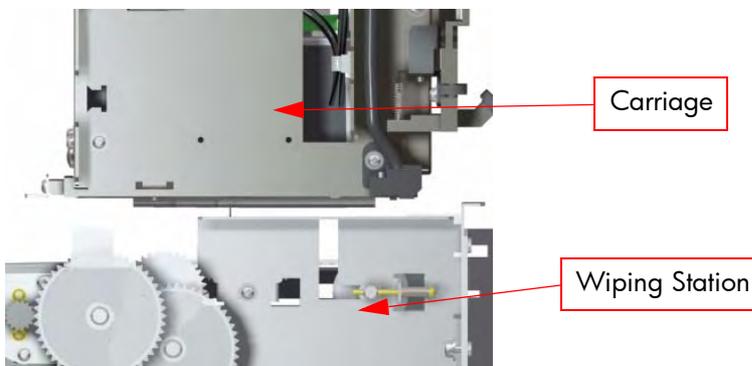

Wiper Belt Tension Adjustment

This adjustment must be performed whenever:


- Wiper Blade is disassembled or replaced.
- Wiper Belts are disassembled or replaced.

Perform the Wiper Belt Height Adjustment as follows:

- 1 Make sure that the Wiper Belts are correctly installed.



- 2 Tighten or loosen the Tension screw on both sides of the Wiping Station (for each Wiper Belt) until the remaining length of the screw is 13 mm.

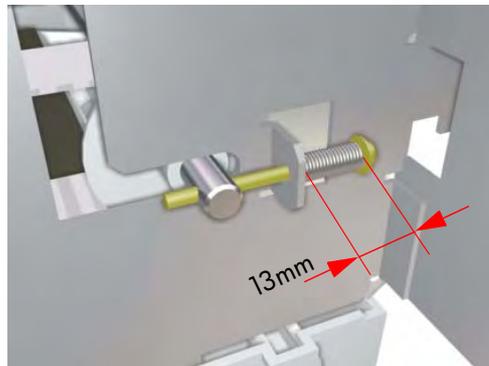

Wiper Blade Height Adjustment

This adjustment must be performed whenever:


- Wiping Station is disassembled or replaced.
- Wiper Blade is disassembled or replaced.
- Wiper Belts are disassembled or replaced.

Perform the Wiper Blade Height Adjustment as follows:


- 1 Make sure that the Wiping Station and the Wiper Belts are correctly installed and adjusted.
- 2 Make sure that the Wiper Blade is correctly installed.




- 3 Remove the Carriage Shields from both sides of the Carriage Assembly.

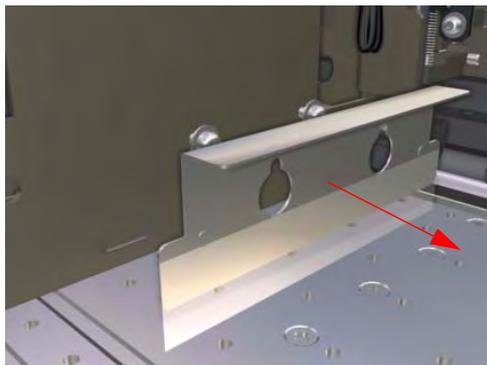

- 4 Make sure that the Printhead Height Lever is in the **upper** position (so that Printhead height is actually in the **lower** position). Make sure you loosen the two Printhead Height Adjustment screws before trying to change the position of the Printhead Height Lever.

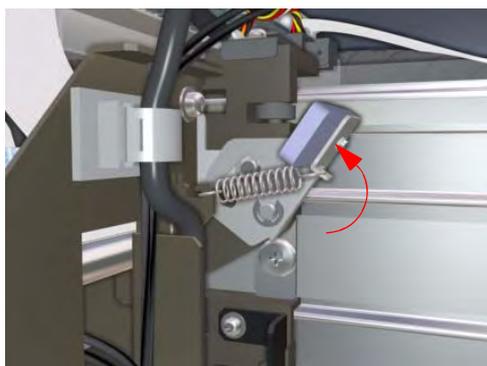


- 5 Loosen four screws that secure the Wiper Blade to the Wiper Belts.

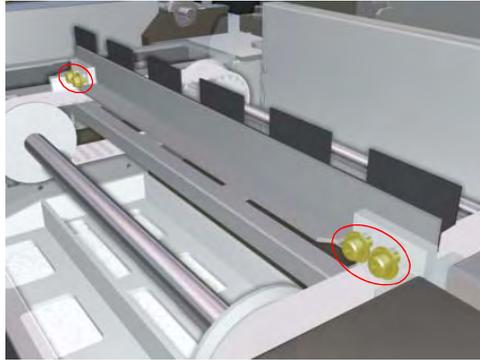

Make sure that the Carriage is Uncapped before performing the following step. Trying to move the Carriage out of the Capping Station while it is still capped will cause damage to the Printheads.


- 6 Move the Carriage to the Wiping Station and position the top edge of the Wiper Blade at least 0.5 mm above the top edge of the Printhead Nozzle Plate (black part).

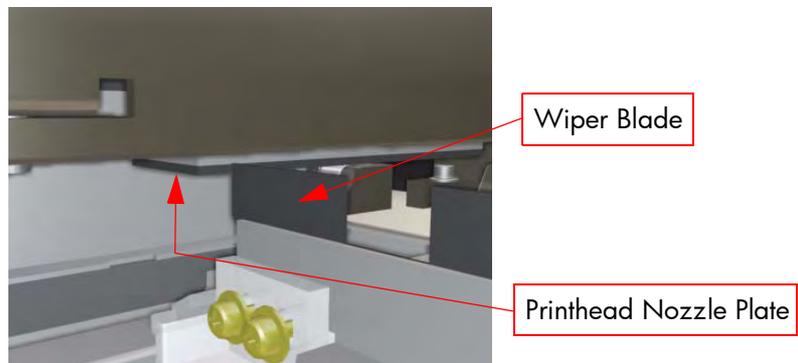


- 7 While holding the Wiper Blade in position, tighten the two screws that you loosened in a previous step.



- 8 Manually rotate the Wiper Blade using the Wiping Station Gear and check that the Wiper Blade touches the Printheads evenly.

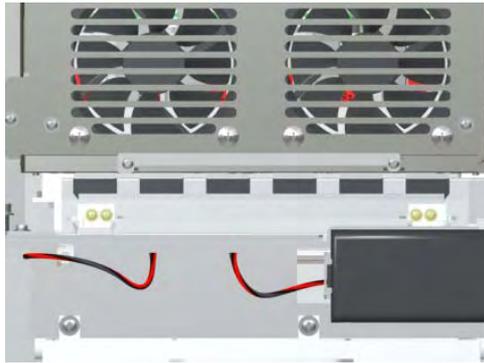

- 9 Also check that the Wiper Blade is level and not slanted.

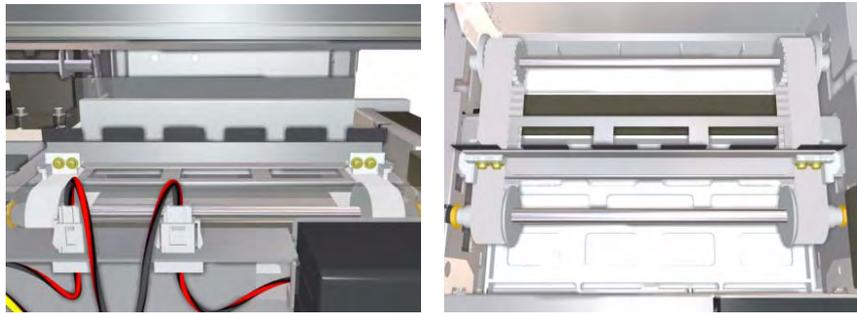

Capping Station Height Adjustment


This adjustment must be performed whenever:

- Capping Station is disassembled or replaced.


For this adjustment, you will need the Capping Height Tools.

Perform the Capping Station Height Adjustment as follows:


- 1 Make sure that the Capping Station is correctly installed and that the Carriage is moved to the Capping Station.
- 2 Make sure that the Printhead Height Lever is in the **upper** position (so that Printhead height is actually in the **lower** position). Make sure you loosen the two Printhead Height Adjustment screws before trying to change the position of the Printhead Height Lever.

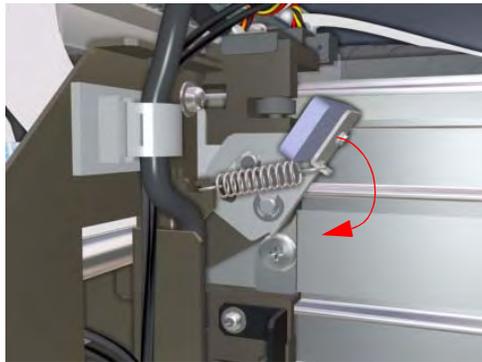


- 3 Loosen five screws from the left hand side of the Capping Station.

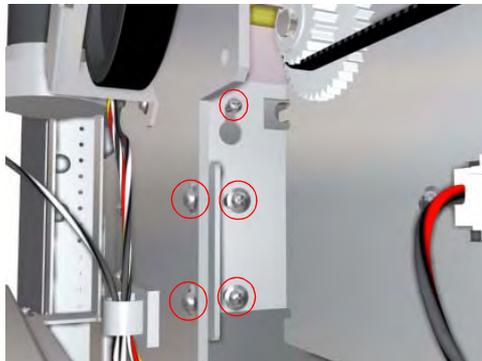


- 4 Loosen three screws from the right hand side of the Capping Station.

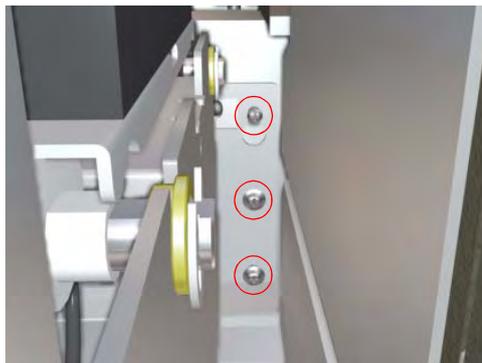

- 5** Before continuing with the Capping Station Height Adjustment, make sure that the Capping Station is at its lowest position by rotating the Capping Belt.

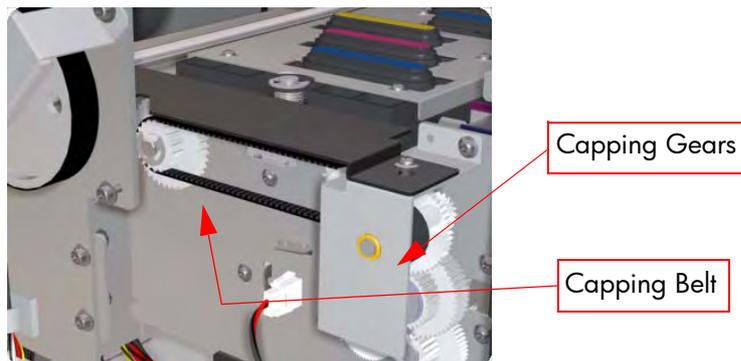

- 6** Install the four Capping Height screws into the Carriage in the positions shown below.

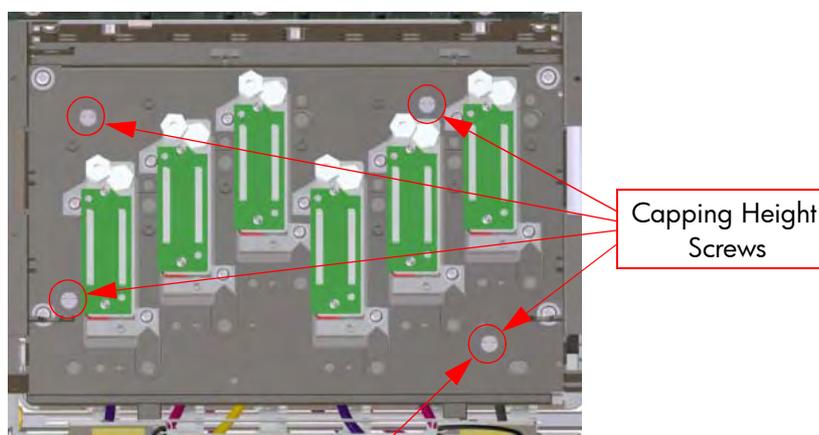

- 7** Adjust the height of the Capping Station so that at least three Capping Height screws are touching the top part of the capping Station.
- 8** While holding the Capping Station in position, tighten the screws that you loosened in the previous steps.
- 9** Remove the four Capping Height Screws from the Carriage.


Printhead Capping Limit Adjustment

This adjustment is necessary in order to stop the Capping Units from pushing against the Printheads too much. This adjustment must be performed whenever:


- Capping Station is disassembled or replaced.

Perform the Printhead Capping Limit Adjustment as follows:


- 1 Make sure that the Capping Station is correctly installed.
- 2 Uncap the Carriage Assembly ⇒ Page 4-18.
- 3 Make sure that the Printhead Height Lever is in the **lower** position (so that Printhead height is actually in the **upper** position). Make sure you loosen the two Printhead Height Adjustment screws before trying to change the position of the Printhead Height Lever.

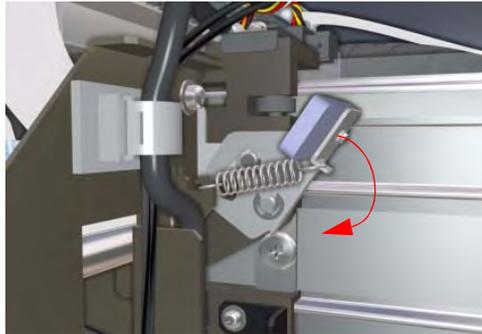

- 4 Loosen the screw which secures each Capping Limit Plate to the Carriage.

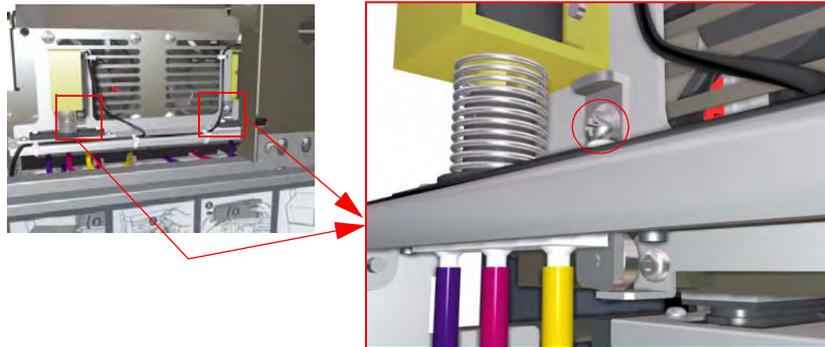

- 5 Lower each Limit Plate until the bearing (attached to the Plate) almost touches the Limit Brackets on the Capping Station. The space between the Bearing and the Limit Brackets should be between 0.3 and 0.5 mm.

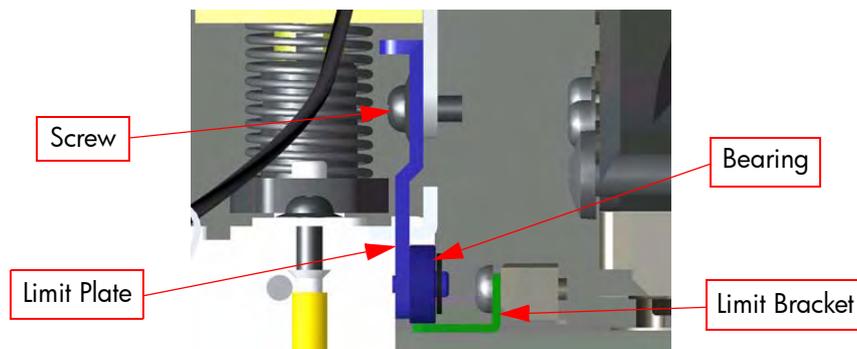

- 6 Tighten the screws that secure the Plates.


Carriage Shield Height Adjustment

This adjustment must be performed whenever:


- Carriage Shields are disassembled or replaced.

Perform the Carriage Shield Height Adjustment as follows:

- 1 Make sure that the Carriage Shields are correctly installed.
- 2 Loosen 2 screws that secure the Carriage Shield to the Carriage.

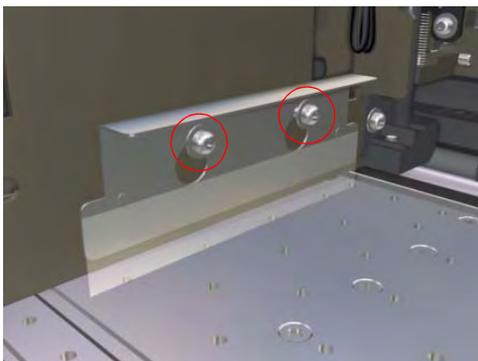

- 3 Adjust the Carriage Shield so that there is a 2-3 mm clearance between the Carriage Shield and the Center Platen.

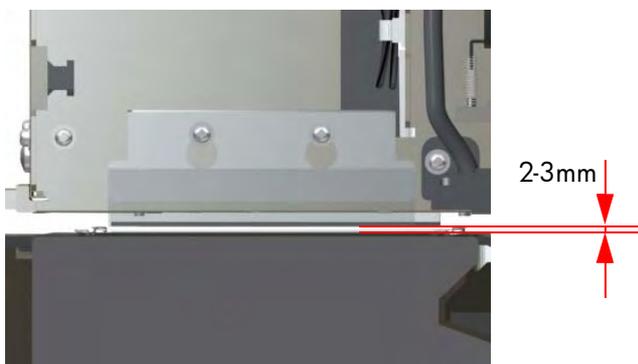

- 4 While holding the Carriage Shield in position, tighten the two screws that you loosened in a previous step.


Media Feed and Take-Up-Reel Unit Adjustment

Whenever the Media Feed or Take-Up-Reel Unit has been disassembled or replaced, you must adjust them horizontally and vertically.


Horizontal Adjustment

Perform the Horizontal Adjustment on the Media Feed or Take-Up-Reel Unit as follows:

- 1** Make sure that the Media Feed or the Take-Up-Reel Unit is correctly installed and that the Main Scrollers are in position.
- 2** Measure the distance from the side of the Printer Stand to the center of the Main Scroller (on the Capping Side). The distance should be approximately 239.5 mm for the Media Feed Unit and 159.5 mm for the Take-Up-Reel Unit.

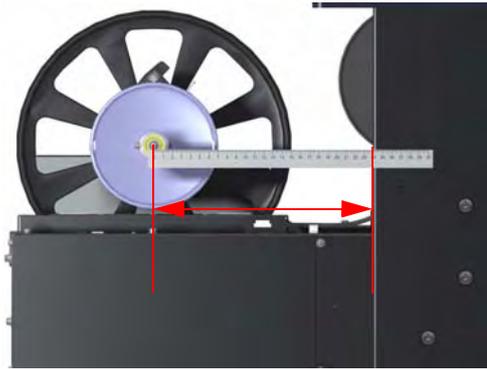


- 3** Measure the distance from the side of the Printer Stand to the center of the Main Scroller (on the Wiping Side). The distance should be approximately the same as measured in the previous step.

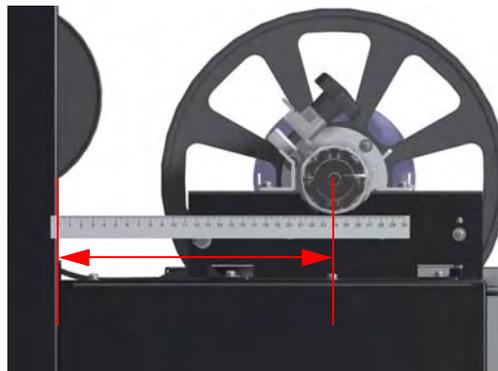

- 4** If the distance measured on the wiping side is different to the distance measured on the capping side, you will need to adjust the position of the Idle Unit as explained in step 5.

- 5 Loosen four screws that secure the Idle Unit on the wiping side and adjust the Idle Unit until the distance from the Printer Stand to the center of the Main Scroller is the same as the distance measured in step 2.

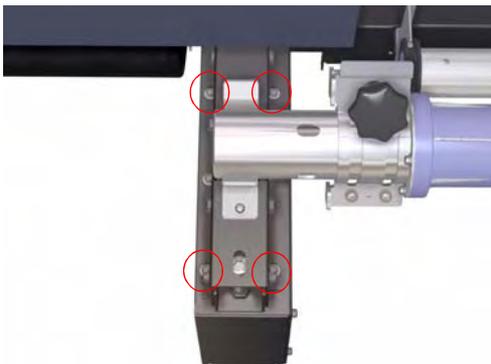


- 6 Tighten the screws loosened in the previous step.


Vertical Adjustment

Perform the Vertical Adjustment on the Media Feed or Take-Up-Reel Unit as follows:


- 1 Tie a piece of string around the Main Scroller (on the Capping Side) and pass it through the paper entry path.

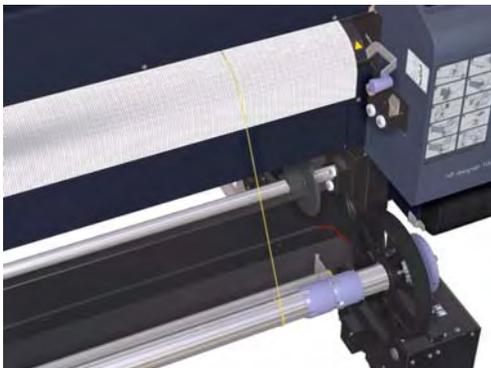


- 2 Pull the string tight and mark the point where it crosses the Cutter Groove on the Center Platen.

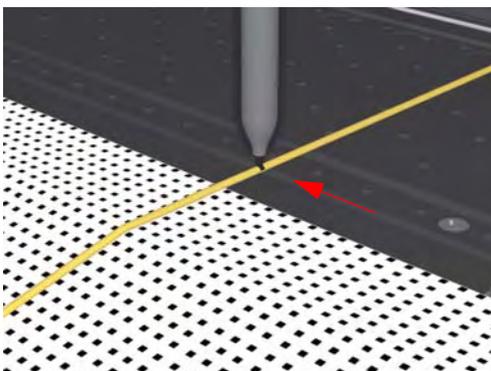


- 3** Slide the string across to the Wiping Side and check that the point marked in step 2 is aligned with the Cutter Groove in the Center Platen.

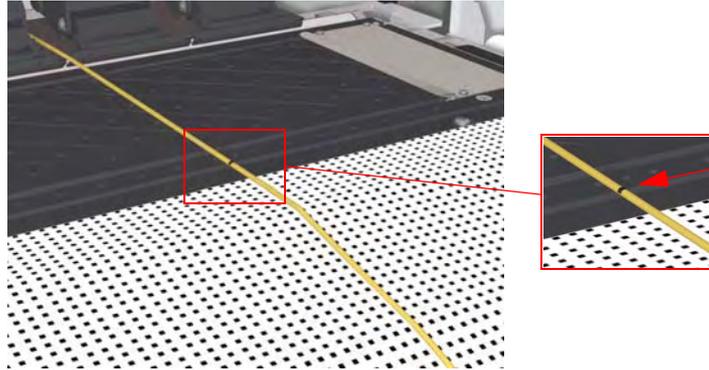

- 4** If the point marked in step 2 is either above or below the Cutter Groove, you will need to adjust the position of the Idle Unit as explained in step 5.

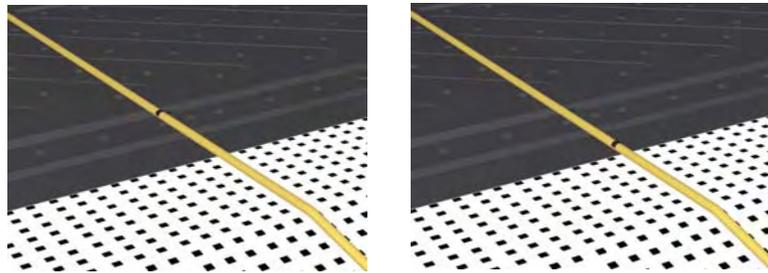

- 5** Loosen one screw on each side of the Idle Unit and turn the Bolt to adjust the height of the Idle Unit until it is the same as the height on the Capping side.

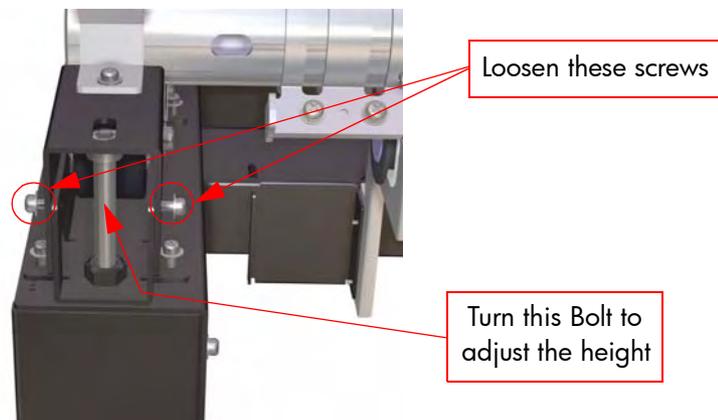

- 6** Tighten the screws loosened in the previous step.
7 Apply red paint to the bottom of the Bolt so it does not accidentally loosen.

Media End Sensor Adjustment

This adjustment is necessary to adjust the direction of the light emitted from the light emission unit of the Media End Sensor (located on the Media Feed side in the upper location). This adjustment must be performed whenever:


- Media End Sensor is disassembled or replaced.

Perform the Media End Sensor Adjustment as follows:


- 1 Remove the Main Scroller and Sub Scroller from the Media Feed side.
- 2 Remove two screws that secure the Sensor Cover on the Media Feed Unit.




- 3 Remove the Sensor Cover from the light emission units on the Media Feed Unit.

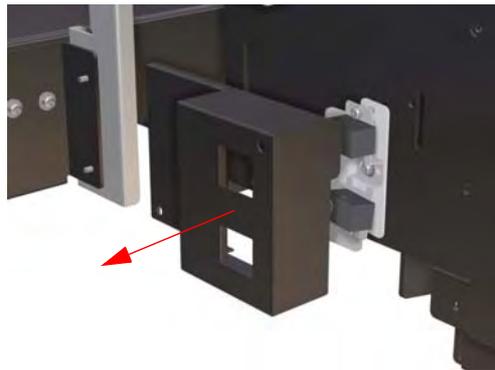


- 4 Disconnect the connector (labelled **K-Slack**) of the light emission unit of the Media Slack Sensor (lower sensor) on the Media feed Unit.

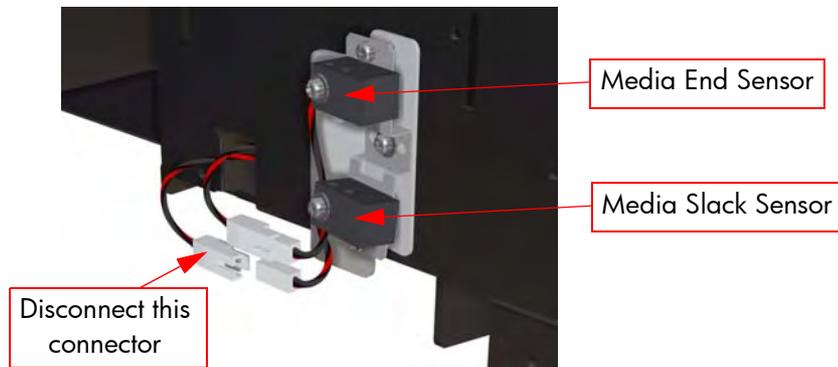

- 5** Turn the top adjusting screw (counter-clockwise) to adjust the light emission unit to a position where both the upper and lower light receiving units receive the light (the red LEDs are ON).

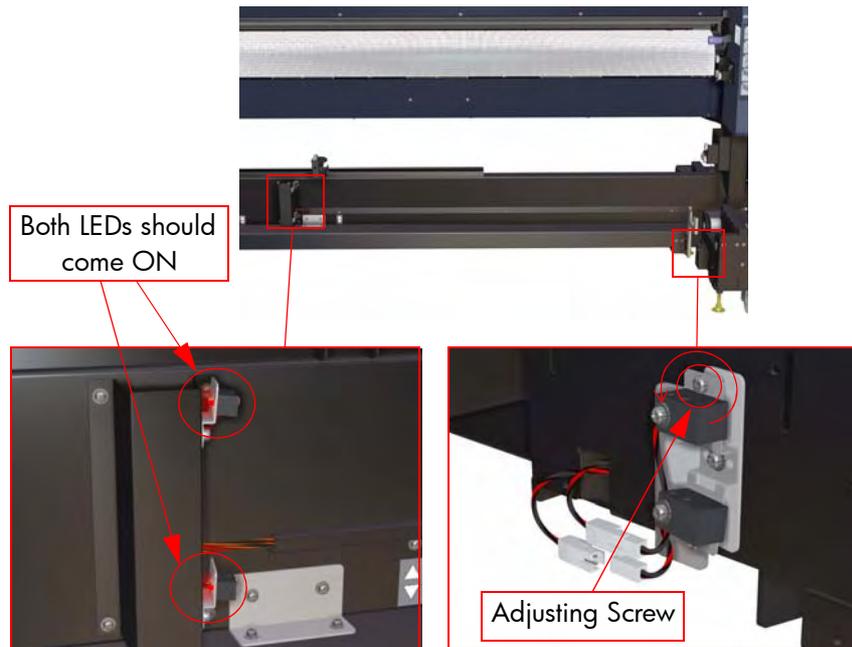


- 6** Turn the top adjusting screw (clockwise) gradually until the Media Slack Sensor (lower sensor) no longer receives the light (the red LED light goes OFF).

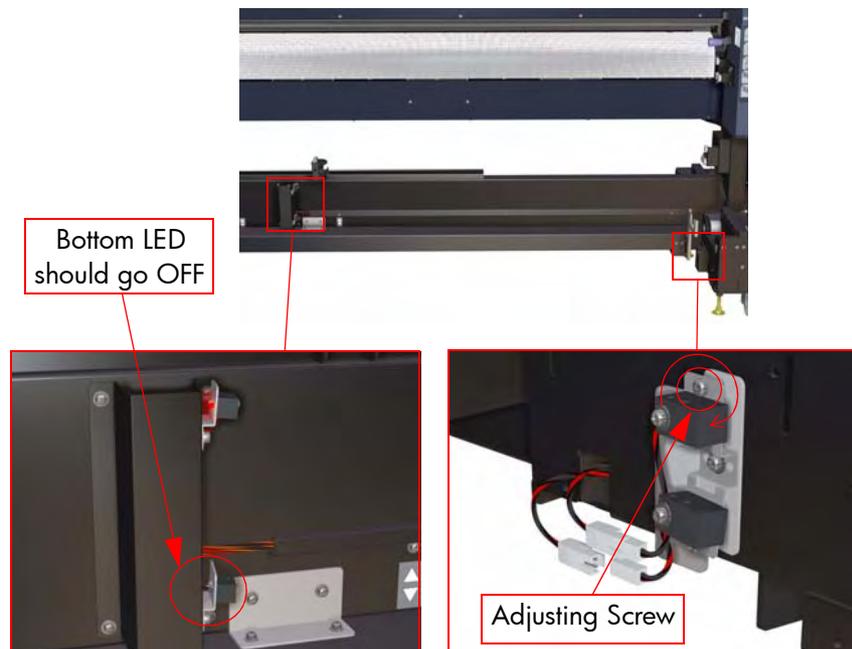

- 7** Turn the top adjusting screw (clockwise) a further **1.25 times**.

- 8 Check that the Media End Sensor (upper sensor) receives the light (the red LED light is ON) and connect the connector of the light emission unit of the Media Slack Sensor (lower sensor).

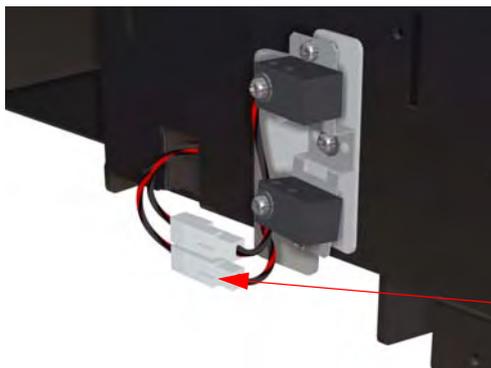

Connect this
connector

- 9 Install the Sensor Cover and secure with two screws.



Sensor Cover

Media Slack Sensor Adjustment

This adjustment is necessary to adjust the direction of the light emitted from the light emission unit of the Media Slack Sensor (located on the Media Feed side in the lower location). This adjustment must be performed whenever:


- Media Slack Sensor is disassembled or replaced.

Perform the Media Slack Sensor Adjustment as follows:


- 1 Remove the Main Scroller and Sub Scroller from the Media Feed side.
- 2 Remove two screws that secure the Sensor Cover on the Media Feed Unit.




- 3 Remove the Sensor Cover from the light emission units on the Media Feed Unit.

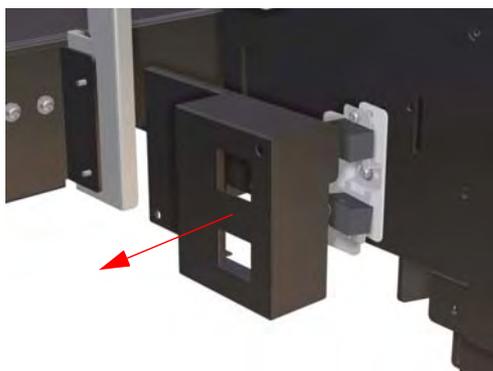


- 4 Disconnect the connector (labelled **K-End**) of the light emission unit of the Media End Sensor (upper sensor) on the Media feed Unit.

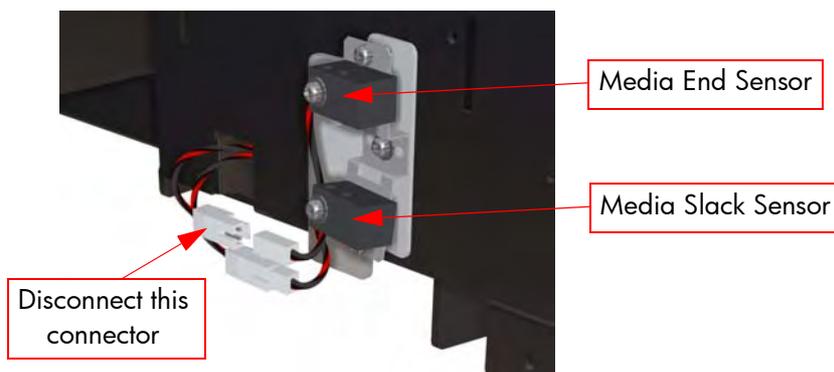

- 5 Turn the bottom adjusting screw (counter-clockwise) to adjust the light emission unit to a position where both the upper and lower light receiving units receive the light ((the red LEDs are ON).

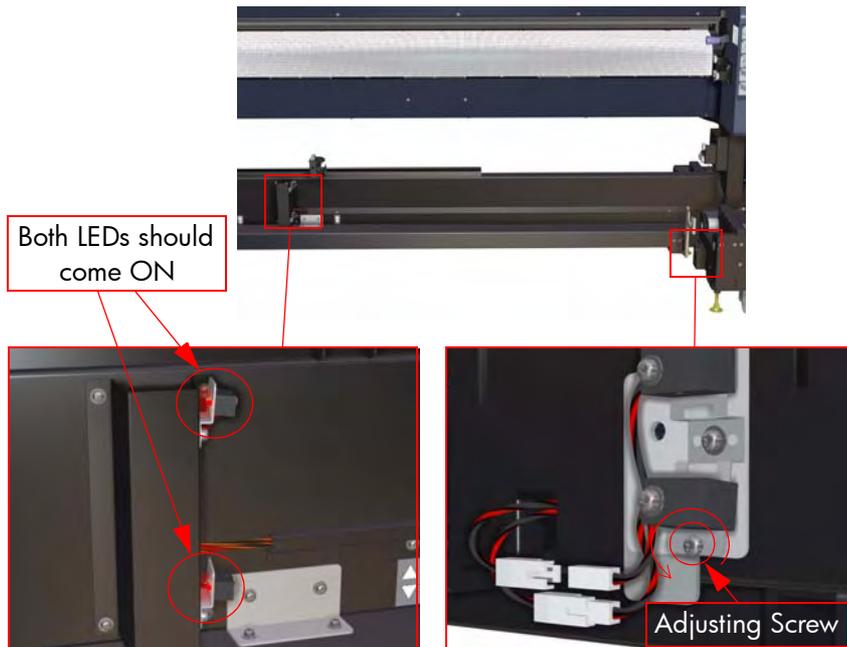


- 6 Turn the bottom adjusting screw (clockwise) gradually until the Media End Sensor (upper sensor) no longer receives the light (the red LED light goes OFF).

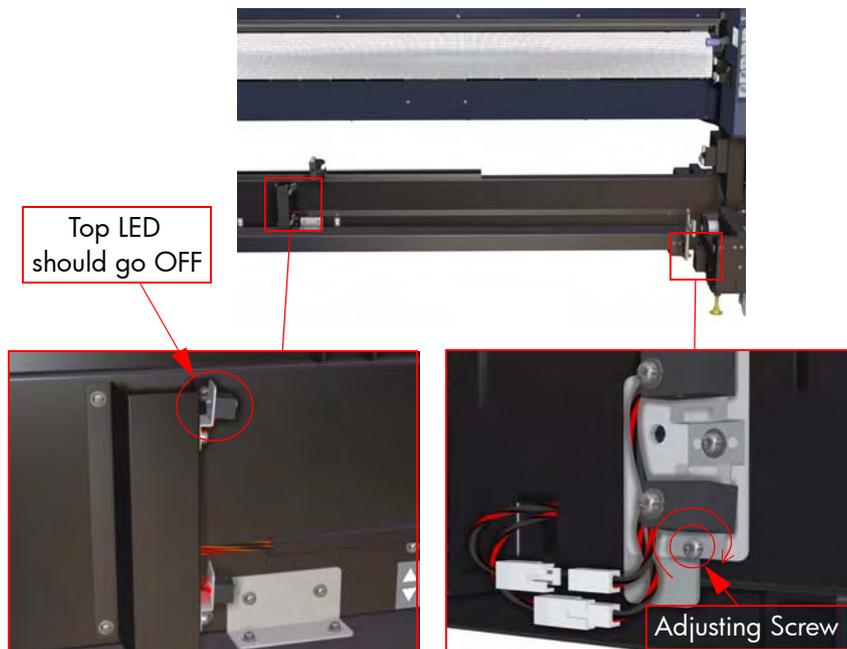

- 7 Turn the adjusting screw (clockwise) a further **two times**.

- 8** Check that the Media Slack Sensor (lower sensor) receives the light (the red LED light is ON) and connect the connector of the light emission unit of the Media End Sensor (upper sensor).

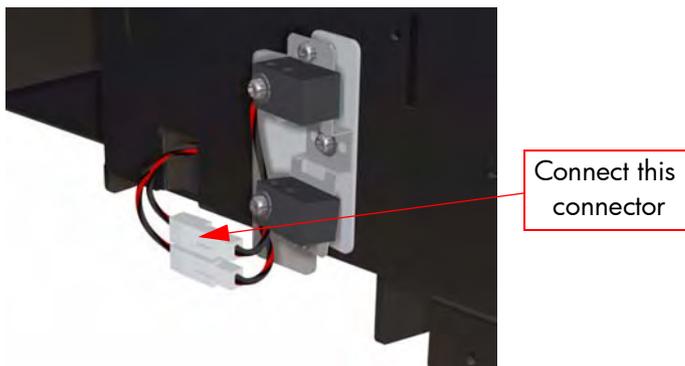

- 9** Adjust the direction of the light from the light emission unit of the Media End Sensor ⇒ Page 5-32.
- 10** Install the Sensor Cover and secure with two screws.



Take-Up-Reel Sensors Adjustment

This adjustment is necessary to adjust the direction of the light received by the light receiving units (upper and lower limit sensors) of the Take-Up-Reel Sensor (located on the Take-Up-Reel side). This adjustment must be performed whenever:


- Take-Up-Reel Sensor is disassembled or replaced.

Perform the Take-Up-Reel Sensors Adjustment as follows:

- 1 Remove the Main Scroller from the Take-Up-Reel side.
- 2 Remove the two screws that secure the Tension Bar Guide.




- 3 Remove the Tension Bar Guide from the Take-Up-Reel side.

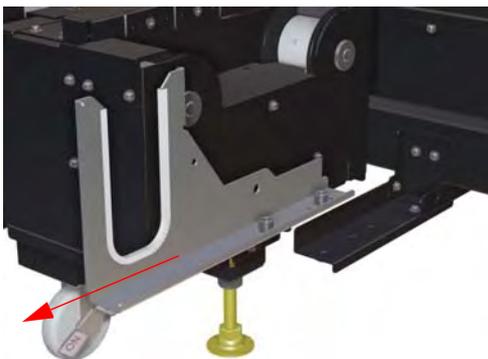

- 4 Remove two screws that secure the Sensor Cover on the Take-Up-Reel Unit.



- 5** Remove the Sensor Cover from the light receiving units on the Take-Up-Reel Unit.

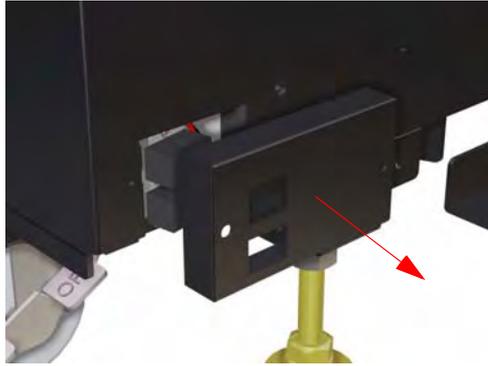


- 6** Remove the two screws that secure the upper and lower light receiving units to the Take-Up-Reel Unit.




- 7** Remove the upper and lower light receiving units from the Take-Up-Reel Unit (there is no need to disconnect them).



- 8** Loosen the adjusting screw (turn it counter-clockwise).

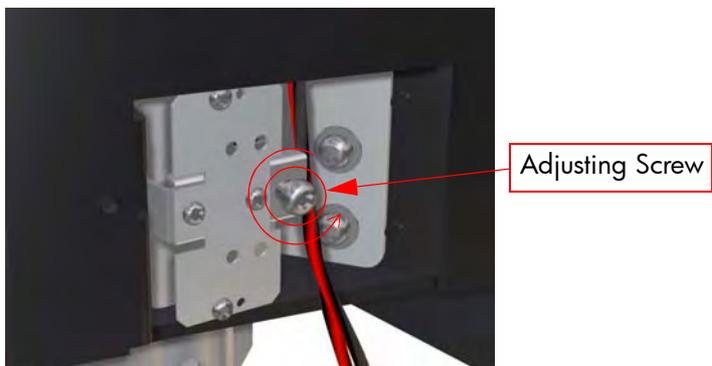


- 9** Tighten the adjusting screw (clockwise) gradually and then give it one full turn when the Mounting Plate for the Sensors begins to move (starts to bend).

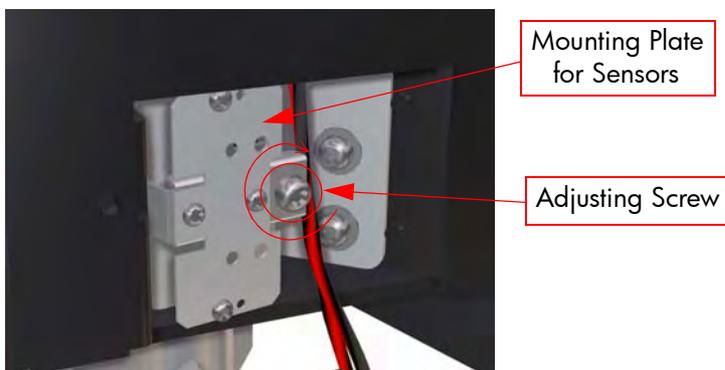


- 10** Re-install the upper and lower light receiving units onto the Take-Up-Reel Unit and secure with the two screws.



- 11** Remove the screw that secures the Light Emission Unit to the Mounting Bracket.

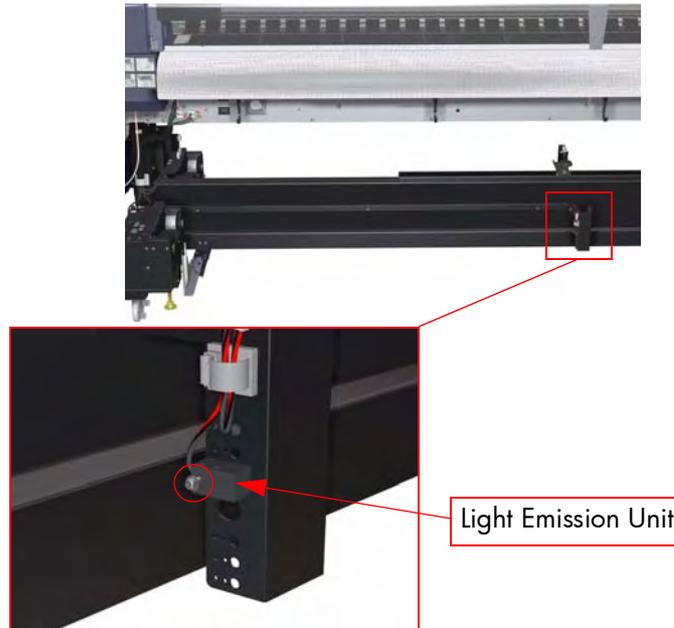


- 12** Install the Light Emission Unit on the bottom hole of the Mounting Bracket.

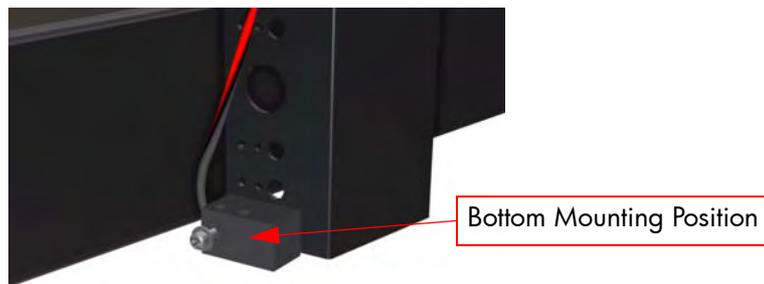


- 13** Enter into the Maintenance Mode ⇒ Page 4-7 or with the Printer power Off, press the **Cancel** and **Shift** keys and Power On button (this is useful if you cannot enter the Maintenance Mode because no media is loaded). Enter the password when requested: ◀, ▶, **Shift** and **OK**.
- 14** Enter into the "TUR Sensors" Menu (⇒ Page 4-58) and check that both the upper and lower limit sensors receive the light (the red LED lights).
- For the Upper Sensor, the Front Panel will indicate **1** when it is receiving the red LED light and **0** when it is not receiving it.
 - For the Lower Sensor, the Front Panel will indicate **0** when it is receiving the red LED light and **1** when it is not receiving it.

- 15** If the light is **not** received, adjust the sensor(s) by tightening the adjusting screw (clockwise) by **0.25** of a turn.

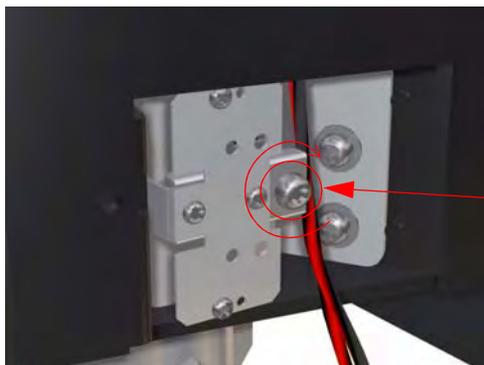


Adjusting Screw

- 16** Repeat steps **14** and **15** until the light is received.
- 17** Remove the Light Emission Unit and install it on the top hole of the Mounting Bracket.

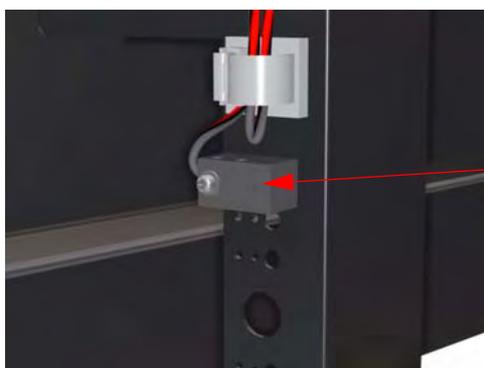

Top Mounting Position


- 18** Using the "TUR Sensors" Menu (⇒ Page 4-58), check that both the upper and lower limit sensors receive the light (the red LED lights).
- For the Upper Sensor, the Front Panel will indicate **1** when it is receiving the red LED light and **0** when it is not receiving it.
 - For the Lower Sensor, the Front Panel will indicate **0** when it is receiving the red LED light and **1** when it is not receiving it.
- 19** If the light is **not** received, adjust the sensor(s) by tightening the adjusting screw (clockwise) by **0.25** of a turn.

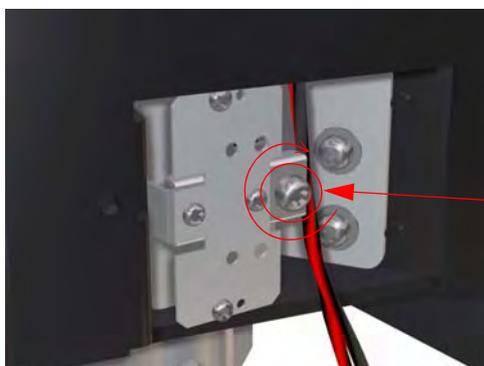


Adjusting Screw

- 20** Repeat steps **18** and **19** until the light is received.

- 21** Repeat steps **11** to **20** so that the Light Emission Unit of both the upper and lower limit sensors can receive the light irrespective of its mounting position (either at the top or the bottom) on the Mounting Bracket.
- 22** Remove the light emission unit of the Take-Up-reel Sensor and install it on the third hole (from the top) of the Mounting Bracket.

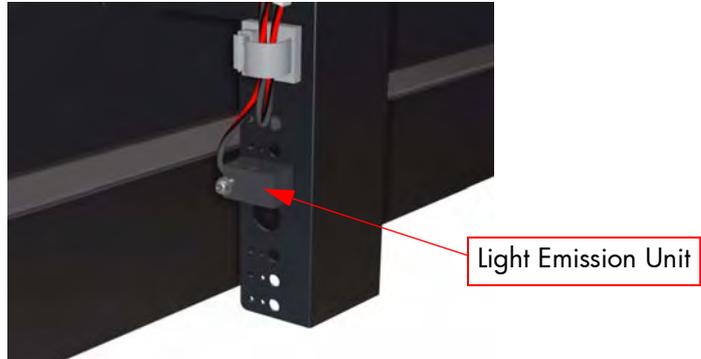

- 23** Install the Sensor Cover and secure with two screws.

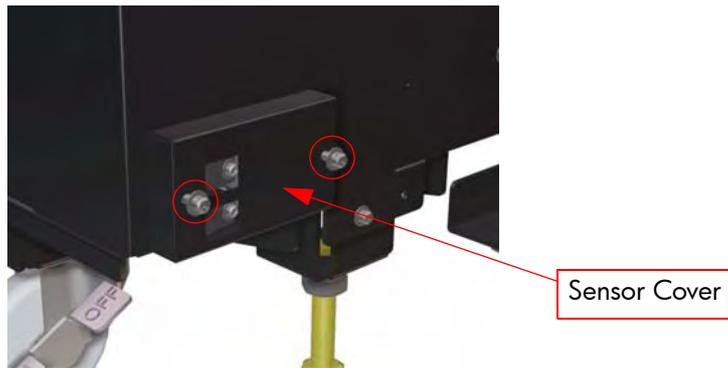

Platen Flatness Measurement and Adjustment

This measurement and adjustment is necessary to ensure that the center Platen is completely flat (within given tolerances). The flatness of the Center Platen should first be measured to check if it is out of the given tolerances, and only then should it be adjusted.

This adjustment must be performed whenever:

- Center Platen or Media Drive Roller is disassembled or replaced.
- There is a higher level of ink spray due to Center Platen not being flat.

Using the Carriage Height Tools to Measure Platen Flatness

Before ordering the Platen Flatness Adjustment Tools to measure the Platen Flatness, it is possible to use the Carriage Height Adjustment Tools to measure the Platen Flatness along the Printer. You should refer to Page 5-5 for more detailed information on how to perform the Carriage Height Adjustment.

- 1 Check the Carriage height along the complete Center Platen in every screw position (11 positions in total) starting from the Capping side.
- 2 You should only measure one side of the Carriage (positions 1 and 3), so there is no need to measure positions 2 and 4. Include the values measured in a table as shown below.


	1	2	3	4	5	6	7	8	9	10	11
Pos 1	6.0	6.2	6.1	6.3	6.1	6.2	6.2	6.1	6.2	6.2	6.1
Pos 3	6.5	6.6	6.4	6.7	6.5	6.4	6.6	6.7	6.5	6.6	6.5

- 3 For each row, take the minimum and maximum value and check that the difference between them is less than 0.4 mm (400 μ m). For example, using the values for Position 1, row 1 has the lowest value (6.0 mm) and row 4 has the highest value (6.3 mm), so the difference between the two is 0.3 mm (300 μ m) - this is within the tolerance range of 0.4 mm (400 μ m).
- 4 If the Carriage Height is out of the tolerance range, then you must order the Platen Flatness Adjustment Tools and perform the Platen Flatness adjustment.
- 5 The part number for the Platen Flatness Adjustment Tools is Q6693-60037 and includes the following parts:
 - Flatness Measurement Gauge.
 - Dummy Heater Sensor.
 - Set of Shims:
 - 30 Shims 0.1 mm (100 μ m).
 - 30 Shims 0.2 mm (200 μ m).
 - 15 Shims 0.1 mm (100 μ m).
 - 15 Shims 0.2 mm (200 μ m).

Platen Flatness Measurement

Perform the Platen Flatness Measurement as follows:


- 1 Turn On the Printer in the Maintenance Mode by pressing the **Cancel** and **Shift** keys and Power On button. Enter the password when requested: **◀**, **▶**, **Shift** and **OK**.
- 2 Make sure that the Media Load Lever is in the lower position.

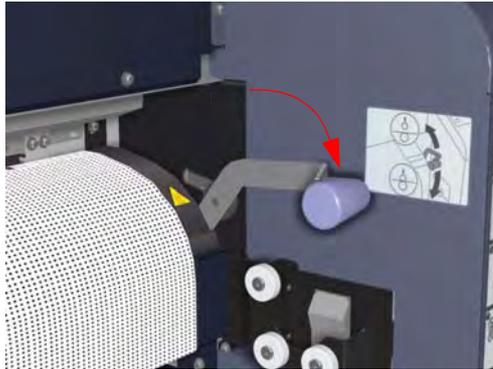

- 3 Make sure that the Media Pressure Lever is set in the "Normal" position.
- 4 Open the Rear Cover, Capping Door and the Wiping Door.
- 5 Make sure that the Printhead Height Lever is in the **upper** position (so that the Printhead height is actually in the **lower** position). Make sure you loosen the two Printhead Height Adjustment screws before trying to change the position of the Printhead Height Lever.



- 6 Loosen the two screws and remove the Carriage Shields from the Carriage Assembly (from the right hand side).

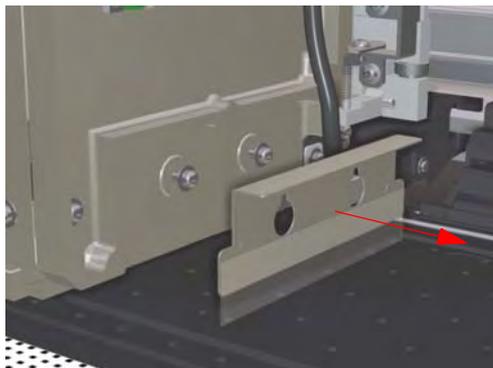

- 7 Install the Flatness Measurement Gauge onto the Carriage Assembly (reusing the two screws used for the Carriage Shield). Make sure you tighten the two screws so that the Gauge is securely positioned.



- 8 Enter the Heater Panel Maintenance Mode and activate the Heater Test ⇒ Page 4-90. Set the temperature of the Heaters at 45°C (Front), 40°C (Center) and 45°C (Rear).

Make sure you wait at least 30 minutes so that the temperature of the Heaters become stable. While waiting make sure Carriage is capped so that the Printheads do not dry out.

- 9 Uncap the Carriage and move it to the 6th screw position on the center Platen. While moving the Carriage, make sure you press down both handles of the Flatness Measurement Gauge so that the measurement pins are raised.




Press down both handles when moving the Carriage

- 10 At the 6th screw position, adjust the dials of the Flatness Measurement Gauge so that the scale is set at **zero**.



Make sure that the measurement pins are not positioned directly over the screws when adjusting the dials to zero.


- 11** Measure the Center Platen in every screw position (11 positions in total) starting from the Capping side.

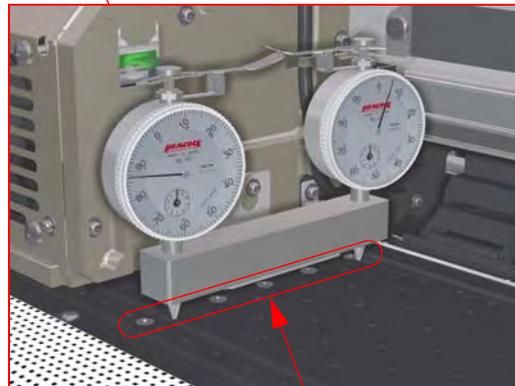

Measure the Platen flatness at every screw position (11 in total)

When measuring the Center Platen, make sure you to do not place anything heavy on top of the center Platen. Also make sure you do not lean on the Center Platen as this could affect the final values.

- 12** When measuring each screw position, note the value of the Back and Front positions on a piece of paper.

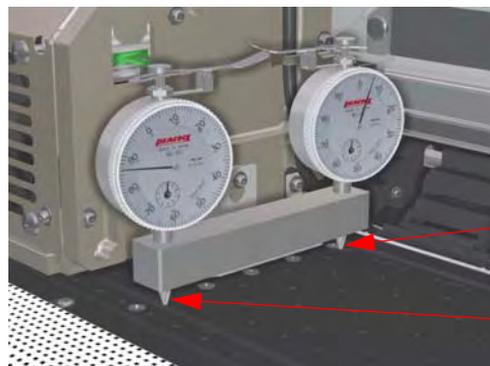

Back Position

Front Position

- 13** Before noting the values, make sure you multiply the read values by 10. For example, if the needle moves counter-clockwise to 85, this should be read as a value of -15 (negative value). This should then be multiplied by 10, which will give you a final value of -150 μm . This is an example of how to note down the values on a piece of paper:

	1	2	3	4	5	6	7	8	9	10	11
Front	-130	-110	-60	-110	+110	-120	-100	-110	-180	-70	-110
Back	-170	-250	-180	-140	+140	-30	-10	-90	-110	-110	-40

Make sure you correctly note the values of the Platen Flatness. If the needle on the gauge moves clockwise, this will be a positive value (+) and if the needle moves counter-clockwise, then this will be a negative value (-).

- 14** Once all the screw positions have been measured, you will need to verify that they are within the range of the accepted tolerance (300 μm).
- You will need to check the difference between the row with the highest value and the row with the lowest value to ensure that the difference is less than 300 μm . For example, using the Front Values, row 9 has the lowest value (-180) and row 5 has the highest value (+110), so the difference between the two is 290 μm - this is within the tolerance range of 300 μm .
 - To give you an example of a Platen that is out of the accepted range, take a look at the Back Values in the above table. Row 2 has the lowest value (-250) and row 5 has the highest value (+140), so the difference between the two is 390 μm - this is out of the tolerance range of 300 μm . To resolve this problem, you would need to add a large Shim 0.2 mm (200 μm) at the back part of the Center Platen at row 2.
- 15** If all of the positions of the Platen are within the accepted range, then you can remove the Flatness Measurement Gauge and reinstall the Carriage Shield(s).

If any of the positions of the Platen are out of the accepted tolerance range, then you will need to adjust the Platen Flatness.

- 16** Turn Off the printer.


Platen Flatness Adjustment

Perform the Platen Flatness Adjustment as follows:


- 1 Move the Carriage to the Capping Station turn Off the Printer from the switch at the rear of the Printer (if not already done so).

Make sure you leave the Carriage uncapped.


- 2 Remove the Rear Heater ⇒ Page 8-32.
- 3 Remove the sponges from both ends of the Printer.

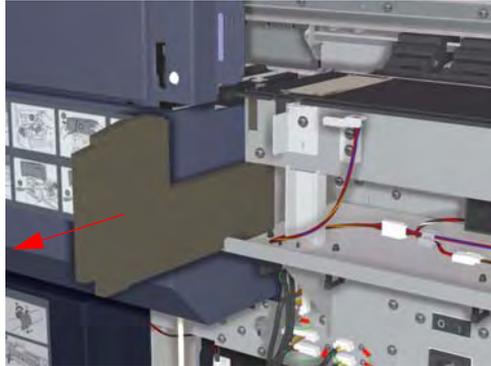

- 4 Remove two screws that secure the Sponge Plate (from both ends of the Printer).

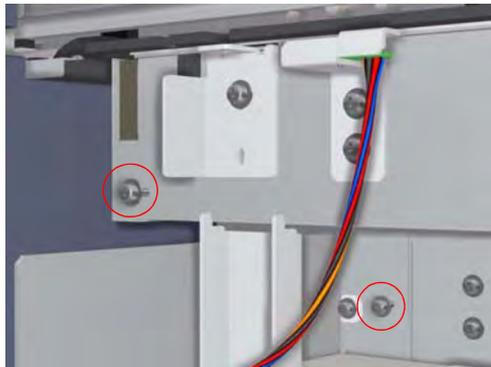

- 5 Remove the Sponge Plates from both ends of the Printer.

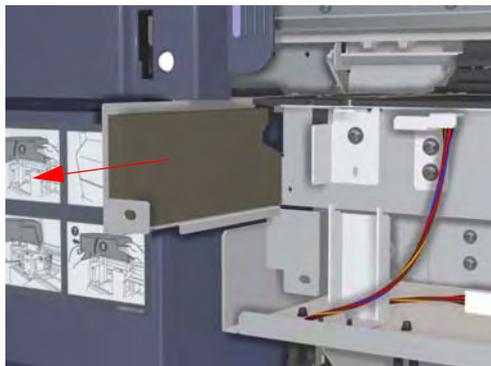


- 6** Remove one screw that secures the Grounding Strip and Bracket at the wiping end of the Printer. Remove the Bracket from the Printer.



- 7** Release the Grounding Strip and remove the Bracket from the Printer.



- 8** Disconnect the connectors from ALL the Vacuum Fans and from the Media Sensor.

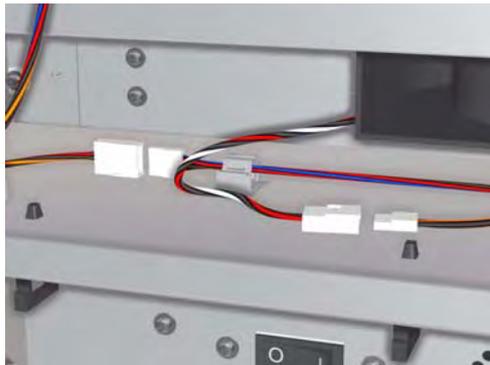


- 9** Remove the screws securing the 5 Mounting Brackets.



Mounting Bracket


- 10** Remove the five Mounting Brackets from the Printer.

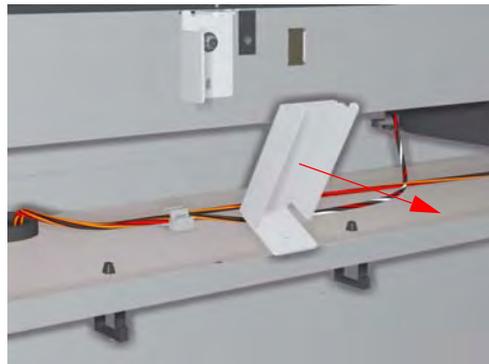

- 11** Disconnect the connectors of the Heater Power Supply and the Temperature Sensor for the Center Platen.
- 12** Remove ALL the screws that secure the Vacuum Fan Mounting Plate.




- 13** Remove the Vacuum Fan Mounting Plate from the Printer.

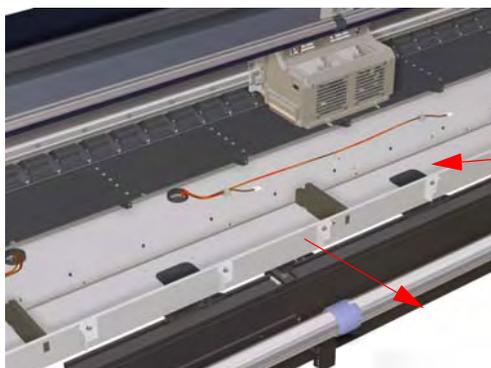

Vacuum Fan
Mounting Plate

- 14** Connect the connectors of the Heater Power Supply and the Temperature Sensor for the Center Platen. Also connect a Dummy Sensor to the connector of the Temperature Sensor for the Rear Heater.

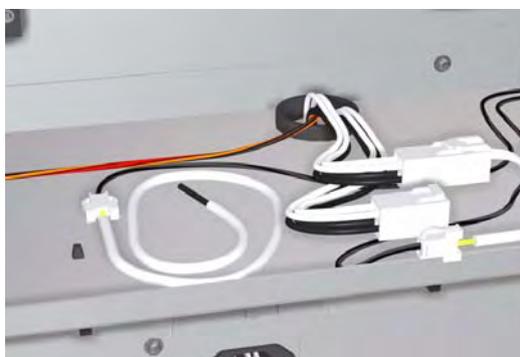


- 15** Turn On the Printer.

A System Error Code will appear on the Front Panel because the Vacuum Fans have been disconnected, but this can be ignored.

- 16** Enter the Heater Panel Maintenance Mode and activate the Heater Test ⇒ Page 4-90. Set the temperature of the Heaters at 45°C (Front), 40°C (Center) and 45°C (Rear).


Make sure you wait at least 30 minutes so that the temperature of the Heaters become stable. While waiting make sure Carriage is capped so that the Printheads do not dry out.

- 17** Locate the screw position that was out of the accepted tolerance range and loosen the five screws.

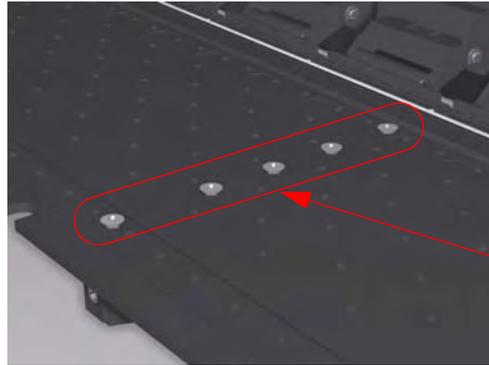

Loosen the screws


- 18** Adjust the gap between the Black Platen Post and the Center Platen by adding or removing Shims until it is within a range of 200 μm . Using the example on Page 5-48, row 2 on the Back part of the Center Platen needed to be adjusted. A Shim of 0.1 mm (100 μm) could be enough to bring the row within the accepted tolerance range of 300 μm , but it is best to always use the 0.2 mm (200 μm) Shim so that the Platen Flatness is well below the accepted tolerance range and is below or very close to a range of 200 μm .

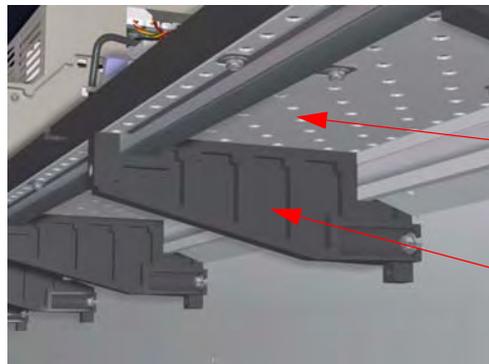

Center Platen

Black Platen Post

- 19** The single slot (small) Shims should be used in the front two screw positions and the triple slot (large) Shims should be used in the rear three screw positions.

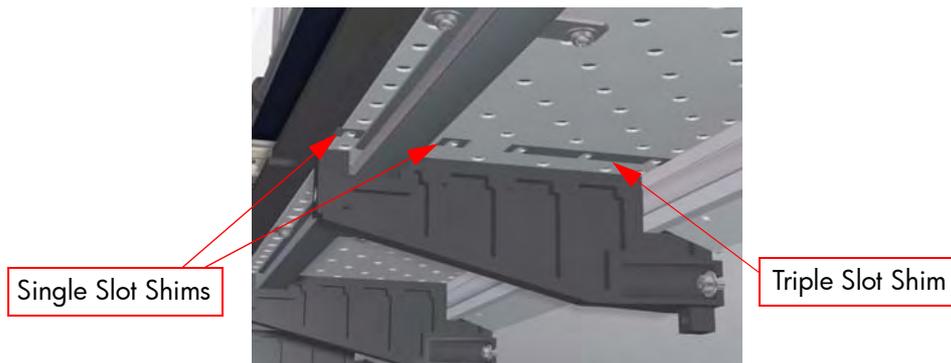

Single Slot Shims

Triple Slot Shim

- 20** After adding the Shims, measure the screw position that was out of the accepted range again to ensure that the gap is within a range of 200 μm . If the gap is still out of range, then you will need to repeat this procedure.
- 21** Turn Off the Printer from the switch at the rear of the Printer.

- 22** Reinstall the following components that were removed:
- Vacuum Fan Mounting Plate (reconnect ALL connectors).
 - Five Mounting Brackets.
 - Grounding Strip and Bracket.

When installing the Bracket, make sure there is a small gap between the Bracket and the Center Platen.

- Sponge Plates from each end of the Printer.
- Sponges from each end of the Printer.

Make sure you reconnect ALL connectors that you had disconnected during the removal of these components.

- 23** Remove the Dummy Sensor and re-install the Rear Heater.
- 24** Measure the flatness of the Center Platen again ⇒ Page 5-45.

Wiping Position Calibration

This calibration must be performed whenever:

- Wiping Station is disassembled or replaced.
- Wiper Blade is disassembled or replaced.
- Wiper Belts are disassembled or replaced.


Perform the Wiping Position Calibration as follows:

- 1 Enter into the Maintenance Mode ⇒ Page 4-7.
- 2 Move the Carriage Assembly to the Wiping Station ⇒ Page 4-18.
- 3 Enter into the "Wipe Position" Menu ⇒ Page 4-13.


WIPE POSITION
> +0.0 mm

This adjustment must be performed when the Carriage is at the Wiping Station. Do NOT move the Carriage when the Wiper Blade is raised as this could damage the Printheads.


- 4 Manually rotate the Wiper Blade using the Wiping Station Gear until the Wiper Blade touches the Printheads (image is shown without the Carriage positioned in the Wiping Station). Remove the necessary covers in order to get access to the Wiping Station Gear.

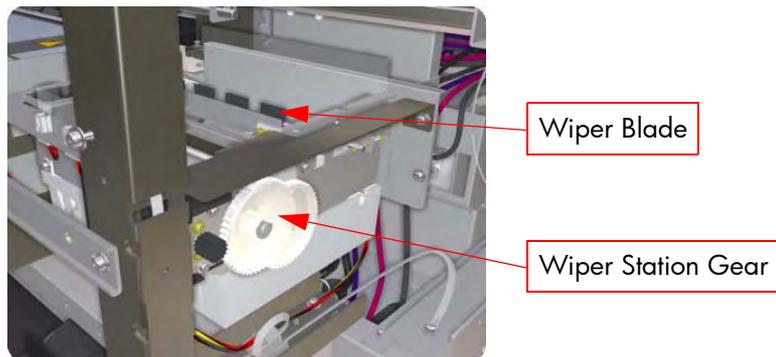

- 5 Check that the center of the Wiper Blades are aligned with the center of the Printheads.

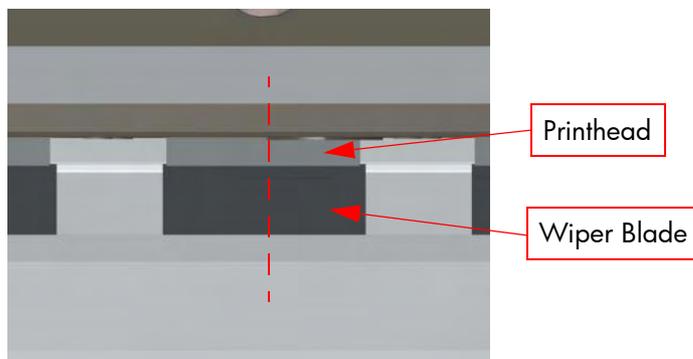


- 6** If the center of the Wiper Blades are **not** aligned with the center of the Printheads, you will need to visually estimate the deviation between the Wiper Blades and the Printheads.

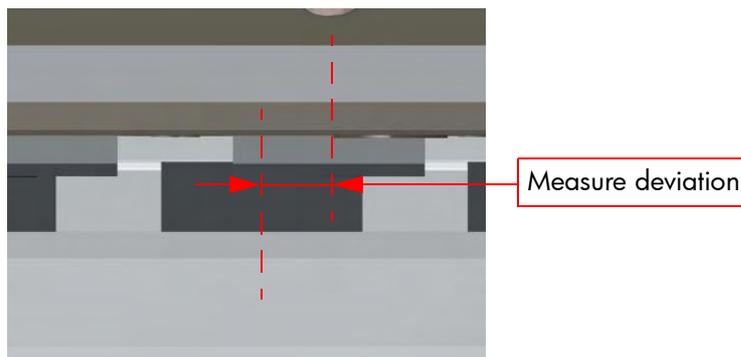

- 7** Manually rotate the Wiper Blades using the Wiping Station Gear so that the Wiper Blades are lowered and **not** touching the Printheads.
- 8** Enter the deviation measured using the ▲ and ▼ keys to change the digits and the ◀ and ▶ keys to select the digits. If the Printheads are on the right side of the Wiper Blades, then enter a - value, and if the Printheads are on the left side of the Wiper Blades, then enter a + value.

```
# WIPE POSITION
* -0.5 mm
```

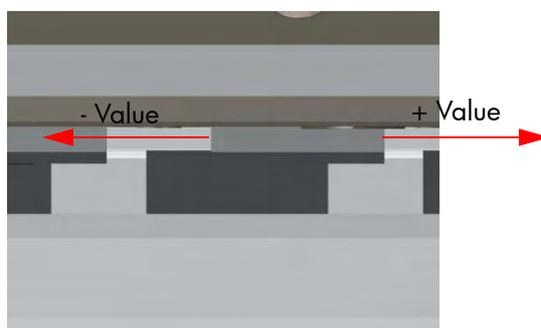

- 9** Press the **OK** key once you have entered the deviation value.
- 10** Check again that the center of the Wiper Blades are aligned with the center of the Printheads. If they are still not aligned, then repeat the procedure from step 4.
- 11** Once the Wiping position is aligned, clean the edges of the Wiper Blades with a swab dipped in Wiping Liquid.

Capping Position Calibration

This calibration must be performed whenever:

- Capping Station is disassembled or replaced.
- Capping Unit is disassembled or replaced.


Perform the Capping Position Calibration as follows:

- 1 Enter into the Maintenance Mode ⇒ Page 4-7.
- 2 Move the Carriage Assembly to the Capping Station (if not already at the Capping Station) ⇒ Page 4-18.
- 3 If the Printheads are capped, uncapp them ⇒ Page 4-43.
- 4 Enter into the "Cap Position" Menu ⇒ Page 4-13.


CAP POSITION
> +0.0 mm

This adjustment must be performed when the Printheads have been uncapped. Do NOT move the Carriage when the Printheads are capped as this could damage the Printheads.

- 5 Visually check that the center of the Capping Units are aligned with the center of the Printheads.

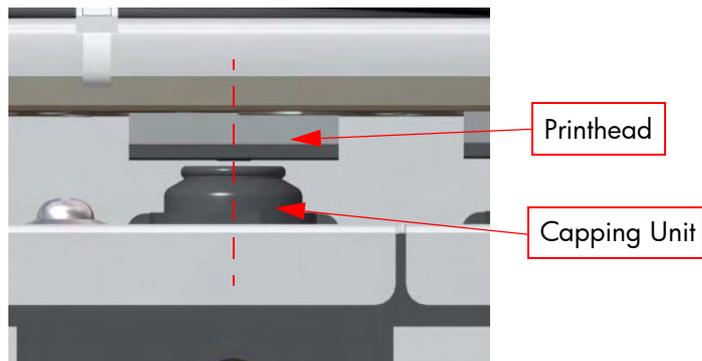


- 6 If the center of the Capping Units are **not** aligned with the center of the Printheads, you will need to visually estimate the deviation between the Capping Units and the Printheads.

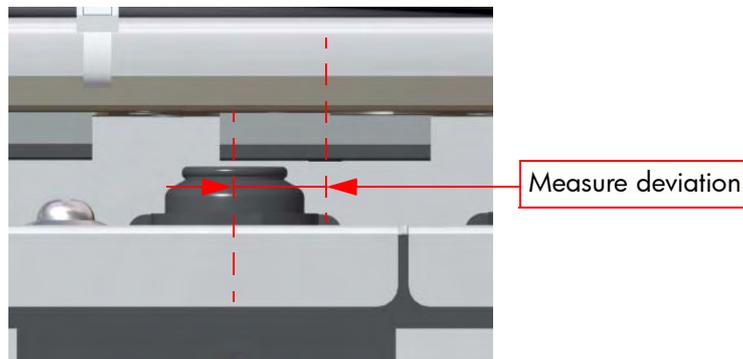

- 7 Enter the deviation measured using the ▲ and ▼ keys to change the digits and the ◀ and ▶ keys to select the digits. If the Printheads are on the right side of the Capping Units, then enter a - value, and if the Printheads are on the left side of the Capping, then enter a + value.

CAP POSITION
* +0.3 mm

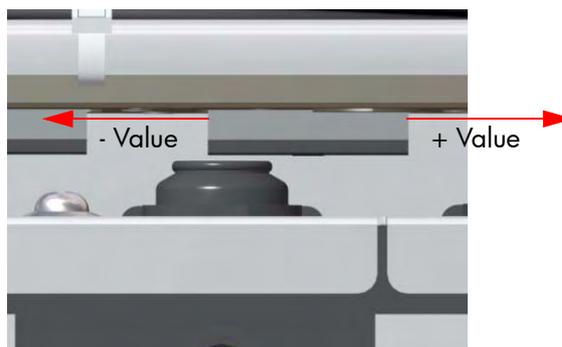

The value of the Cap Position should never be set as 0.0 mm as this means that the Cap Position has not been adjusted.

- 8 Press the **OK** key once you have entered the deviation value.
- 9 Open the Rear Cover and close it again so that the Carriage adjusts itself in relation to the Capping Station.
- 10 Check again that the center of the Capping Units are aligned with the center of the Printheads. If they are still not aligned, then repeat the procedure from step 6.
- 11 Once the Capping position is aligned, move the Carriage Assembly to the Home Position ⇒ Page 4-18 or power Off and On the Printer.

Line Sensor Calibration (Side Margin)


This calibration allows you to correct the value for the side margin position.

This calibration must be performed whenever:

- Line Sensor is disassembled or replaced.
- Black Printhead is disassembled or replaced.

Perform the Side Margin Position Calibration as follows:

- 1 Enter into the Maintenance Mode ⇒ Page 4-7.
- 2 Print the Adjust Pattern ⇒ Page 4-10.
- 3 Measure the side margin using a ruler. If the distance measured is more or less than 5 mm, then the side margin value will need to be changed.

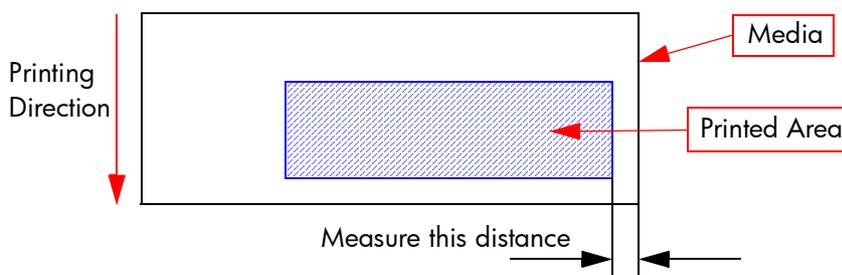

- 4 Enter into the "LS Adj Side Val" Menu ⇒ Page 4-14.



- 5 Determine the side margin value to be entered by subtracting the distance measured from the specified side margin value of 5 mm. For example, if the distance measured was 7 mm, then you subtract 7 mm from 5 mm and you get a result of +2 mm. If the distance measured was 2 mm, then you subtract 2 mm from 5 mm and you get a result of -3 mm.
- 6 Enter the side margin value using the ▲ and ▼ keys to change the digits and the ◀ and ▶ keys to select the digits.



- 7 Press the **OK** key once you have entered the side margin value.

Line Sensor Calibration (Top Margin)


This calibration allows you to correct the value for the top margin position.

This calibration must be performed whenever:

- Line Sensor is disassembled or replaced.
- Black Printhead is disassembled or replaced.

Perform the Top Margin Position Calibration as follows:

- 1 Enter into the Maintenance Mode ⇒ Page 4-7.
- 2 Print the Adjust Pattern ⇒ Page 4-10.
- 3 Measure the top margin using a ruler. If the distance measured is more or less than 5 mm, then the top margin value will need to be changed.

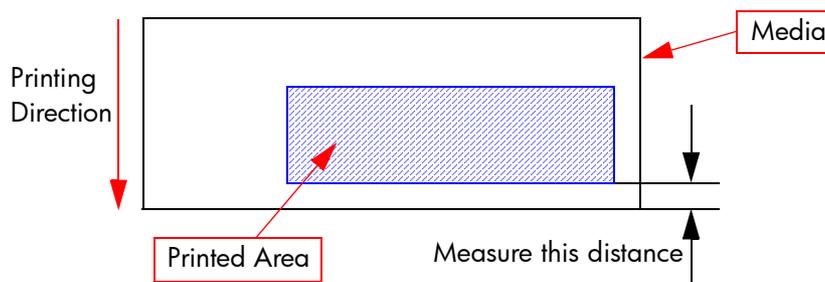

- 4 Enter into the "LS Adj Top Val" Menu ⇒ Page 4-14.

```
# LS ADJ TOP VAL
> +0.0 mm
```

- 5 Determine the top margin value to be entered by subtracting the distance measured from the specified side margin value of 5 mm. For example, if the distance measured was 8 mm, then you subtract 8 mm from 5 mm and you get a result of +3 mm. If the distance measured was 3 mm, then you subtract 3 mm from 5 mm and you get a result of -2 mm.
- 6 Enter the top margin value using the ▲ and ▼ keys to change the digits and the ◀ and ▶ keys to select the digits.

```
# LS ADJ TOP VAL
* +2.0 mm
```

- 7 Press the **OK** key once you have entered the top margin value.

Print Quality

6

Print Quality	6-2
Print Quality Troubleshooting Actions	6-2
Print Quality General Advice	6-2
Troubleshooting Print Quality Problems	6-5
Horizontal Lines Across the Image (Banding)	6-5
Images are Blurred	6-6
Bleeding, Repelling or Mottling Problems	6-6
Image is Completely Blank or Faded	6-6
Output Only Contains a Partial Print	6-7
The Printer Area is Stained	6-7
Part of Image is Missing at the Start of the Print	6-7
Print Quality is not Improved After Printhead Recovery	6-8
Troubleshooting Printhead Problems	6-9

Print Quality

Print Quality Troubleshooting Actions

For some Print Quality problems, a Call Agent can try and troubleshoot the Printer by requesting the Customer to perform certain actions. Using this process, most problems can be resolved without the need of an on-site visit.

When faced with a Print Quality problem, perform the following actions in order to resolve the problem:

- 1 Printer Configuration:
 - Check that the **media type** selected in the Front Panel is the same as the media type loaded into the Printer.
 - Make sure that the correct adjustments have been made for each media.
- 2 Perform the Printhead Recovery procedure.
- 3 Media:
 - Select the correct media type through the front panel when loading it.
 - Make sure that HP or HP-approved media is being used.
- 4 Check that original HP Ink Cartridges are being used in the Printer.
- 5 Check if the latest version of the firmware is installed. If not, install the latest firmware revision.
- 6 For further information, refer directly to the Troubleshooting section that covers the different Print Quality problems.

Print Quality General Advice


- 1 Performing the Daily Maintenance ensures that the Printheads stay in a good condition and the nozzles don't get blocked.
- 2 Make sure that the **media type** selected in the Front Panel is the same as the media type loaded into the Printer.
- 3 Roll media usually gives better Print Quality than a single sheet of the same type of media.
- 4 The most appropriate print quality settings must be used for the current purpose.
- 5 Check that the environmental conditions (temperature, humidity) are within the temperature/humidity range as specified for the Printer (refer to the User's Guide for further information).
- 6 Remember that certain print quality problems can be solved by:
 - Performing the Printhead Recovery procedure.
 - Adjusting the Media Advance.

Using the IQ Print to Troubleshoot

The IQ Print can be used to check for Print Quality problems (like banding) and can be used to isolate the root cause of the problem.



- 1 When the "Printer Ready" message appears on the Front Panel, press the **Online** key to take the Printer offline.

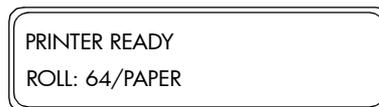

- 2 When the following screen is displayed on the Front Panel, press the **Shift** key twice.



- 3 When the following screen is displayed on the Front Panel, press the ◀ key to enter into the Adjust Menu.




- 4 In the Adjust submenu, scroll to "Test Prints" and press the **OK** key.



- 5 In the Test Prints submenu, scroll to "IQ Print" and press the **OK** key.



- 6 You will need to confirm that you want to print the IQ Print by pressing the **OK** key.

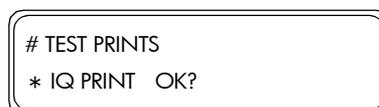


- 7 The Printer will start to print the IQ Print and the following message will appear on the Front Panel.

TEST PRINTS
* EXECUTING

If problems are found in the Test print, try the following:

Banding in One or Several Colors


If the problem detected is banding in one or several colors, it is more than likely that the nozzles are either blocked or misfiring.

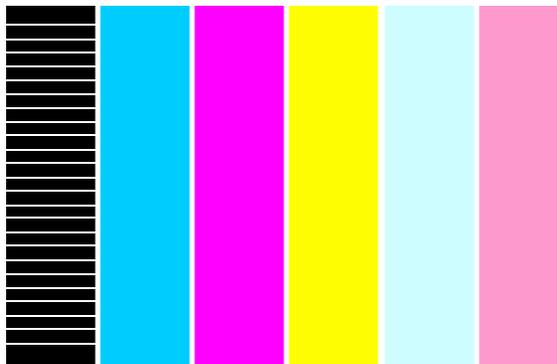

In this situation it is recommended to perform the Printhead Recovery procedure ⇒ Refer to the User's Guide.

Banding in ALL the Colors

If the problem detected is banding across ALL the colors, it is more than likely that the feed adjust is not correct for the media currently loaded.

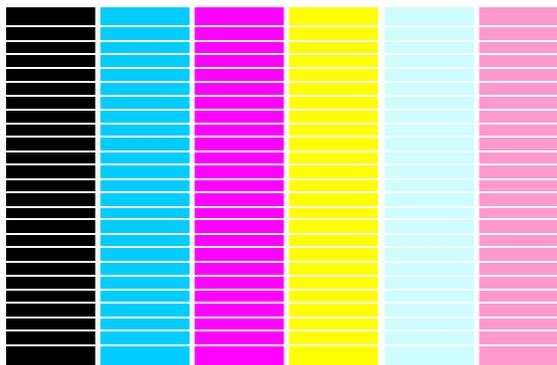

In this situation it is recommended to perform the Media Advance adjustment on the media that is currently being used ⇒ Refer to the User's Guide.

Troubleshooting Print Quality Problems

Horizontal Lines Across the Image (Banding)

Description of problem

When you look at the image you have printed, there are horizontal lines across the image. Shown below is an example of what you might see if you have this problem:



Corrective Action

- 1** Check that the appropriate print quality settings are being used and reprint the image.
- 2** If not already done so, perform the Printhead Recovery procedure and reprint the image with the same settings as before.
- 3** Perform the Media Advance adjustment on the media that is currently being used ⇒ Refer to the User's Guide.
- 4** Check the temperature of the Heaters to make sure that they are not set too high (high temperatures could cause the media to become sticky). If necessary, lower the temperature of the Heaters and reprint the image.
- 5** Print the Nozzle Check Pattern (⇒ Page 4-17) to verify if any Printhead Nozzle are missing. If any missing nozzles cannot be recovered, the failing Printhead may need to be replaced.
- 6** If banding occurs unevenly across the printed image, this could be caused by the misalignment between the Drive Unit and the Idle Unit (either on the TUR side or the Media Feed side). To correct this problem, perform the Media Feed and Take-Up-Reel Unit Adjustment (⇒ Page 5-29).

Images are Blurred

Description of problem

This problem is often caused by incorrect adjustment of the Bi-directional print position causing the image or text to look blurred.

Corrective Action

- 1 Use the Printer in an environment that is less humid.
- 2 Make sure that the **media type** selected in the Front Panel is the same as the media type loaded into the Printer.
- 3 Check the temperature of the Heaters to make sure that they are not set too high. If necessary, lower the temperature of the Heaters and reprint the image.
- 4 Perform the Bi-Directional Print Position Correction.

Bleeding, Repelling or Mottling Problems

Description of problem

The problems can be described as follows:

- Ink Bleeding can spoil the sharpness of the image and cause the text to be blurred.
- Ink Repelling can cause the lines to be dotted or uneven.
- Ink Mottling can cause dark lines in high density prints.

Corrective Action

- 1 Try printing using a higher quality print mode.
- 2 Check the temperature of the Heaters to make sure that they are not set too high. If necessary, lower the temperature of the Heaters and reprint the image (if you see mottling when using lower temperatures, it is best to raise the temperature).

Image is Completely Blank or Faded

Corrective Action

- 1 There might be a problem between the Printer and Computer. Check the cable between the computer and the Printer to make sure it is not damaged and is connected correctly.
- 2 Check the data file that was sent to print.
- 3 Make sure that the **media type** selected in the Front Panel is the same as the media type loaded into the Printer.
- 4 Check that the room temperature is higher than 20°C and make sure that you leave the Printer to warm up sufficiently.

Print Quality is only guaranteed in a temperature range of between 20°C to 25°C.

Output Only Contains a Partial Print

Corrective Action

- 1 There might be a problem between the Printer and Computer. Check the cable between the computer and the Printer to make sure it is not damaged and is connected correctly.
- 2 There might be foreign objects attached to the Printhead. Perform the Printhead Recovery procedure and reprint the image.
- 3 If cleaning the Printheads does NOT solve the problem, then the nozzles might be blocked. Perform the Wash Printheads procedure (refer to the User's Guide) and reprint image.

The Printer Area is Stained

Corrective Action

- 1 Check if the Carriage Shields are covered in ink. If the Carriage Shields are covered in ink, then try to clean them with a cloth.
- 2 Check if the Carriage Shields are correctly positioned because they could be installed too low. If necessary, adjust the Carriage Shields ⇒ Page 5-28.
- 3 Check if the leading edge of the media is curled. If it is curled, cut off the leading edge before printing.
- 4 Check if the media is wrinkled. If it is wrinkled, advance the media and cut off the part of the media that is wrinkled.
- 5 Make sure that the **media type** selected in the Front Panel is the same as the media type loaded into the Printer.
- 6 Make sure that the Center Platen is not stained with ink since this could be transferred to the printed image.

Part of Image is Missing at the Start of the Print

Corrective Action

- 1 There might be a problem between the Printer and Computer. Check the cable between the computer and the Printer to make sure it is not damaged and is connected correctly.
- 2 Make sure that the environmental conditions (temperature, humidity) are within the temperature/humidity range as specified for the Printer (refer to the User's Guide for further information).

Print Quality is not Improved After Printhead Recovery

Corrective Action

- 1** Perform the Daily Maintenance procedure (⇒ Page 9-3).
- 2** Repeat the Printhead Recovery procedure (⇒ Page 9-11) and reprint the image.
- 3** Print the Nozzle Check pattern and check if there any nozzles missing. If there are several nozzles missing and the Printhead Recovery procedure has not improved the print quality, then it might be necessary to replace the failing Printhead.

Color Density Irregularities at the Edges of the Media

Corrective Action

- 1** Check the temperature of the Heaters to make sure that they are not set too low. If necessary, raise the temperature of the Heaters and reprint the image.
- 2** If raising the temperature of the heaters does not solve the problem, it is recommended to use the Offset Media Loading option to reload the media (refer to the User's Guide for further information).

Troubleshooting Printhead Problems

If a Print Quality problem occurs, it could be due to a problem with the actual Printheads. Use this checklist to try and resolve any problems with the Printheads:

- 1 Print the Nozzle Check Pattern (⇒ Page 4-17) to verify if any Printhead Nozzle are missing. If any missing nozzles cannot be recovered, the failing Printhead may need to be replaced.
- 2 Is the problem caused by an electrical issue or by the Ink System?
 - If ALL the Printheads are faulty, then this definitely points to an electrical problem. Check all cables connected to the Printheads and from the Carriage PCA to the Main PCA to make sure that they are connected correctly and not damaged.
 - If only one Printhead is faulty, then this points to a Printhead/Ink System or electrical system problem. To check if it is an electrical problem, swap the connector on the faulty Printhead with a connector from a working Printhead. If the Printhead continues to be faulty, then this definitely points to a Printhead Problem.
- 3 How to check if the Ink System is defective?
 - Verify that the ink is being absorbed. If not, then you will need to check the Capping Station, Capping Unit or Ink Tubes.
 - Verify if there is air in the Ink Tube. If there is air in the Ink Tube, then you will need to refill the sub-tank, replace the Capping Unit, tighten the Tube joints or replace the Printhead.
- 4 If a Printhead is actually defective.
 - Perform the Printhead Recovery procedure.
 - Perform the Fill Cap procedure.
 - Purge the Ink System ⇒ Page 4-25.
 - Charge the Ink System with new ink ⇒ Page 4-23.
- 5 If a problem occurs due to a Printhead rubbing or a Media crash.
 - Check the Printhead Nozzle plate for any damage.
 - Check the carriage Height and adjust it if necessary ⇒ Page 5-5.
 - Make sure that the Media is loaded correctly and that the Media Edge Guards are correctly positioned.
 - Check the flatness of the Center Platen and adjust if necessary ⇒ Page 5-45.
- 6 If the amount of missing nozzles increases while printing.
 - Check the voltage of the Printhead and if necessary adjust it ⇒ Page 4-22.
 - Clean any dust that is on the media passing through the Media Feed side.
 - Check for jagged edges on the Media that could cause friction against the Printheads.
 - Clean the Capping Units and the Wiper Blade.
 - Change the settings for the Printhead Cleaning cycle ⇒ **Media Reg Menu / PH Cleaning / During Print** or **During Print2**.
- 7 Make sure that there is no ink on the Printhead Connector Cable or the Carriage Cable.





Parts and Diagrams

7

- Right Hand Covers 7-2
- Left Hand Covers 7-4
- Center Covers 7-6
- Electronics Module 7-8
- Control Panels 7-10
- Carriage Assembly 7-12
- Scan-Axis Assemblies 7-14
- Paper Path Assemblies 7-16
- Media Entry Assemblies 7-18
- Take-Up-Reel Assemblies 7-20
- Capping Assemblies 7-22
- Wiping Assemblies 7-24
- Ink Supply and Subtank Assemblies 7-26
- Printer Stand and Waste Bottle 7-28
- Media Feed and TUR Sensors 7-30
- Accessories 7-32
- Service Tools 7-34

Right Hand Covers

Right Hand Covers			
Reference on Drawing	HP Part Number	Quantity	Description/Comments
1	Q6665-60011	2	Top Side Cover
2	Q6693-60003	2	Upper Side Cover
3	Q6665-60008	2	Lower Side Cover
4	Q6665-60005	1	Capping Door
5	Q6665-60006	1	Lower Capping Cover
6	Q6693-60004	1	Right Subtank Cover
7	Q6665-60014	1	Right Ink Cartridge Door
8	Q6665-60016	4	Side Ink Cartridge Cover
9	Q6693-60007	1	Right Rear Ink Cartridge Cover

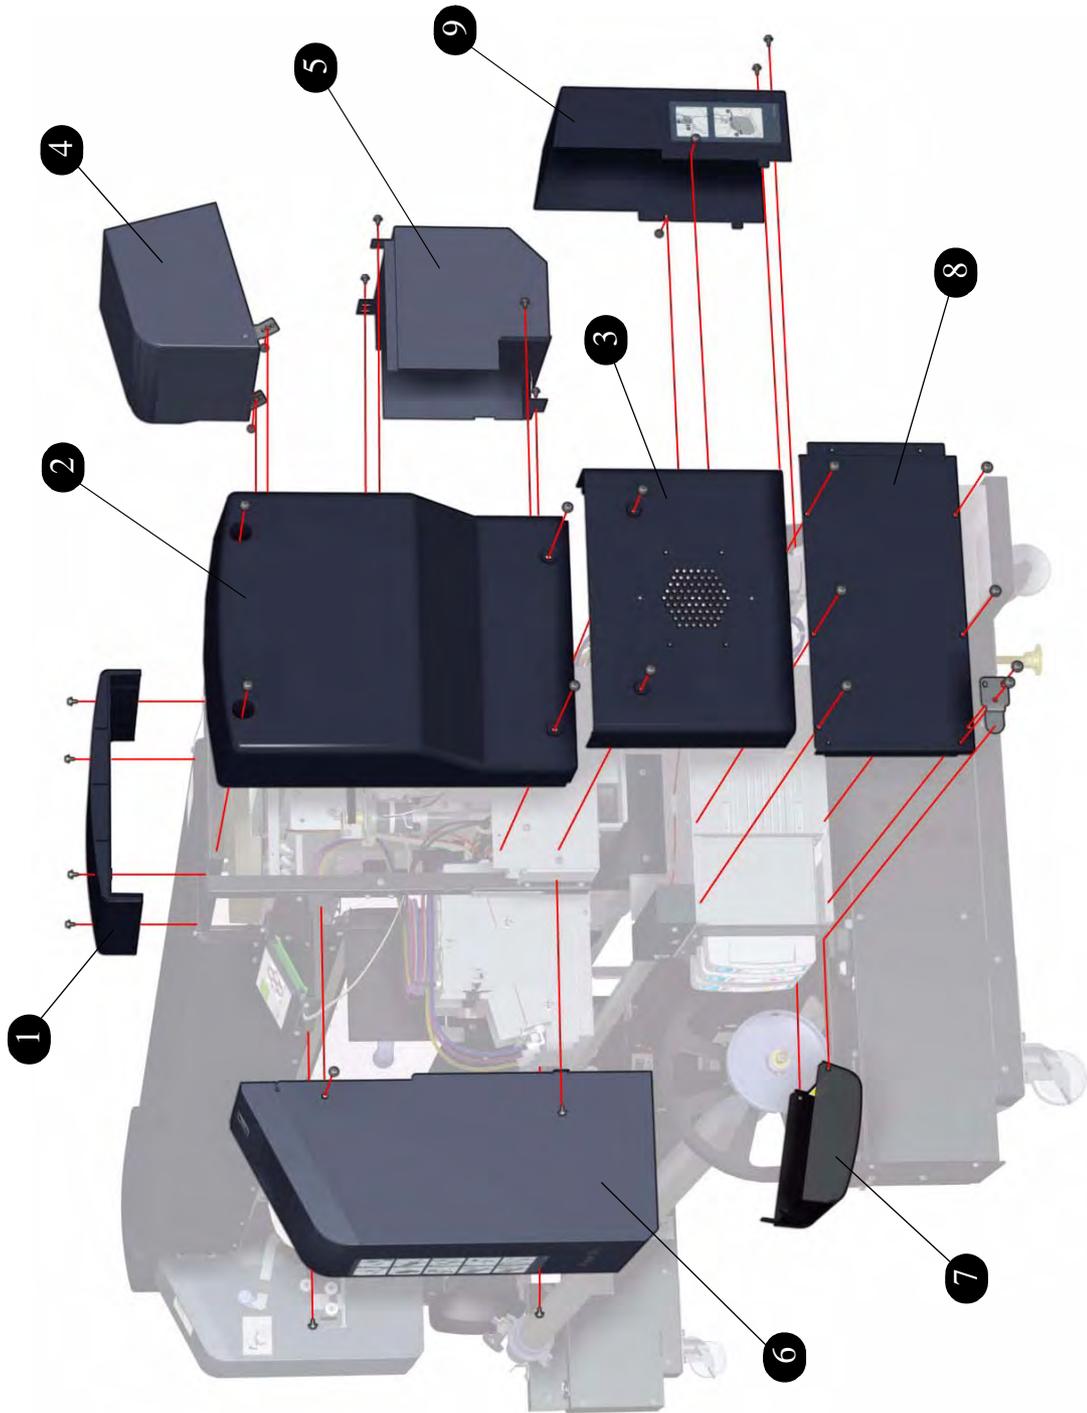


Figure 1: Right Hand Covers

Left Hand Covers

Left Hand Covers			
Reference on Drawing	HP Part Number	Quantity	Description/Comments
1	Q6665-60011	2	Top Side Cover
2	Q6665-60007	2	Upper Side Cover
3	Q6665-60008	2	Lower Side Cover
4	Q6693-60001	1	Wiping Door
5	Q6665-60003	1	Lower Wiping Cover
6	Q6693-60005	1	Left Subtank Cover
7	Q6665-60015	1	Left Ink Cartridge Door
8	Q6665-60016	4	Side Ink Cartridge Cover
9	Q6665-60081	1	Left Rear Ink Cartridge Cover

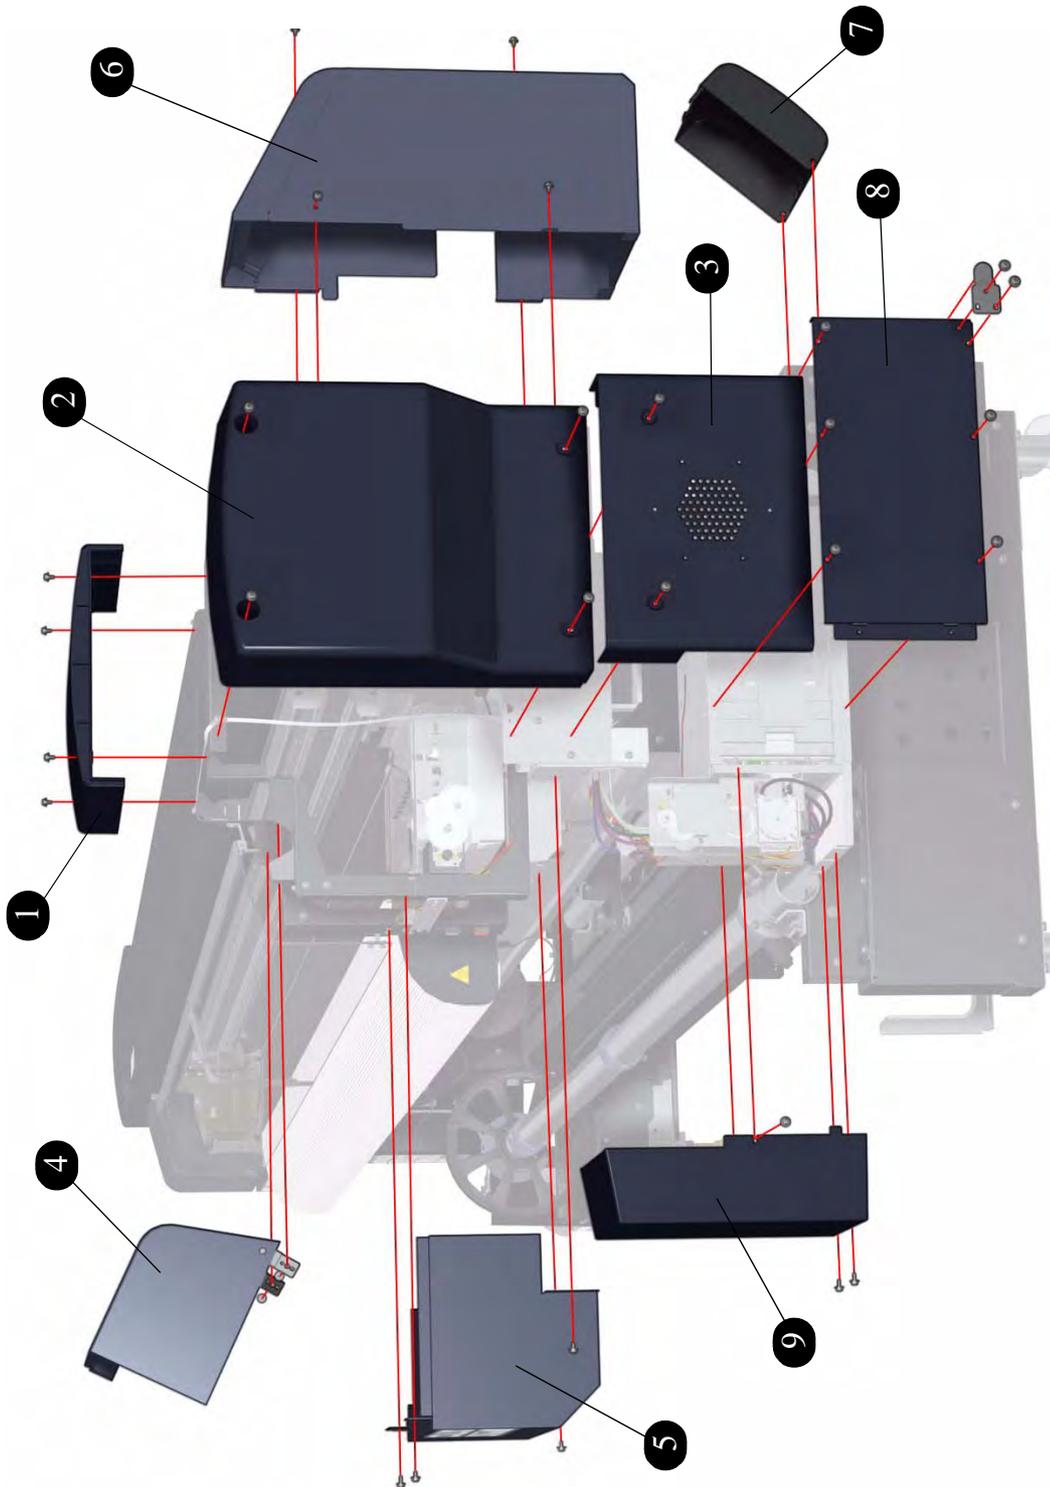


Figure 2: Left Hand Covers

Center Covers

Center Covers			
Reference on Drawing	HP Part Number	Quantity	Description/Comments
1	Q6693-60006	1	Rear Cover ***
2	Q6693-60002	1	Top Cover ***
3	Q6693-60011	1	Electronics Module Cover ***
4	Q6665-60021	1	Firmware Access Cover

*** These parts are contained in boxes that measure at least 3 meters, so should be dispatched directly from the parts stock to the customer.

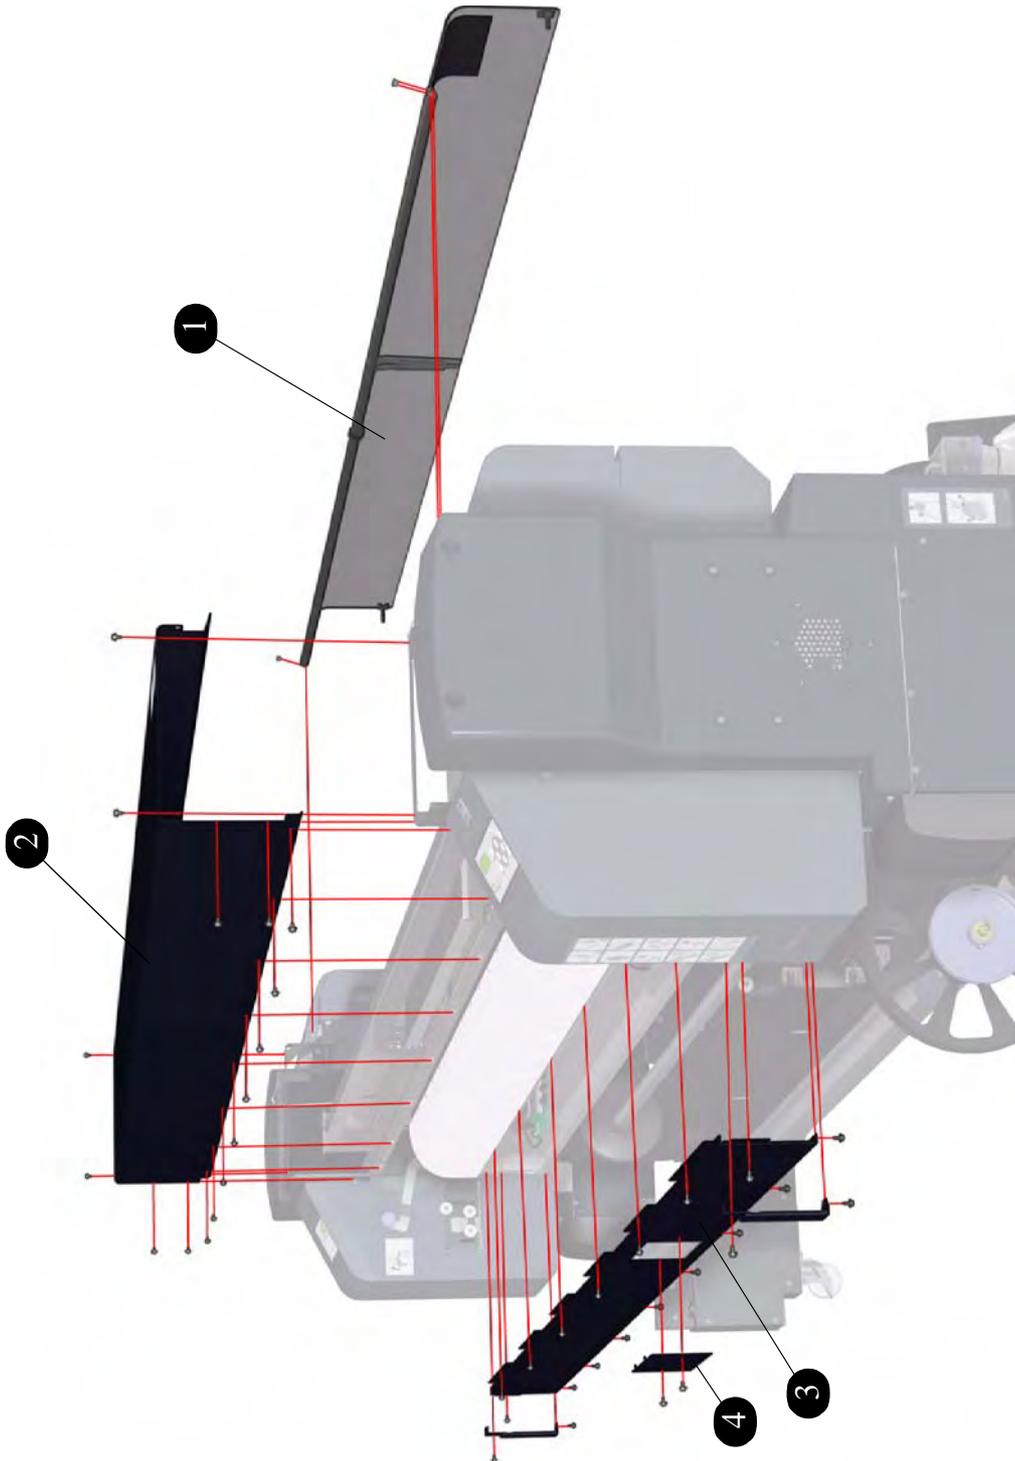


Figure 3: Center Covers

Electronics Module

Electronics Module			
Reference on Drawing	HP Part Number	Quantity	Description/Comments
1	Q6693-60010	1	Power Supply Unit
2	Q6665-60017	1	NVRAM
3	Q6693-60008	1	Main PCA
4	Q6665-60019	1	Head Relay Board
5	Q6693-60009	1	Heater Relay Assembly
6	Q6693-60031	1	Add-on (HEB2) Control PCA
7	Q6693-60032	1	Switching Power Supply

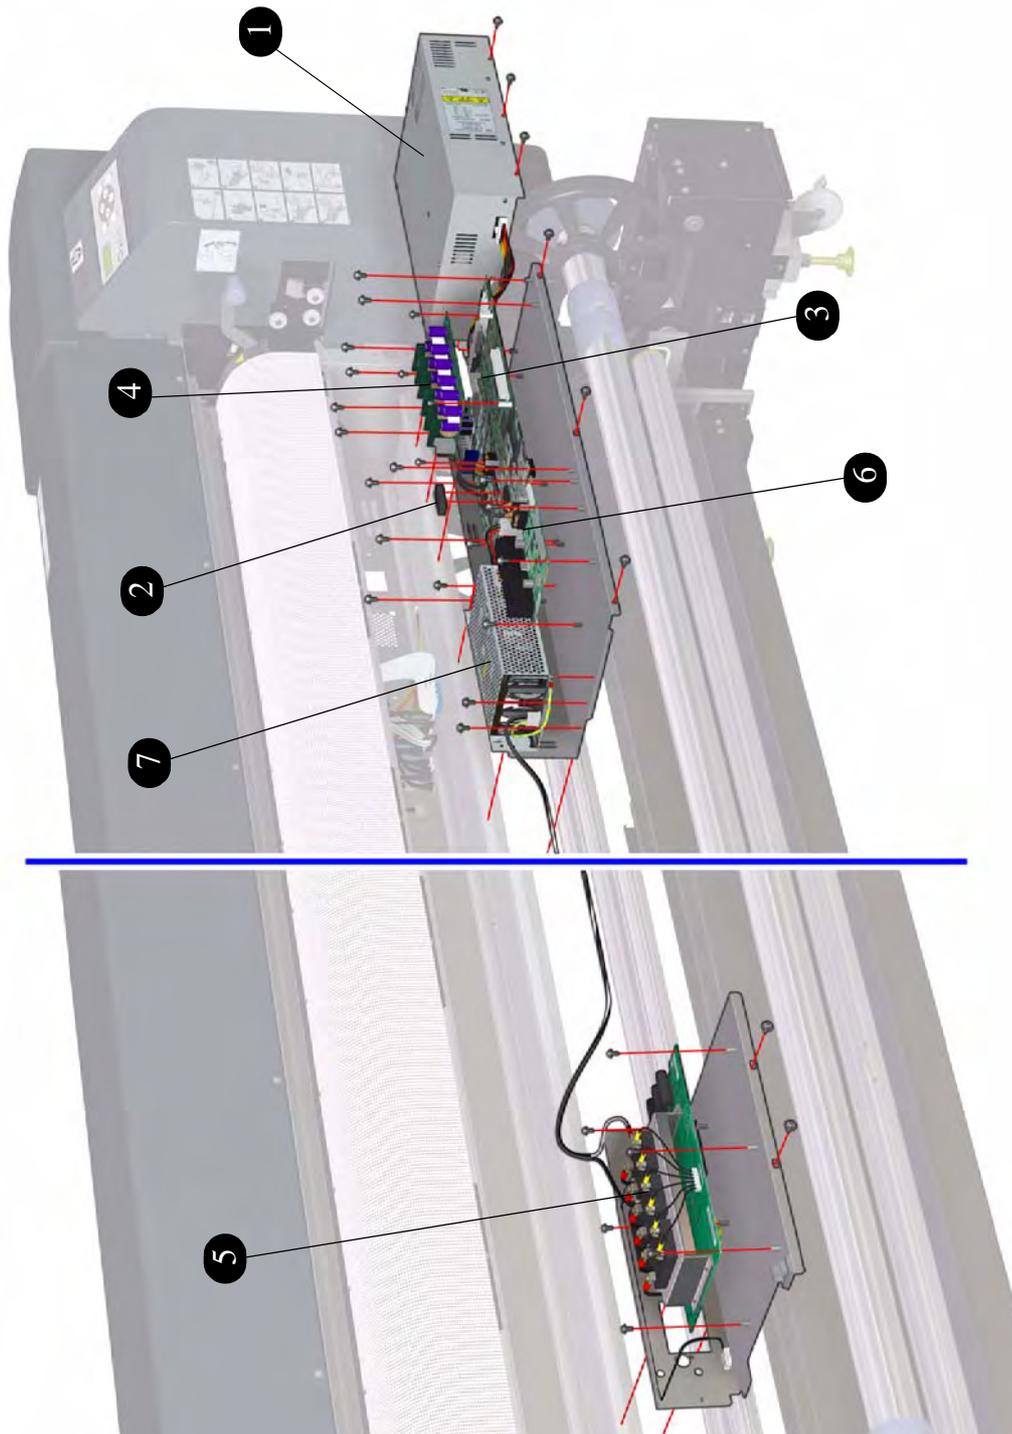


Figure 4: Electronics Module

Control Panels

Control Panels			
Reference on Drawing	HP Part Number	Quantity	Description/Comments
1	Q6665-60027	1	Front Panel
2	Q6665-60025	1	Heater Panel

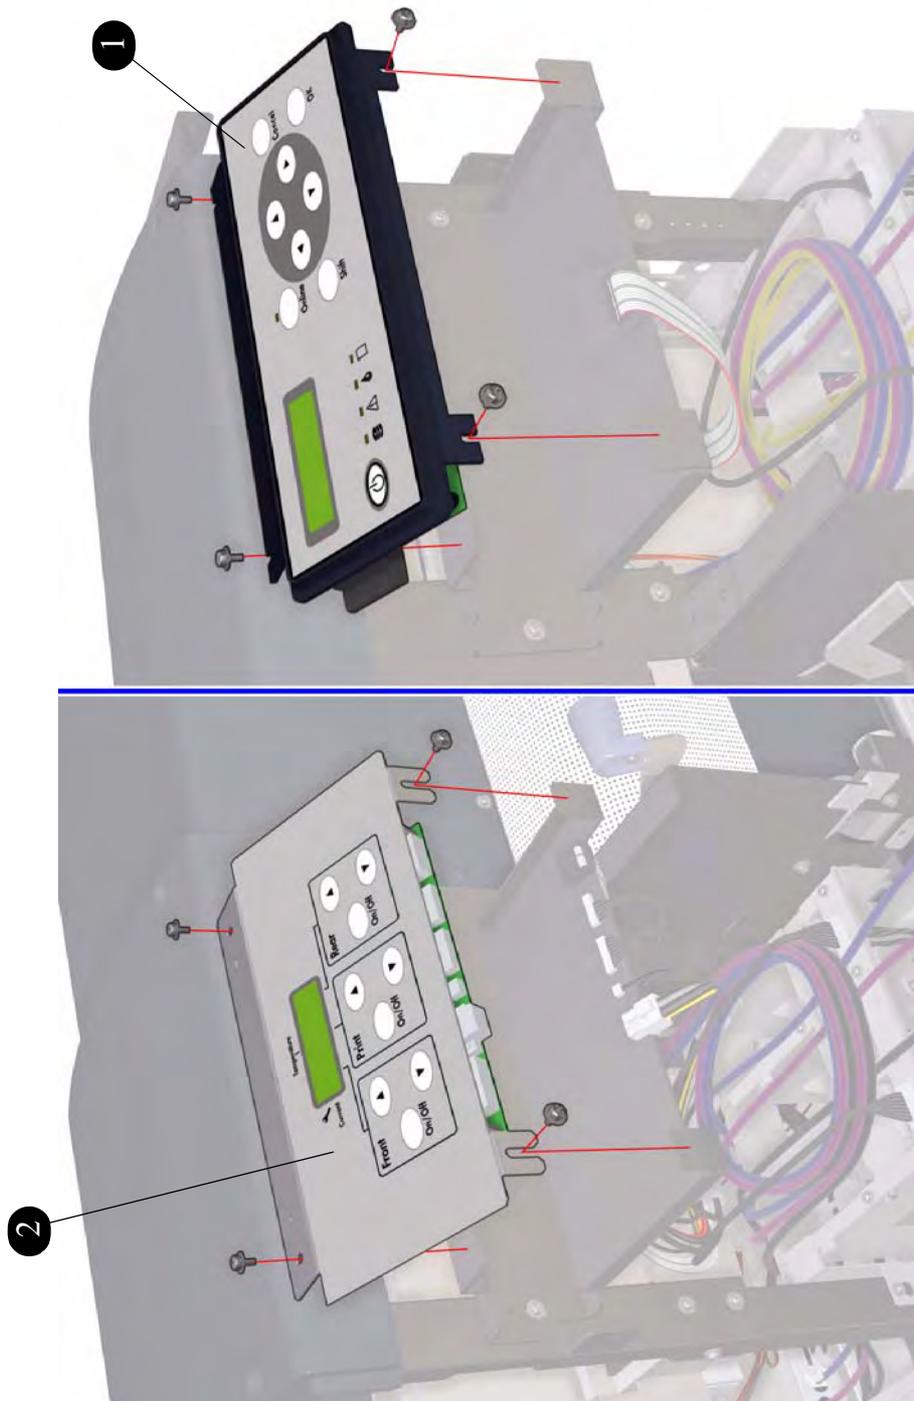


Figure 5: Control Panels

Carriage Assembly

Carriage Assembly			
Reference on Drawing	HP Part Number	Quantity	Description/Comments
1	Q6665-60052	2	Printhead Cooling Fan
2	Q6665-60048	1	Carriage PCA
3	Q6665-60001	6	Printhead (does not include the Printhead Connector Assembly)
4	Q6665-60047	6	Printhead Connector Assembly (comes in a kit of 3 Cables - one for the left hand Printhead, one for the Center Printhead and one for the right hand Printhead).
5	Q6665-60049	1	Encoder Sensor
6	Q6665-60050	1	Line Sensor
7	Q6693-60021	6	Air Damper Kit
8	Q6693-60018	1	Encoder Strip
9	Q6665-60026	1	Carriage Home Position Sensor
10	Q6693-60039	1	Discharge Brush

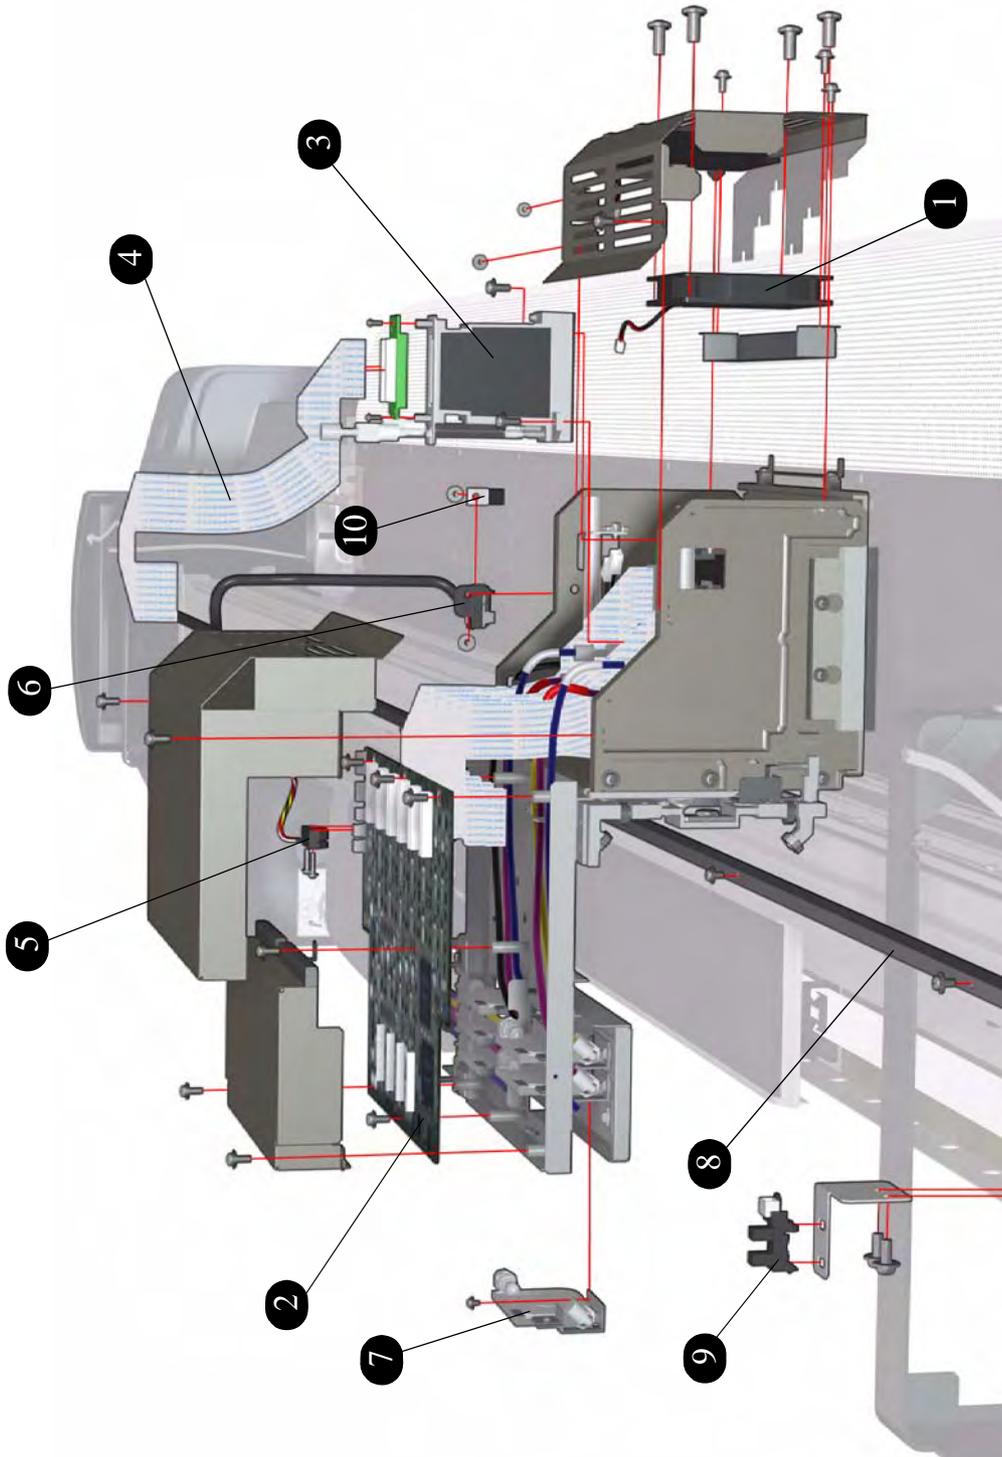


Figure 6: Carriage Assembly

Scan-Axis Assemblies

Scan-Axis Assemblies			
Reference on Drawing	HP Part Number	Quantity	Description/Comments
1	Q6693-60020	1	Trailing Cable Assembly
2	Q6693-60019	1	Belt
3	Q6665-60045	1	Tension Pulley
4	Q6665-60043	1	Drive Pulley
5	Q6665-60044	1	Scan-Axis Motor Assembly

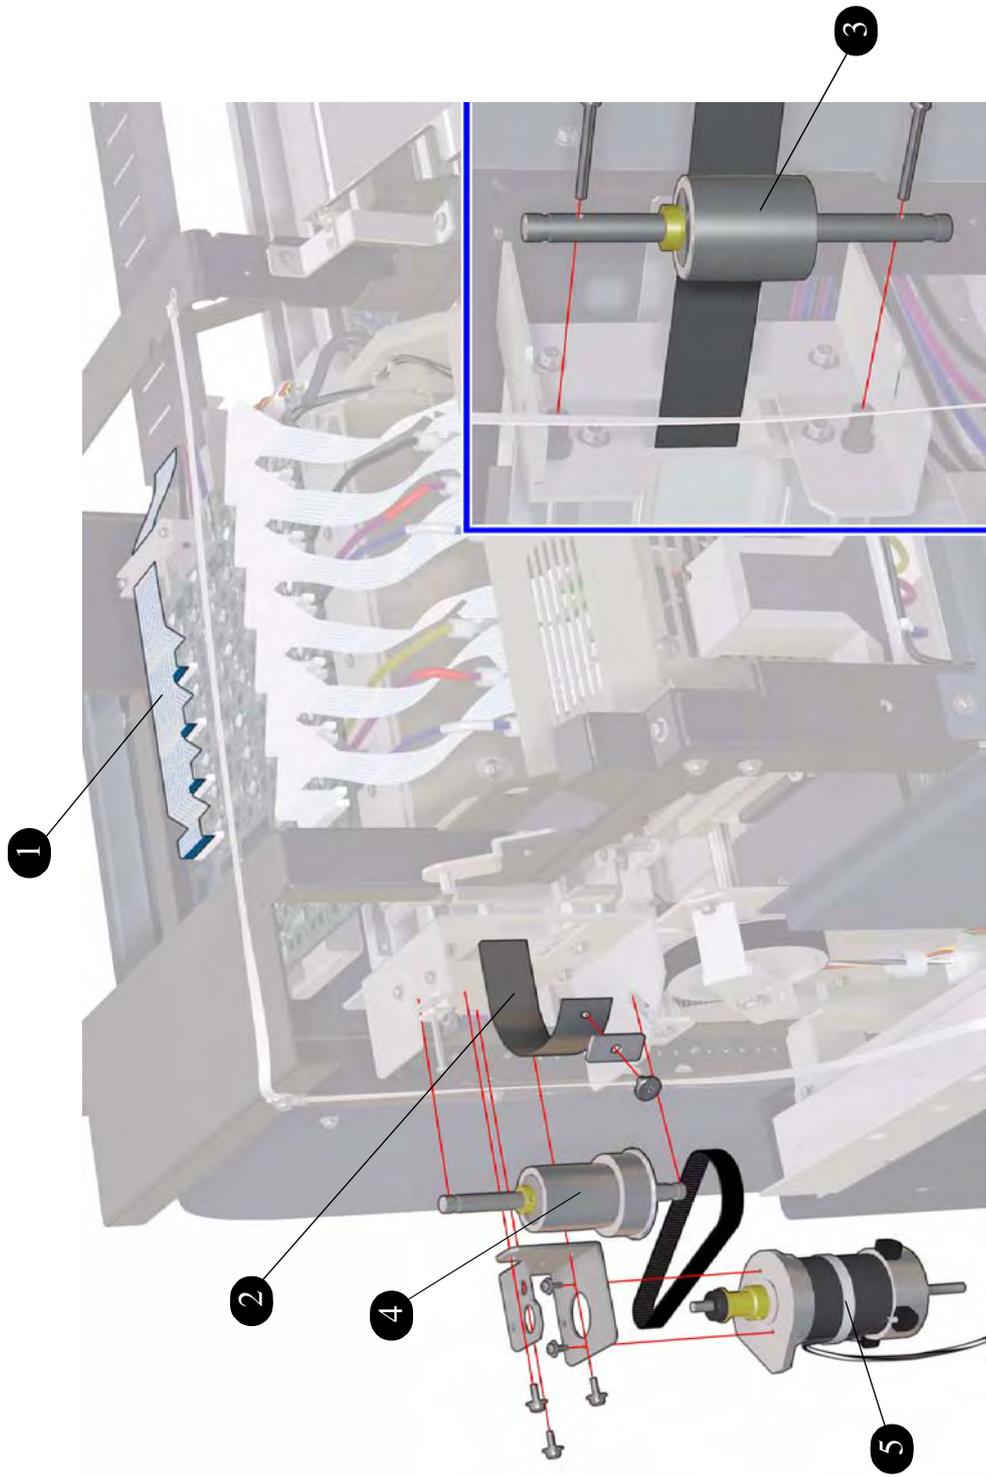


Figure 7: Scan-Axis Assemblies

Paper Path Assemblies

Paper Path Assemblies			
Reference on Drawing	HP Part Number	Quantity	Description/Comments
1	Q6693-60013	1	Front Heater ***
2	Q6693-60012	1	Center Platen ** ***
3	Q6693-60014	1	Rear Heater ***
4	Q6665-60030	7	Vacuum Fan
5	Q6693-60016	1	Paper-Axis Motor (includes Belt, Gear, Spring, Washer and Bearing)
6	Q6665-60028	2	Media Edge Guard
7	Q6693-60017	40	Pinch Roller Kit
8	Q6693-60060	40	Pinch Roller Blade
9	Q6665-60033	2	Media Sensor (Front and Rear)
10	Q6665-60026	1	Media Lever Sensor
11	Q6693-60015	1	Front and Rear Net Kit
12	Q6665-60034	2	Lever Knob
13	Q6693-60038	1	Media Drive Roller ** ***

** When ordering the Center Platen or the Media Drive Roller, you MUST also order the Platen Flatness Adjustment Tools (Part Number Q6693-60037). Also, due to the size and weight of the Center Platen and the Media Drive Roller, two Customer Engineers are required when installing these parts.

*** These parts are contained in boxes that measure at least 3 meters, so should be dispatched directly from the parts stock to the customer.

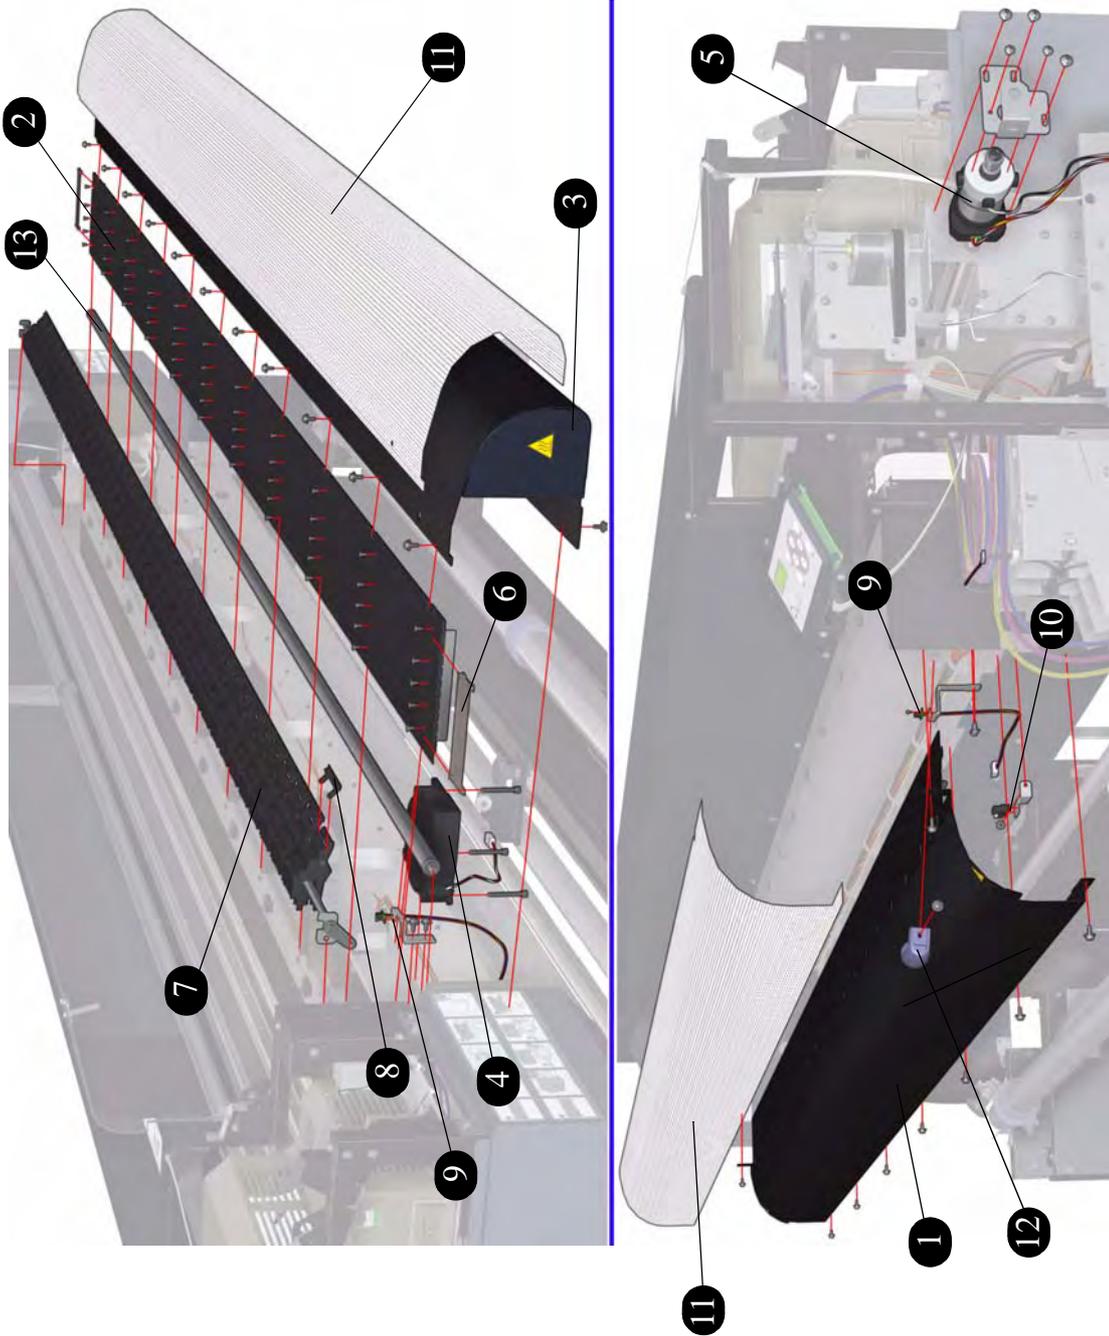


Figure 8: Paper Path Assemblies

Media Entry Assemblies

Media Entry Assemblies			
Reference on Drawing	HP Part Number	Quantity	Description/Comments
1	Q6693-60028	1	Feeder Drive Unit Assembly
2	Q6693-60029	1	Left Bottom Leg Covers (Front and Rear)
3	Q6693-60030	2	Media Scroller Support
4	Q6693-60034	2	Roller (for Feed/TUR Unit)
5	Q6693-60059	1	Timing Belt (for Feed/TUR Unit)

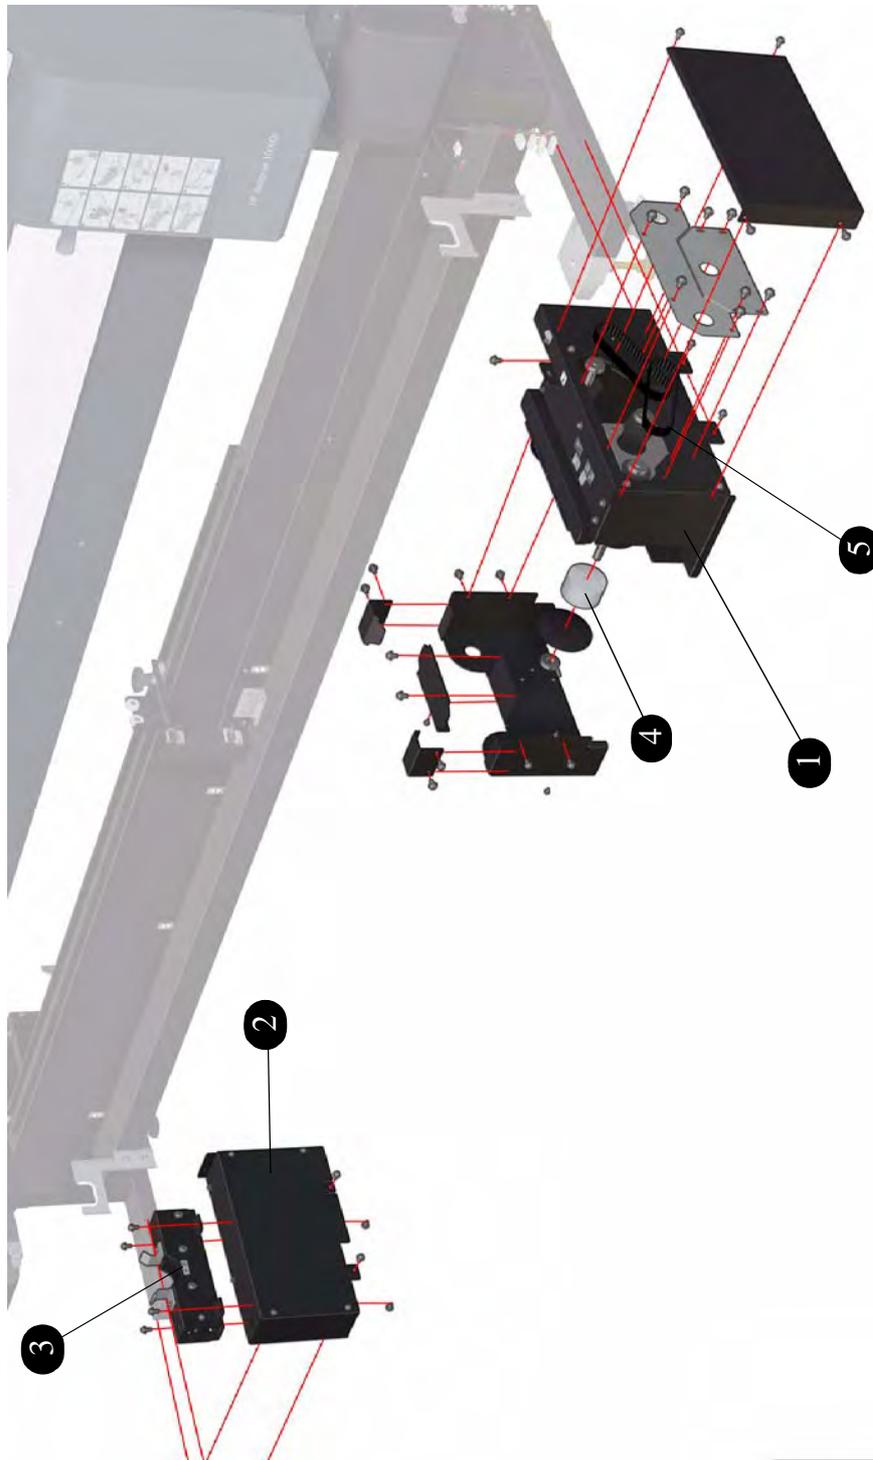


Figure 9: Media Entry Assemblies

Take-Up-Reel Assemblies

Take-Up-Reel Assemblies			
Reference on Drawing	HP Part Number	Quantity	Description/Comments
1	Q6693-60027	1	Take-Up-Reel Drive Unit Assembly
2	Q6693-60029	1	Left Bottom Leg Covers (Front and Rear)
3	Q6693-60030	2	Media Scroller Support
4	Q6693-60034	2	Roller (for Feed/TUR Unit)
5	Q6693-60059	1	Timing Belt (for Feed/TUR Unit)
6	Q6693-60050	1	Right Tension Bar Guide
7	Q6693-60051	1	Left Tension Bar Guide
8	Q6693-60039	1	Discharge Brush

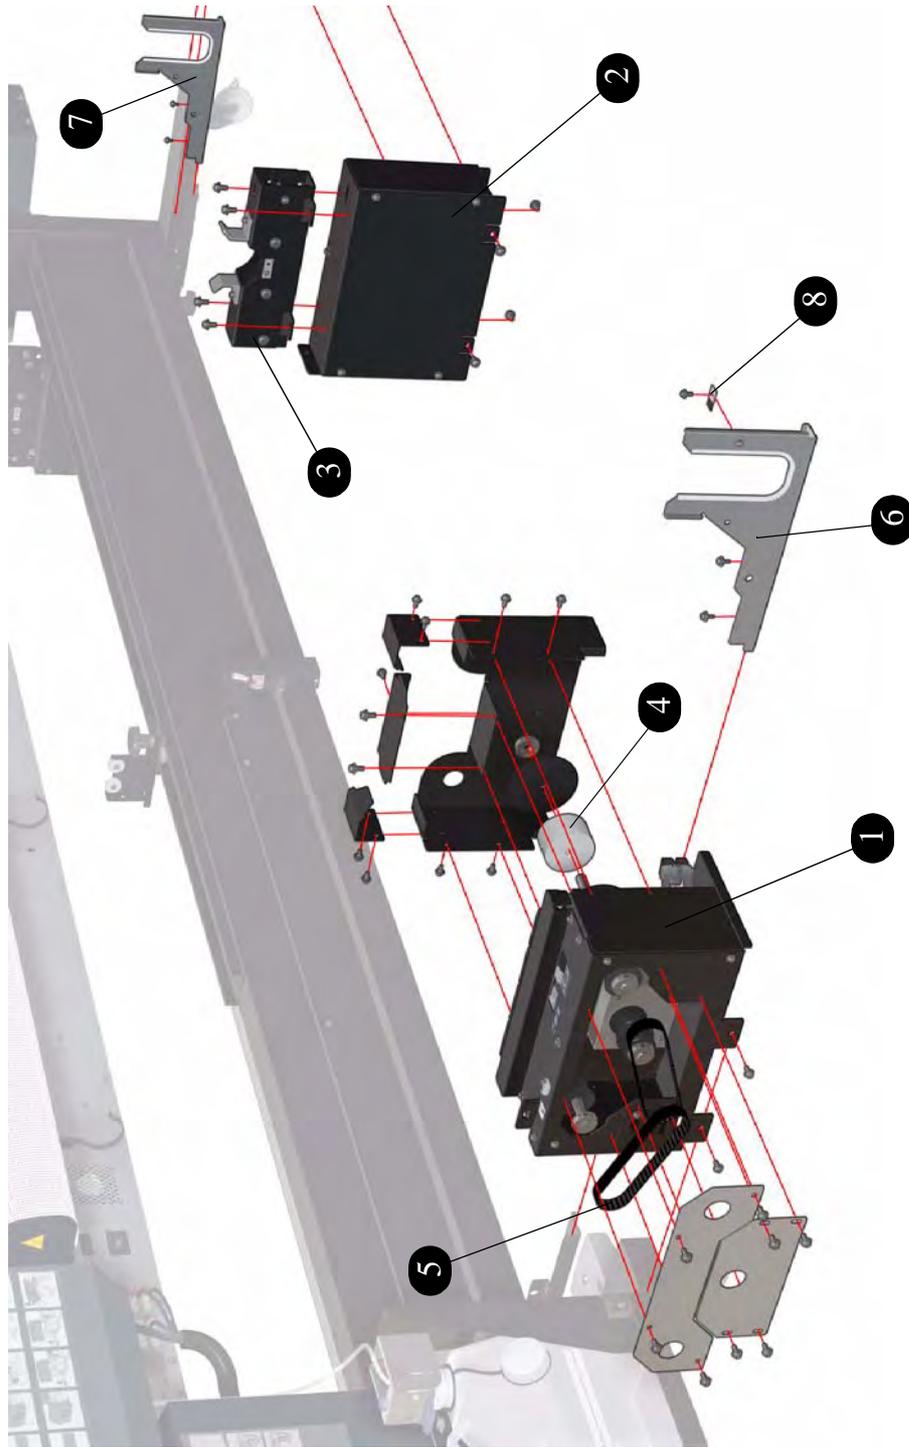


Figure 10: Take-Up-Reel Assemblies

Capping Assemblies

Capping Assemblies			
Reference on Drawing	HP Part Number	Quantity	Description/Comments
1	Q6693-60022	1	Capping Station Assembly
2	Q6665-60061	6	Capping Unit
3	Q6665-60062	2	Solenoid Assembly
4	Q6665-60063	6	Prime Assembly
5	Q6665-60024	2	Rear Cover Sensor

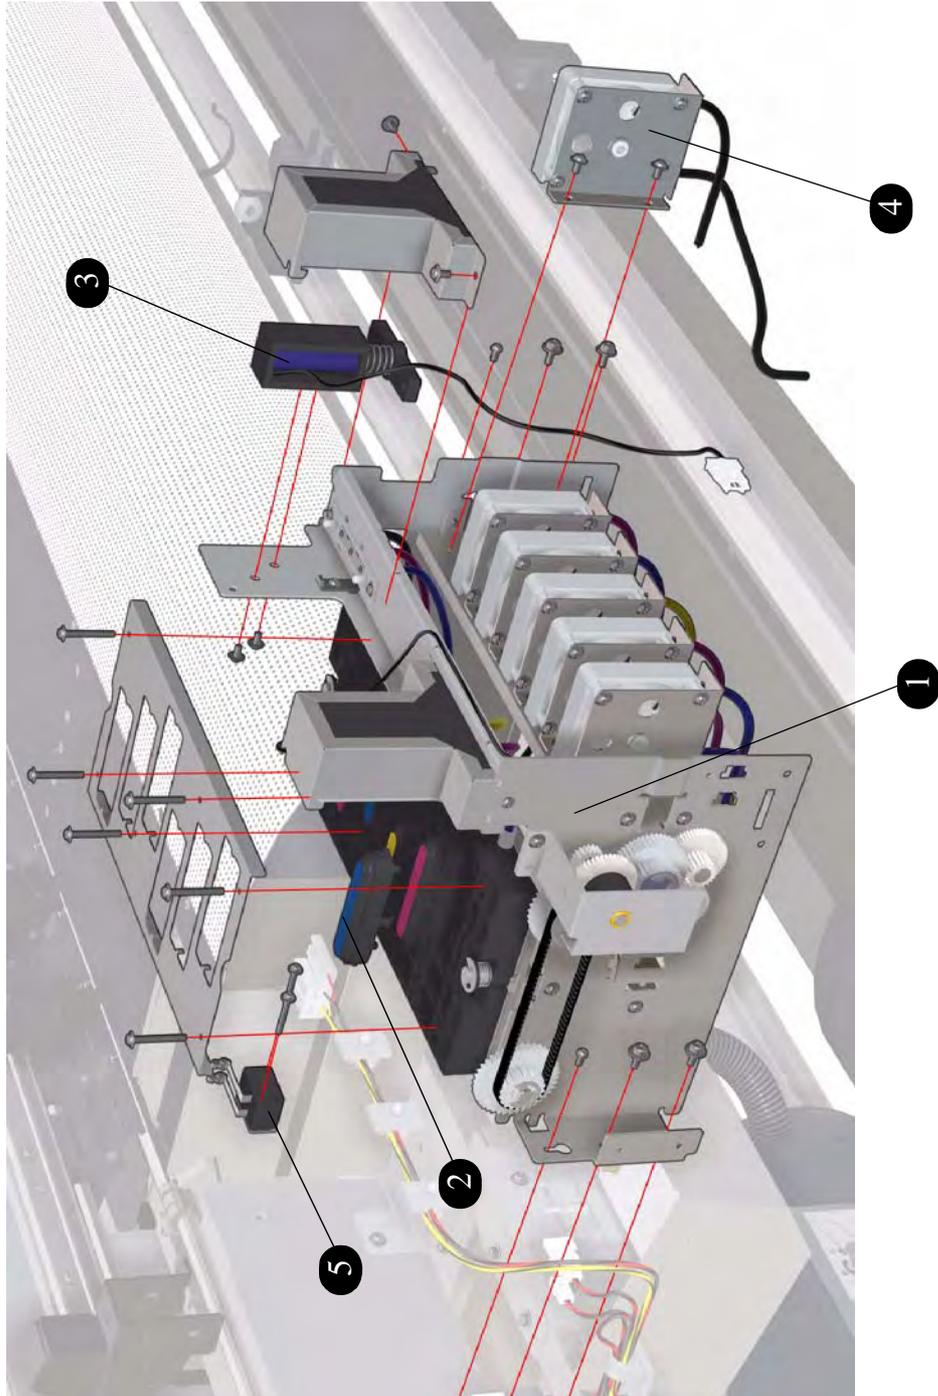


Figure 11: Capping Assemblies

Wiping Assemblies

Wiping Assemblies			
Reference on Drawing	HP Part Number	Quantity	Description/Comments
1	Q6665-60064	1	Wiping Station Assembly
2	Q6665-60066	1	Wiper Blade
3	Q6665-60067	2	Wiper Belt
4	Q6665-60065	1	Wiper Cleaning Assembly
5	Q6665-60024	2	Rear Cover Sensor

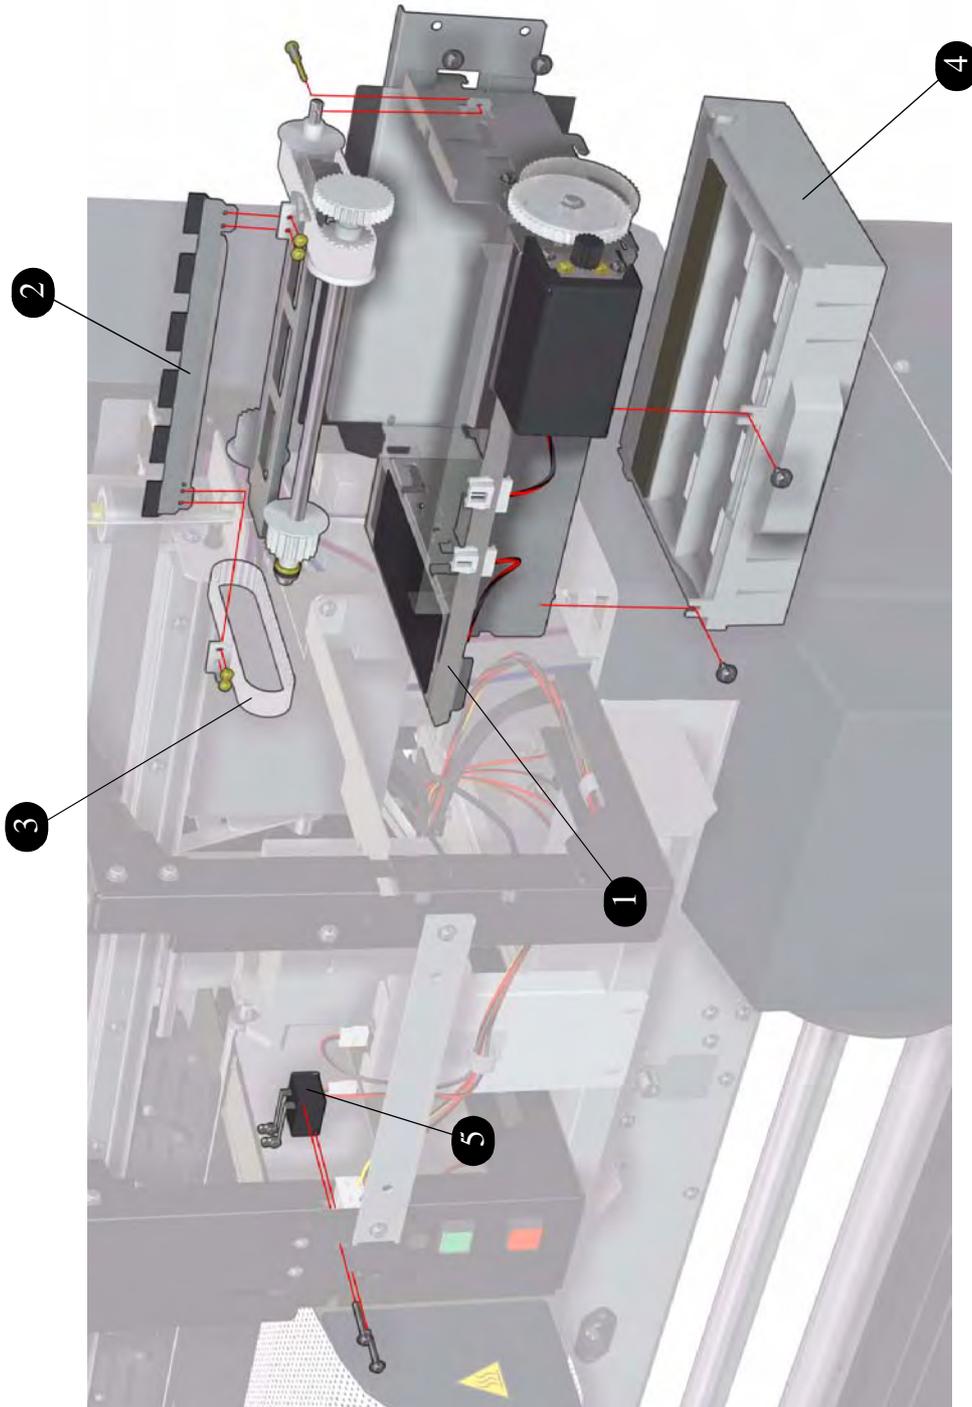


Figure 12: Wiping Assemblies

Ink Supply and Subtank Assemblies

Ink Supply and Subtank Assemblies			
Reference on Drawing	HP Part Number	Quantity	Description/Comments
1	Q6665-60055	1	Right Ink Supply Station
-	Q6665-60056	1	Left Ink Supply Station
2	Q6665-60053	6	Ink Pump Assembly (includes Ink Pump Tube)
3	Q6665-60054	6	Ink Pump Tube
4	Q6665-60057	2	Ink Cartridge Door Sensor
5	Q6665-60059	6	Subtank Assembly
6	Q6665-60058	6	Subtank Sensors

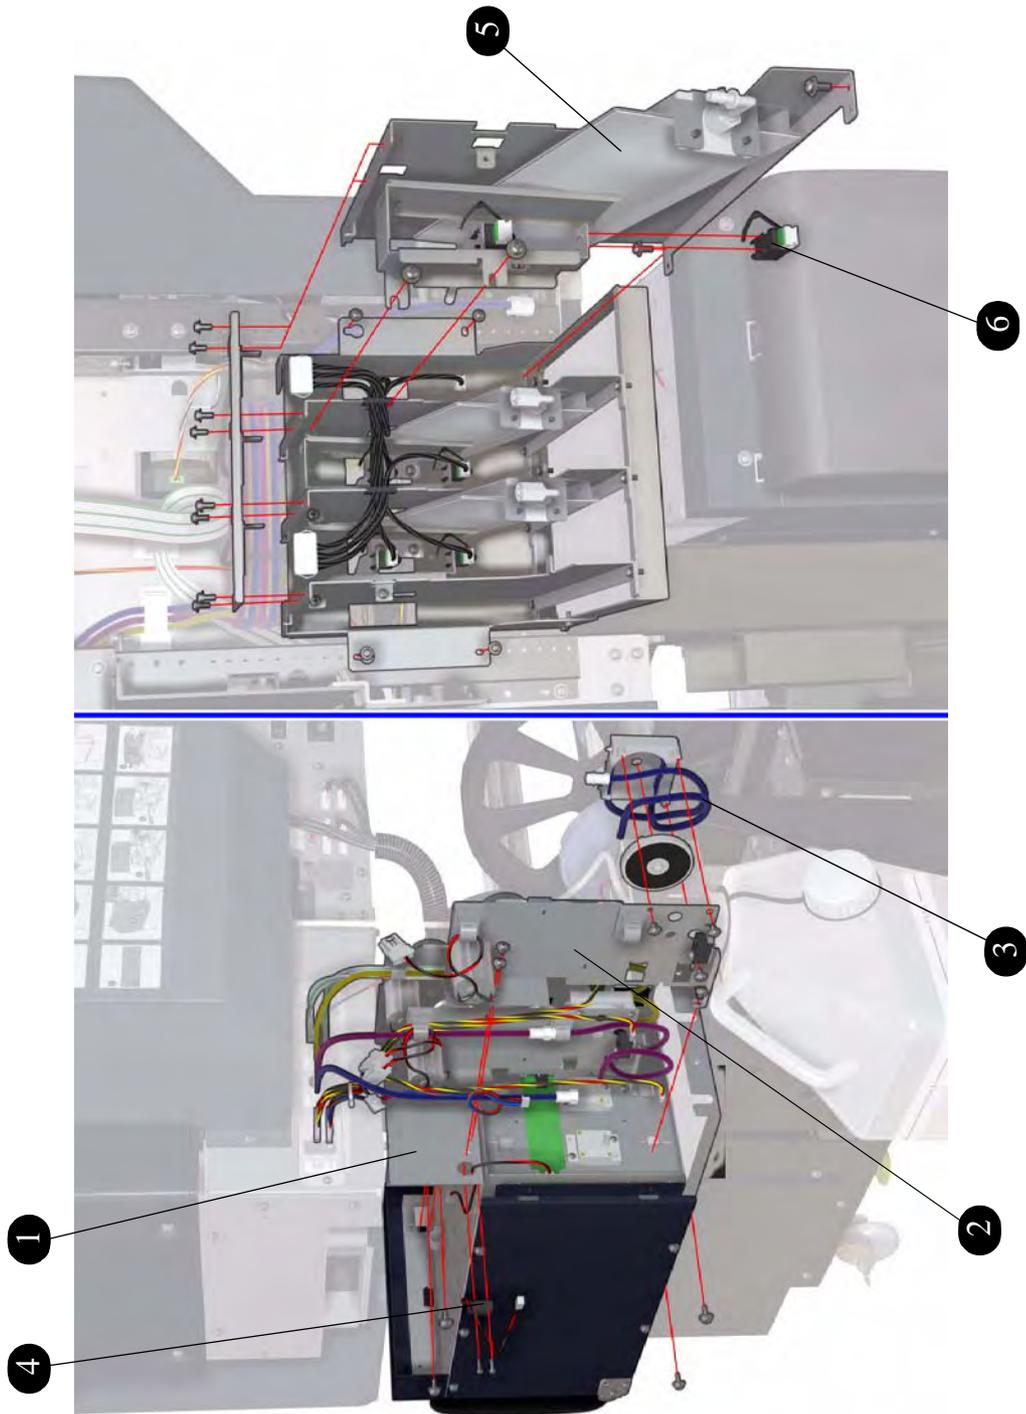


Figure 13: Ink Supply and Subtank Assemblies

Printer Stand and Waste Bottle

Printer Stand and Waste Bottle			
Reference on Drawing	HP Part Number	Quantity	Description/Comments
1	Q6693-60023	1	Foot Casters
2	Q6665-60068	1	Waste Bottle
3	Q6665-60057	1	Waste Bottle Sensor
4	Q6693-60025	1	Waste Bottle Holder Assembly and Sensor

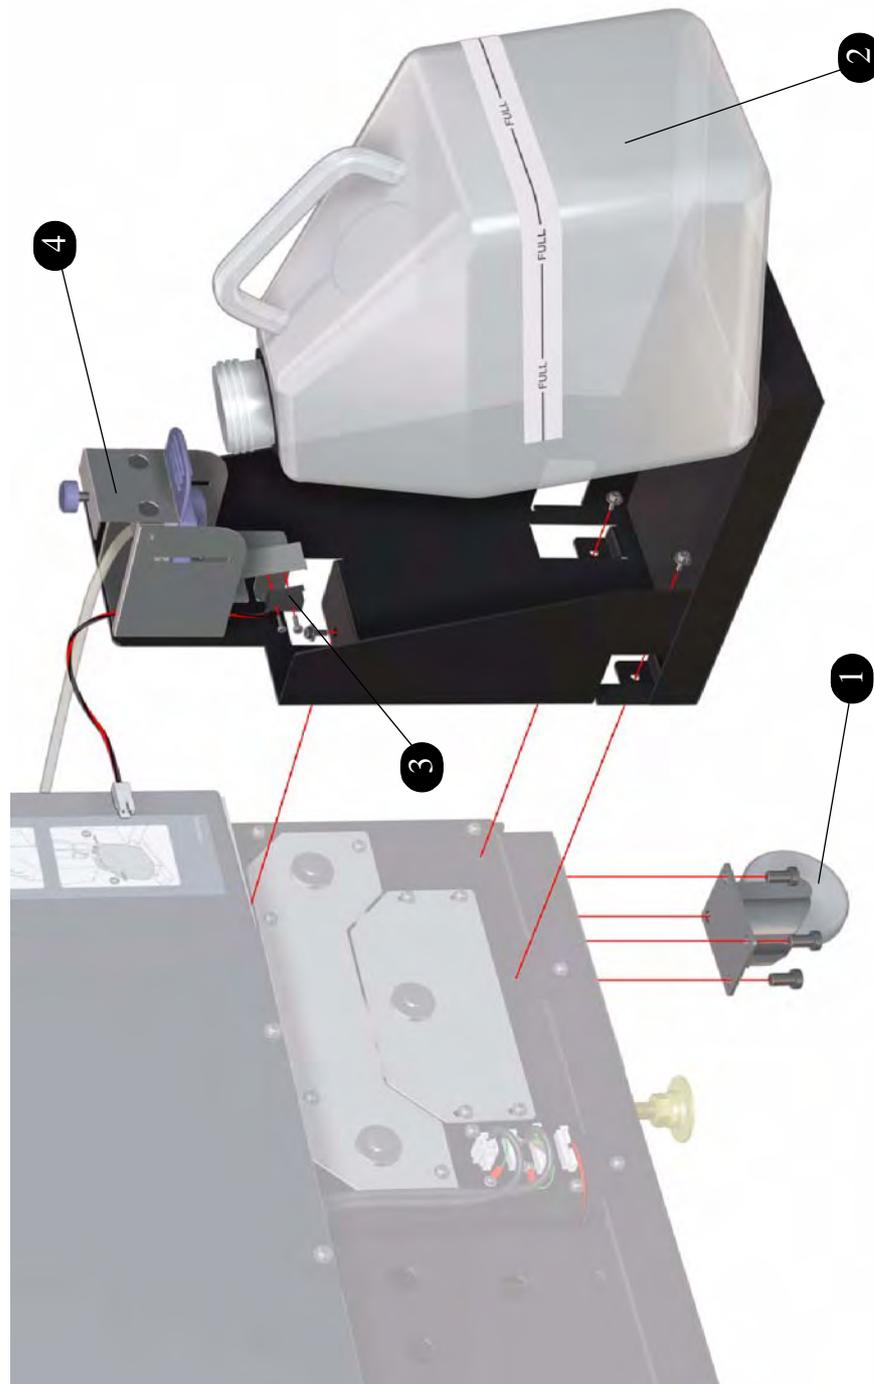


Figure 14: Printer Stand and Waste Bottle

Media Feed and TUR Sensors

Media Feed and TUR Sensors			
Reference on Drawing	HP Part Number	Quantity	Description/Comments
1	Q6693-60033	1	Media Sensor Kit (Includes 2 Receiving Units and 2 Emitting Units)

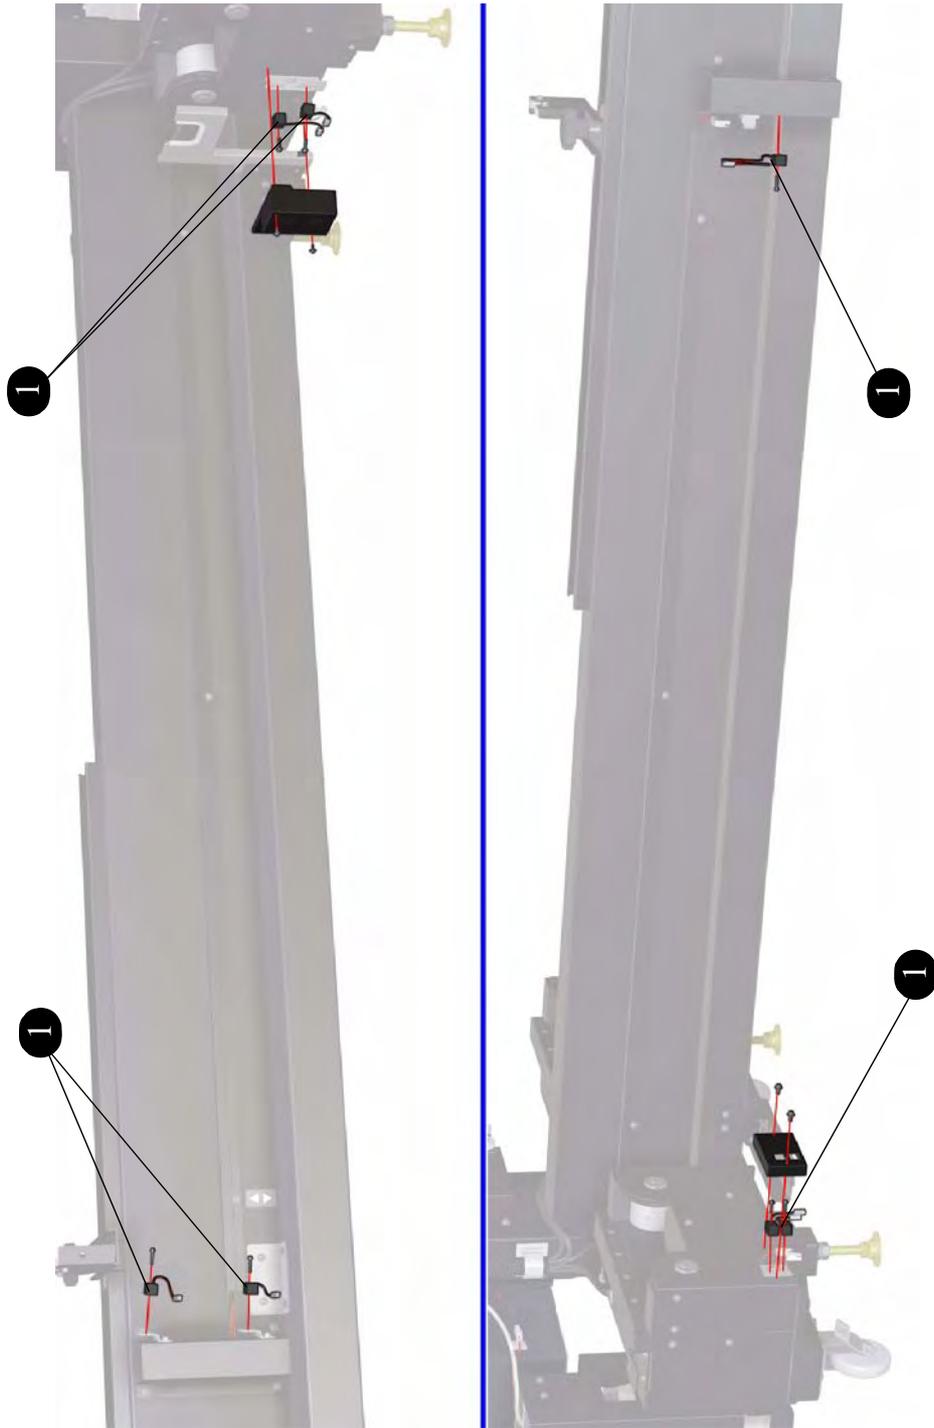


Figure 15: Media Feed and TUR Sensors

Accessories

Accessories			
Reference on Drawing	HP Part Number	Quantity	Description/Comments
1	Q6693-60047	2	Main Scroller ***
2	Q6693-60048	1	Sub Scroller ***
3	Q6693-60049	1	Tension Bar Kit
4	Q6693-60054	2	Foot Switch
5	Q6693-60057	1	Sub Scroller Holder Assembly
6	Q6693-60055	4	Flange Spacer
7	Q6693-60056	4	Flange Stopper
8	Q6693-60041	2	Subscroller Flange
-	Q6693-60040	1	Edge Guard Kit (when using a Liner)
-	Q6693-60042	1	Edge Guard Kit for Dual-Roll Printing
-	Q6693-60046	1	Liner Separator Bar Set ***
-	Q6693-60052	1	Paper Tube Flanges Kit
-	Q6693-60053	1	Paper Set Gauge
-	Q6693-60058	1	Flange Joint
-	C7790-60425	1	USB Cable (5 m)

*** These parts are contained in boxes that measure at least 3 meters, so should be dispatched directly from the parts stock to the customer.

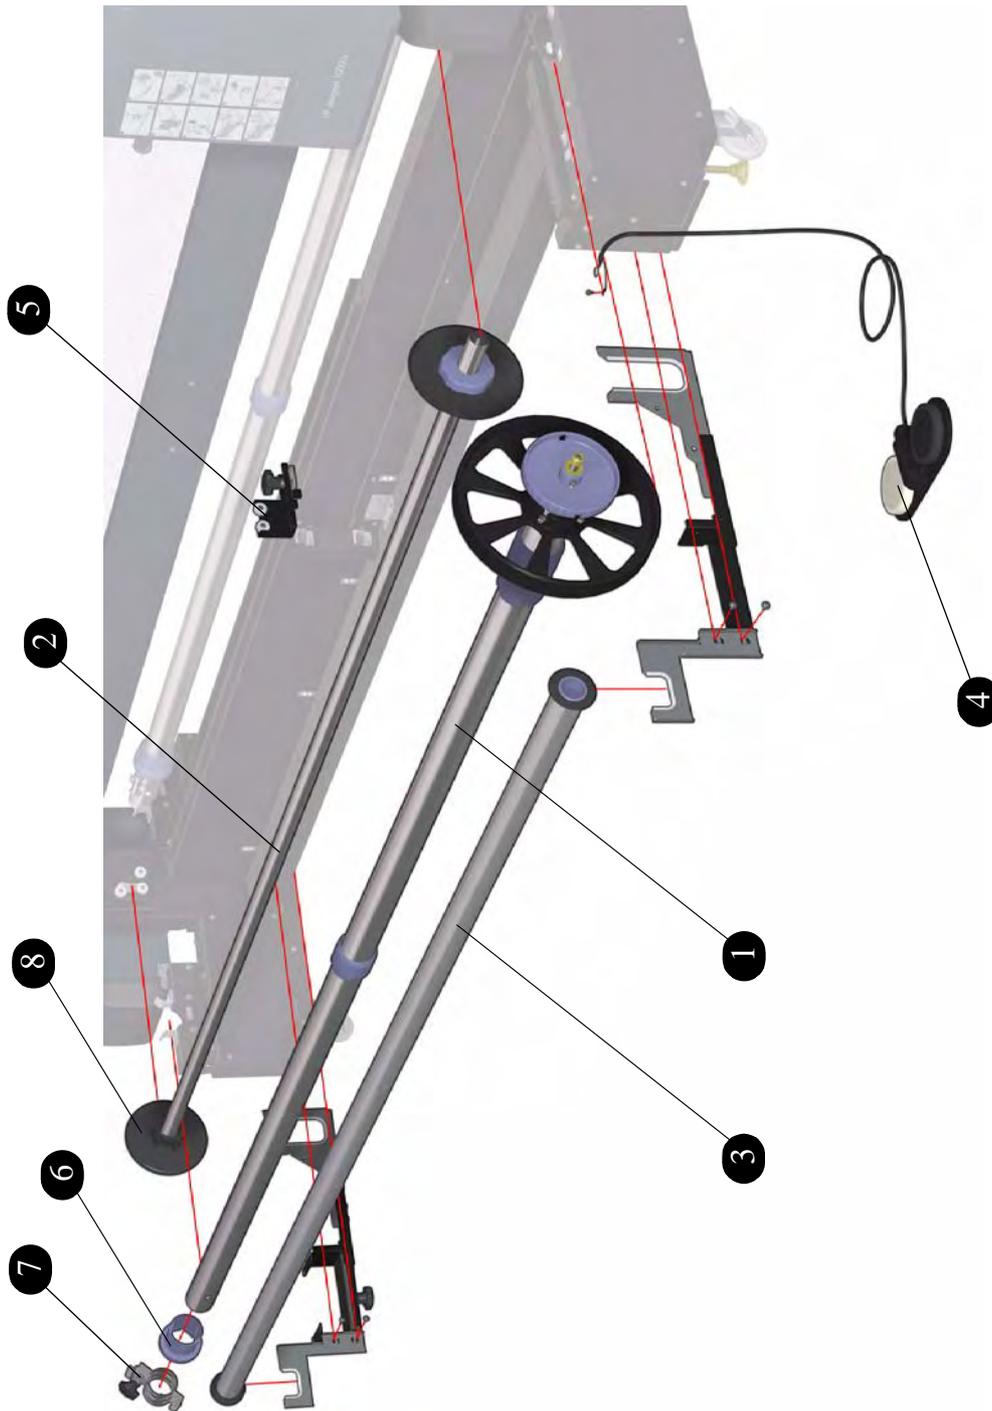


Figure 16: Accessories

Service Tools

Service Tools			
Reference on Drawing	HP Part Number	Quantity	Description/Comments
1	Q6693-60024	1	Carriage Height Adjustment Tools
2	Q6665-60071	1	Printhead Position Adjustment Tools
3	Q6665-60075	1	Capping Height Adjustment Tools
4	Q6693-60037	1	Platen Flatness Adjustment Tools (includes Shims and Dummy Heater Sensor). Shims included are: <ul style="list-style-type: none"> ■ 30 small Shims 0.1 mm (100 μm). ■ 30 small Shims 0.2 mm (200 μm). ■ 15 large Shims 0.1 mm (100 μm). ■ 15 large Shims 0.2 mm (200 μm).

If any of the above tools are required, please contact the HP Response Center or the nearest HP Support Office.

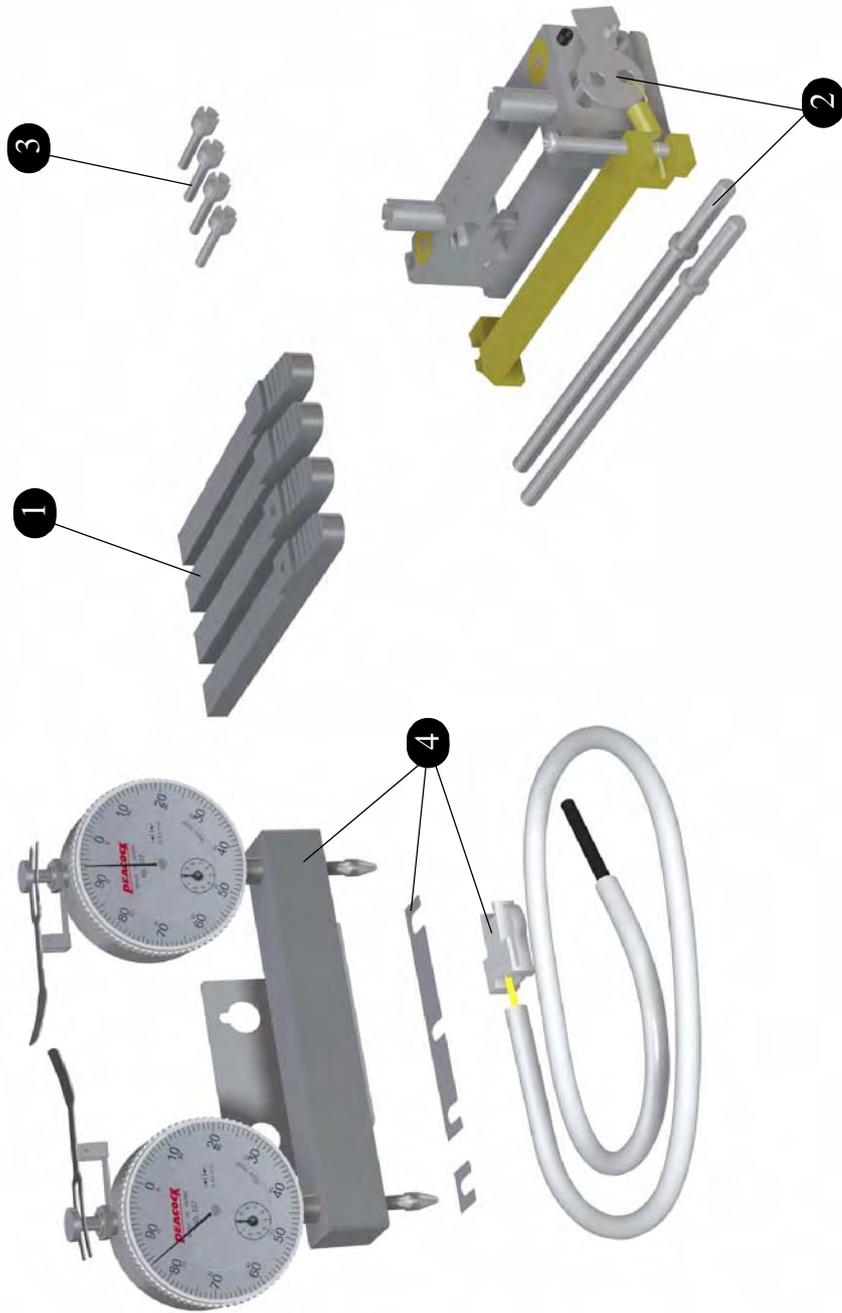


Figure 17: Service Tools



Removal and Installation

8

Introduction	8-2
Covers	8-3
Front Panel	8-25
Heater Panel	8-27
Front Heater	8-29
Rear Heater	8-32
Center Platen	8-34
Vacuum Fan	8-35
Main PCA	8-36
NVRAM	8-41
Head Relay Board	8-42
Add-On (HEB2) Control PCA	8-45
Switching Power Supply Unit	8-47
Power Supply Unit	8-50
Heater Relay Assembly	8-52
Waste Bottle Sensor	8-54
Front Media Sensor	8-56
Rear Media Sensor	8-58
Media Lever Sensor	8-59
Rear Cover Sensor	8-61
Home Position Sensor	8-66
Paper-Axis Motor and Belt	8-68
Scan-Axis Motor and Belt	8-72
Carriage Drive Assembly (Includes Carriage Belt)	8-75
Encoder Strip	8-78
Trailing Cable	8-79
Printhead Cooling Fans	8-87
Printhead	8-91
Printhead Connector Assembly	8-94
Carriage PCA	8-96
Air Damper	8-100
Encoder Sensor	8-104
Line Sensor	8-106
Ink Pump Assembly	8-108
Ink Supply Station (Left or Right)	8-110
IC Door Sensor (Left or Right)	8-113
Subtank Sensors	8-115
Capping Station Assembly	8-120
Capping Unit	8-129
Prime Assembly	8-130
Solenoid Assembly	8-134
Waste Bottle Holder and Sensor Assembly	8-139
Wiping Station Assembly	8-145
Wiper Cleaning Assembly	8-149
Wiper Blade	8-150
Wiper Belts	8-152
Pinchwheel Assembly	8-156
Drive Roller	8-160
Media Feed Drive Unit Assembly	8-165
Take-Up-Reel Drive Unit Assembly	8-169
Drive Unit Rollers	8-174
Drive Unit Timing Belt	8-180
Media Sensors (Media End, Media Slack and Take-Up-Reel)	8-184
White Nets (For Front and Rear Heaters)	8-190
Sub-Scroller Flange	8-193

Introduction

This chapter is a step by step guide to the removal and installation of the key components in the printer. You may find it useful to tick off the steps as they are performed. Use the illustration at each procedure to identify the parts referred to in the text.

The procedures appear in order of removal. So the whole machine can be stripped down by starting at the beginning of this chapter and working through the subsequent procedures.

Before using this chapter to remove and install a new component, always make sure that you have performed the relevant service test from Chapter 4. If the test passes you will not need to replace the component.

Safety Precautions

Review WARNING and CAUTION symbols and instructions before you service the printer. Follow these warnings and cautions for your protection and to avoid damaging the printer.

Serious shock hazard leading to death or injury may result if you do not take the following precautions:

Ensure that the ac power outlet (mains) has a protective earth (ground) terminal.

Switch the Printer Off, and disconnect it from the power source prior to performing any maintenance.

Prevent water or other liquids from running onto electrical components or circuits, or through openings in the module.

Electrostatic Discharge (ESD) Precautions


To prevent damage to the Printer circuits from high-voltage electrostatic discharge (ESD):

1. Do not wear clothing that is subject to static build-up.
2. Do not handle integrated circuits (ICs) in carpeted areas.
3. Do not remove an IC or a printed circuit assembly (PCA) from its conductive foam pad or conductive packaging until you are ready to install it.
4. Ground (earth) your body while disassembling and working on the Printer.
5. After removing a cover from the Printer, attach an earthing (ground) lead between the PCA common and earth ground. Touch all tools to earth ground to remove static charges before using them on the Printer.
6. After removing any PCA from the Printer, place it on a conductive foam pad or into its conductive packaging to prevent ESD damage to any ICs on the PCA.

Rear Cover

Removal

Switch off the product and remove the power cable.

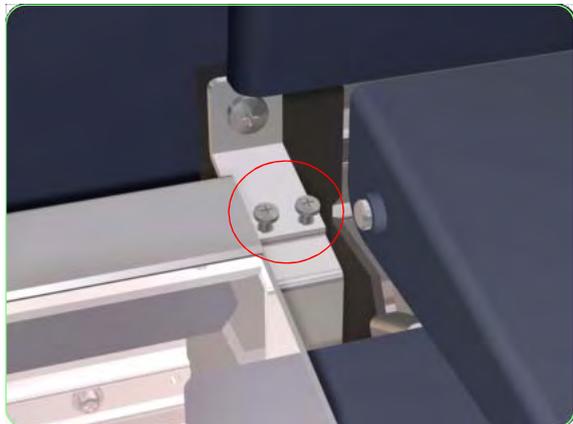

1. Remove two screws that secure the Rear Cover to the right hinge.



2. Remove two screws that secure the Rear Cover to the left hinge.



3. Remove the Rear Cover from the Printer.

Upper Side Cover (Left or Right)

Removal

Switch off the product and remove the power cable.



1. Remove four screws that secure the Upper Side Cover to the Printer.




2. Remove the Upper Side Cover from the Printer.

Top Side Cover (Left or Right)

Removal

Switch off the product and remove the power cable.

1. Remove the Upper Side Cover (Left or Right)
⇒ Page 8-4.
2. Remove four screws that secure the Top Side Cover to the Printer.

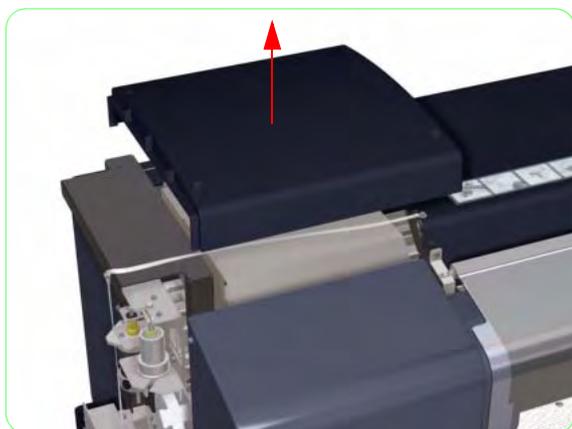

3. Remove the Top Side Cover from the Printer.


Top Cover

Removal

Switch off the product and remove the power cable.

1. Remove the Rear Cover ⇒ Page 8-3.
2. Remove the Upper Side Cover (Left and Right) ⇒ Page 8-4.
3. Remove the Top Side Cover (left and Right) ⇒ Page 8-5.

In steps 4 and 5, the screws at the bottom of the Cover are short screws (M4 x 6) and the screws at the top and at the sides are long screws (M4 x 10).

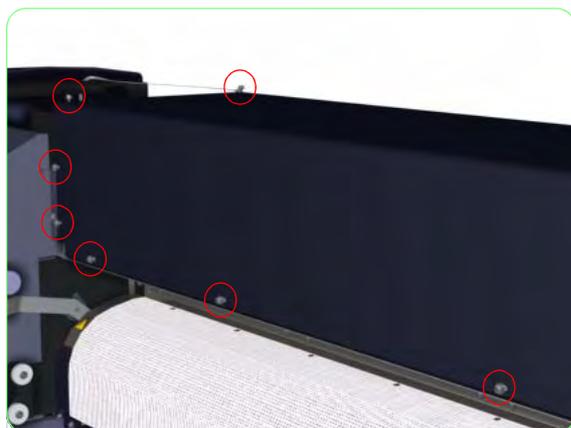

4. Remove seven screws that secure the Top Cover to the left hand side of the Printer.



5. Remove nine screws that secure the Top Cover to the right hand side of the Printer.



6. Remove the Top Cover from the Printer.

Lower Side Cover (Left or Right)

Removal

Switch off the product and remove the power cable.



1. Open the Ink Cartridge Door and remove two screws that secure the metal cover to the Ink Supply Station. Remove the metal cover from the Ink Supply Station.



2. Remove two screws that secure the Lower Side Cover to the Printer.



3. Remove the Lower Side Cover from the Printer.

Subtank Cover (Left or Right)


Removal

Switch off the product and remove the power cable.


1. Remove the Upper Side Cover (Left or Right) ⇒ Page 8-4.
2. Remove the Lower Side Cover (Left or Right) ⇒ Page 8-8.
3. Remove two screws that secure the Electronics Module Side Trim to the Printer.



4. Remove the Electronics Module Side Trim from the Printer.

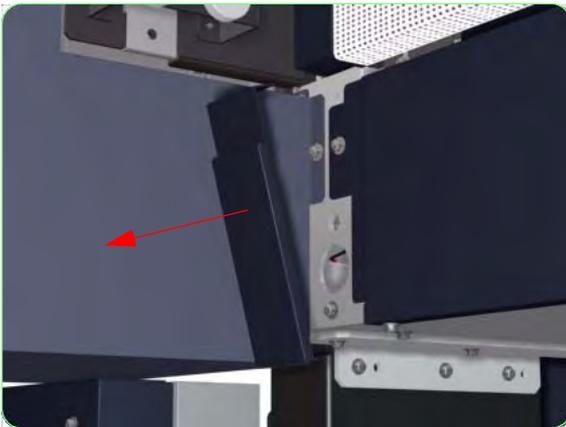


5. Remove two screws that secure the Subtank Cover to the Printer.

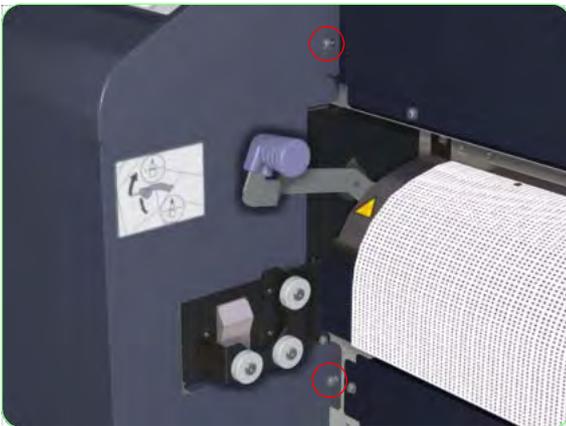



6. Remove two screws that secure the Subtank Cover to the Printer.

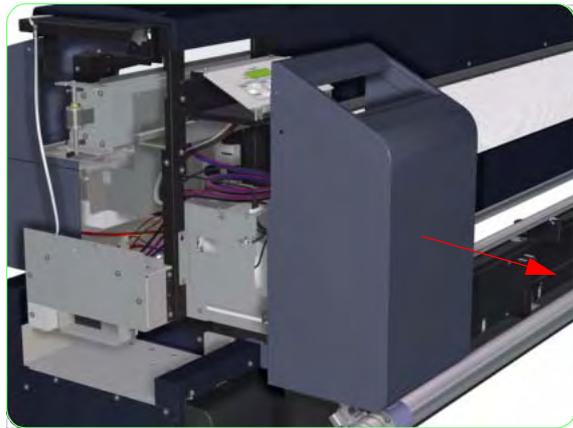


7. Remove the Subtank Cover from the Printer.

Lower Capping Cover


Removal

Switch off the product and remove the power cable.


1. Remove the Upper Side Cover (Right) ⇒ Page 8-4.
2. Remove the Lower Side Cover (Right) ⇒ Page 8-8.
3. Open the Capping Door.

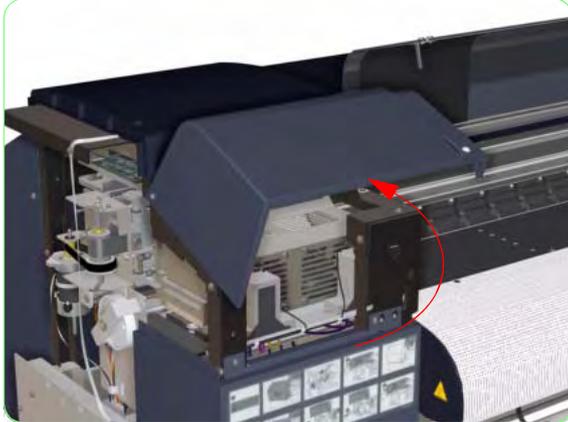

4. Remove three screws that secure the Lower Capping Cover to the Printer.

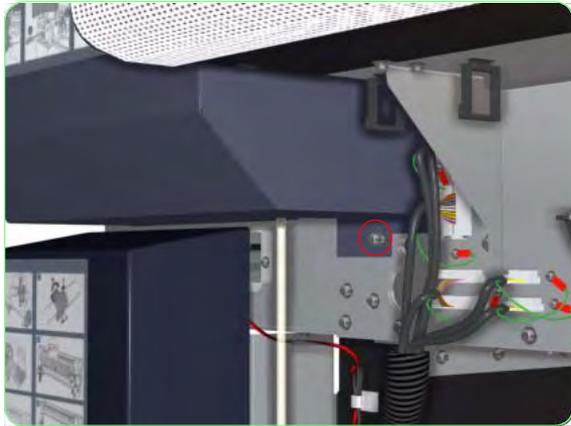

5. Remove one screw that secures the Lower Capping Cover to the Printer.

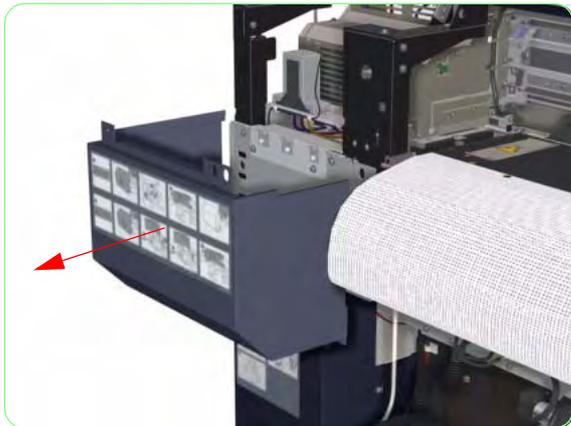

6. Remove the Lower Capping Cover from the Printer.

Capping Door

Removal

Switch off the product and remove the power cable.


1. Remove the Upper Side Cover (Right) ⇒ Page 8-4.
2. Remove the Lower Side Cover (Right) ⇒ Page 8-8.
3. Open the Window.




4. Open the Capping Door.



5. Remove one screw that secures the Capping Door hinge to the Printer.

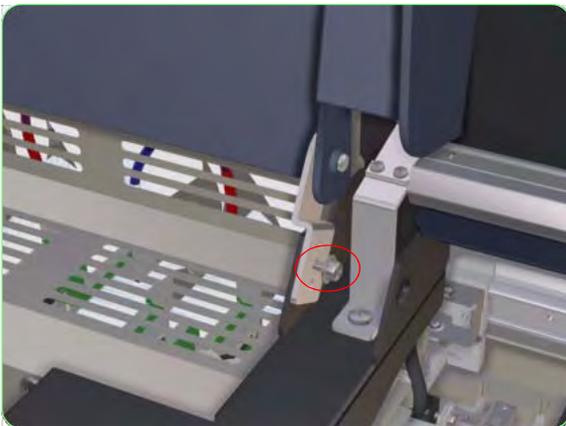

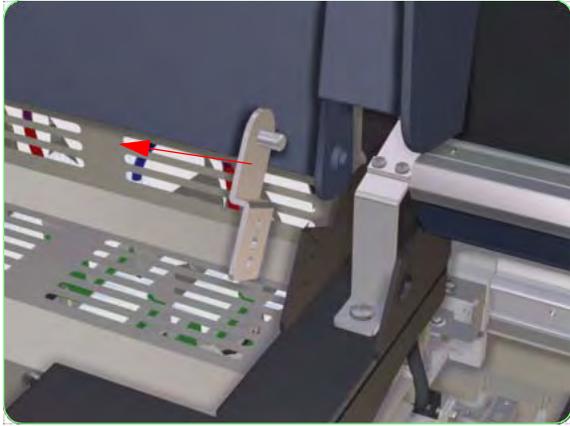

6. Remove the Hinge from the Printer.



7. Slide the Capping Door to the left and remove from the Printer.

Lower Wiping Cover

Removal

Switch off the product and remove the power cable.


1. Remove the Upper Side Cover (Left) ⇒ Page 8-4.
2. Remove the Lower Side Cover (Left) ⇒ Page 8-8.
3. Open the Wiping Door.



4. Remove three screws that secure the Lower Wiping Cover to the Printer.



5. Remove one screw that secures the Lower Wiping Cover to the Printer.

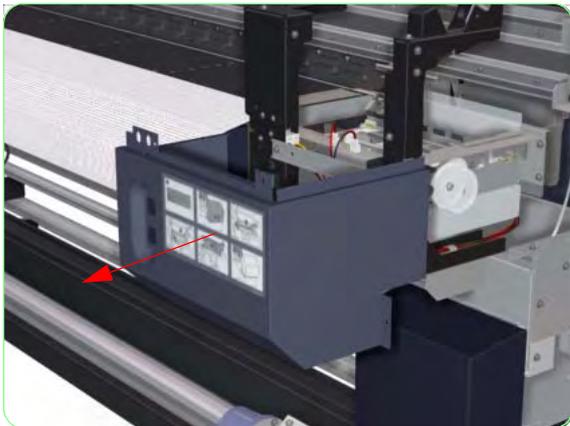

6. Remove the Lower Wiping Cover from the Printer.

Wiping Door

Removal

Switch off the product and remove the power cable.

1. Remove the Upper Side Cover (Left) ⇒ Page 8-4.
2. Remove the Lower Side Cover (Left) ⇒ Page 8-8.
3. Open the Window.



4. Open the Wiping Door.




5. Remove one screw that secures the Wiping Door hinge to the Printer.





6. Remove the Hinge from the Printer.

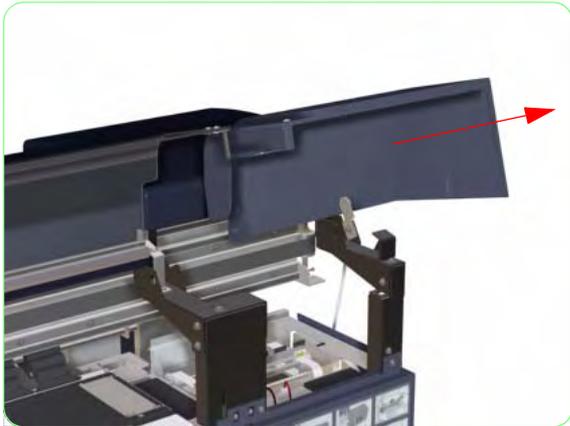

7. Slide the Wiping Door to the right and remove from the Printer.

Ink Cartridge Door (Left or Right)

Removal

Switch off the product and remove the power cable.



1. Remove one screw that secures the Ink Cartridge Door Hinge to the Printer.



2. Remove the Hinge from the Printer.



3. Open the Ink Cartridge Door and remove from the Printer.

Rear Ink Cartridge Cover (Left or Right)

Removal

Switch off the product and remove the power cable.



1. Remove three screws that secure the Rear Ink Cartridge Cover to the Printer.



2. Loosen one screw that secures the Rear Ink Cartridge Cover to the Printer.




3. Remove the Rear Ink Cartridge Cover from the Printer.

Electronics Module Cover

Removal


Switch off the product and remove the power cable.

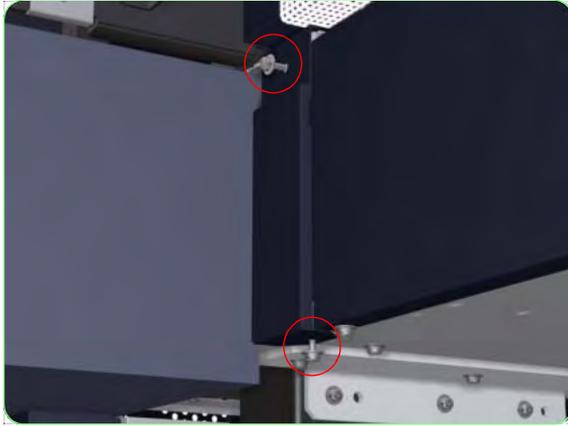


1. Remove two screws that secure the Left Electronics Module Side Trim to the Printer.




2. Remove the Left Electronics Module Side Trim from the Printer.

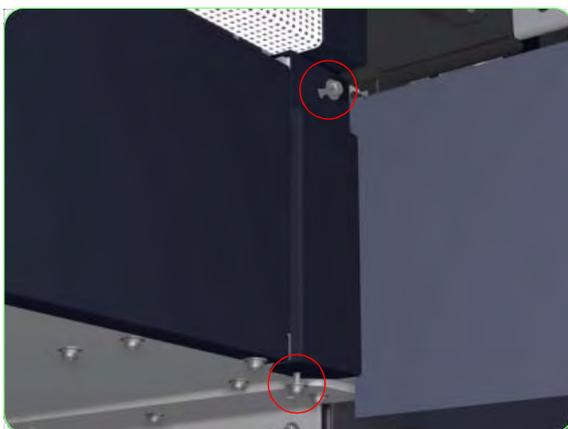

3. Remove two screws that secure the Right Electronics Module Side Trim to the Printer.

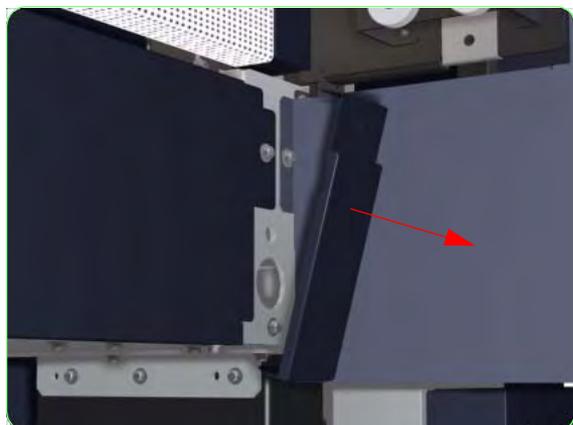

4. Remove the Right Electronics Module Side Trim from the Printer.

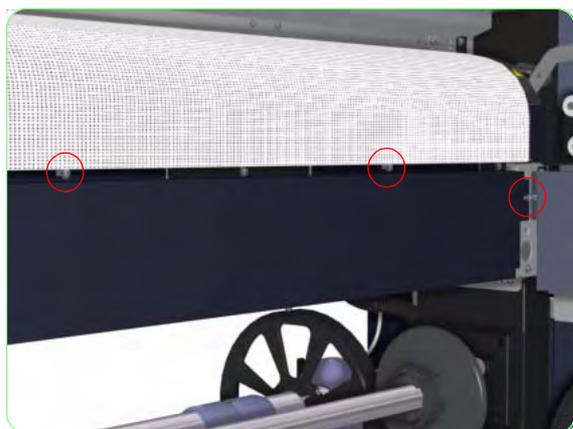

5. Remove eight screws that secure the top and the side of the Electronics Module Cover to the Printer.



6. Loosen eight screws that secure the bottom of the Electronics Module Cover to the Printer.




7. Remove the Electronics Module Cover from the Printer.


Firmware Access Cover

Removal

Switch off the product and remove the power cable.

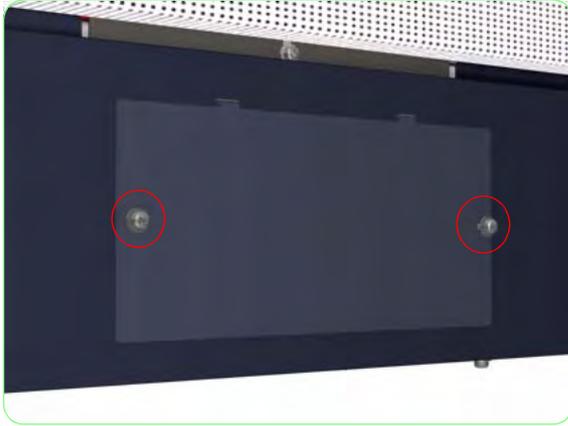

1. Remove two screws that secure the Firmware Access Cover to the Printer.

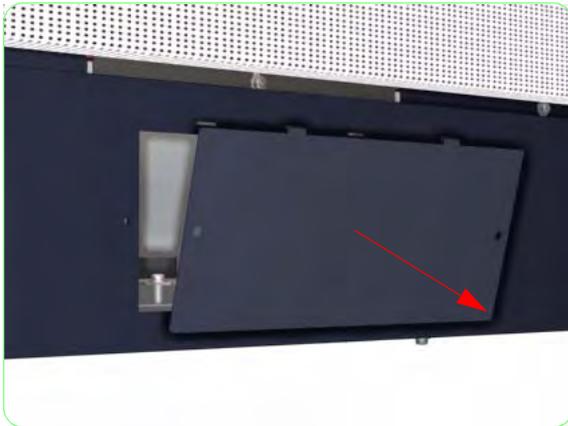


2. Remove the Firmware Access Cover from the Printer.

Front Panel

Removal

Switch off the product and remove the power cable.

1. Remove the Upper Side Cover (Right) ⇒ Page 8-4.
2. Remove the Lower Side Cover (Right) ⇒ Page 8-8.
3. Remove the Subtank Cover (Right) ⇒ Page 8-9.
4. Disconnect the Front Panel Cable from the Front Panel.

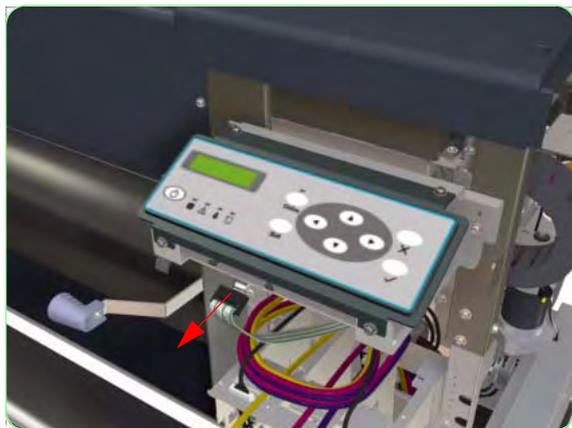

5. Loosen two screws that secure the Front Panel to the Printer.





6. Remove two screws that secure the Front Panel to the Printer.



7. Remove the Front Panel from the Printer.

Heater Panel

Removal


Switch off the product and remove the power cable.

1. Remove the Upper Side Cover (Left) ⇒ Page 8-4.
2. Remove the Lower Side Cover (Left) ⇒ Page 8-8.
3. Remove the Subtank Cover (Left) ⇒ Page 8-9.
4. Disconnect ALL the Heater Panel Cables from the Heater Panel.




5. Loosen two screws that secure the Heater Panel to the Printer.



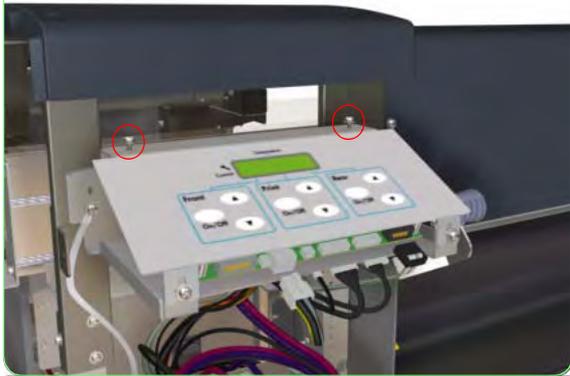

6. Remove two screws that secure the Heater Panel to the Printer.

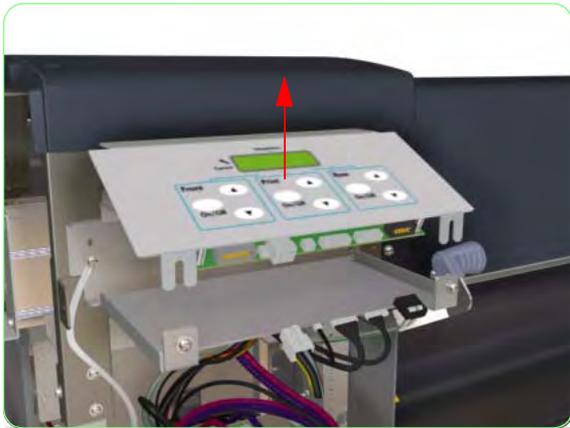


7. Remove the Heater Panel from the Printer.

Front Heater


Removal


Switch off the product and remove the power cable.

1. Remove the Upper Side Cover (Left) ⇒ Page 8-4.
2. Remove the Lower Side Cover (Left) ⇒ Page 8-8.
3. Remove the Subtank Side Cover (Left) ⇒ Page 8-9.
4. Carefully pull out the Left Subtank Station slightly ⇒ Page 8-115.
5. Remove three screws that secure the Sub-Scroller Holder to the Printer.

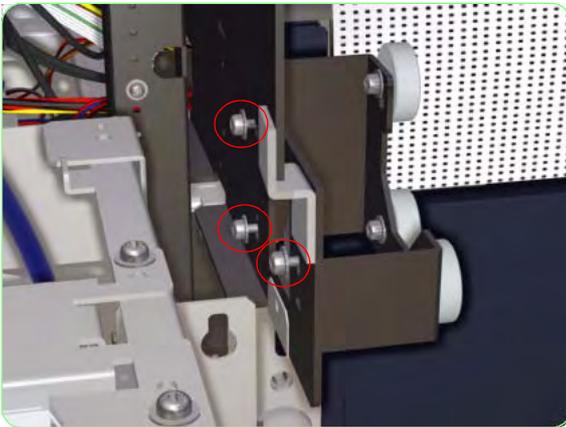

6. Remove the Sub-Scroller Holder from the Printer.

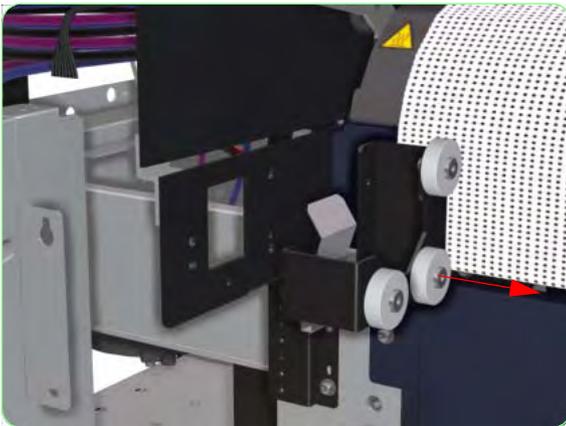


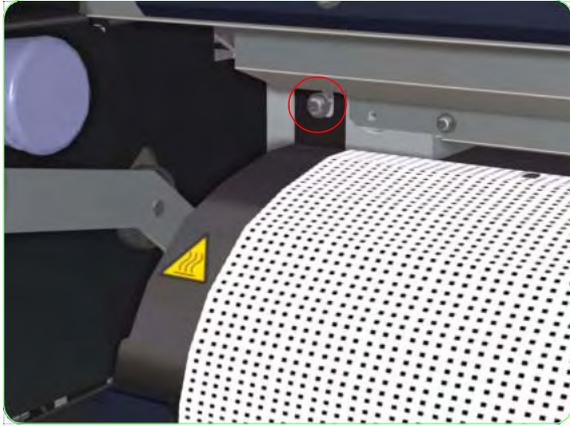


- 7.** Remove one screw from either side of the Printer.




- 8.** Remove seven screws that secure the bottom of the Front Heater to the Printer.

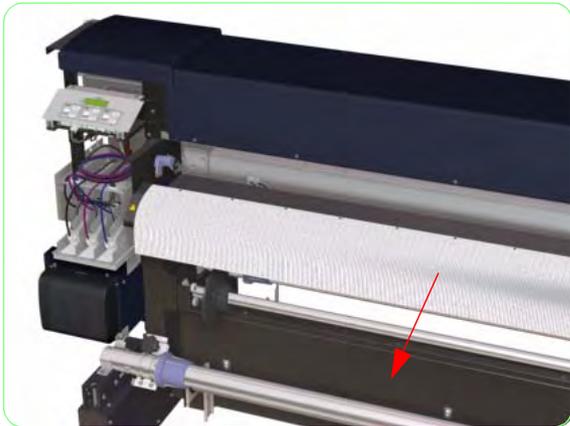

- 9.** Pull out the Front Heater slightly.

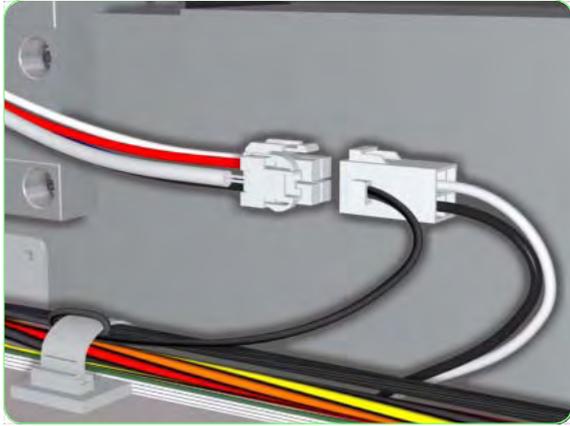

10. Disconnect the Front Heater Cables from the Front Heater.

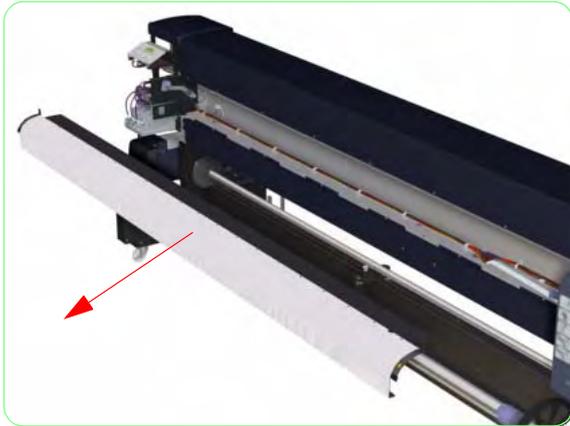


11. Remove the Front Heater (including the white net) from the Printer.


Rear Heater

Removal


Switch off the product and remove the power cable.

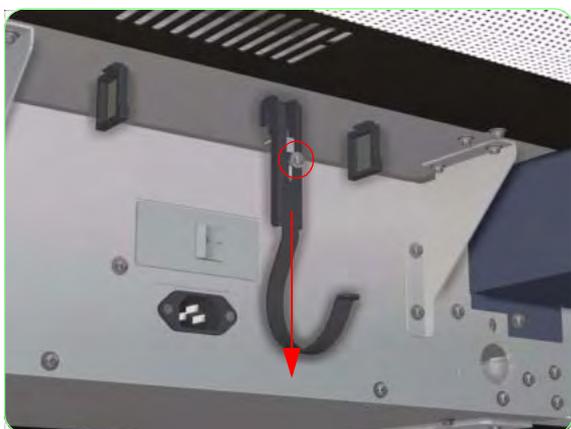

1. Loosen the screw that secures each Tension Bar Holder and remove the five Holders from the Printer.

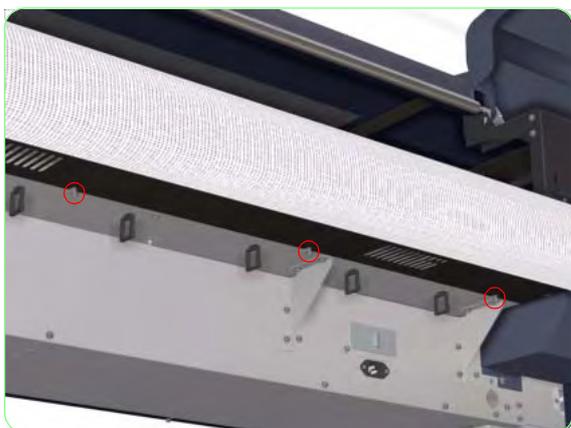


2. Loosen nine screws that secure the bottom of the Rear Heater to the Printer.

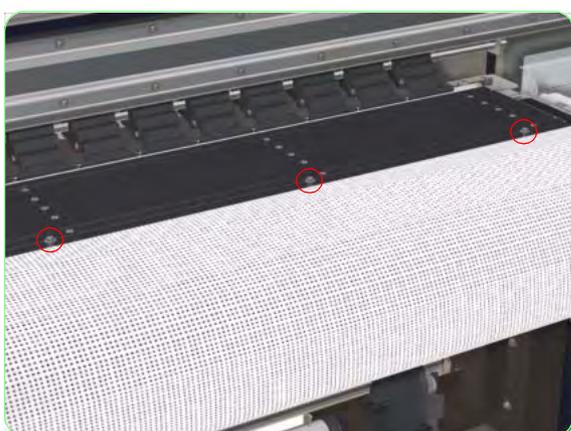

3. Remove 11 screws that secure the top of the Rear Heater to the Printer.

Make sure that the washers do NOT slip underneath the Center Platen.

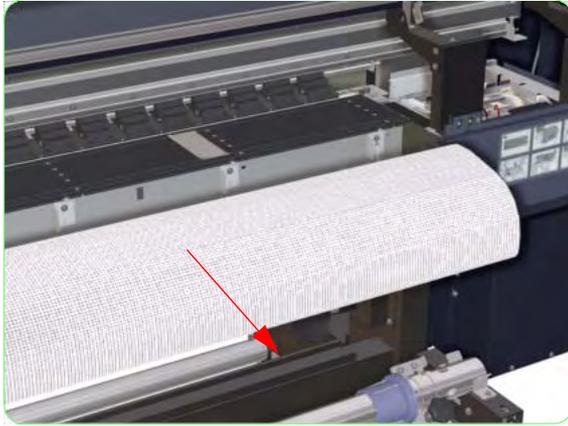

4. Pull out the Rear Heater slightly.



5. Disconnect the Rear Heater Cables from the Rear Heater.



6. Remove the Rear Heater (including the white net) from the Printer.

When re-installing the Rear heater, make sure you push the white net evenly underneath the Center Platen (this can be done starting from the center and moving outwards).

When installing the top 11 screws, make sure you tighten them starting from the center and then moving outwards.

When positioning the Rear Heater, make sure you do NOT trap the captive washers (on the bottom) between the Rear heater and the Printer.

Center Platen

Removal

Switch off the product and remove the power cable.



1. Remove the Rear Heater ⇒ Page 8-32.
2. Disconnect ALL the cables connected to the Center Platen.

3. Remove 55 screws that secure the Center Platen to the Printer.

4. Remove the Center Platen from the Printer.

When removing the Center Platen, take care not to disturb the Shims that are placed underneath the Center Platen.


Once the Center Platen has been installed correctly, you must perform the Platen Flatness Adjustment. For further information, refer to Page 5-44.

Vacuum Fan

Removal

Switch off the product and remove the power cable.


1. Remove the Rear Heater ⇒ Page 8-32.
2. Disconnect the Vacuum Fan Cable.

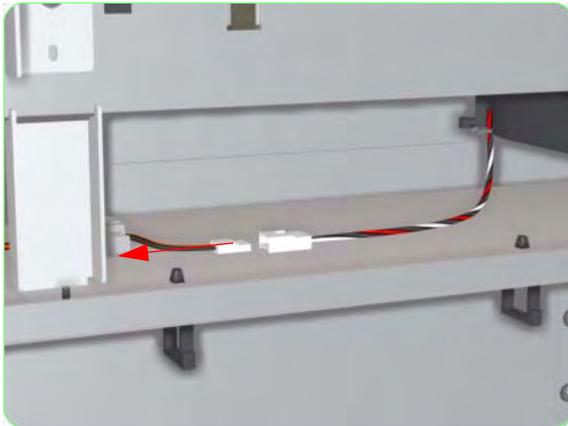

3. Using a small 5mm Allen Key, remove 3 screws that secure the Vacuum Fan to the Printer.



4. Remove the Vacuum Fan from the Printer.

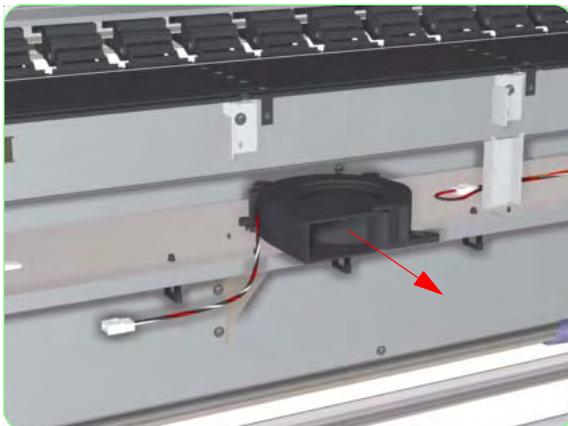


Main PCA


Removal

Switch off the product and remove the power cable.

1. Remove the Electronics Module Cover ⇒ Page 8-27.
2. Remove five screws that secure the Main PCA Tray to the Printer from the rear.

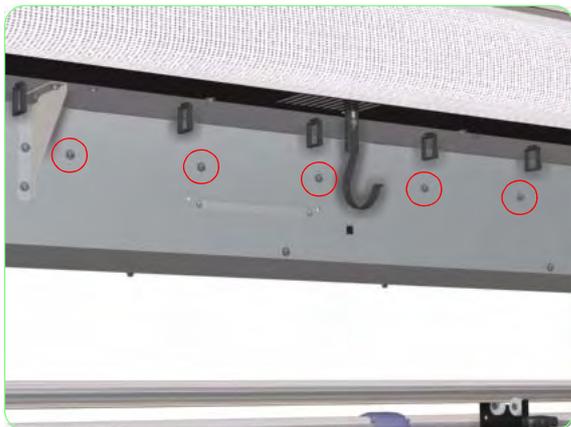

3. Remove three screws that secure the Main PCA Tray to the front of the Printer.

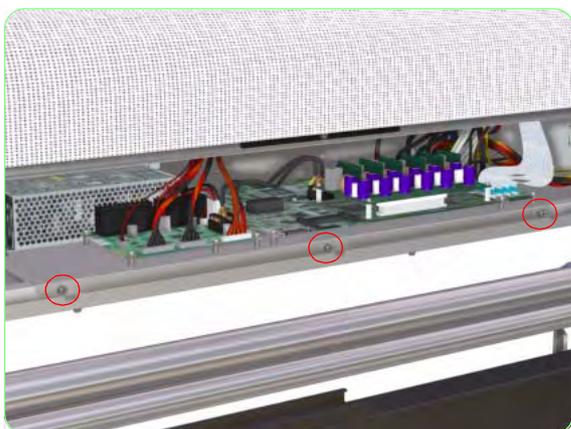


4. Disconnect ALL the cables connected to the Main PCA.







5. Disconnect ALL the cables connected to the Add-On Control PCA (no need to disconnect cables connected between the Add-On Control PCA and the Switching Power Supply Unit).

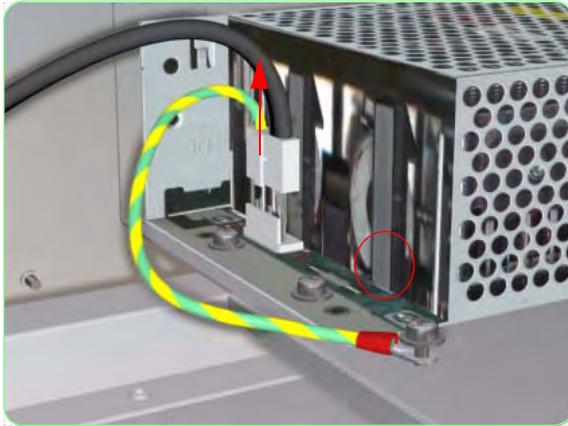


6. Remove one screw that secures the Grounding Strip and disconnect the cable from the Switching Power Supply Unit.

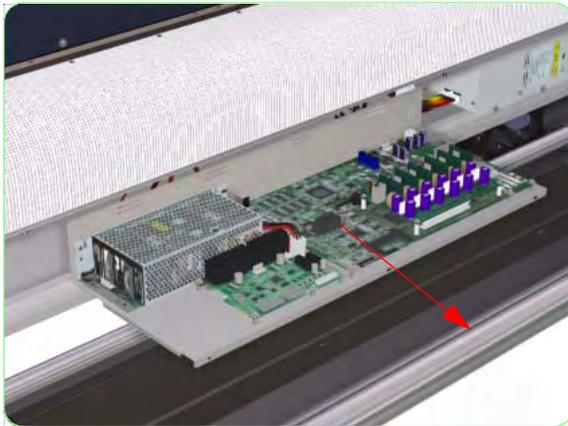


7. Remove the Main PCA Tray from the Printer.

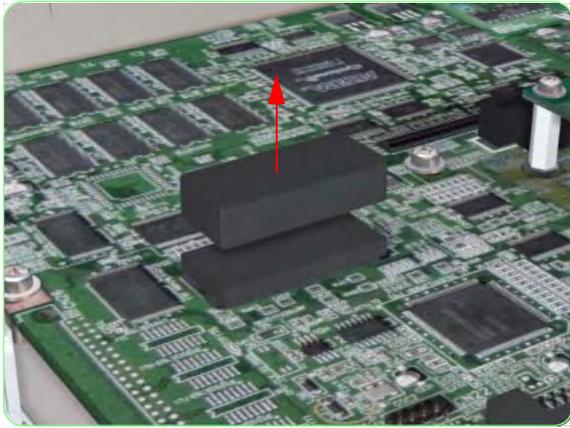

8. Pull up and remove the NVRAM from the Main PCA.

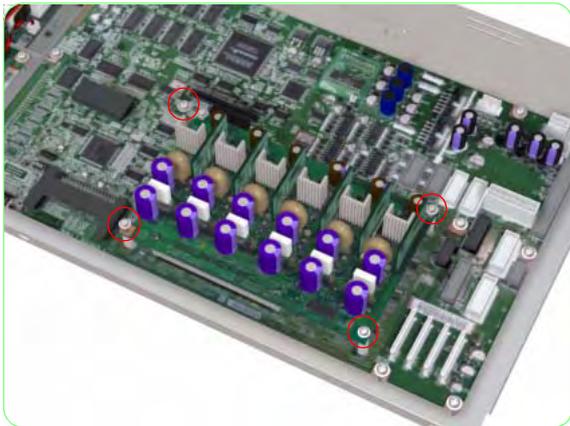


9. Remove four screws that secure the Head Relay Board to the Main PCA.

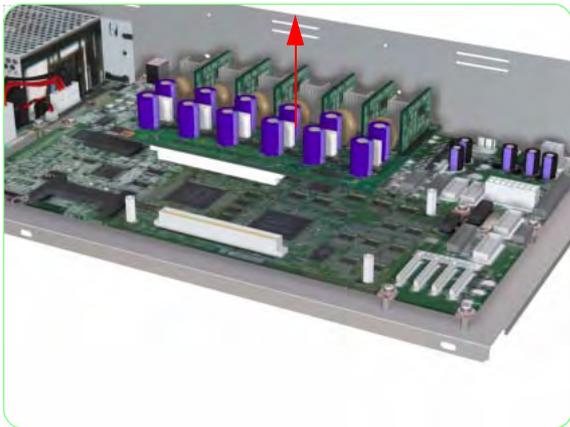


10. Remove the Head Relay Board from the Main PCA.



11. Remove 10 screws that secure the Main PCA to the Tray.

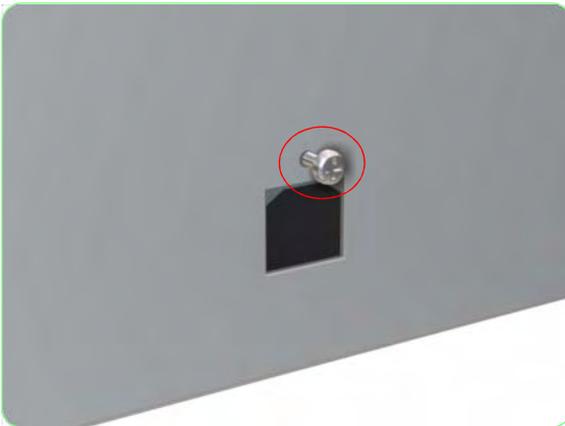

12. Remove one screw that secures the USB Connector to the Tray.

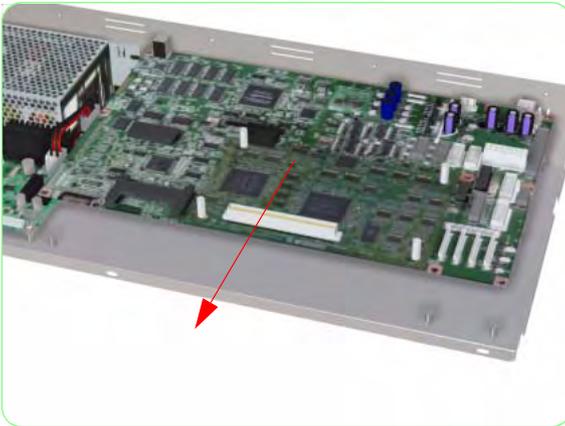

13. Remove the Main PCA from the Tray.

Make sure that you re-install the NVRAM and the Head Relay Board on the NEW Main PCA.

Once the NEW Main PCA is installed, power ON the Printer and do the following:

- 1.** Enter into the Maintenance Mode ⇒ Page 4-7.
- 2.** Press the **Shift** key once and then the ◀ key to enter in to the Setup menu.

3. In the Setup submenu, scroll to "Save Calibs" and press the **OK** key.

```
# SAVE CALIBS  
>
```

4. You will need to confirm that you want to save the NVRAM Calibrations by pressing the **OK** key.

```
# SAVE CALIBS  
* OK?
```

5. In the Setup submenu, scroll to "Save NVRAM" and press the **OK** key.

```
# SAVE NVRAM  
>
```

6. You will need to confirm that you want to save the NVRAM contents by pressing the **OK** key.

```
# SAVE NVRAM  
* OK?
```


If both the NVRAM and the Main PCA are replaced at the same time, please refer to Chapter 1 for further information.

NVRAM

Removal

Switch off the product and remove the power cable.

1. Remove the Electronics Module Cover ⇒ Page 8-21.
2. Carefully pull up and remove the NVRAM from the Main PCA.

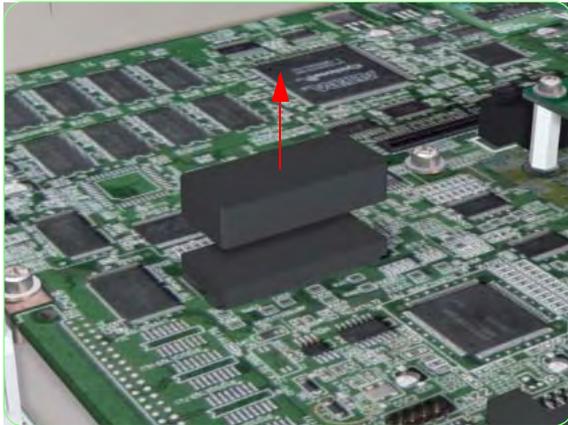

Once the NEW NVRAM is installed, power ON the Printer and do the following:

1. Enter into the Maintenance Mode ⇒ Page 4-7.
2. Press the **Shift** key once and then the ◀ key to enter in to the Setup menu.
3. In the Setup submenu, scroll to "NVRAM Init" and press the **OK** key.

```
# NVRAM INIT
>
```

4. You will need to confirm that you want to initialize the NVRAM by pressing the **OK** key.

```
# NVRAM INIT
* OK?
```

5. In the Setup submenu, scroll to "Restore NVRAM" and press the **OK** key.

```
# RESTORE NVRAM
>
```

6. You will need to confirm that you want to restore the NVRAM contents by pressing the **OK** key.

```
# RESTORE NVRAM
* OK?
```

7. Power Off the Printer, wait a few seconds and then power the Printer On again.


If both the NVRAM and the Main PCA are replaced at the same time, please refer to Chapter 1 for further information.

Head Relay Board


Removal

Switch off the product and remove the power cable.

1. Remove the Electronics Module Cover ⇒ Page 8-27.
2. Remove five screws that secure the Main PCA Tray to the Printer from the rear.

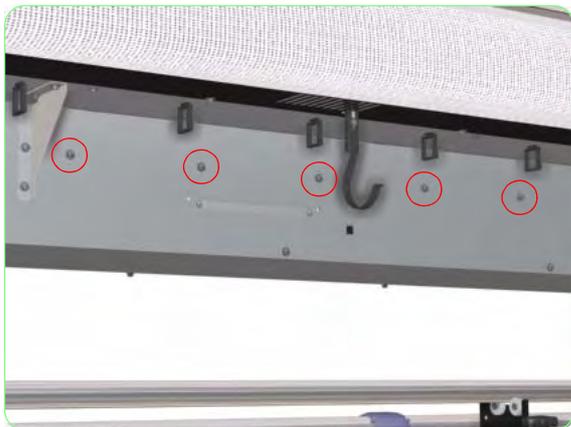


3. Remove three screws that secure the Main PCA Tray to the front of the Printer.

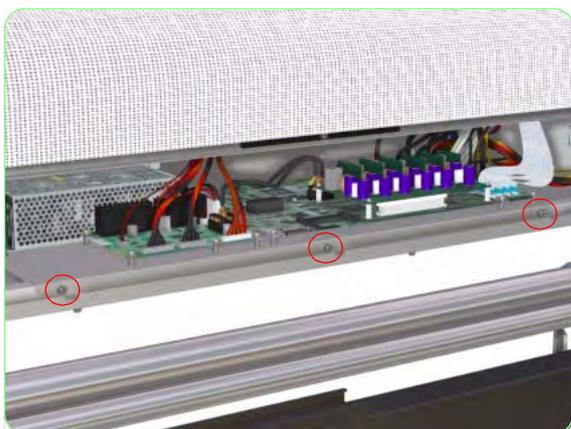


4. Disconnect ALL the cables connected to the Main PCA.




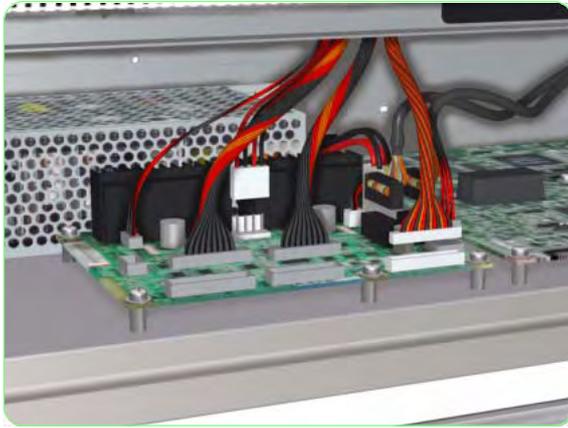

5. Disconnect ALL the cables connected to the Add-On Control PCA (no need to disconnect cables connected between the Add-On Control PCA and the Switching Power Supply Unit).

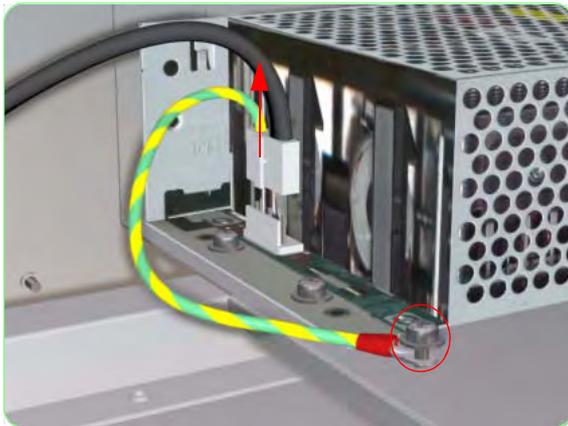


6. Remove one screw that secures the Grounding Strip and disconnect the cable from the Switching Power Supply Unit.

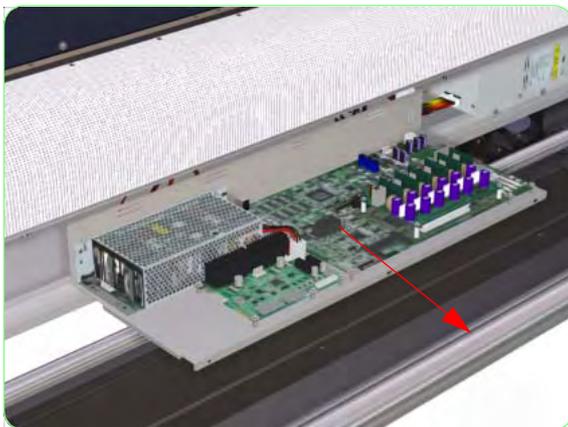

7. Remove the Main PCA Tray from the Printer.



8. Remove four screws that secure the Head Relay Board to the Main PCA.

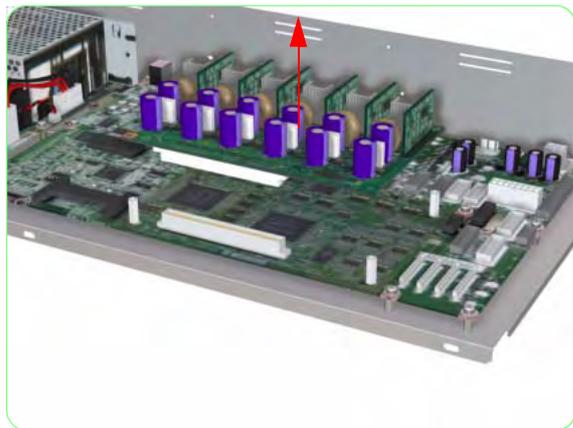


9. Remove the Head Relay Board from the Main PCA.

Add-On (HEB2) Control PCA


Removal

Switch off the product and remove the power cable.

1. Remove the Electronics Module Cover ⇒ Page 8-21.
2. Remove five screws that secure the Main PCA Tray to the Printer from the rear.

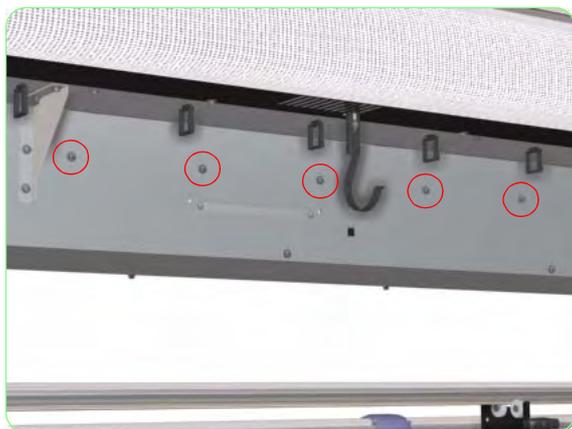


3. Remove three screws that secure the Main PCA Tray to the front of the Printer.

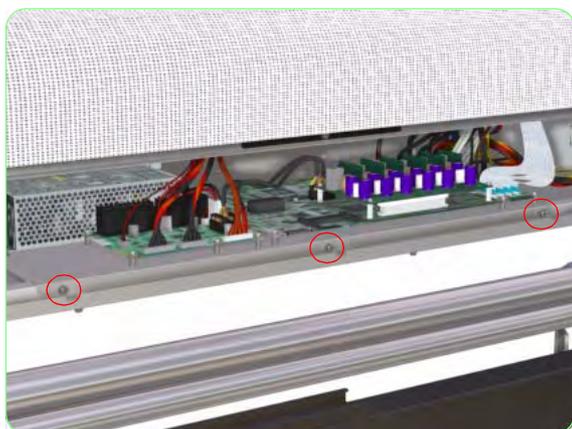


4. Disconnect ALL the cables connected to the Add-On Control PCA.



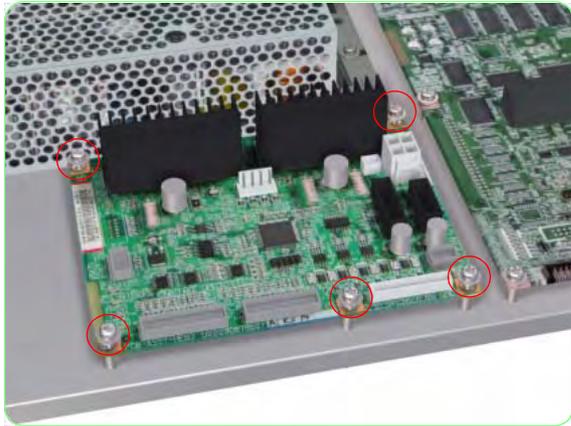

5. Pull out slightly the Main PCA Tray from the Printer and remove five screws that secure the Add-On Control PCA to the Main PCA Tray.

If you cannot access the screws that secure the Add-On Control PCA, then it is recommended to disconnect ALL the cables from the Main PCA and remove the Main PCA Tray from the Printer.

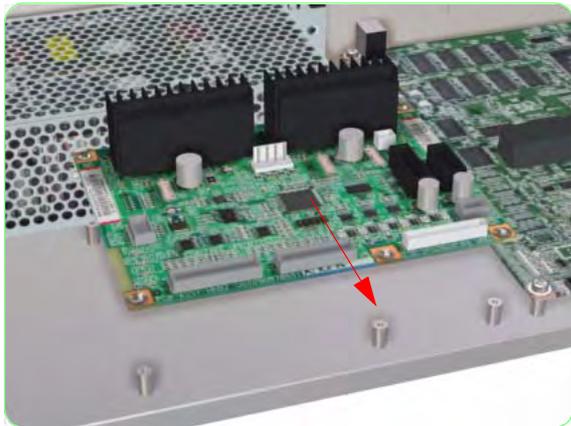


6. Remove the Add-On Control PCA from the Main PCA Tray.

Switching Power Supply Unit


Removal

Switch off the product and remove the power cable.

1. Remove the Electronics Module Cover ⇒ Page 8-21.
2. Remove five screws that secure the Main PCA Tray to the Printer from the rear.

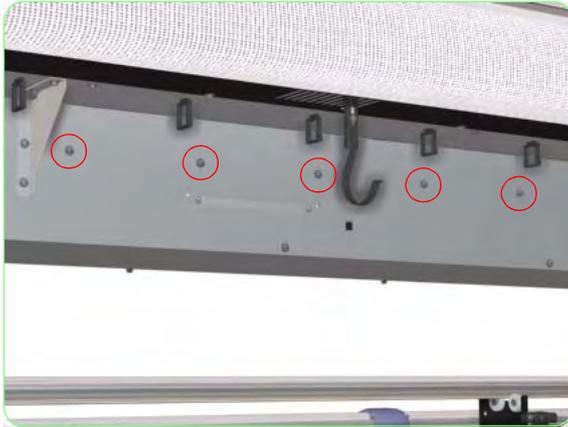


3. Remove three screws that secure the Main PCA Tray to the front of the Printer.

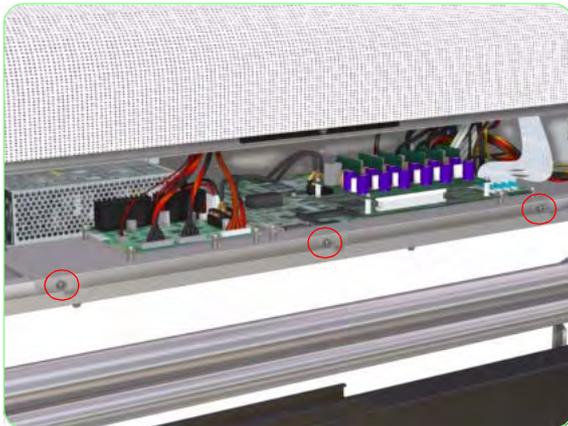


4. Disconnect ALL the cables connected to the Main PCA.




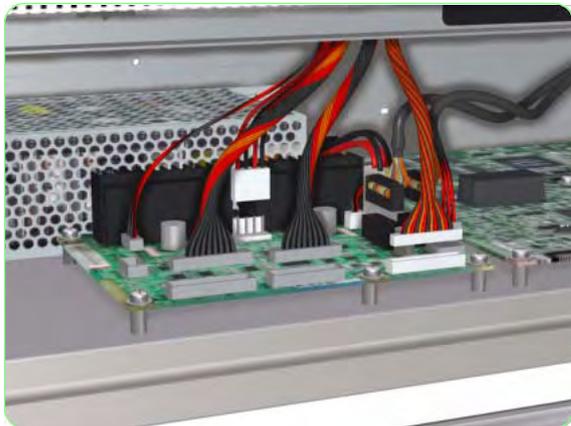

5. Disconnect ALL the cables connected to the Add-On Control PCA (no need to disconnect cables connected between the Add-On Control PCA and the Switching Power Supply Unit).

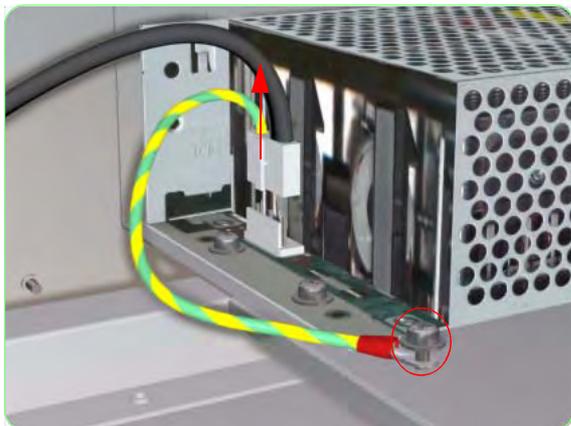

6. Remove one screw that secures the Grounding Strip and disconnect the cable from the Switching Power Supply Unit.

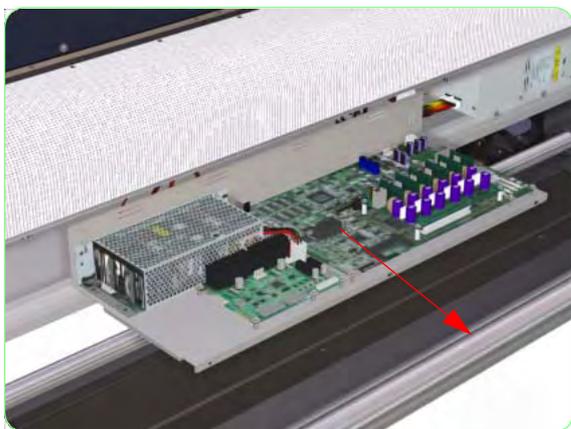


7. Remove the Main PCA Tray from the Printer.



- 8.** Disconnect ALL the cables connected to the Switching Power Supply Unit.



- 9.** Remove three screws that secure the Switching Power Supply Unit to the Main PCA Tray.

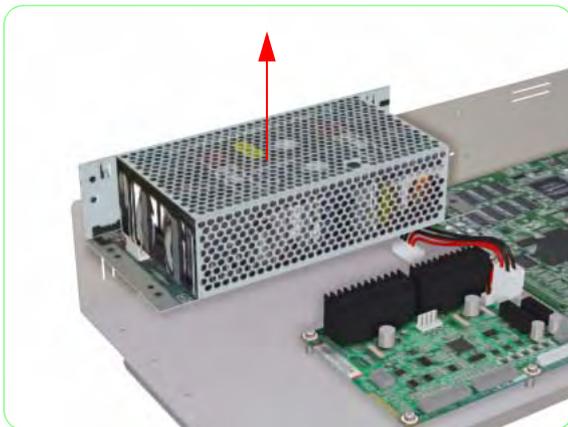

- 10.** Remove the Switching Power Supply Unit from the Main PCA Tray.

Power Supply Unit

Removal

Switch off the product and remove the power cable.


1. Remove the Electronics Module Cover ⇒ Page 8-27.
2. Remove four screws that secure the Power Supply Unit to the Printer from the rear.



3. Remove three screws that secure the Power Supply Unit to the Printer from the front.



4. Disconnect ALL the cables connected to the Power Supply Unit.

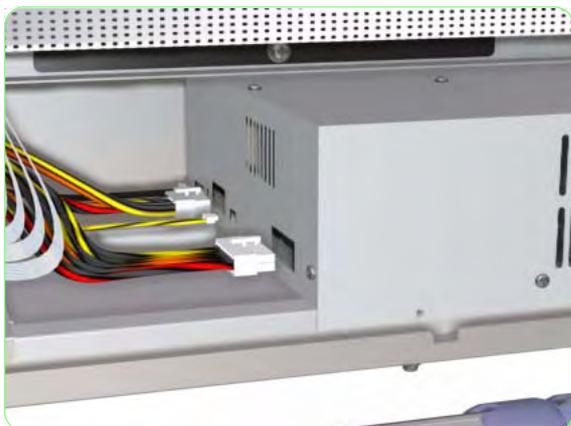



5. Remove the Power Supply Unit from the Printer.

Heater Relay Assembly

Removal

Switch off the product and remove the power cable.




1. Remove the Electronics Module Cover ⇒ Page 8-27.
2. Remove three screws that secure the Heater Relay Assembly Tray to the Printer from the rear.



3. Disconnect ALL the cables from the Heater Relay Assembly (except for the long black and white cable).


To help identify the cables when reconnecting, it is useful to label the cables before disconnecting.

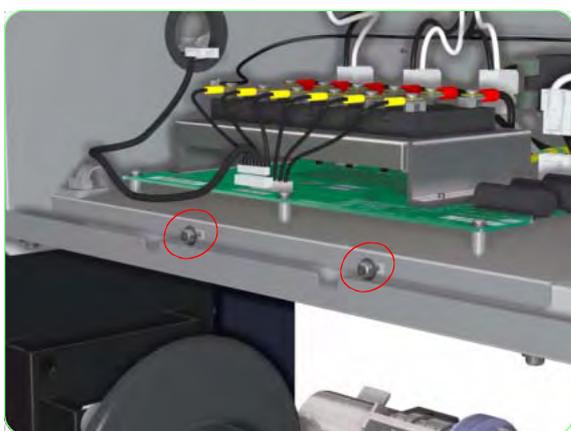


4. Remove two screws that secure the Heater Relay Assembly to the Printer.



5. Pull out slightly the Heater Relay Assembly from the Printer.

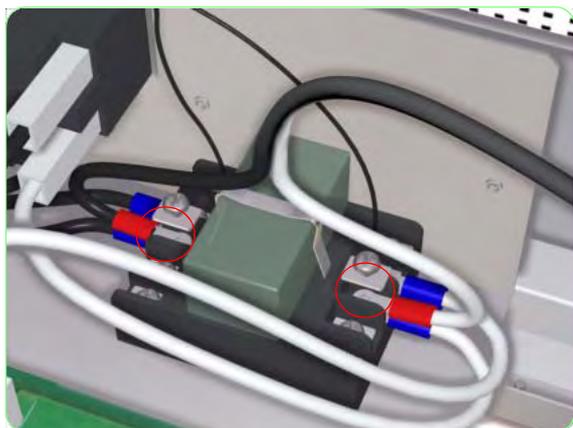

6. Remove two screws that secure the black and white cable (with the red sleeves) to the relay.

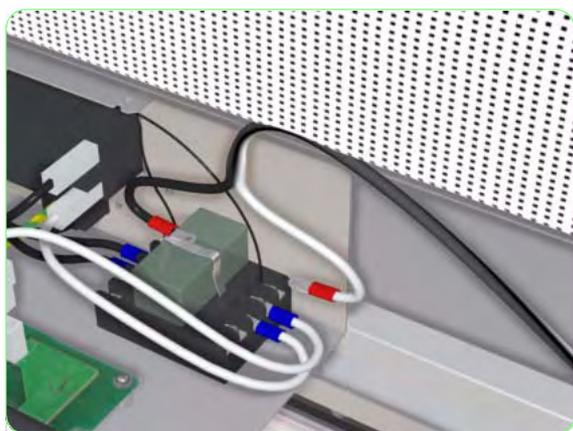

7. Release the black and white cable from the relay and remove the Heater Relay Assembly from the Printer.

Waste Bottle Sensor

Removal


Switch off the product and remove the power cable.




1. Remove the Waste Ink Bottle from the Printer.




2. Remove two screws that secure the Waste Bottle Locking Bracket.

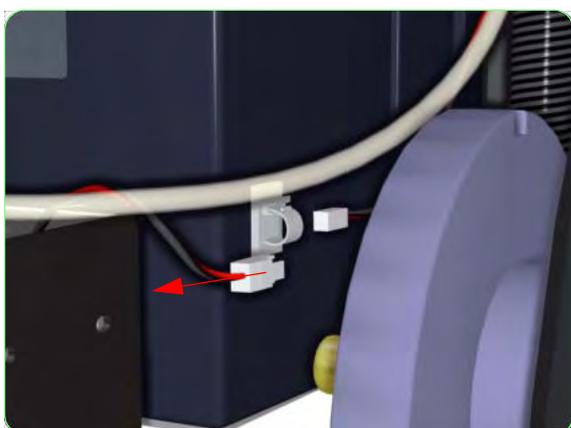

3. Disconnect the Waste Bottle Sensor Cable.

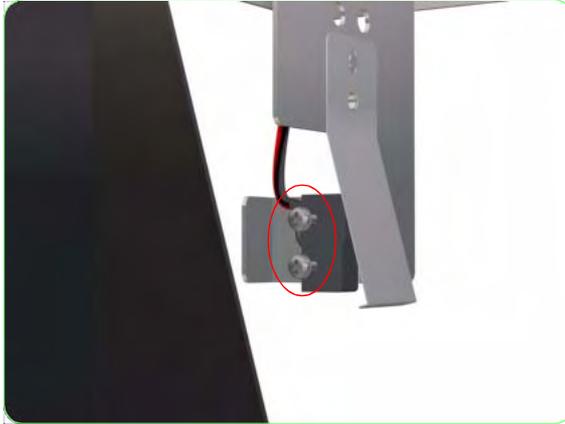

4. Turn the Waste Bottle Bracket 180 degrees and remove two screws that secure the Waste Bottle Sensor to the Bracket.

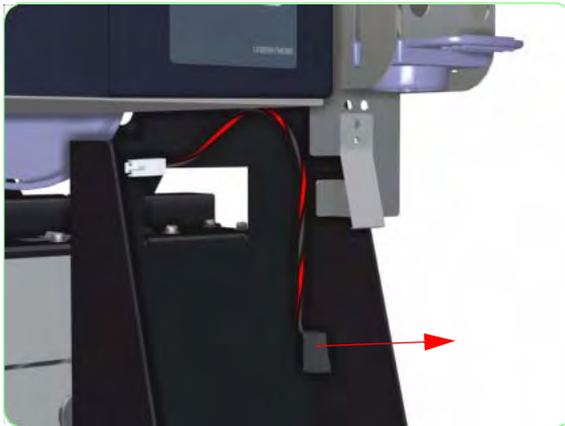


5. Remove the Waste Bottle Sensor from the Bracket.

Front Media Sensor


Removal

Switch off the product and remove the power cable.


1. Remove the Front Heater ⇒ Page 8-29.
2. Disconnect the Front Media Sensor Cable.

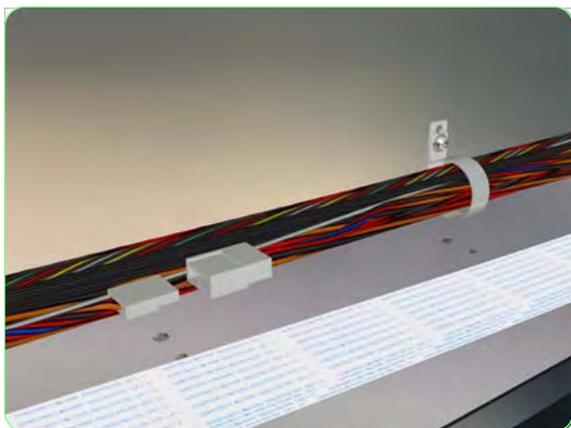


3. Remove one screw that secure the Cable Holder to the Printer.

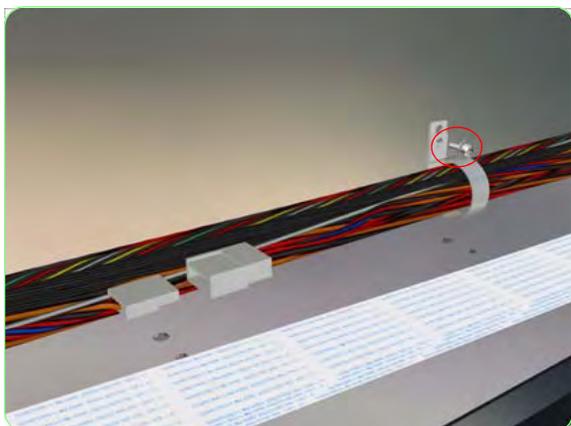

4. Remove one screw that secures the Front Media Sensor to the Bracket.

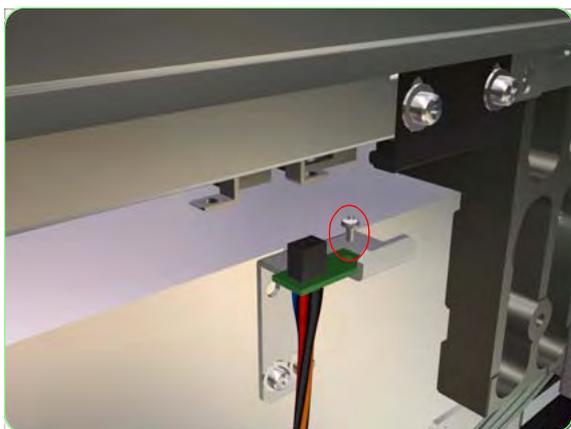

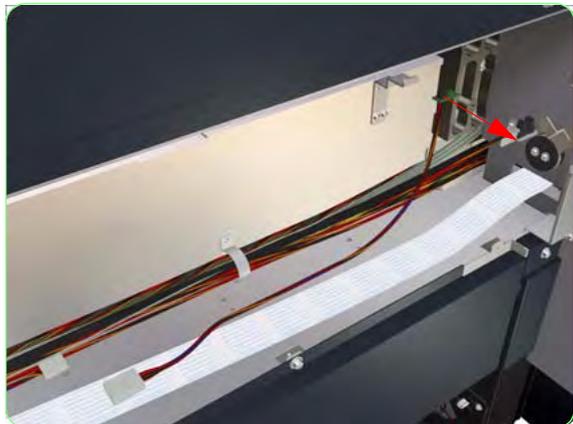


5. Remove the Front Media Sensor from the Printer.

Rear Media Sensor


Removal

Switch off the product and remove the power cable.


1. Remove the Rear Heater ⇒ Page 8-32.
2. Disconnect the Rear Media Sensor Cable.

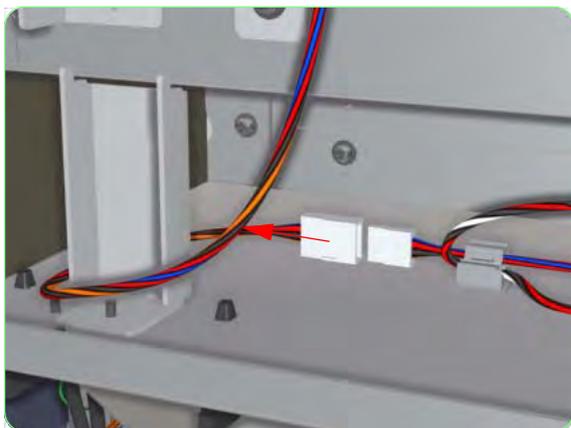

3. Remove one screw that secures the Rear Media Sensor to the Bracket.

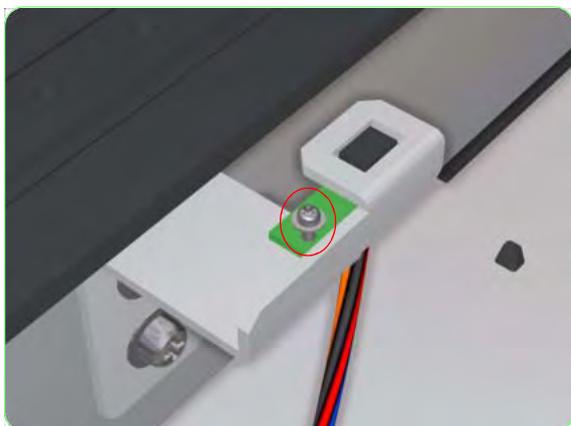

4. Remove the Rear Media Sensor from the Printer.

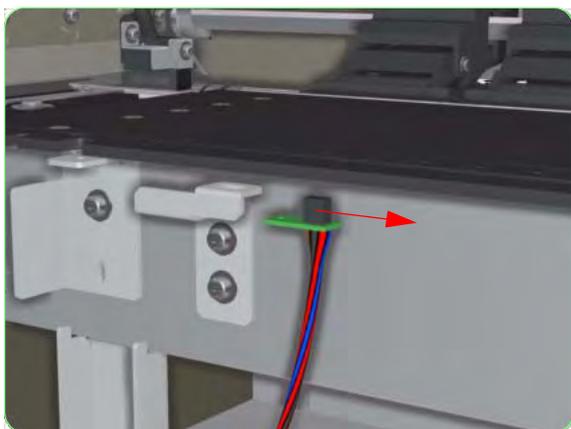


Media Lever Sensor


Removal

Switch off the product and remove the power cable.


1. Remove the Front Heater ⇒ Page 8-29.
2. Disconnect the Media Lever Sensor Cable.

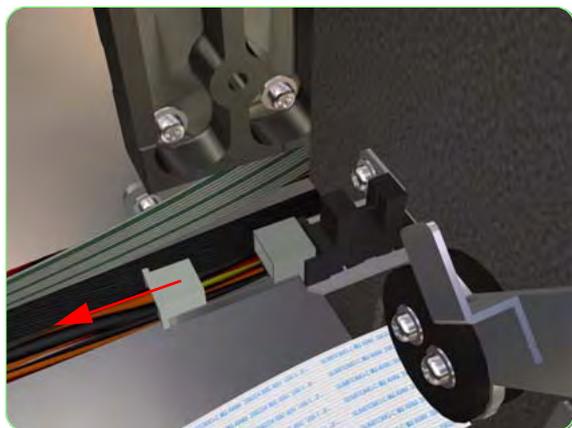


3. Remove one screw that secures the Media Lever Sensor to the Bracket.

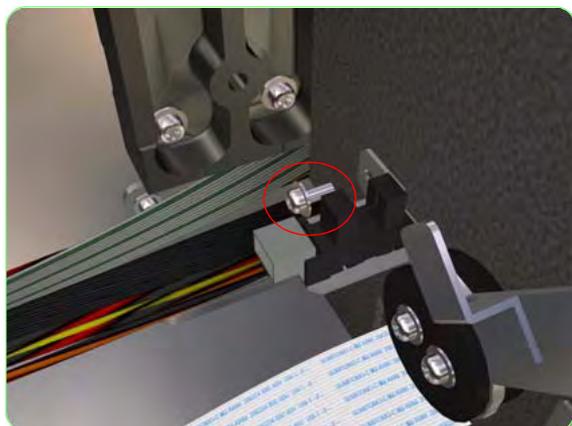

4. Remove the Media Lever Sensor from the Printer.

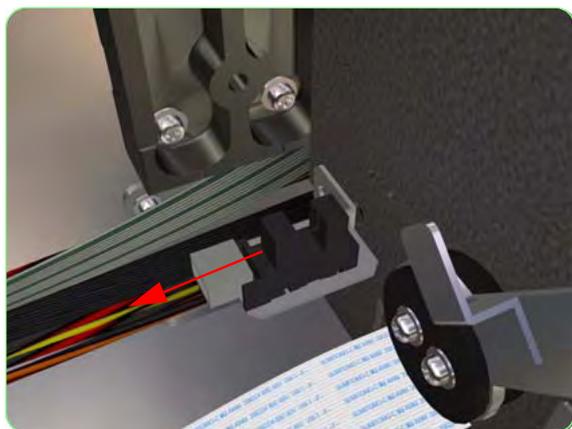

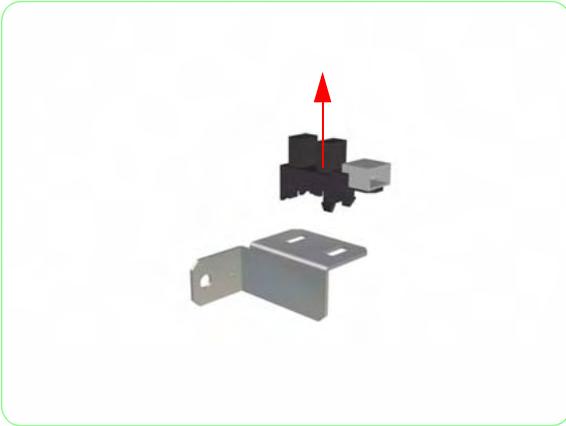


5. Remove the Media Lever Sensor from the Bracket.

Rear Cover Sensor


Removal

Switch off the product and remove the power cable.


1. Remove the Upper Side Cover (Left and Right) ⇒ Page 8-4.
2. Remove the Top Side Cover (Left and Right) ⇒ Page 8-5.
3. Remove the Lower Side Cover (Left and Right) ⇒ Page 8-8.
4. Remove the Lower Capping Cover ⇒ Page 8-11.
5. Remove the Capping Door ⇒ Page 8-13.
6. Remove the Lower Wiping Cover ⇒ Page 8-15.
7. Remove the Wiping Door ⇒ Page 8-17.
8. Remove two screws that secure the metal bracket to the chassis (on the Capping Side).

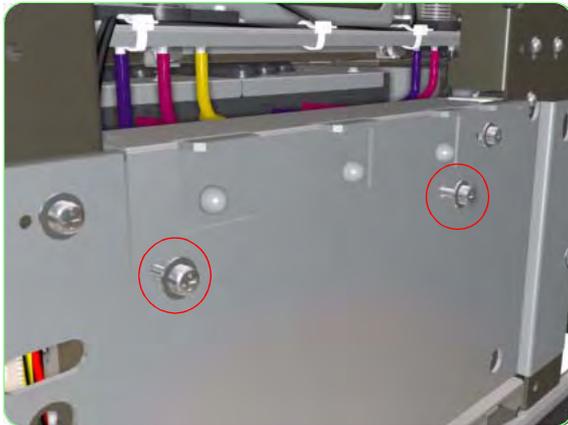

9. Remove the metal bracket from the Printer.

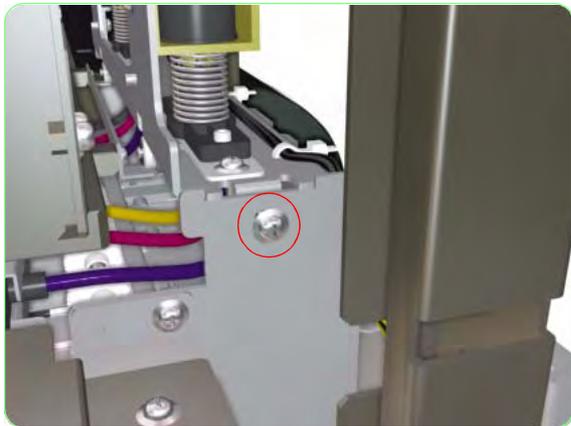


- 10.** Remove one screw from each side of the Solenoid Assembly.

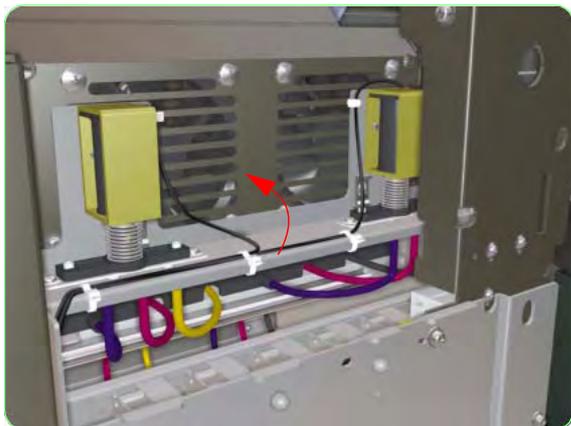

- 11.** Rotate the Solenoid Assembly so that the Right Rear Cover Sensor can be accessed.

Be very careful when rotating the Solenoid Assembly as the tube joint can easily break when handled incorrectly.

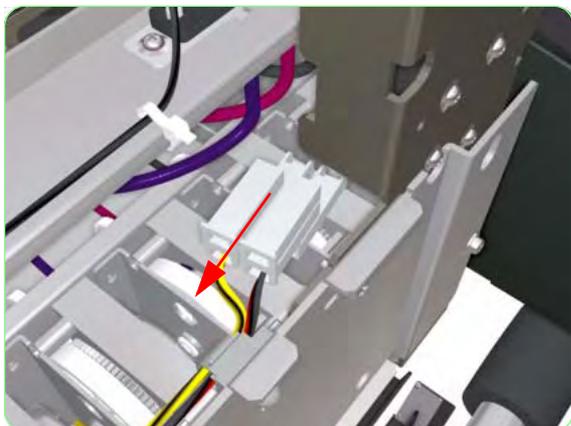


- 12.** Disconnect the Cable from the Right Rear Cover Sensor.




- 13.** Loosen two screws that secure the Sensor Plate and the Right Rear Cover Sensor to the Chassis.

Only loosen the screws until the Sensor Plate is released. Also, keep hold of the Sensor Plate while loosening the screws as it could fall into the Printer.

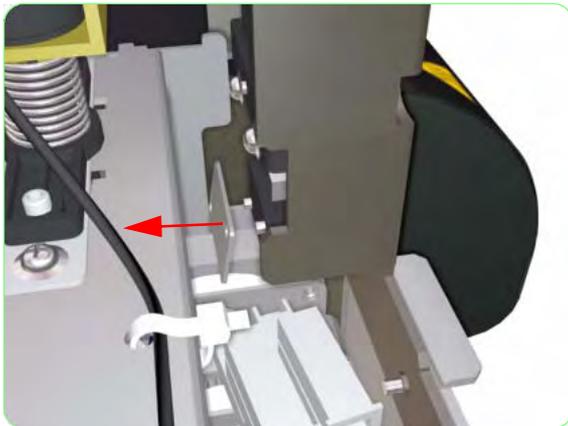

- 14.** Remove the Sensor Plate from the Printer.

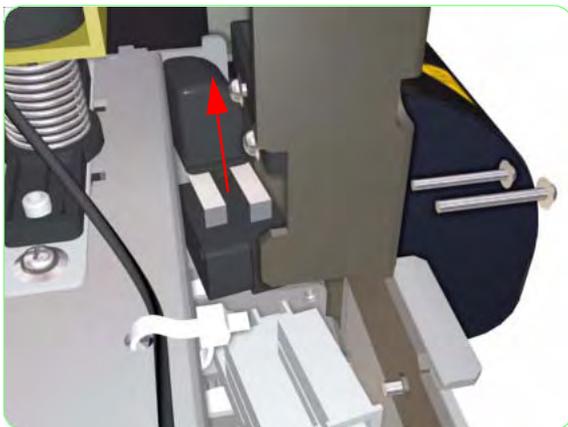


- 15.** Remove two screws that secure the Right Rear Cover Sensor to the Chassis. Remove the Right Rear Cover Sensor.

Remove the Rear Cover Sensor very carefully so that the Kicker on the Rear Cover Sensor does not drop.




- 16.** Loosen two screws that secure the Sensor Plate and the Left Rear Cover Sensor to the Chassis.

Only loosen the screws until the Sensor Plate is released. Also, keep hold of the Sensor Plate while loosening the screws as it could fall into the Printer.

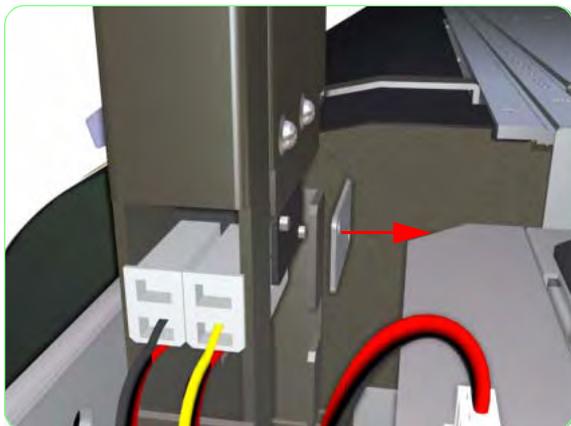


- 17.** Remove the Sensor Plate from the Printer.

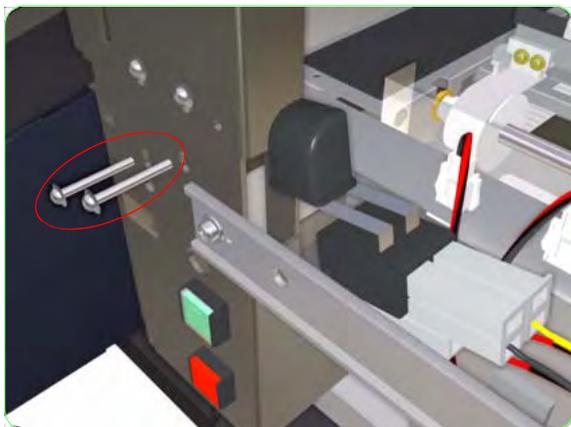

- 18.** Remove two screws that secure the Left Rear Cover Sensor to the Chassis.

Remove the Rear Cover Sensor very carefully so that the Kicker on the Rear Cover Sensor does not drop.

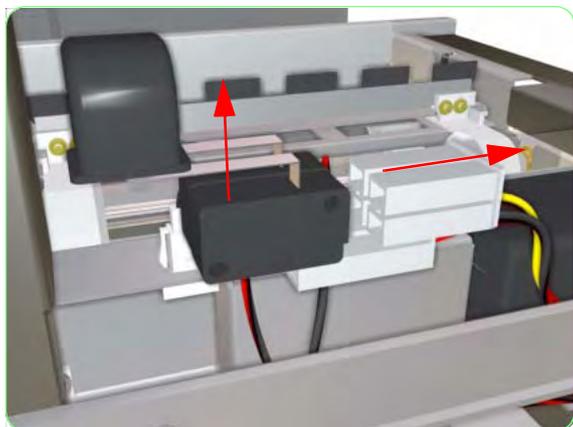

19. Disconnect the Sensor Cable from the Right Rear Cover Sensor and remove from the Printer.

Home Position Sensor


Removal

Switch off the product and remove the power cable.


1. Remove the Upper Side Cover (Right) ⇒ Page 8-4.
2. Remove the Top Side Cover (Right) ⇒ Page 8-5.
3. Locate the Home Position Sensor.




4. Remove two screws that secure the Home Position Sensor to the Printer.

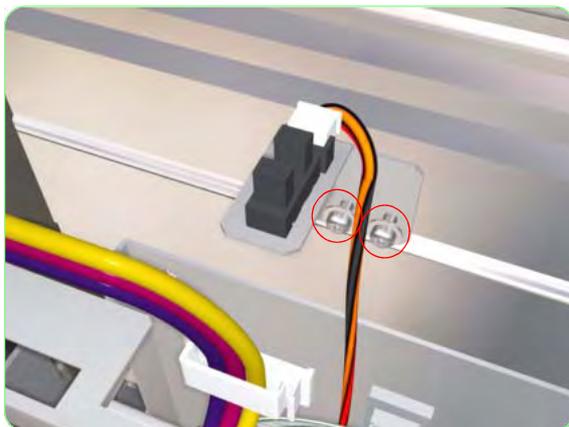

5. Remove the Home Position Sensor from the Printer.

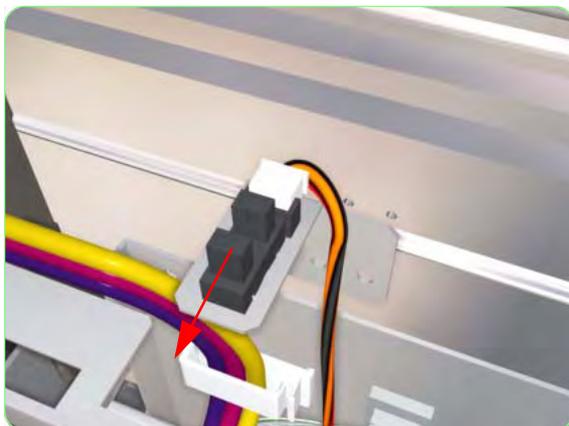

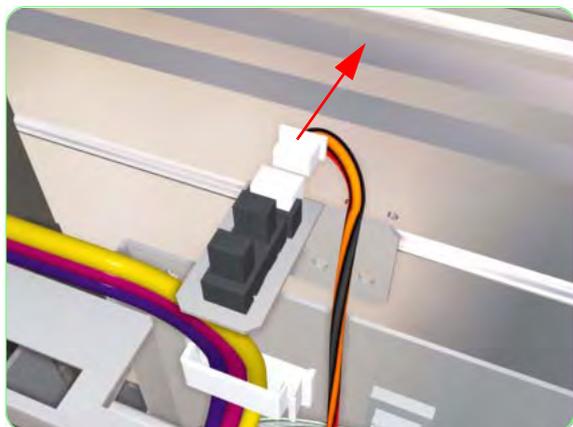

6. Disconnect the Cable from the Home Position Sensor.





7. Unclip the Home Position Sensor from the Support Bracket.

Paper-Axis Motor and Belt


Removal

Switch off the product and remove the power cable.

1. Remove the Upper Side Cover (Right) ⇒ Page 8-4.
2. Remove the Top Side Cover (Right) ⇒ Page 8-5.
3. Remove the Scan-Axis Motor ⇒ Page 8-72.
4. Disconnect the Paper-Axis Motor Cables.

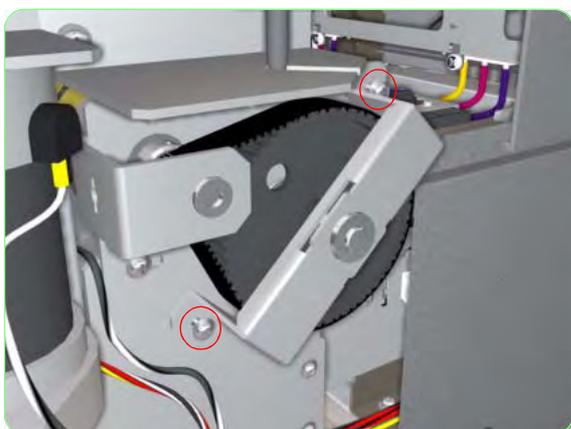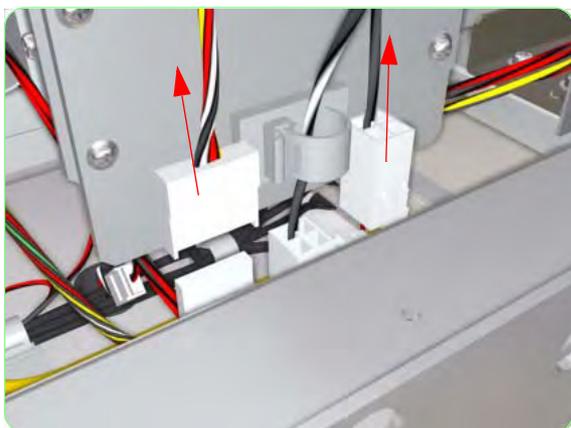


5. Remove two screws that secure the Paper-Axis Gear Plate.

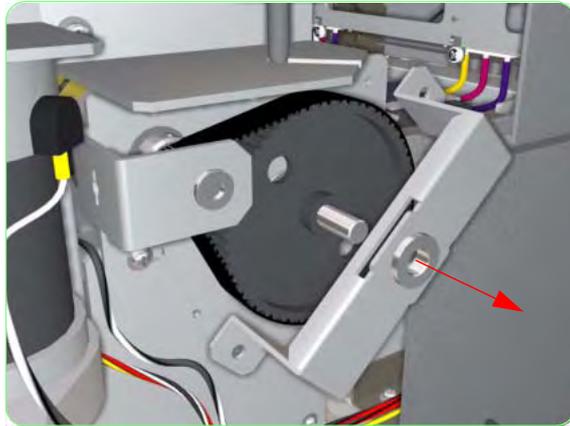


6. Remove the Paper-Axis Gear Plate from the Printer.


Make sure you gently remove the Paper-Axis Gear Plate, otherwise the Spring and Washer will accidentally fly out.

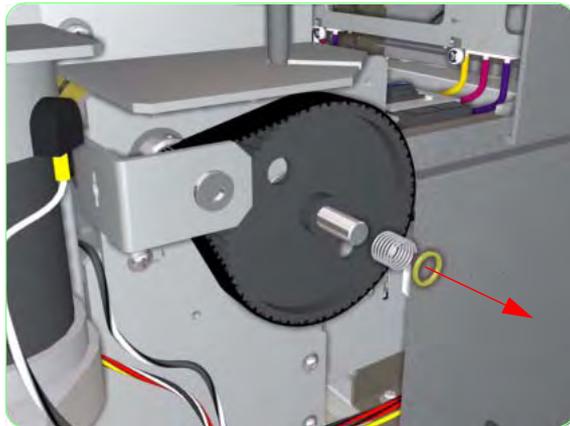


7. Remove the Spring and Washer from the Paper-Axis Gear shaft.

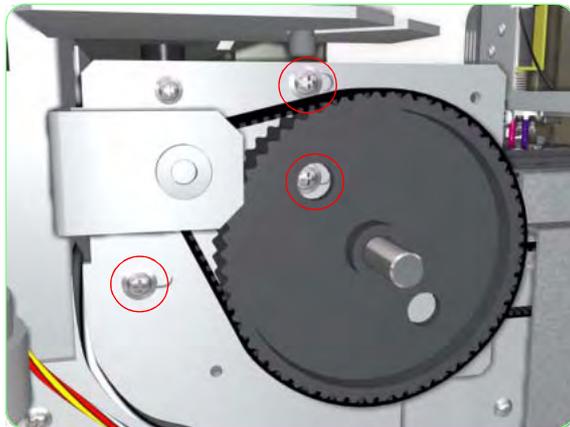


8. Loosen three screws that secure the Paper-Axis Motor Bracket to the Chassis.

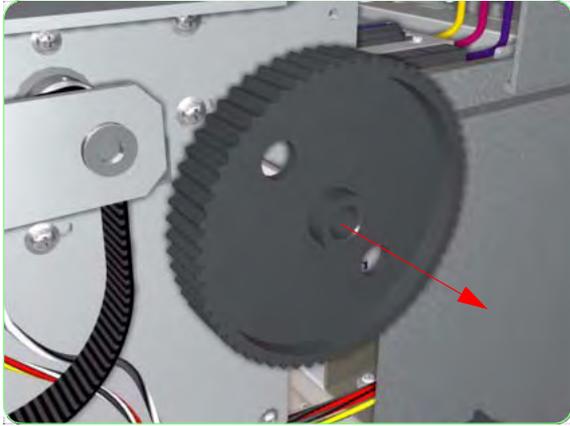

- 9.** Release the Belt and remove the Paper-Axis Gear from the Printer.

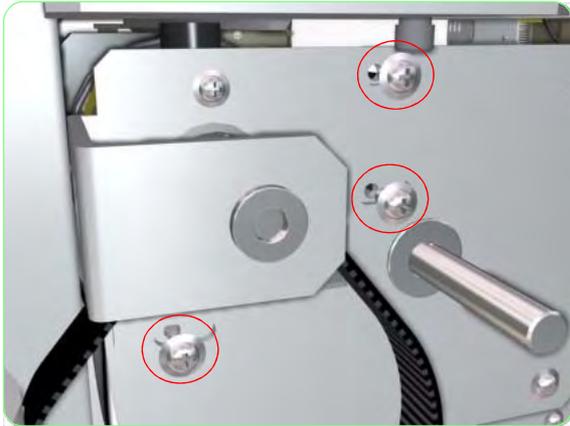

- 10.** Remove three screws that secure the Paper-Axis Motor Bracket to the Chassis.

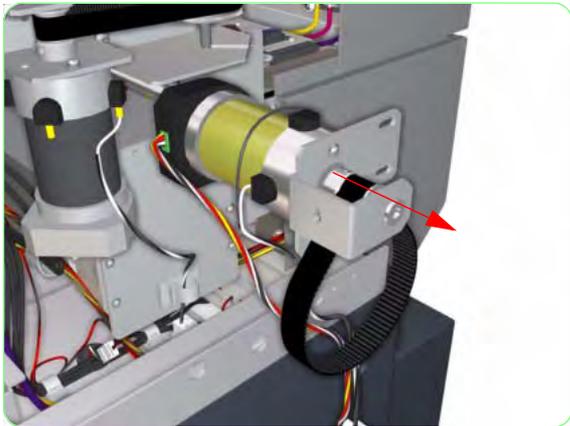

- 11.** Remove the Paper-Axis Motor Assembly from the Printer.



- 12.** Remove two screws that secure the Bracket to the Paper-Axis Motor.



- 13.** Remove the Paper-Axis Motor from the Bracket.

When installing the Paper-Axis Motor, make sure that the Scan-Axis Motor has already been removed.


Once the Paper-Axis Motor has been installed correctly, you must perform the Paper-Axis Belt Tension Adjustment. For further information, refer to Page 5-14.

Scan-Axis Motor and Belt


Removal

Switch off the product and remove the power cable.


1. Remove the Upper Side Cover (Right) ⇒ Page 8-4.
2. Remove the Top Side Cover (Right) ⇒ Page 8-5.
3. Disconnect the Scan-Axis Motor Cable.

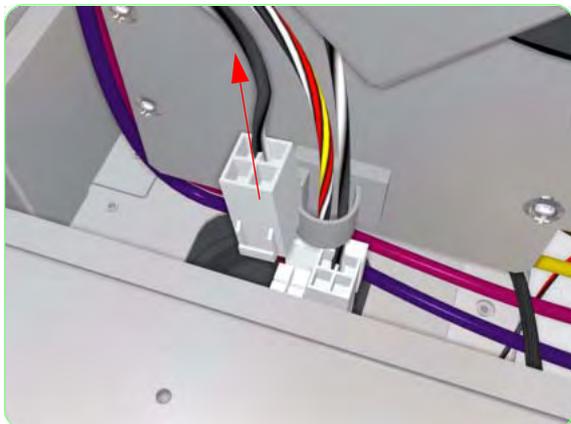


4. Loosen two screws that secure the Tension Pulley on the right hand side of the Printer. Loosening these two screws will release the tension on the Carriage Belt, which must always be done before removing the Belt.

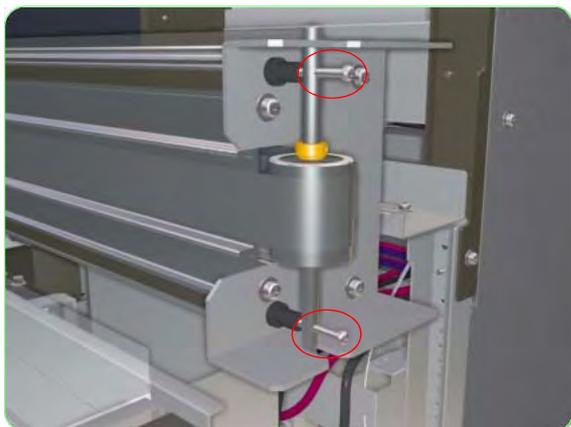


5. Remove one screw that secures the Belt to the left side of the Carriage Assembly and then release the Belt from the Carriage Assembly.

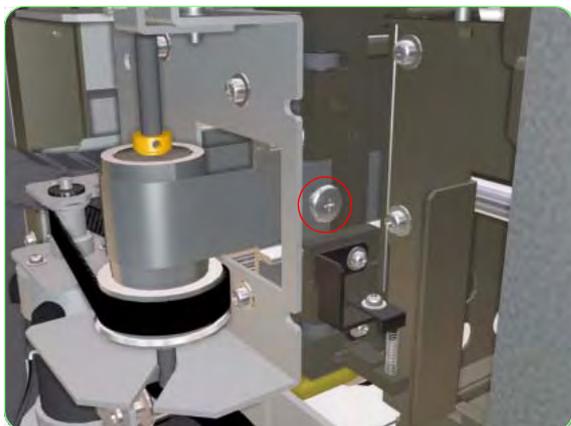

Be very careful when handling the Belt, since it is sharp and could cause injury.

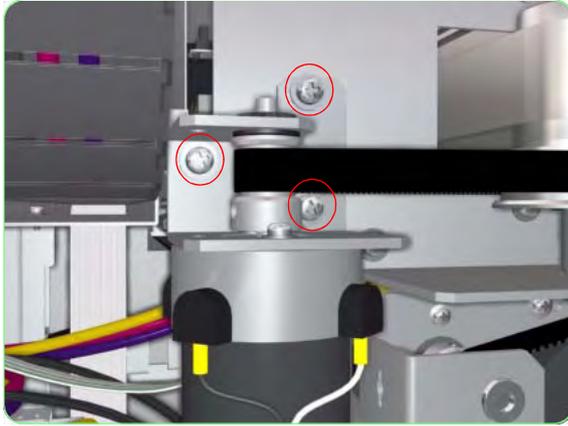


- 6.** Loosen three screws that secure the Scan-Axis Motor Bracket to the Chassis.

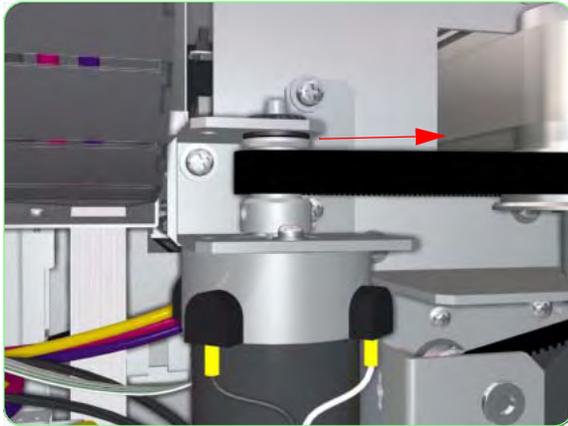


- 7.** Move the Scan-Axis Motor Bracket to the right to release the tension on the Scan-Axis Belt.




- 8.** Release the Scan-Axis Belt and remove the Drive Pulley from the Printer.

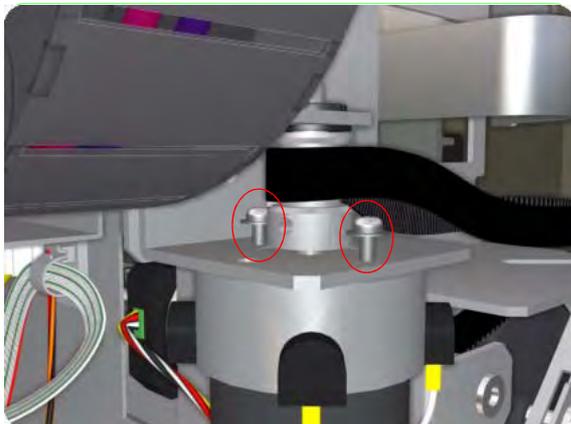

9. Remove two screws that secure the Scan-Axis Motor to the Bracket.

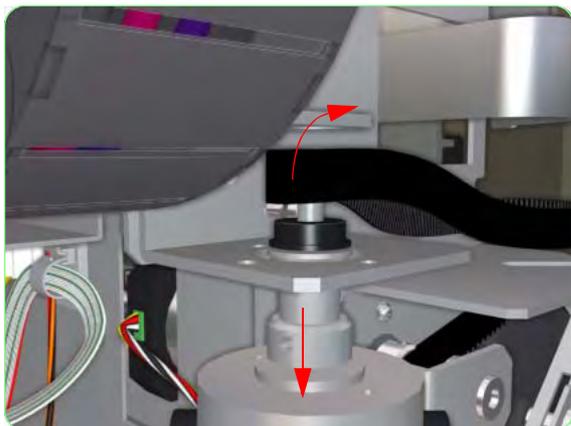

10. Release the Scan-Axis Belt and remove the Scan-Axis Motor from the Printer.

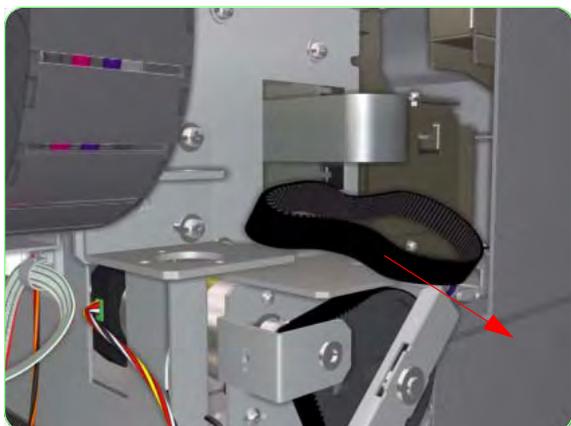

11. Remove the Scan-Axis Belt from the Printer.


Once the Scan-Axis Motor has been installed correctly, you must perform the Scan-Axis Belt Tension Adjustment (refer to Page 5-12) and the Belt Tension Adjustment (refer to Page 5-3).

Carriage Drive Assembly (Includes Carriage Belt)

Removal


Switch off the product and remove the power cable.

1. Remove the Upper Side Cover (Left and Right) ⇒ Page 8-4.
2. Remove the Top Side Cover (Left and Right) ⇒ Page 8-5.
3. Loosen two screws that secure the Tension Pulley on the right hand side of the Printer. Loosening these two screws will release the tension on the Carriage Belt, which must always be done before removing the Belt.

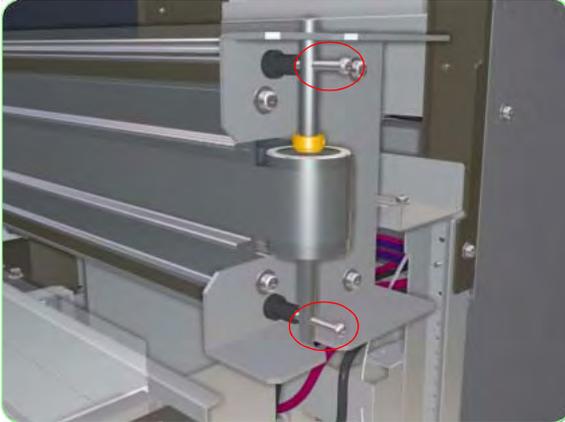



4. Remove one screw that secures the Belt to the left side of the Carriage Assembly.

Be very careful when handling the Belt, since it is sharp and could cause injury.

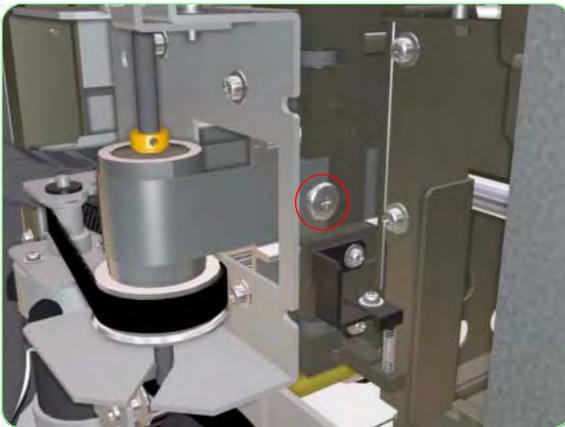


5. Release the Belt from the Carriage Assembly.

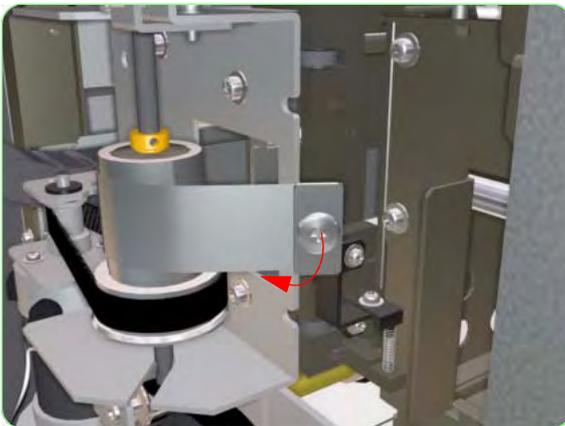

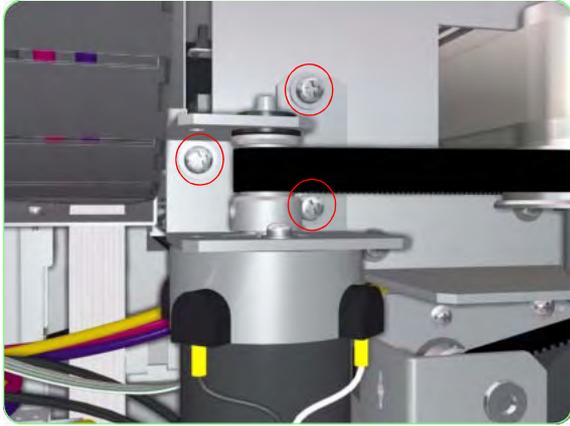

6. Loosen three screws that secure the Scan-Axis Motor Bracket to the Chassis.

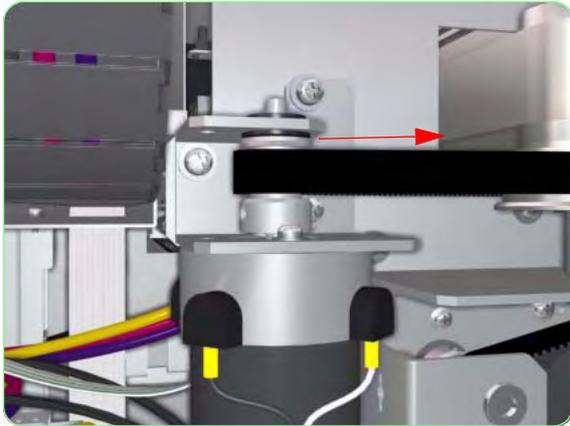


7. Move the Scan-Axis Motor Bracket to the right to release the tension on the Scan-Axis Belt.




8. Release the Scan-Axis Belt and remove the Drive Pulley from the Printer.



- 9.** Remove one screw that secures the Belt to the right side of the Carriage Assembly.

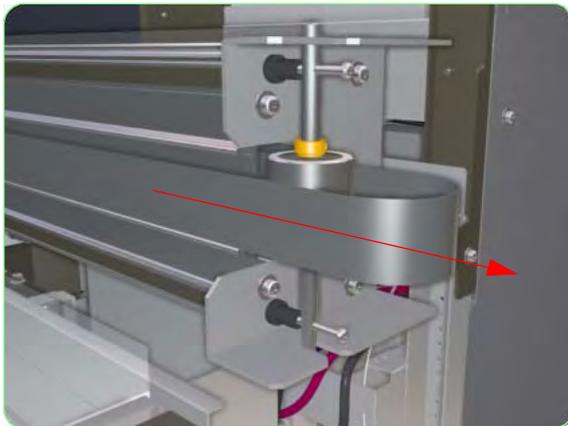

- 10.** Carefully slide the Belt out of the Carriage Assembly and remove from the Printer.

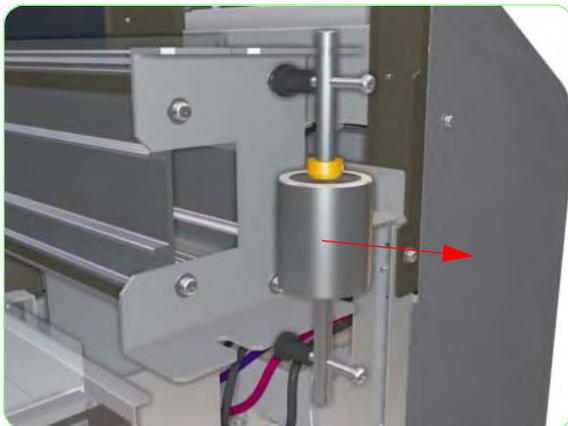

- 11.** Remove the Tension Pulley from the Printer.



Once the Carriage Drive Assembly has been installed correctly, you must perform the Scan-Axis Belt Tension Adjustment (refer to Page 5-12) and the Belt Tension Adjustment (refer to Page 5-3).

Encoder Strip

Removal

Switch off the product and remove the power cable.

1. Remove the Rear Cover ⇒ Page 8-3.
2. Remove the Upper Side Cover (Left and Right) ⇒ Page 8-4.
3. Remove the Top Side Cover (Left and Right) ⇒ Page 8-5.
4. Remove the Top Cover ⇒ Page 8-6.
5. Remove the screws that secure the Encoder Strip to the Chassis.

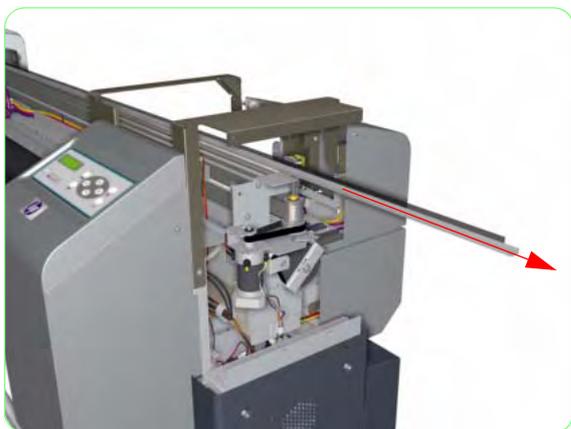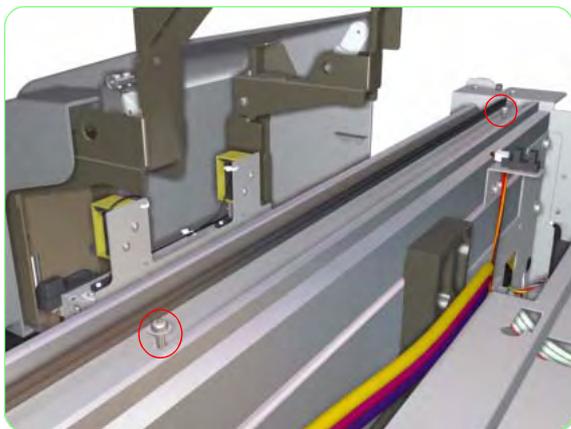



6. Slide the Encoder Strip out of the Printer.

Trailing Cable

Removal

Switch off the product and remove the power cable.


1. Remove the Rear Cover ⇒ Page 8-3.
2. Remove the Upper Side Cover (Right) ⇒ Page 8-4.
3. Remove the Top Side Cover (Right) ⇒ Page 8-5.
4. Remove the Top Cover ⇒ Page 8-6.
5. Remove the Capping Door ⇒ Page 8-13.
6. Remove the Electronics Module Cover ⇒ Page 8-21.
7. Remove the Front Heater ⇒ Page 8-29.
8. Remove two screws that secure the Carriage Cover to the Carriage Assembly.

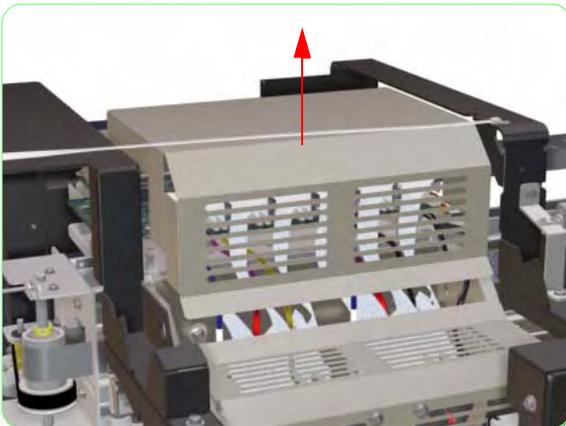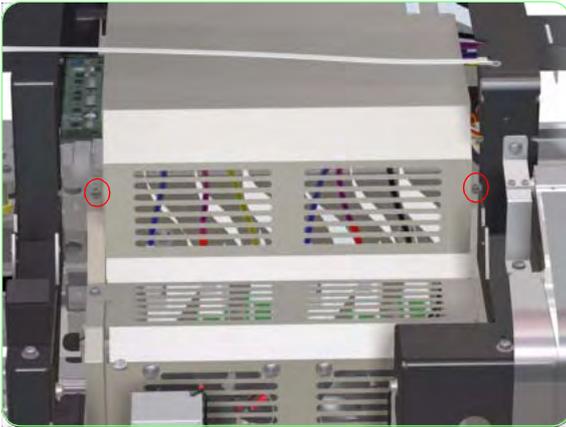

9. Remove the Carriage Cover from the Carriage Assembly.



- 10.** Remove two screws that secure the Carriage PCA Cover to the Carriage Assembly.

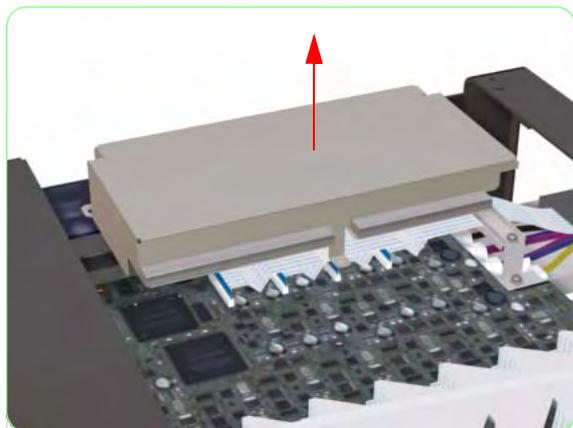


- 11.** Remove the Carriage PCA Cover from the Carriage Assembly.




- 12.** Move the Carriage Assembly out of the Capping Station.

Make sure that the Carriage is Uncapped before performing the following steps. Trying to move the Carriage out of the Capping Station while it is still capped will cause damage to the Printheads.

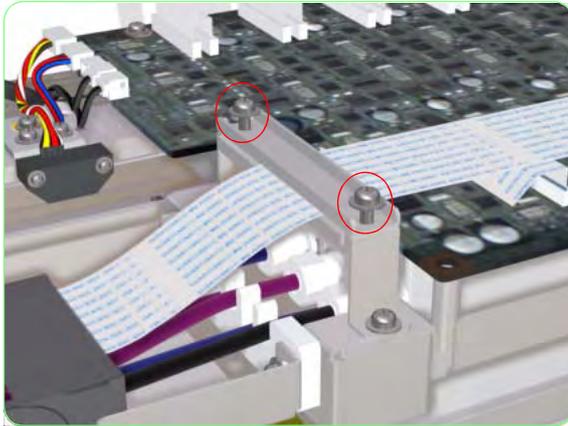


- 13.** Remove two screws that secure the metal bracket to the Carriage Assembly.

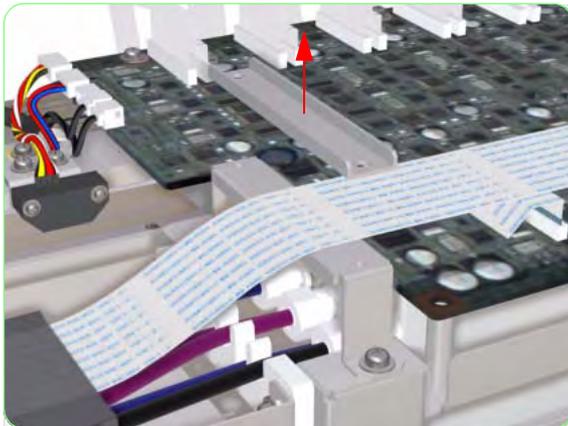


- 14.** Remove the metal bracket from the Carriage Assembly.




- 15.** Remove four screws that secure the Rail Guide to the Printer.

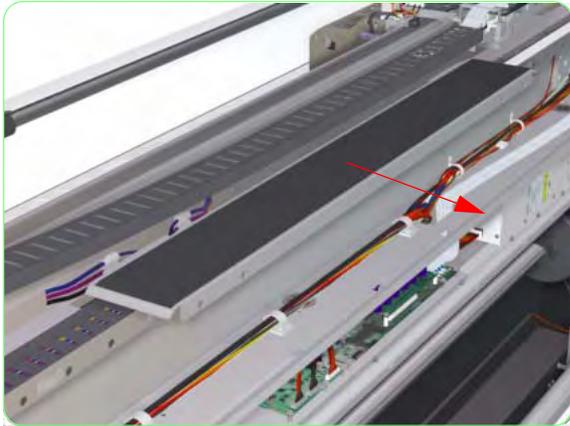


16. Remove the Rail Guide from the Printer.

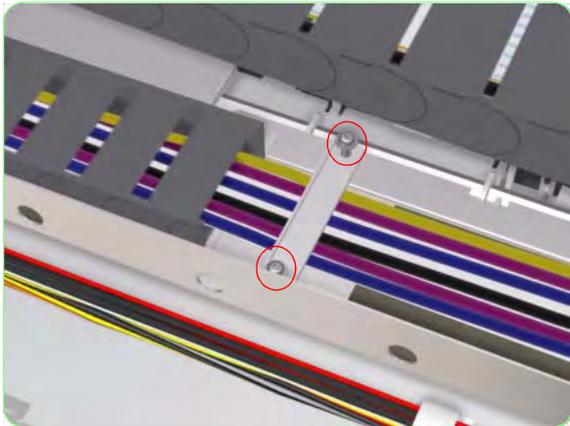


17. Remove two screws that secure the metal bracket to the Printer.

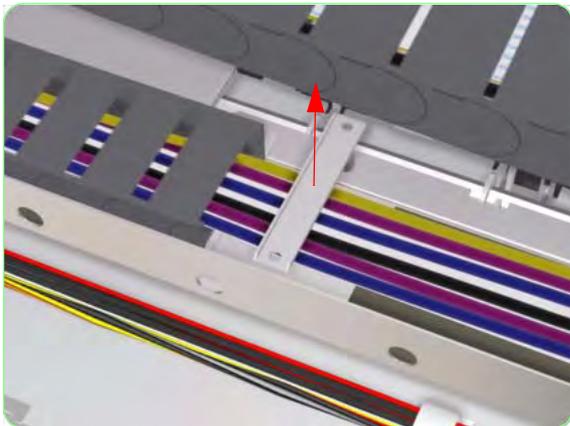


18. Remove the metal bracket from the Printer.

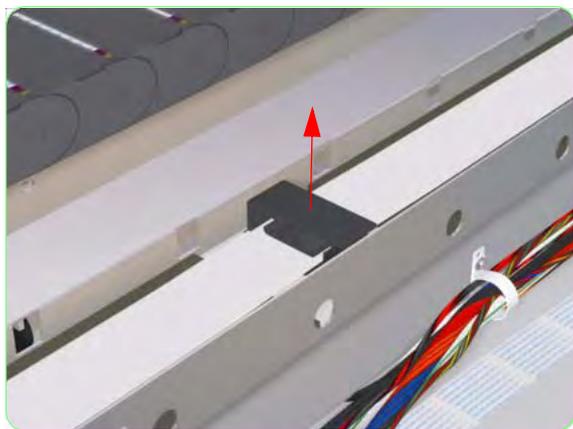


19. Remove a Cable Clip that secures the Trailing Cable to the Printer.

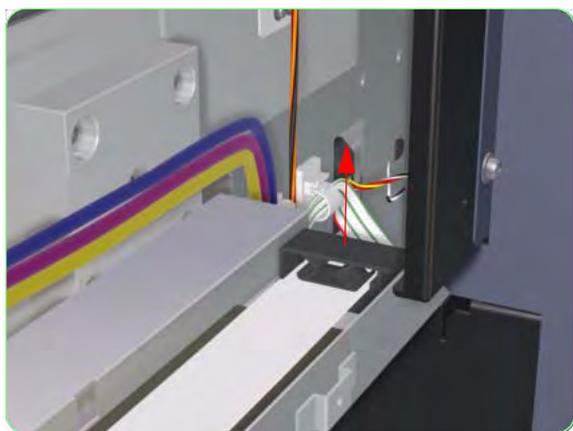


20. Remove a Cable Clip that secures the Trailing Cable to right hand side of the Printer.

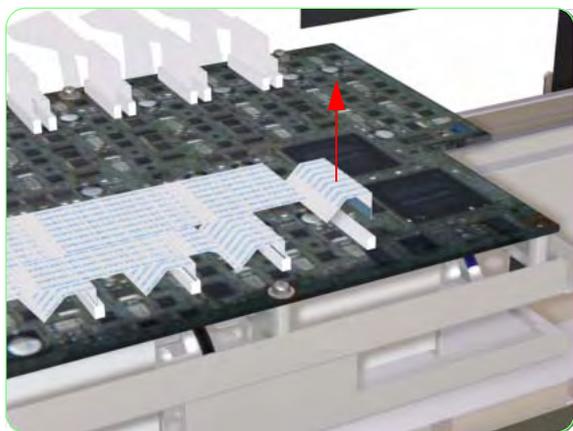


21. Disconnect the first Trailing Cable from the Carriage PCA.

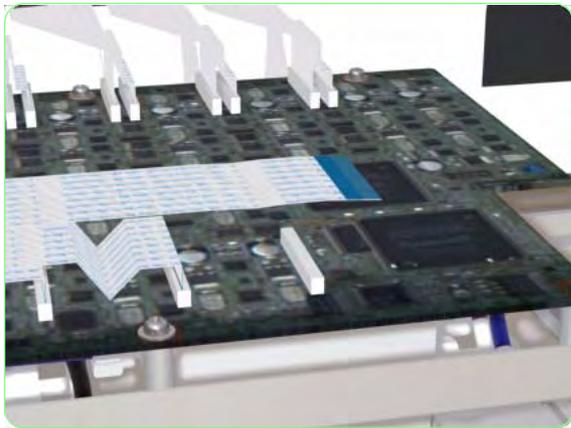

22. Flatten the Trailing Cable.

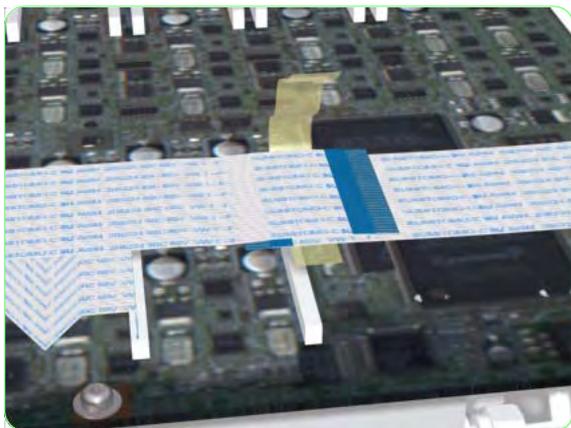

23. Using a piece of tape, attach the first **new** Trailing Cable to the old Trailing Cable already disconnected.

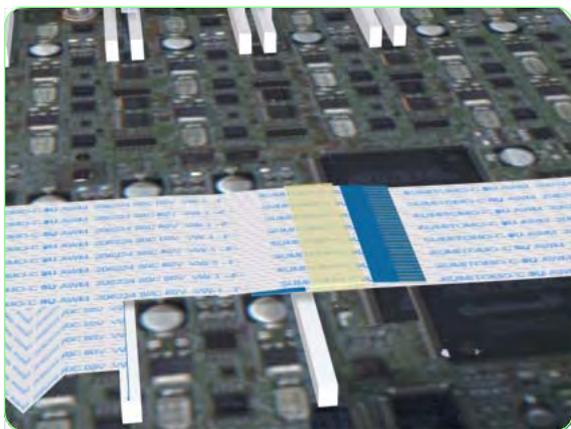


24. Make sure that the tape does not touch the electrode part of the Trailing Cable and ensure the two Trailing Cables are securely attached.




25. Disconnect (one by one) the remaining Trailing Cables and attach them to the **new** Trailing Cables.




26. Disconnect the Trailing Cable from the Main PCA.

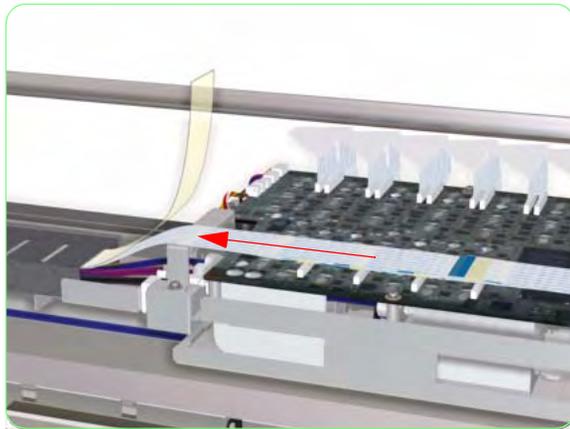

27. While holding the transparent plastic strip, begin to carefully pull the old Trailing Cable through the Tube Rail, making sure not to detach the tape from the Trailing Cables.

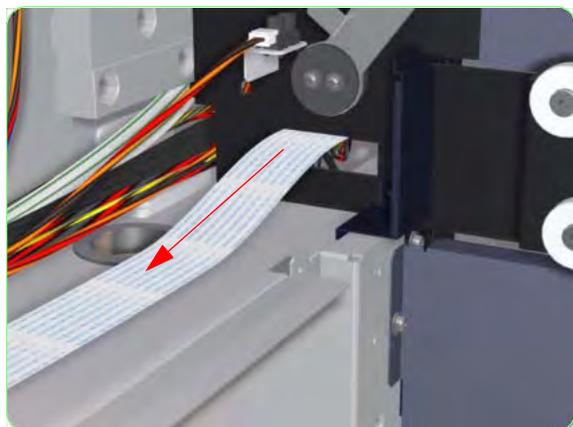

28. Pass the Trailing Cable through the hole (as shown in the drawing).

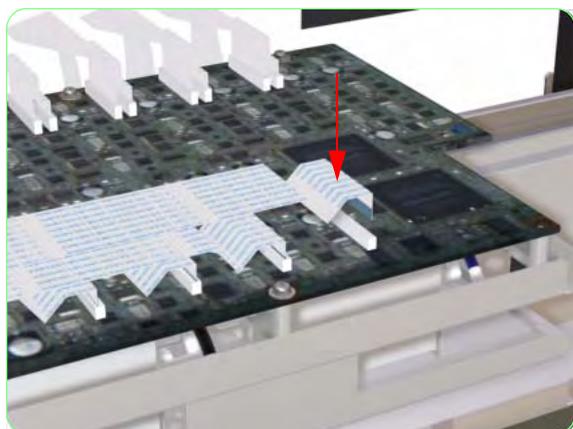

29. Once the **new** Trailing Cable has been routed through the Printer, detach the tape and connect the Trailing Cable to the Carriage PCA and the Main PCA.




30. Once the Trailing Cable has been correctly connected and all the different components have been re-installed, you will need to move the Carriage Assembly across the Printer (from left to right) three or four times to ensure that the Ink Tubes and Trailing Cable are well seated within the Tube Rail.

Printhead Cooling Fans


Removal


Switch off the product and remove the power cable.

1. Remove the Upper Side Cover (Right) ⇒ Page 8-4.
2. Remove the Top Side Cover (Right) ⇒ Page 8-5.
3. Remove the Capping Door ⇒ Page 8-13.
4. Remove two screws that secure the Carriage Cover to the Carriage Assembly.

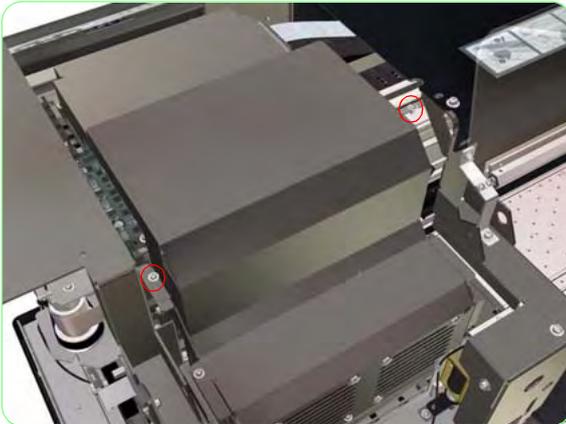


5. Remove the Carriage Cover from the Carriage Assembly.

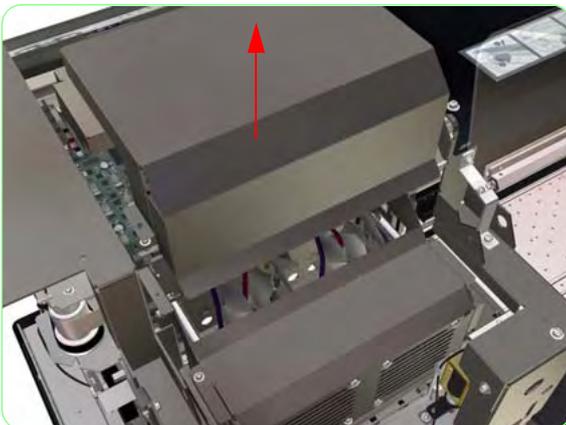


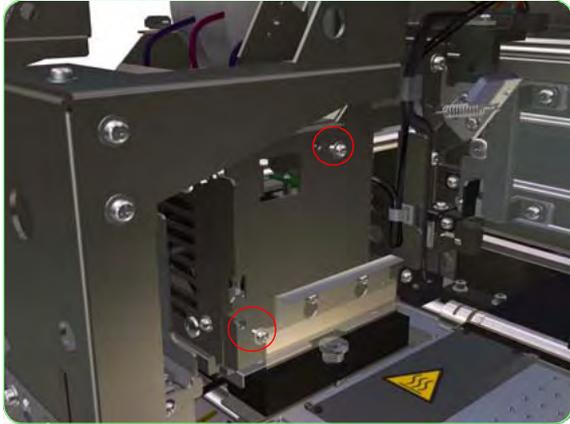


6. Remove two screws that secure the Printhead Cooling Fan Assembly to the Carriage Assembly.

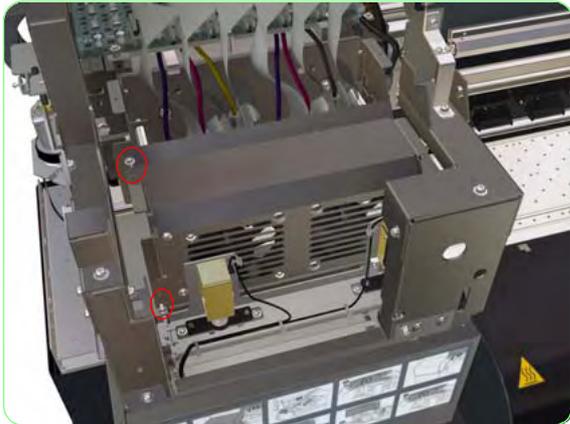


7. Remove two screws that secure the Printhead Cooling Fan Assembly to the Carriage Assembly.

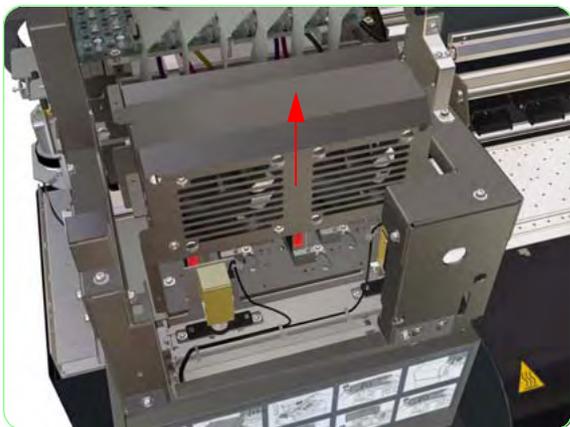

8. Raise the Printhead Cooling Fan Assembly slightly.

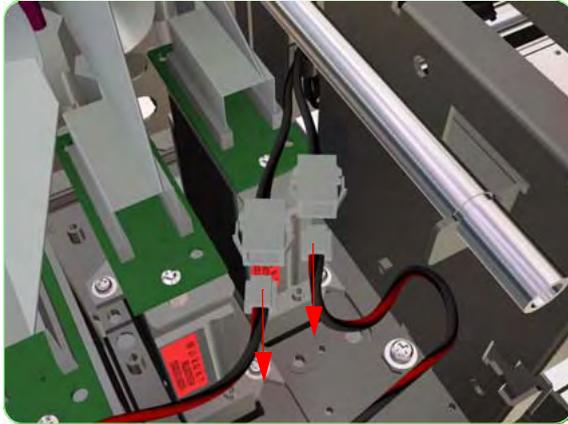

9. Disconnect the cables from the Printhead Cooling Fan Assembly.

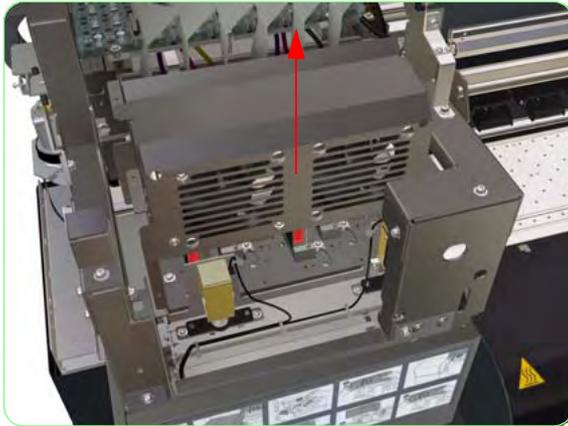


10. Remove the Printhead Cooling Fan Assembly from the Printer.


If one or both of the Printhead Cooling Fans need to be replaced, then continue with the following instructions.



11. Remove two screws that secure the metal bracket to the Printhead Cooling Fan Assembly.

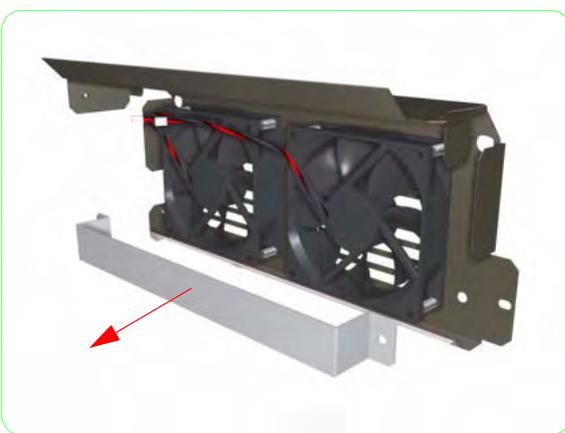


- 12.** Remove the metal bracket from the Printhead Cooling Fan Assembly.

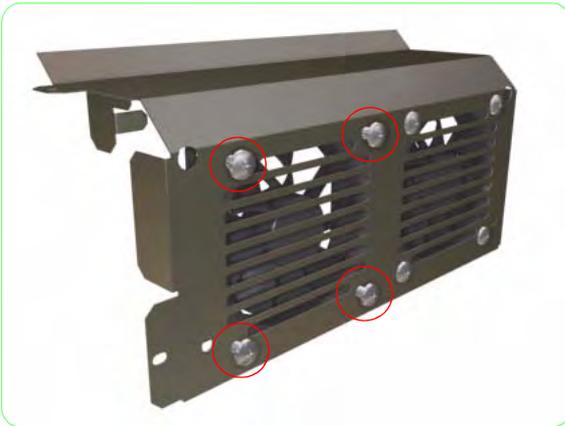

- 13.** Remove four screws that secure the Printhead Cooling Fan to the Printhead Cooling Fan Assembly.

Be careful when removing the screws since there are washers between the Fan and the Fan Assembly. Make sure these Washers are re-installed when installing the Cooling Fan.

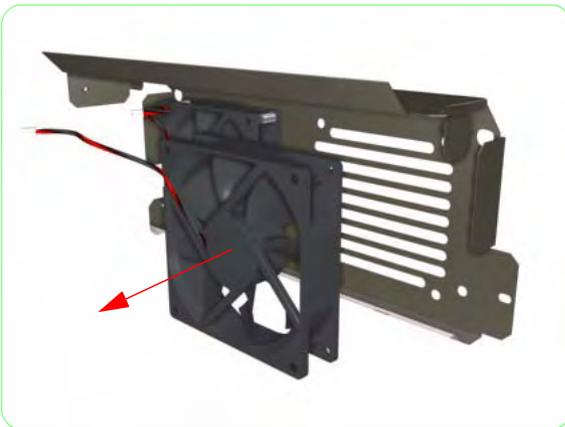


- 14.** Remove the Printhead Cooling Fan from the Printhead Cooling Fan Assembly.

Printhead


Removal

Switch off the product and remove the power cable.


1. Remove the Upper Side Cover (Right) ⇒ Page 8-4.
2. Remove the Top Side Cover (Right) ⇒ Page 8-5.
3. Remove the Capping Door ⇒ Page 8-13.
4. Remove the Printhead Cooling Fan Assembly ⇒ Page 8-87.
5. Remove two screws that secure the Printhead Connector Assembly to the Printhead.

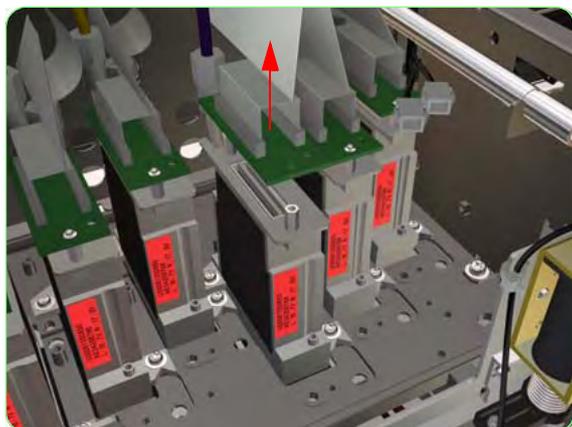


6. Disconnect the Printhead Connector Assembly from the Printhead.

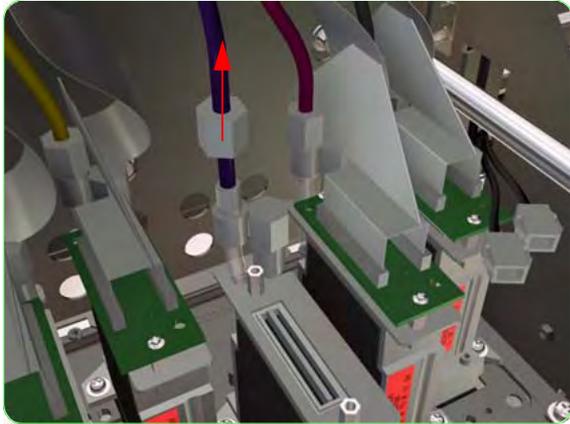

7. Disconnect the Ink Tube from the Printhead.

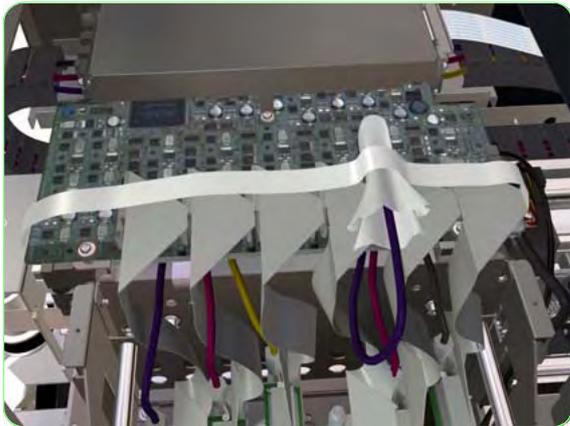


8. Cover the Ink Tube carefully with a paper cloth and secure it to the Carriage Assembly with some tape.

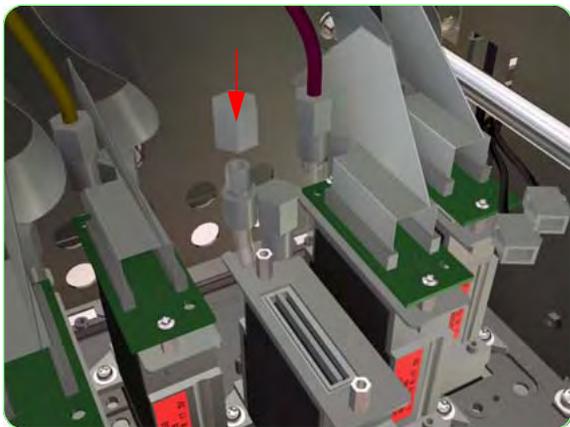

9. Install a Tube Cap on to the Printhead.



10. Remove two screws that secure the Printhead to the Carriage Assembly.

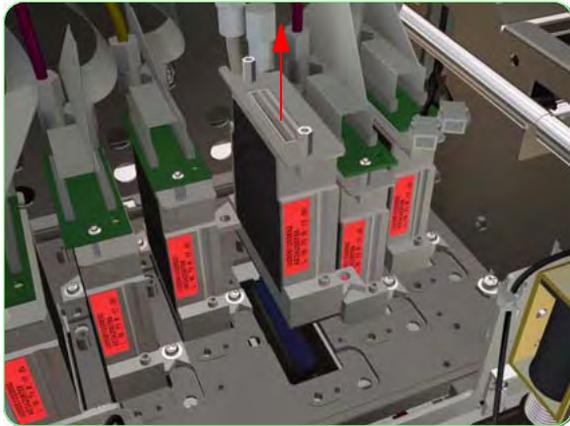

11. Remove the Printhead from the Carriage Assembly.



You MUST carefully follow the instructions in Chapter 3 in order to install and adjust the NEW Printhead correctly.

Printhead Connector Assembly


Removal

Switch off the product and remove the power cable.

1. Remove the Upper Side Cover (Right) ⇒ Page 8-4.
2. Remove the Top Side Cover (Right) ⇒ Page 8-5.
3. Remove the Capping Door ⇒ Page 8-13.
4. Remove the Printhead Cooling Fan Assembly ⇒ Page 8-87.
5. Disconnect the Printhead Connector Cable from the Carriage PCA.

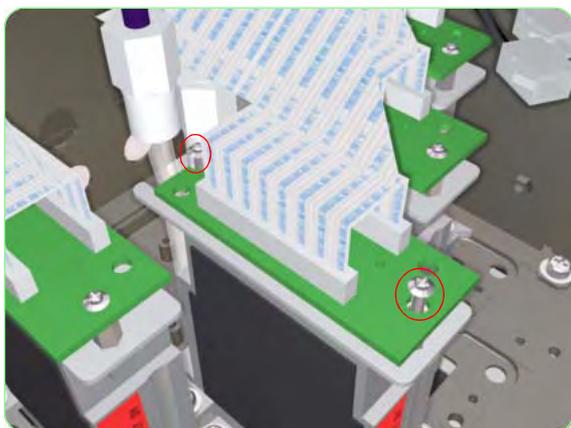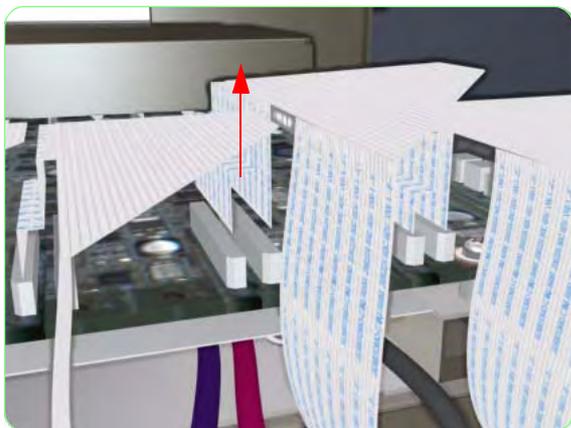

6. Remove two screws that secure the Printhead Connector Assembly to the Printhead.

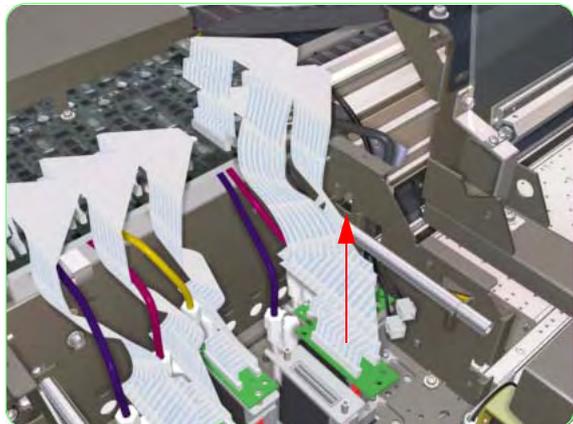


7. Disconnect the Printhead Connector Assembly from the Printhead and remove from the Printer.

Carriage PCA


Removal

Switch off the product and remove the power cable.


1. Remove the Upper Side Cover (Right) ⇒ Page 8-4.
2. Remove the Top Side Cover (Right) ⇒ Page 8-5.
3. Remove the Capping Door ⇒ Page 8-13.
4. Remove the Printhead Cooling Fan Assembly ⇒ Page 8-87.
5. Remove two screws that secure the Carriage PCA Cover to the Carriage Assembly.

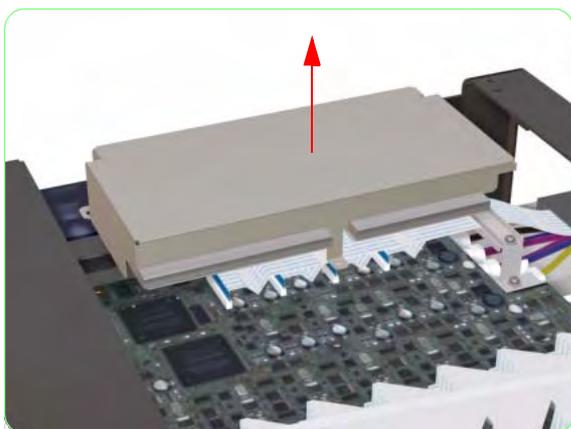


6. Remove the Carriage PCA Cover from the Carriage Assembly.

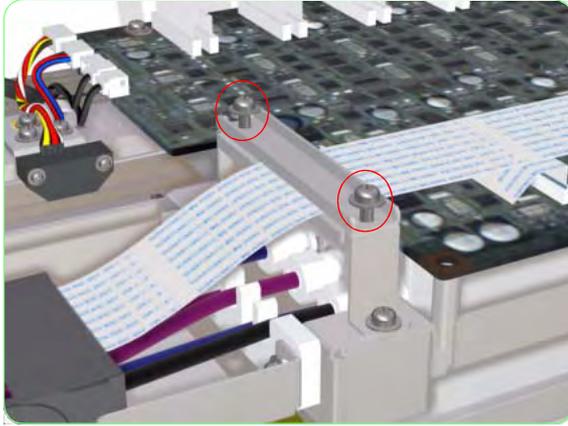


- 7.** Remove two screws that secure the metal bracket to the Carriage Assembly.

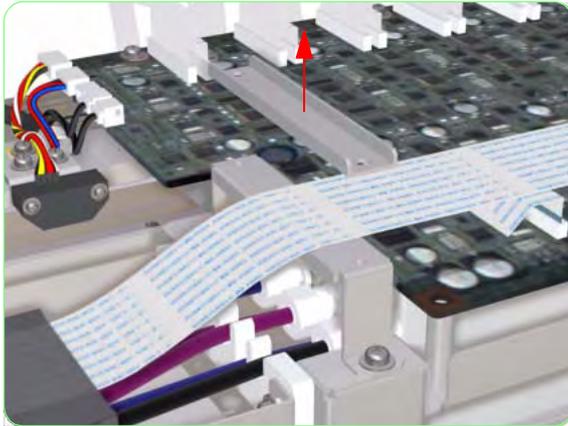


- 8.** Remove the metal bracket from the Carriage Assembly.

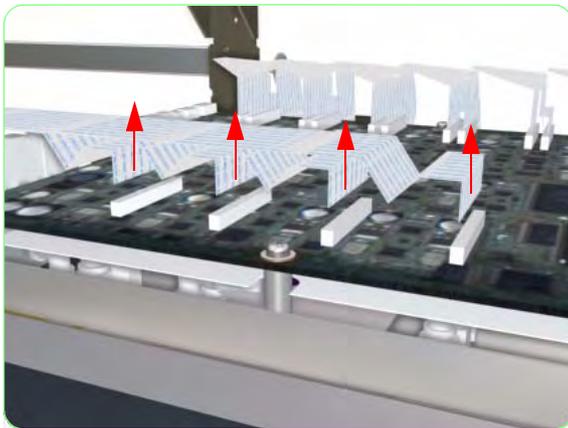


- 9.** Disconnect the Trailing Cable from the Carriage PCA.

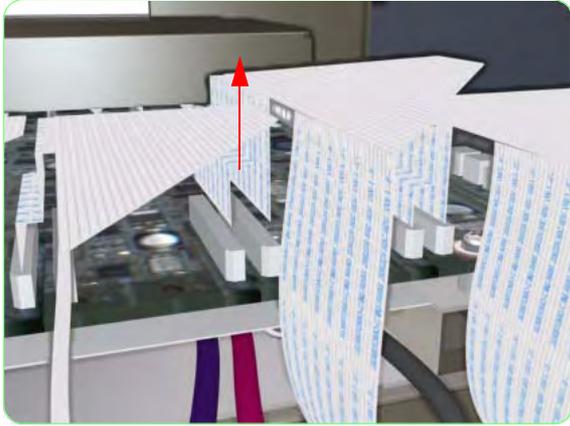

10. Disconnect ALL the Printhead Connector Cables from the Carriage PCA.

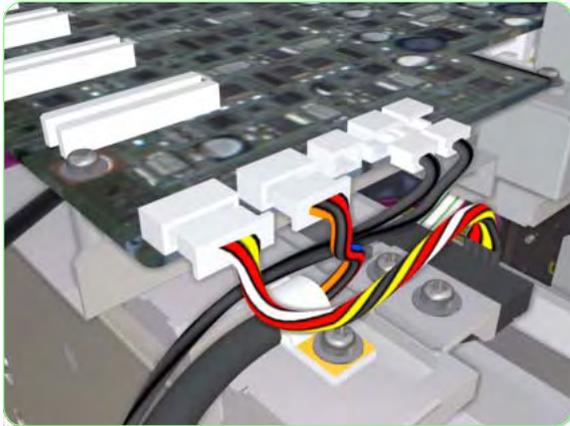

11. Disconnect ALL cables from the Carriage PCA.

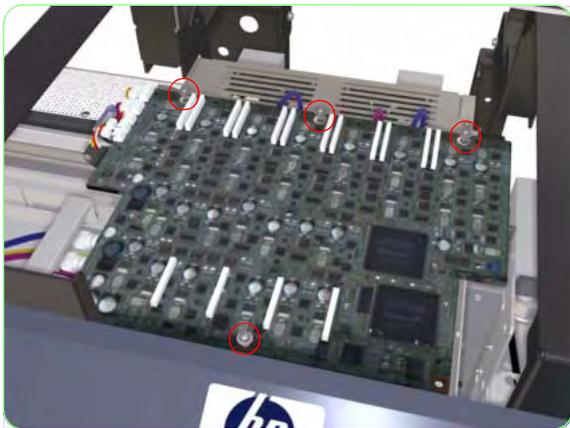

12. Remove four screws that secure the Carriage PCA to the Carriage Assembly.





13. Remove the Carriage PCA from the Printer.

Air Damper

Removal

Switch off the product and remove the power cable.


1. Remove the Upper Side Cover (Right) ⇒ Page 8-4.
2. Remove the Top Side Cover (Right) ⇒ Page 8-5.
3. Remove the Capping Door ⇒ Page 8-13.
4. Remove the Printhead Cooling Fan Assembly ⇒ Page 8-87.
5. Remove the Carriage PCA ⇒ Page 8-96.
6. If necessary, disconnect the Printhead Connector Cables from the Printheads in order to get better access to the Ink Tubes.
7. Identify the failing Air Damper and select the same Air Damper from the Air damper support Kit (each Air Damper has a different color tape and tube length).

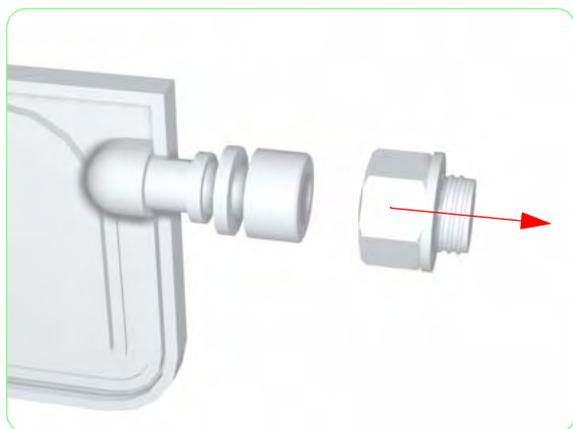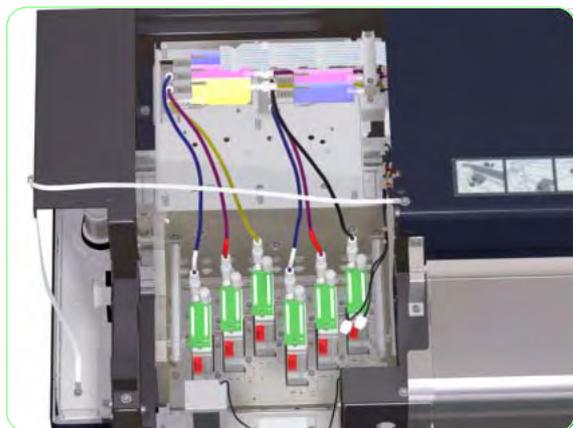


8. Remove the cap from the **new** Air Damper that will connect to the Ink Supply Tubes.



- 9.** Remove one screw that secures the Air Damper to the Carriage Assembly.

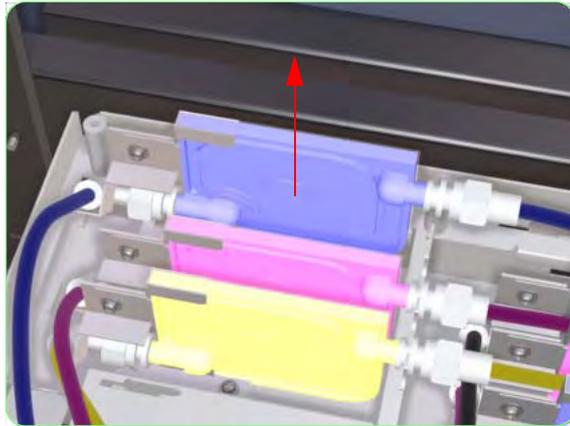




- 10.** Pull up the Air Damper slightly so you can access the Ink Supply Tube connector.

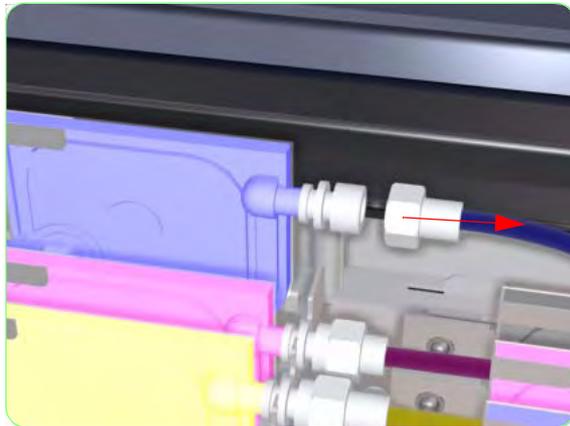

- 11.** Disconnect the Ink Supply Tube from the Air Damper.

When the Ink Supply Tube has been disconnected from the Air Damper, it is very important to immediately connect the NEW Air Damper to the Ink Supply Tube to prevent ink from being drawn into the Subtank.

The O-Ring inside the Ink Supply Tube should be replaced by a new one, and should be inserted all the way in.

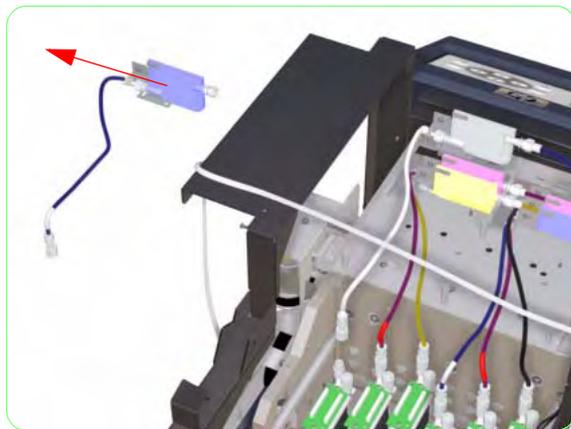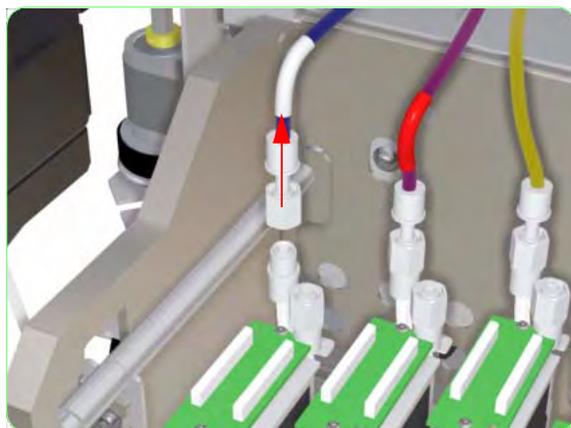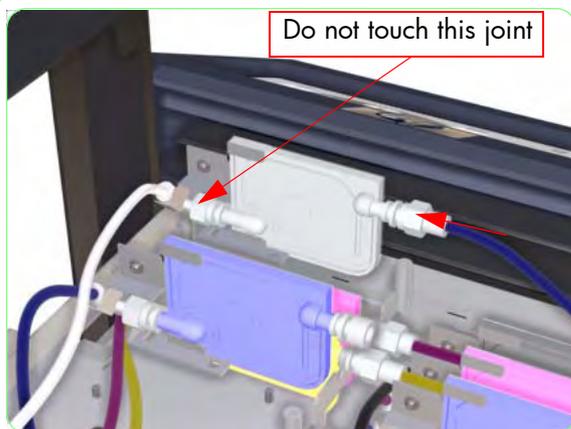

- 12.** Quickly connect the Ink Supply Tube to the **new** Air Damper.

Do not loosen or remove the joints on either side of the Air damper. Also, do not loosen or bend the nuts on the joints since they have been fastened to a specific torque.


When connecting the Ink Supply Tube to the Air Damper, make sure the joint is straight and fasten the nut securely with your fingers (do NOT use any other tool).

- 13.** Disconnect the Air Damper Tube from the Printhead.

- 14.** Remove the failing Air Damper from the Printer.



15. Remove the cap from the tube of the **new** Air Damper that will connect to the Printhead.

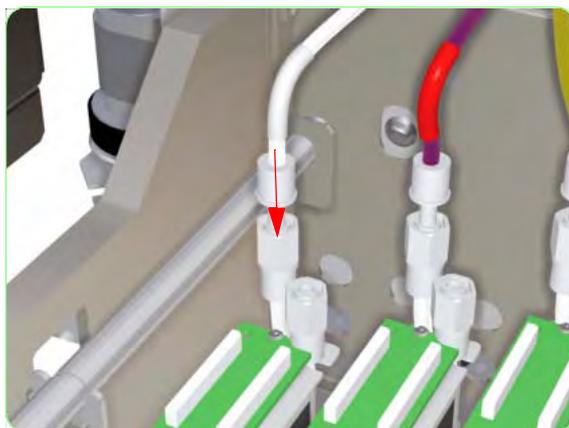

16. Quickly connect the tube of the **new** Air Damper to the Printhead.



17. Install the **new** Air Damper into the Carriage and secure with one screw.



Once the new Air Damper has been installed, you will need to switch On the Printer and charge the ink system (for more information, refer to Page 4-23).

Encoder Sensor


Removal

Switch off the product and remove the power cable.

1. Remove the Rear Cover ⇒ Page 8-3.
2. Remove the Upper Side Cover (Left and Right) ⇒ Page 8-4.
3. Remove the Top Side Cover (left and Right) ⇒ Page 8-5.
4. Remove the Top Cover ⇒ Page 8-6.
5. Disconnect the Encoder Sensor Cable from the Carriage PCA.

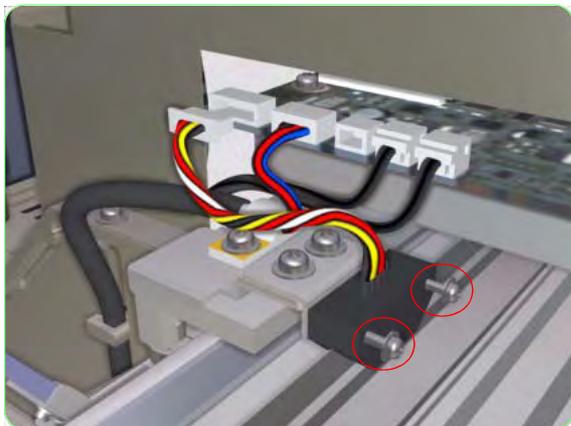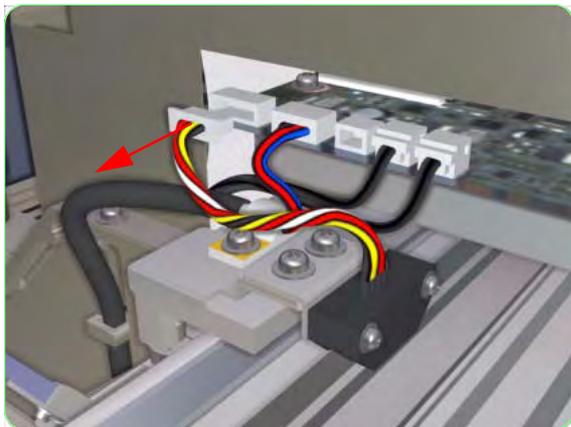

6. Remove two screws that secure the Encoder Sensor.

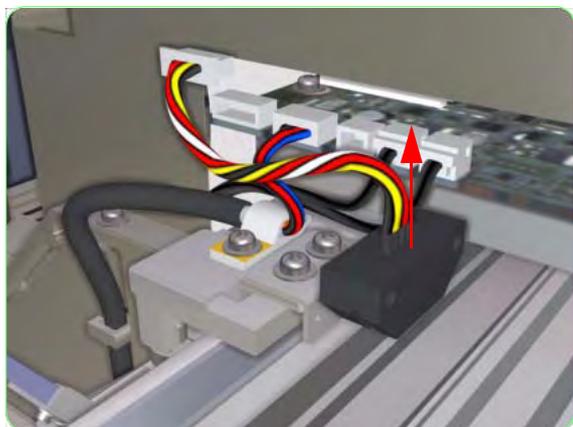

7. Remove the Encoder Sensor from the Printer.


Do not drop the plastic sheet between the Encoder Sensor and the fixing plate.

When a new Encoder Sensor is installed, make sure you re-insert the plastic sheet between the Encoder Sensor and the fixing plate.


Line Sensor

Removal


Switch off the product and remove the power cable.

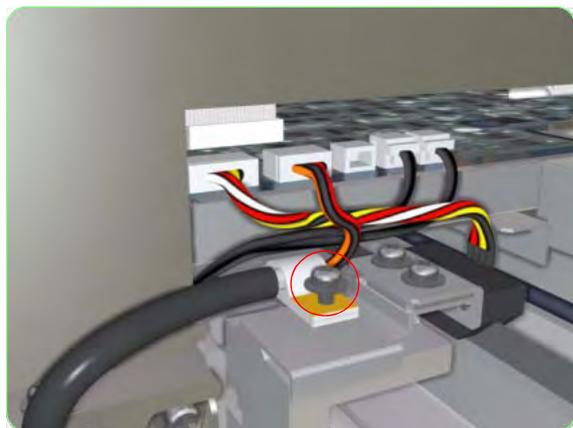

1. Open the Rear Cover.
2. Remove one screw that secures the Line Sensor Cable clip.

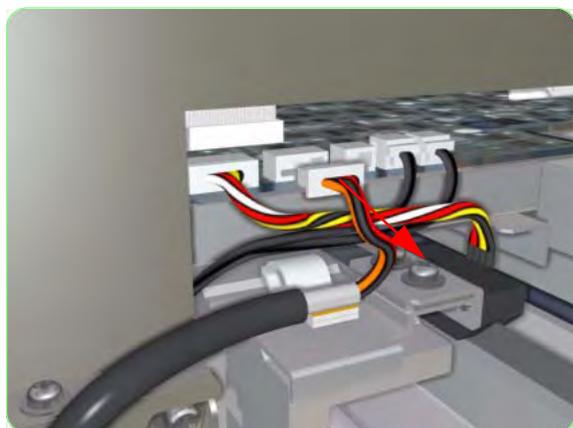

3. Disconnect the Line Sensor Cable from the Carriage PCA.

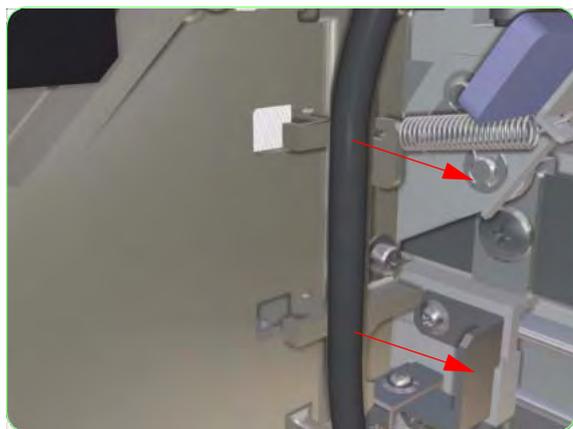

4. Release the Line Sensor Cable from the cable clips.




5. Remove one screw that secures the Line Sensor to the Carriage PCA.




6. Remove the Line Sensor from the Printer.

Ink Pump Assembly


Removal

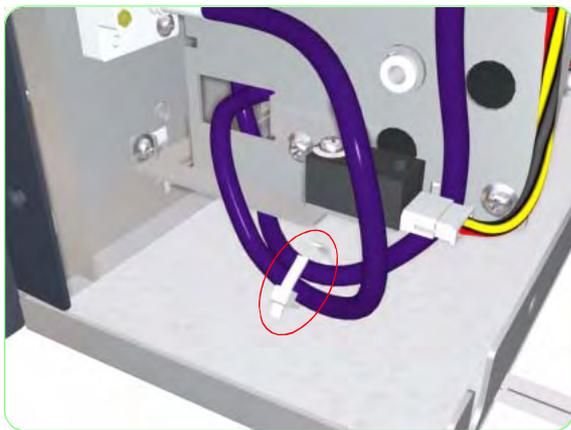


1. Purge the Ink from the Printer ⇒ Page 4-25. Once the ink has been purged, switch Off the Printer.
2. Remove the Rear Ink Cartridge Cover (Left or Right) ⇒ Page 8-20.
3. Cut the cable tie that secures the Ink Pump Tube.

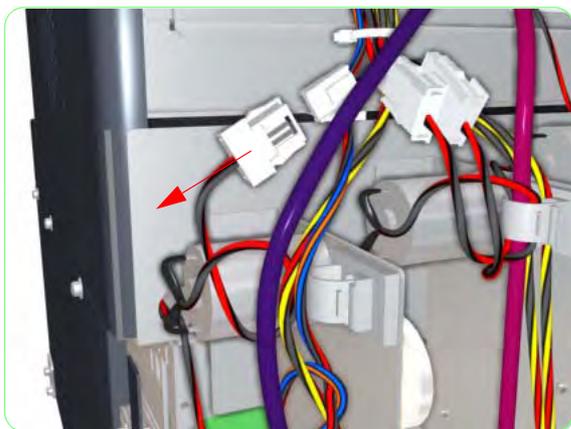


4. Disconnect the Ink Pump Assembly cables.

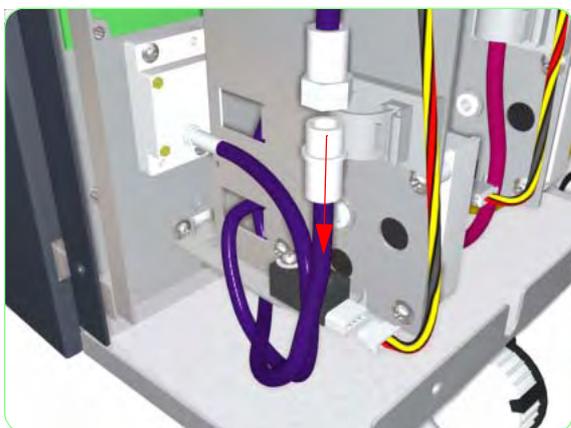

5. Carefully disconnect the Ink Pump Tube as shown.

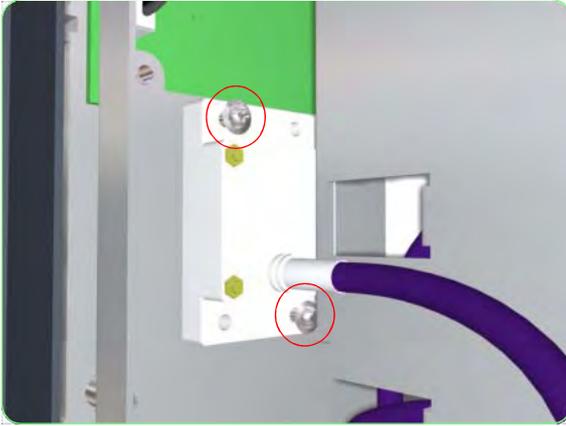

6. Remove two screws that secure the Ink Pump Tube Bracket.

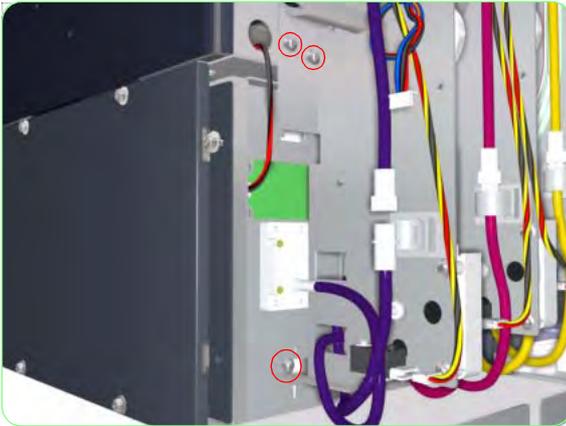

7. Remove three screws that secure the Ink Pump Assembly to the Printer.



8. Remove the Ink Pump Assembly from the Printer.


Once the new Ink Pump Assembly has been installed, you will need to switch On the Printer and charge the Ink (for more information, refer to Page 4-23).

Once you have replaced the Ink Pump Assembly, make sure you reset the Pump Tube counter (for more information, refer to Page 4-84).


Ink Supply Station (Left or Right)

Removal


1. Purge the Ink from the Printer ⇒ Page 4-25. Once the ink has been purged, switch Off the Printer.
2. Remove the Lower Side Cover (Left or Right) ⇒ Page 8-8.
3. Remove the Rear Ink Cartridge Cover (Left or Right) ⇒ Page 8-20.
4. Disconnect the Ink Supply Station cables.

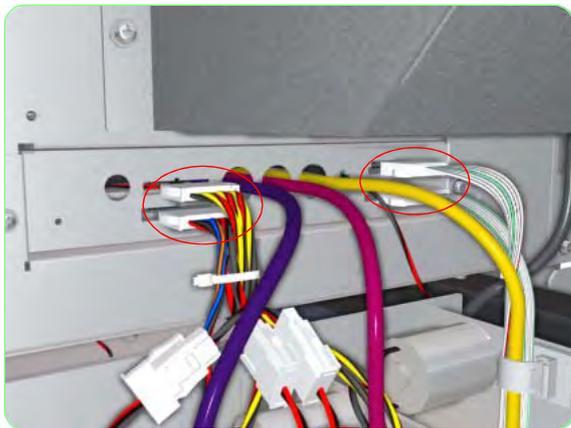

5. Remove the Ink Pump Tubes (for ALL three colors) from the cable clip.

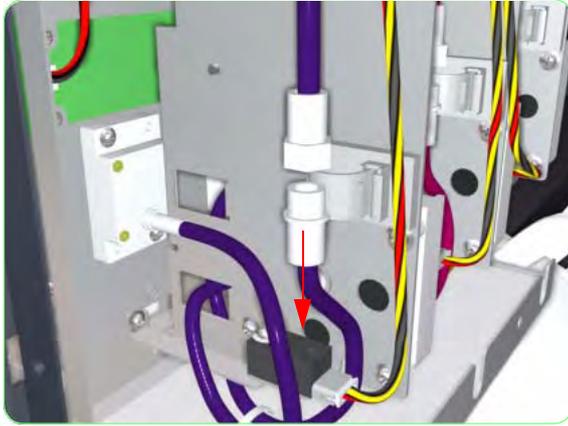


6. Carefully disconnect the Ink Pump Tube (for ALL three colors) from the top side.

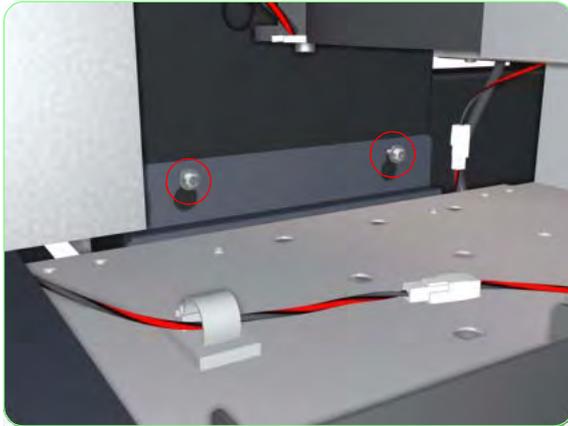

7. Loosen two screw that secure the Ink Supply Station to the Printer.



8. Remove two screws that secure the Ink Supply Station to the Printer.

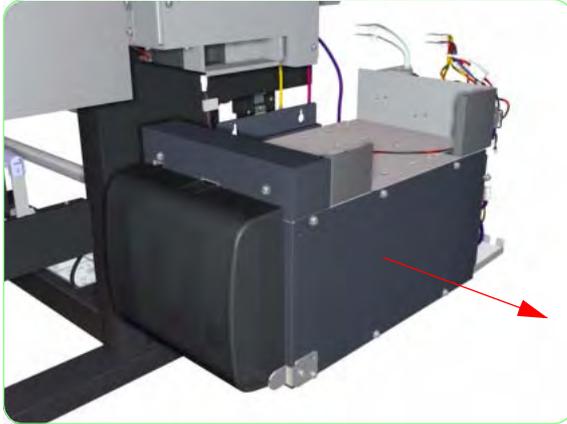

9. Remove the Ink Supply Station from the Printer.

Once the new Ink Supply Station has been installed, you will need to switch On the Printer and charge the Ink (for more information, refer to Page 4-23).

IC Door Sensor (Left or Right)

Removal

Switch off the product and remove the power cable.



1. Open the Ink Cartridge Door.




2. Remove two screws that secure the metal cover to the Ink Supply Station.




3. Remove the metal cover from the Ink Supply Station.


4. Remove the Lower Side Cover (Left or Right)
⇒ Page 8-8.

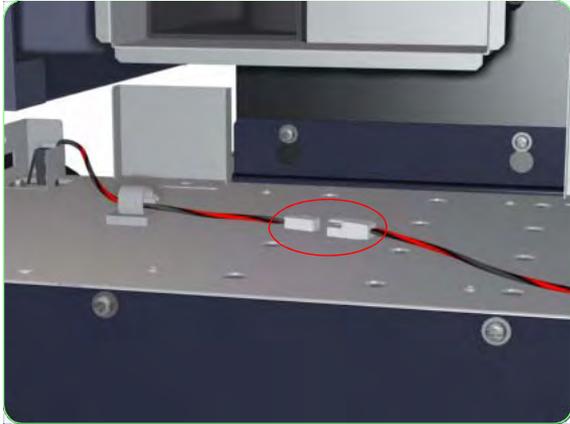

5. Disconnect the IC Door Sensor cable.

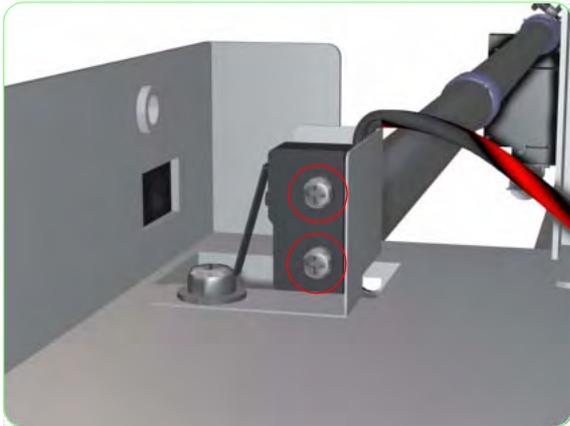

6. Remove two screws that secure the IC Door Sensor to the Ink Supply Station.

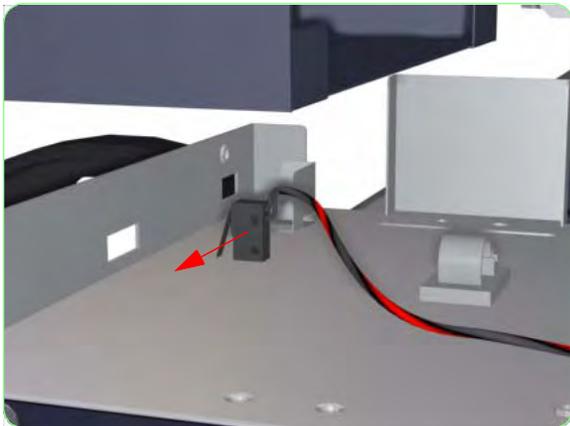


7. Remove the IC Door Sensor from the Ink Supply Station.

Subtank Sensors


Removal


Switch off the product and remove the power cable.

1. Remove the Upper Side Cover (Left or Right) ⇒ Page 8-4.
2. Remove the Lower Side Cover (Left or Right) ⇒ Page 8-8.
3. Remove the Subtank Side Cover (Left or Right) ⇒ Page 8-9.
4. Disconnect the Subtank Station cables.

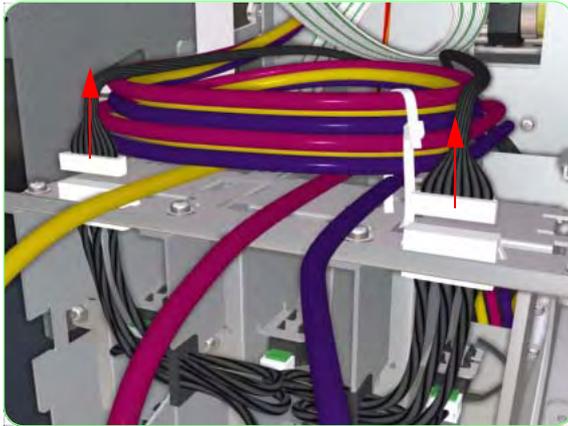

5. Cut the cable tie that secures the Ink Tubes.

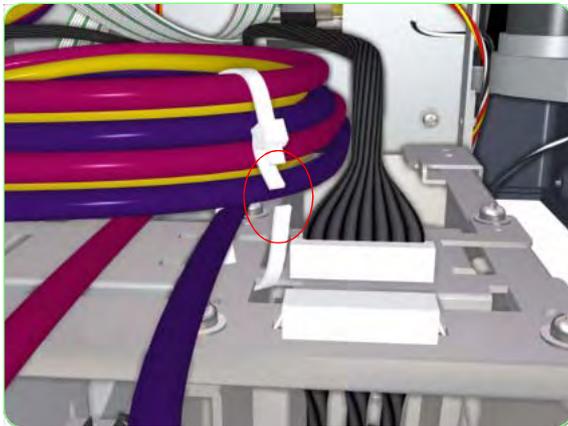


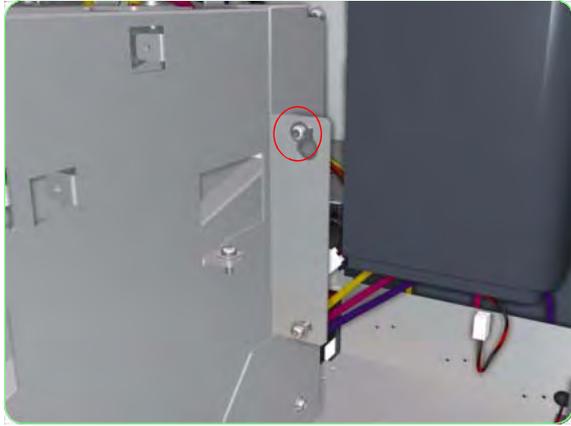


6. Loosen one screw from each side of the Subtank Station.




7. Remove one screw from each side of the Subtank Station.

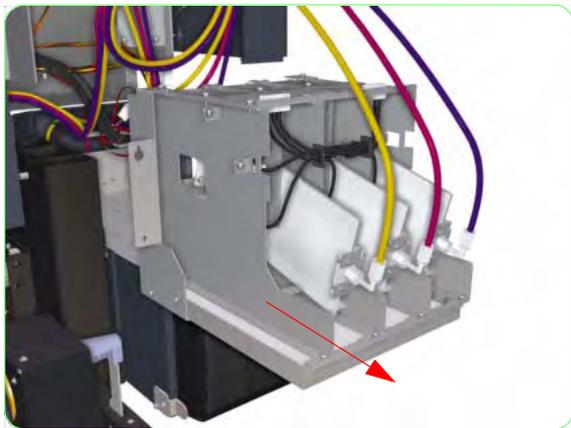


8. Carefully pull out the Subtank Station slightly.

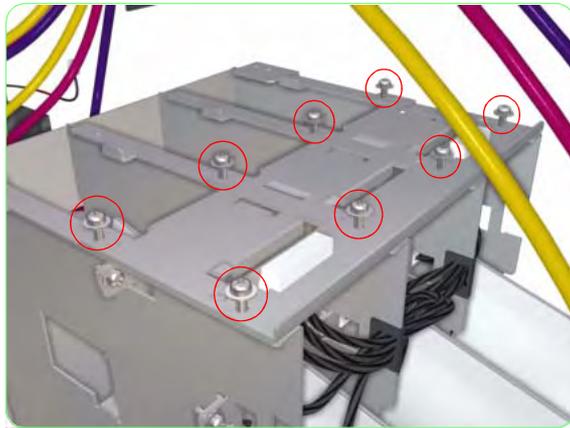


- 9.** Remove eight screws that secure the metal plate to the Subtank Station.

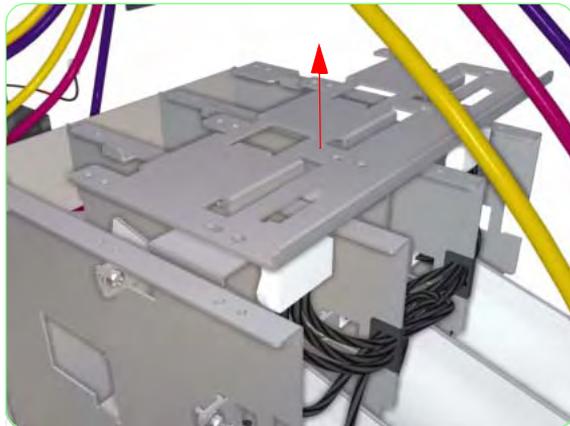

- 10.** Remove the metal plate from the Subtank Station.

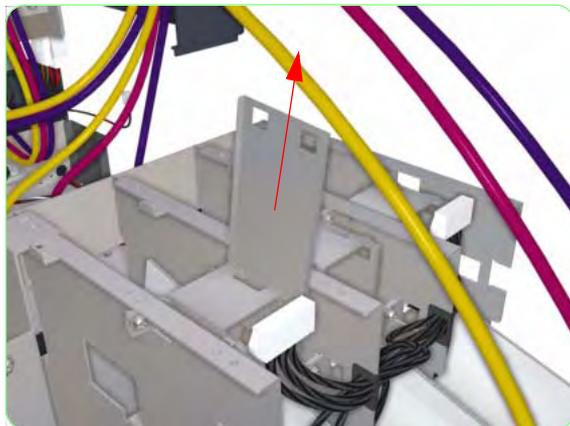


- 11.** Remove the Sensor Plate from the Subtank Station.

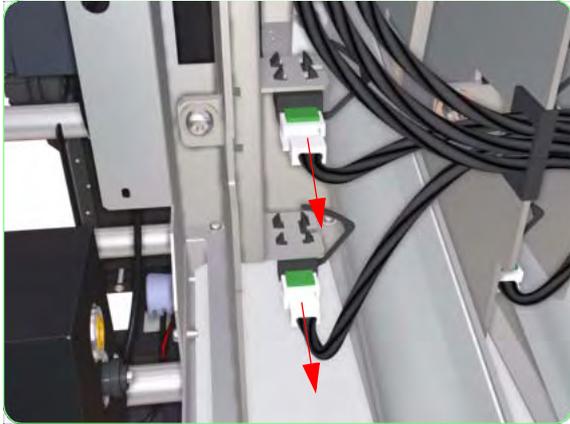


12. Disconnect the Subtank Sensor cables.



13. Remove two screws that secure the Subtank Sensors Assembly to the Subtank Station.

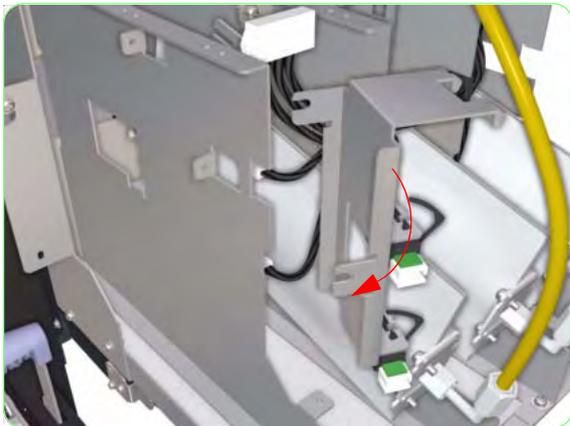

14. Remove the Subtank Sensors Assembly from the Subtank Station.

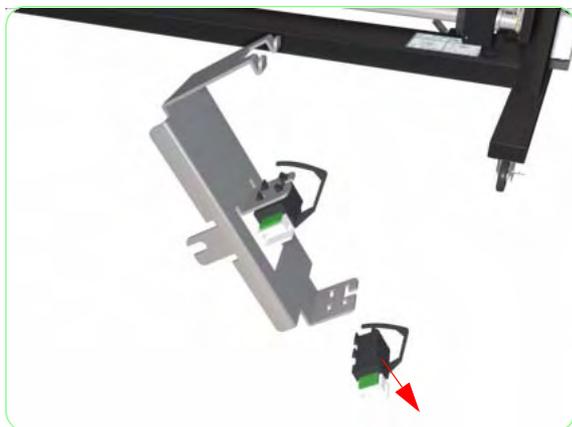


15. Unclip the Sensors from the Subtank Sensors Assembly.

Capping Station Assembly


Removal

Switch off the product and remove the power cable.


1. Uncap the Carriage and move it to the Wiping Station.
2. Remove the Upper Side Cover (Right) ⇒ Page 8-4.
3. Remove the Upper Side Cover (Right) ⇒ Page 8-4.
4. Remove the Top Side Cover (Right) ⇒ Page 8-5.
5. Remove the Lower Side Cover (Right) ⇒ Page 8-8.
6. Remove the Lower Capping Cover ⇒ Page 8-11.
7. Remove the Capping Door ⇒ Page 8-13.
8. Remove two screws that secure the metal bracket to the chassis (on the Capping Side).

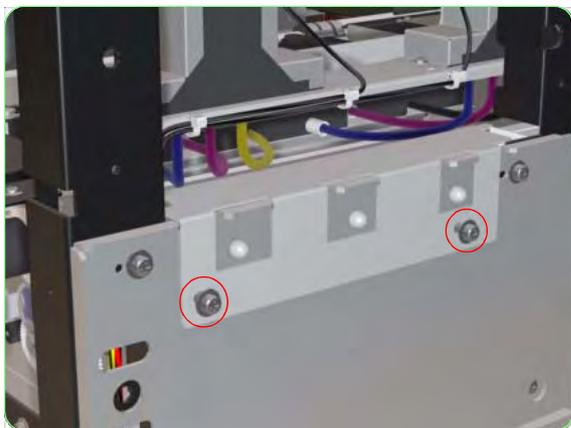


9. Remove the metal bracket from the Printer.

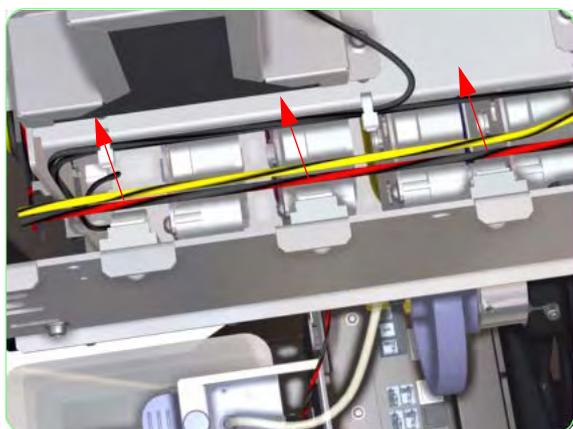

10. Release ALL the cables from the cable clips.

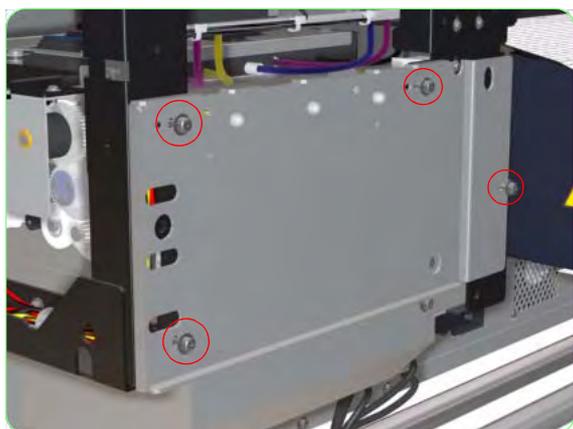


11. Remove four screws that secure the metal plate to the chassis.

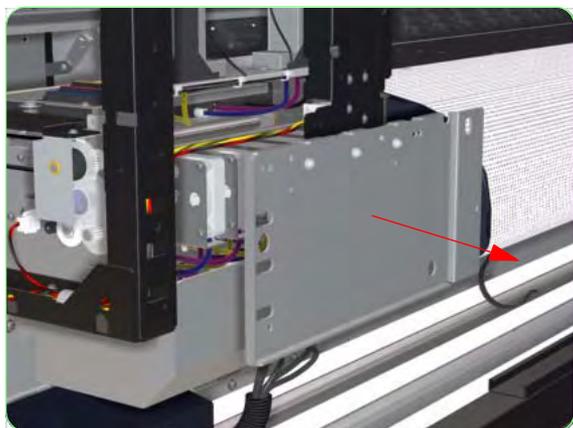


12. Remove the metal plate from the chassis.




13. Remove two screws that secure the metal cover to the side of the Printer.

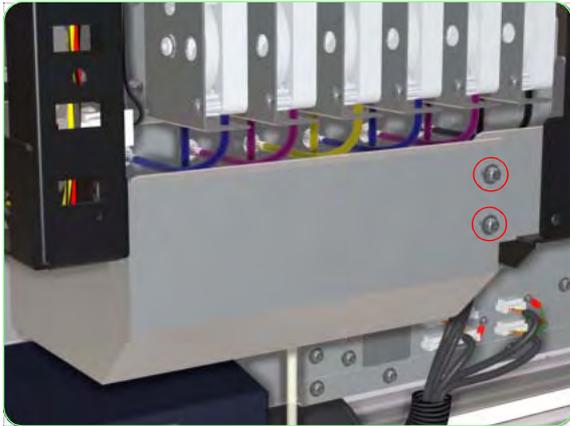


14. Remove two screws that secure the metal cover to the front of the Printer.

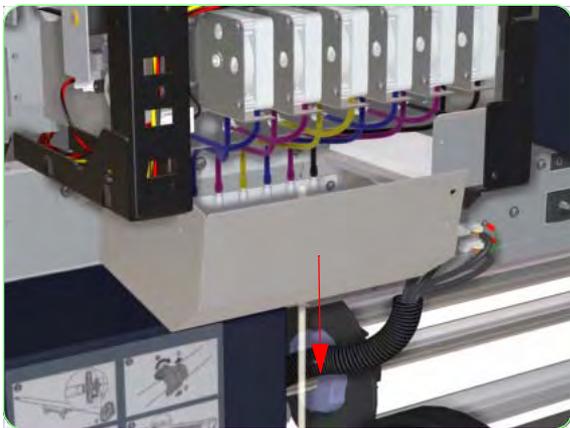


15. Pull the metal cover down slightly so that the Priming Tubes are exposed.

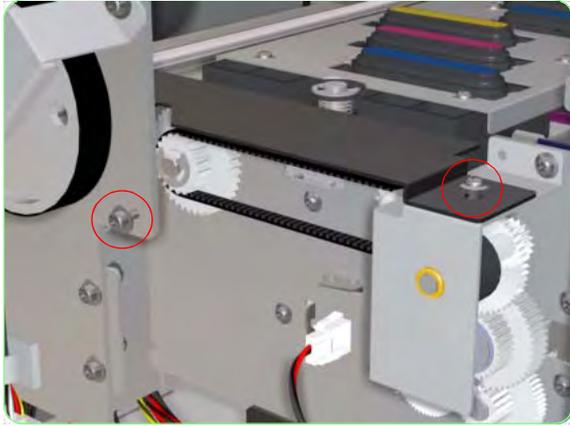


16. Remove two screws that secure the metal bracket to the Capping Station.

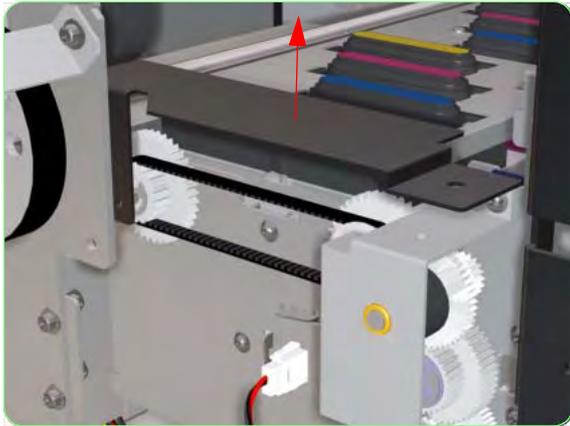

17. Remove the metal bracket from the Capping Station.

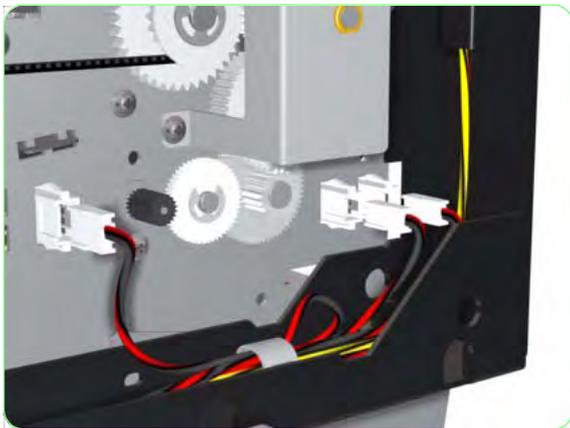

18. Disconnect the Capping Station cables.

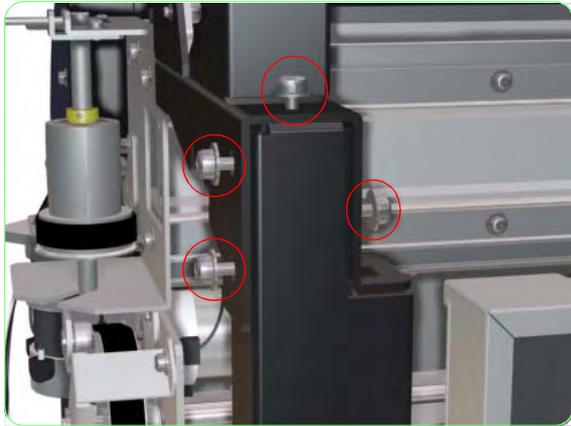


19. Remove four screws that secure the Left Capping Frame at the top.



20. Remove two screws that secure the Left Capping Frame to the bottom.




21. Remove one screw that secures the metal bracket.

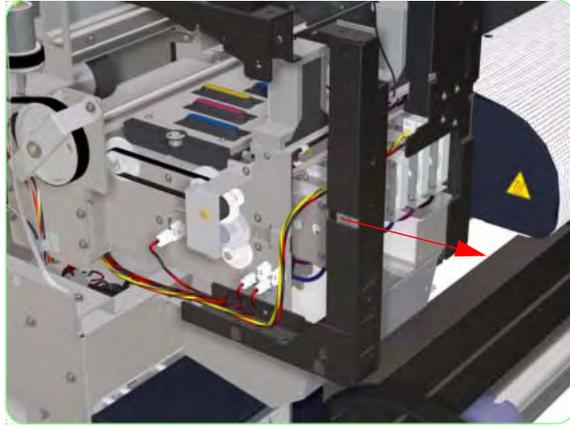

22. Remove the Left Capping Frame from the Printer.




23. Remove four screws that secure the Right Capping Frame at the top.

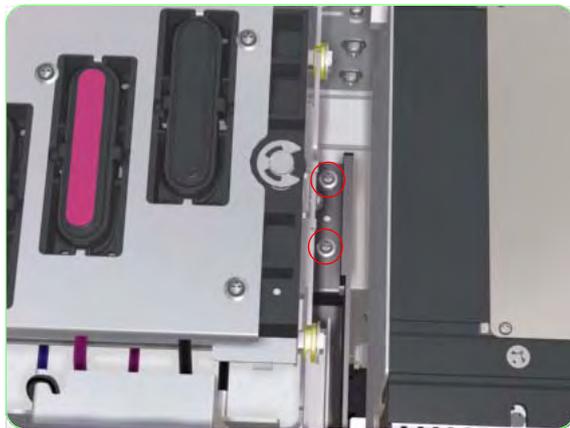


24. Remove two screws that secure the Right Capping Frame to the bottom.




25. Remove one screw that secures the metal bracket.

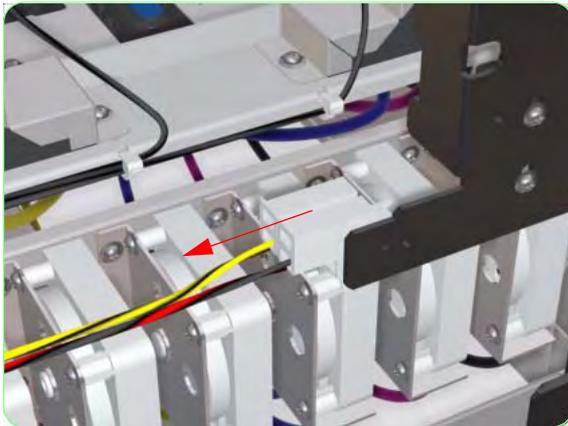

26. Disconnect the Cable from the Right Rear Cover Sensor.

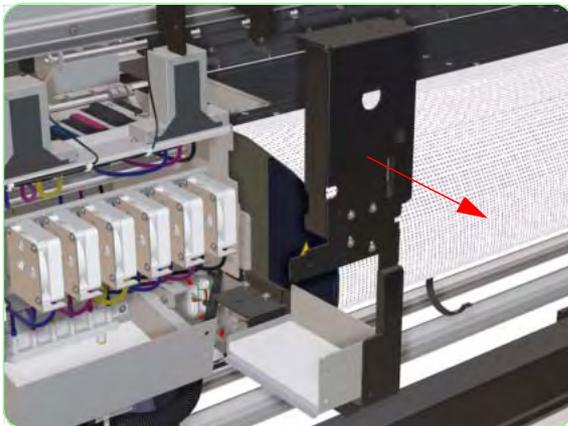


27. Remove the Right Capping Frame from the Printer.

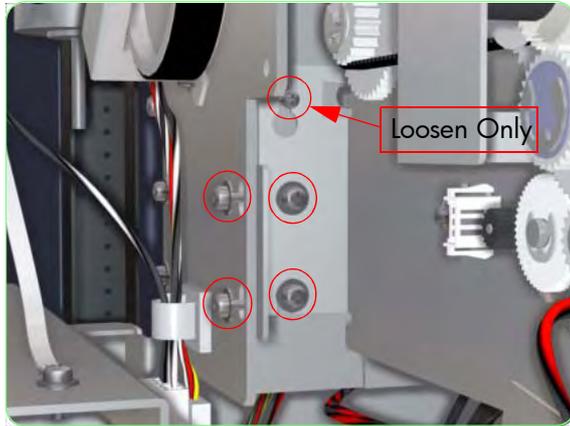

28. Loosen one screw (from the top) and four screws that secure the Capping Station.




29. Loosen one screw (from the top) and two screws that secure the Capping Station.

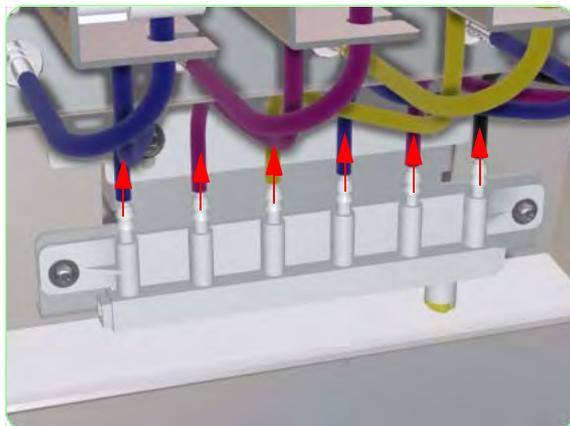

30. Disconnect ALL six tubes from the Capping Tubes Bracket.

Make sure you have a suitable cloth to place under the tubes so that the ink does not drip all over the Printer parts.

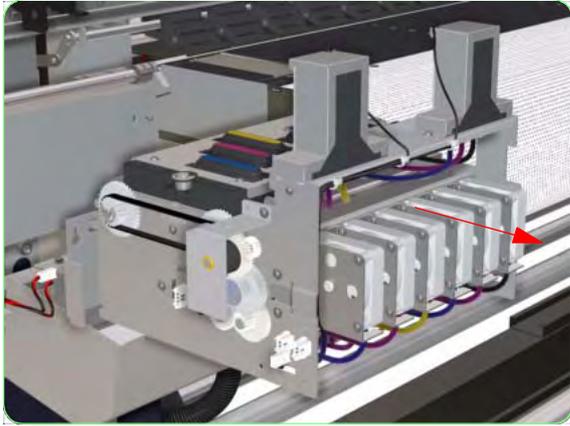

31. Remove the Capping Station from the Printer.

You should remove the Solenoid Covers from the old Capping Station and install them on the new Capping Station (the new part comes without the Solenoid Covers).

Once the Capping Station Assembly has been installed correctly, you must perform the following adjustments:


- **Capping Station Height Adjustment** ⇒ **Page 5-25.**
- **Printhead Capping Limit Adjustment** ⇒ **Page 5-27.**

Capping Unit


Removal

Switch off the product and remove the power cable.


1. Uncap the Carriage and move it to the Wiping Station.
2. Remove the Capping Door ⇒ Page 8-13.
3. Remove six screws that secure the Capping Plates to the Capping Station.

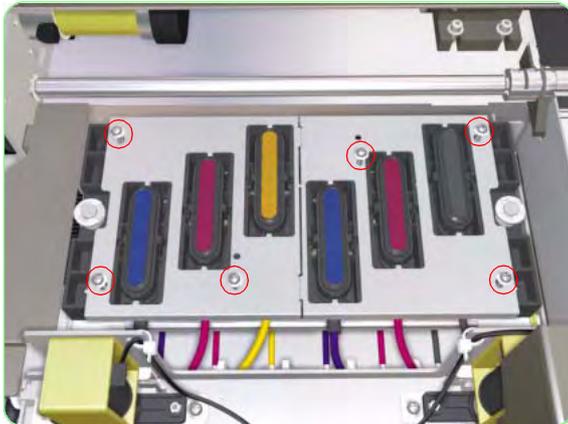

4. Remove the Capping Plates from the Capping Station.

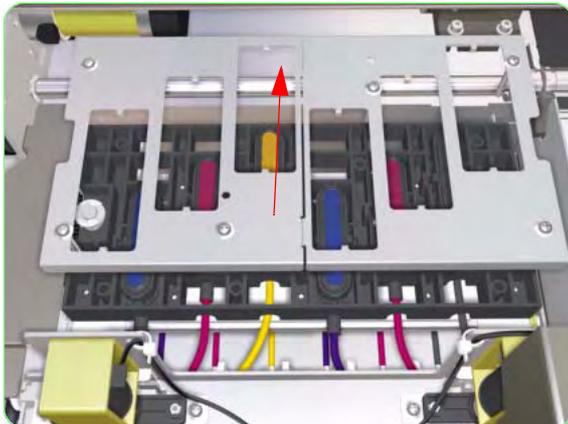

5. Release the Capping Unit and remove from the Capping Station.

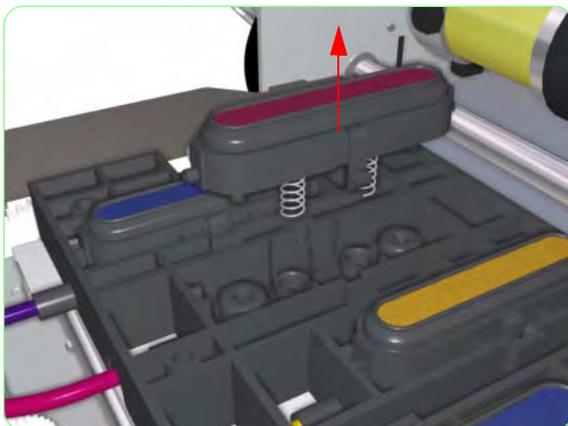


Once you have replaced the Capping Unit, make sure you reset the Capping Unit counter (for more information, refer to Page 4-87).

Prime Assembly


Removal

Switch off the product and remove the power cable.


1. Remove the Upper Side Cover (Right) ⇒ Page 8-4.
2. Remove the Top Side Cover (Right) ⇒ Page 8-5.
3. Remove the Lower Side Cover (Right) ⇒ Page 8-8.
4. Remove the Lower Capping Cover ⇒ Page 8-11.
5. Remove the Capping Door ⇒ Page 8-13.
6. Remove two screws that secure the metal bracket to the chassis (on the Capping Side).

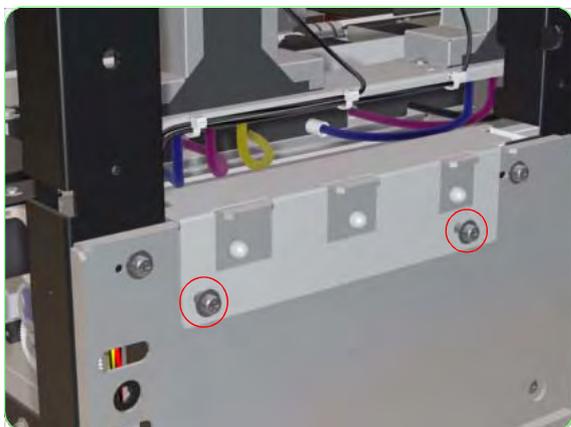


7. Remove the metal bracket from the Printer.

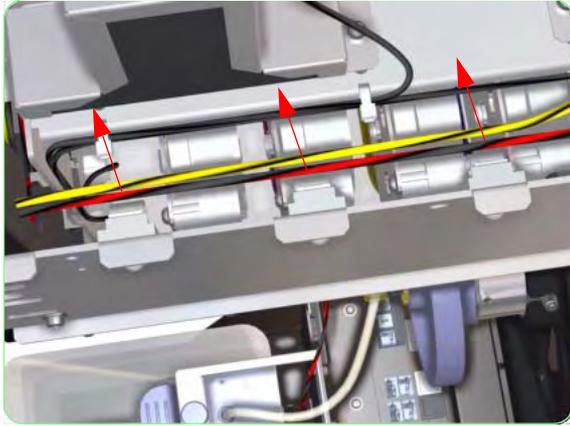


8. Release ALL the cables from the cable clips.

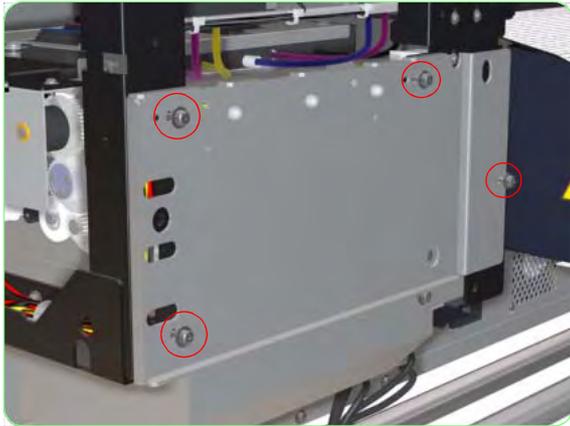

9. Remove four screws that secure the metal plate to the chassis.

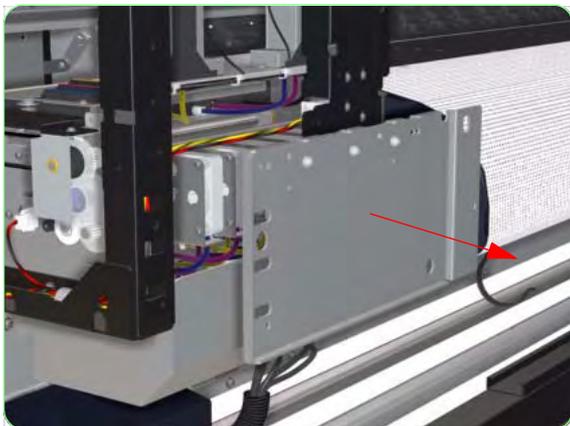


10. Remove the metal plate from the chassis.

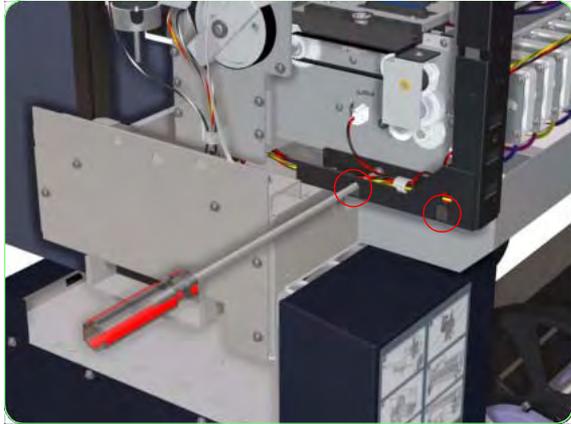


11. Remove two screws that secure the metal cover to the side of the Printer.



12. Remove two screws that secure the metal cover to the front of the Printer.

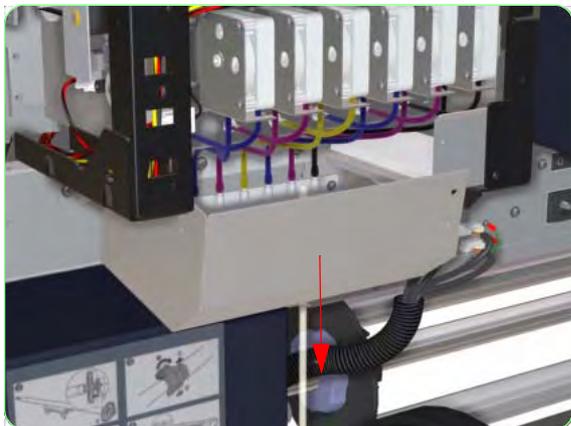


13. Pull the metal cover down slightly so that the Priming Tubes are exposed.

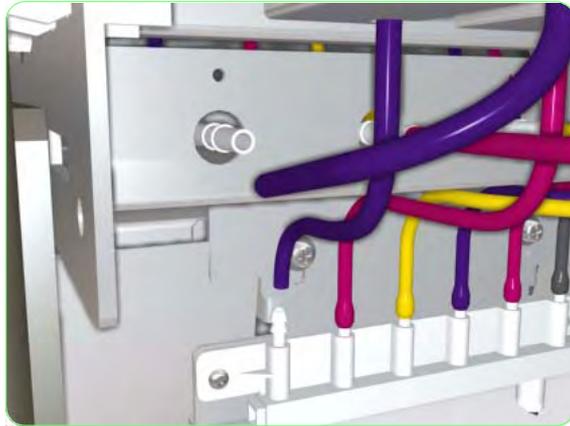


- 14.** Disconnect the Priming Tube from both ends.

Be very careful when disconnecting the Priming Tubes since waste ink may leak from them. Place a cloth underneath the tubes before disconnecting them and cover the end of the tubes with a clean cloth.

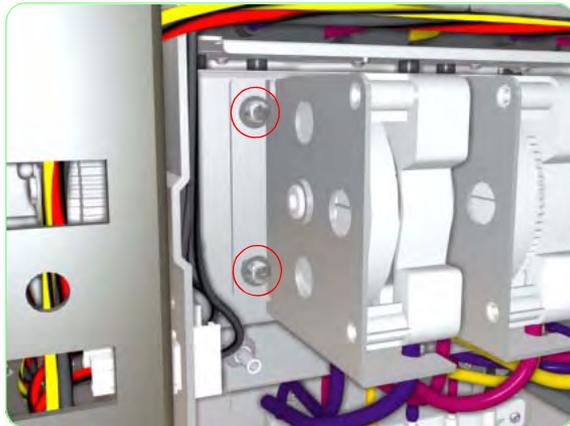

- 15.** Remove two screws that secure the Prime Assembly to the Capping Station.

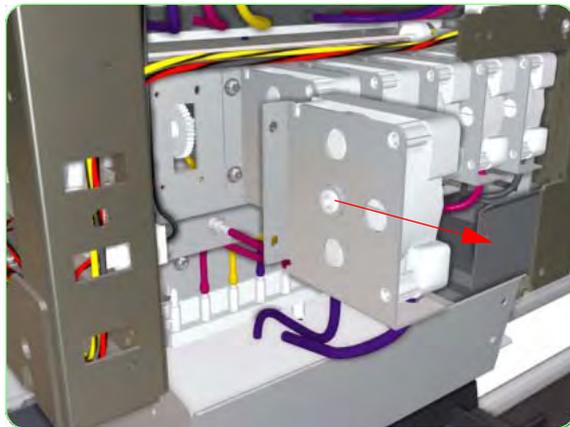

- 16.** Remove the Prime Assembly from the Capping Station.



Once you have replaced the Prime Assembly, make sure you reset the Prime Assembly counter (for more information, refer to Page 4-83).

Solenoid Assembly


Removal

Switch off the product and remove the power cable.


1. Uncap the Carriage and move it to the Wiping Station.
2. Remove the Upper Side Cover (Right) ⇒ Page 8-4.
3. Remove the Top Side Cover (Right) ⇒ Page 8-5.
4. Remove the Lower Side Cover (Right) ⇒ Page 8-8.
5. Remove the Lower Capping Cover ⇒ Page 8-11.
6. Remove the Capping Door ⇒ Page 8-13.
7. Remove two screws that secure the metal bracket to the chassis (on the Capping Side).

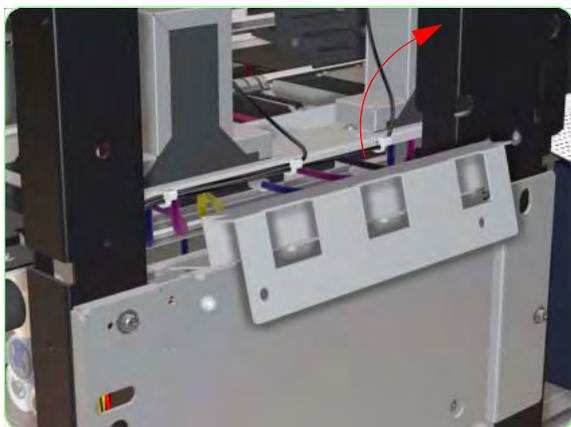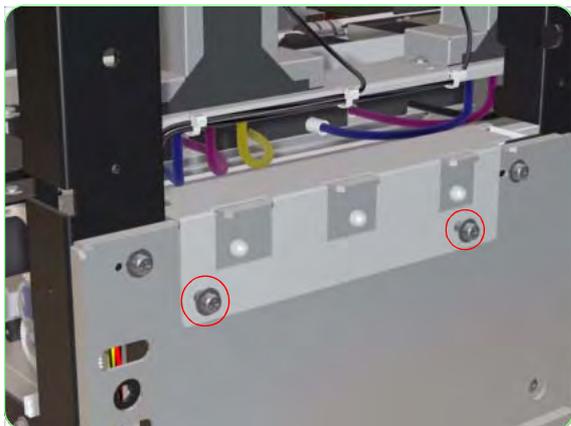


8. Remove the metal bracket from the Printer.

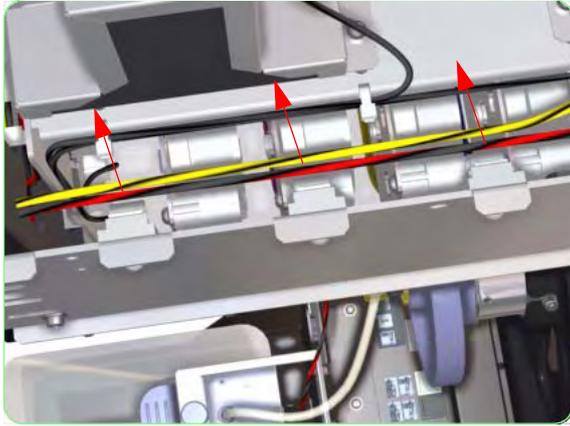


9. Release ALL the cables from the cable clips.

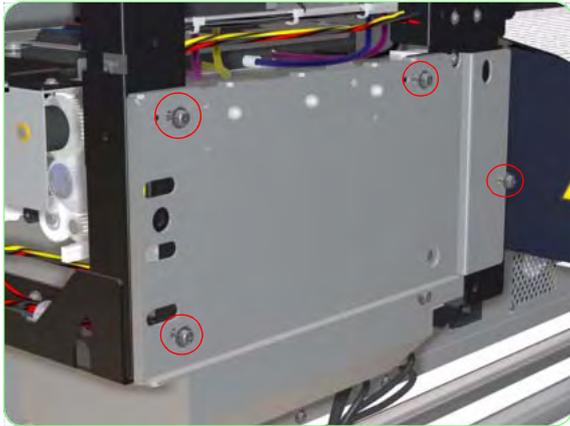


10. Remove four screws that secure the metal plate to the chassis.

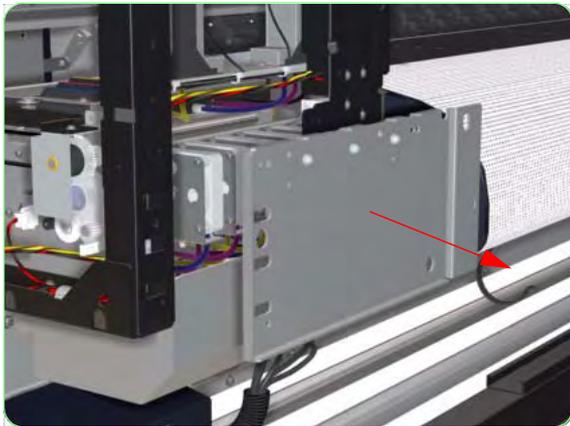


11. Remove the metal plate from the chassis.

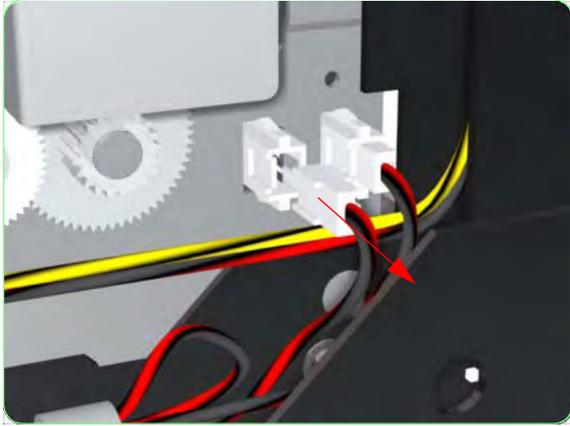


12. Disconnect the Solenoid Assembly cable.

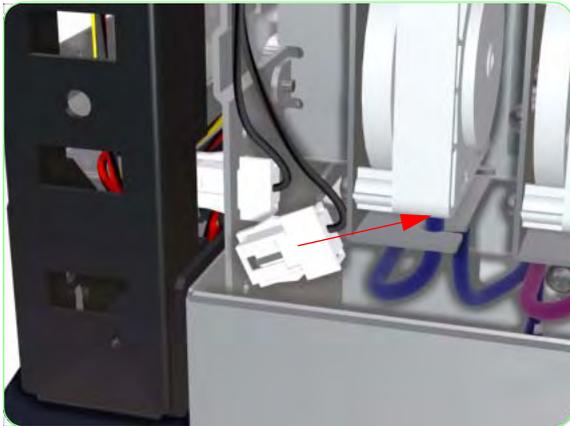

13. Release the Solenoid Assembly cable connector from the chassis.

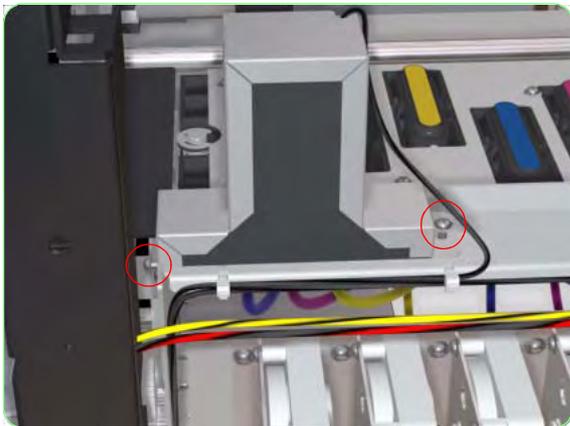


14. Remove two screws that secure the Solenoid Cover to the Capping Station.

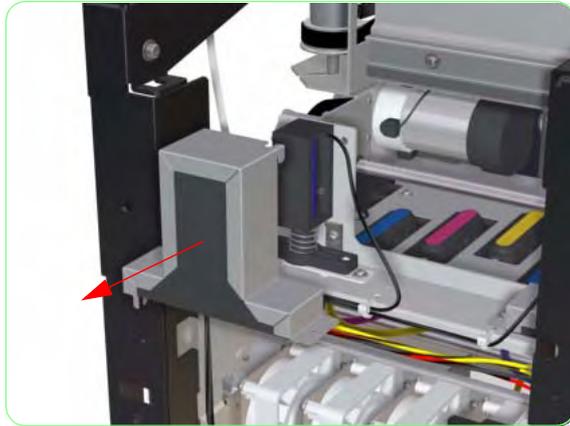


15. Remove the Solenoid Cover from the Capping Station.



16. Cut ALL cable ties that secure the Solenoid Assembly cable.

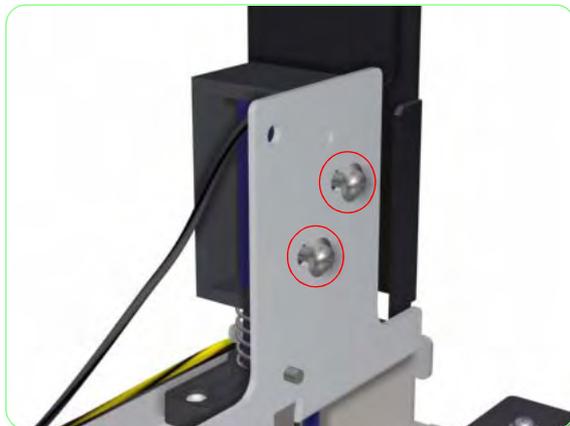

17. Remove two screws that secure the Solenoid Assembly to the Capping Station.

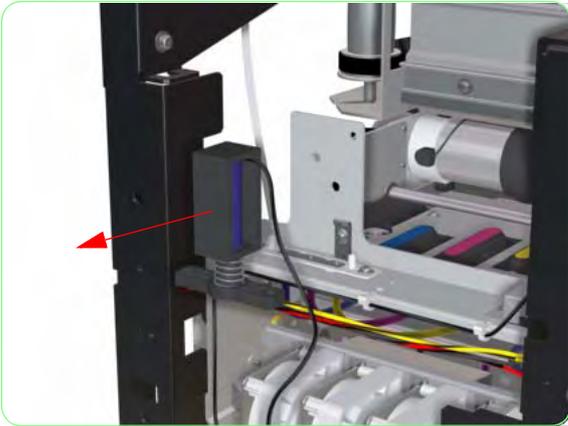


18. Remove the Solenoid Assembly from the Capping Station.

Waste Bottle Holder and Sensor Assembly


Removal

Switch off the product and remove the power cable.


1. Remove the Upper Side Cover (Right) ⇒ Page 8-4.
2. Remove the Top Side Cover (Right) ⇒ Page 8-5.
3. Remove the Lower Side Cover (Right) ⇒ Page 8-8.
4. Remove the Lower Capping Cover ⇒ Page 8-11.
5. Remove the Capping Door ⇒ Page 8-13.
6. Remove two screws that secure the metal bracket to the chassis (on the Capping Side).

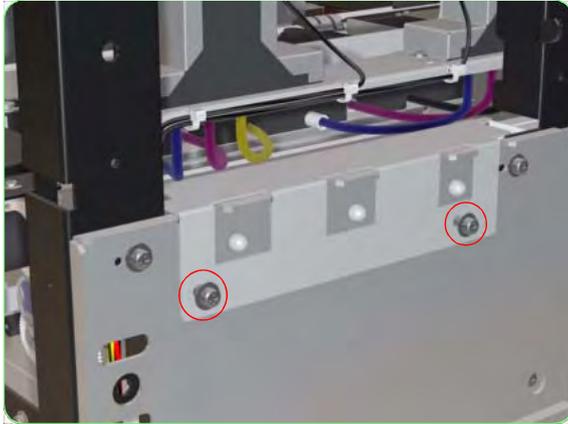


7. Remove the metal bracket from the Printer.

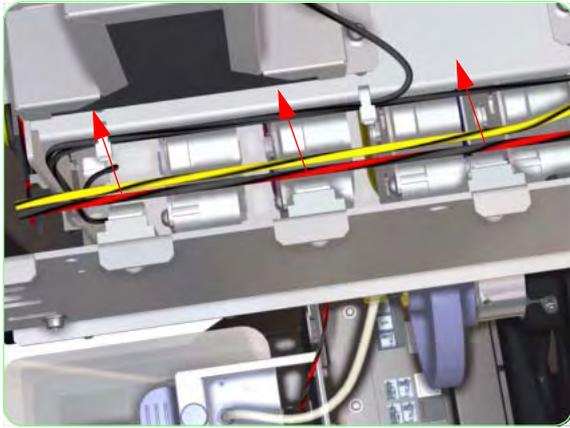


8. Release ALL the cables from the cable clips.

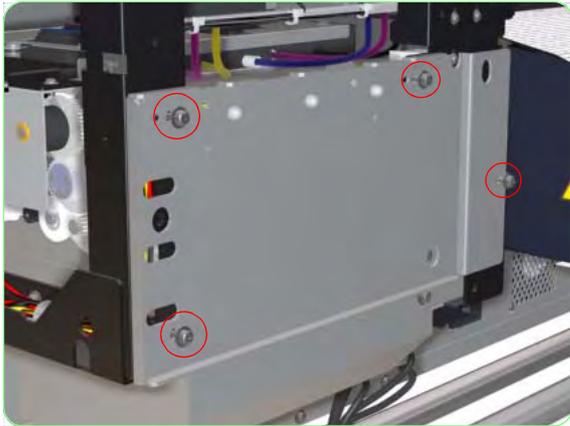


9. Remove four screws that secure the metal plate to the chassis.

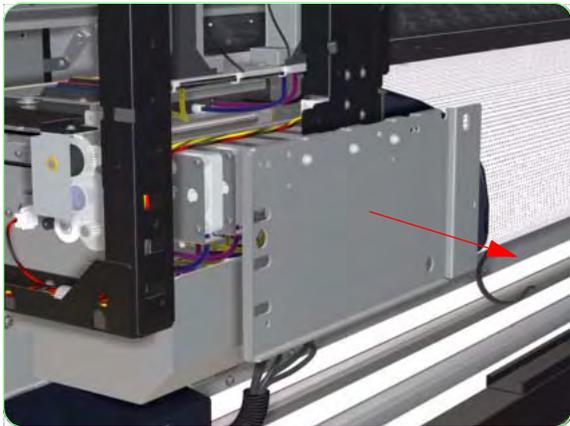


10. Remove the metal plate from the chassis.

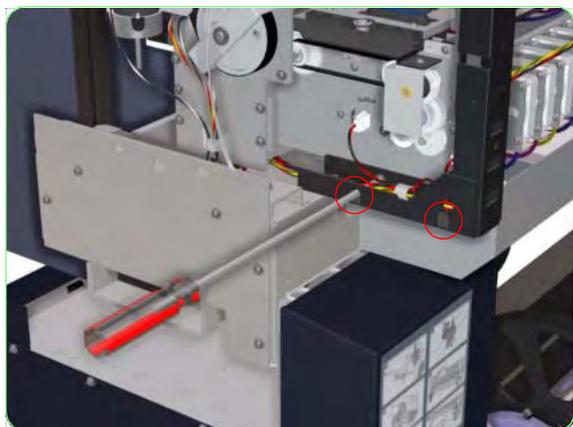

- 11.** Remove two screws that secure the metal cover to the side of the Printer.

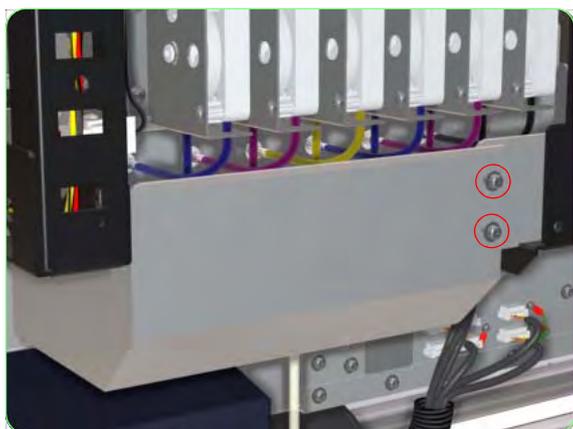


- 12.** Remove two screws that secure the metal cover to the front of the Printer.

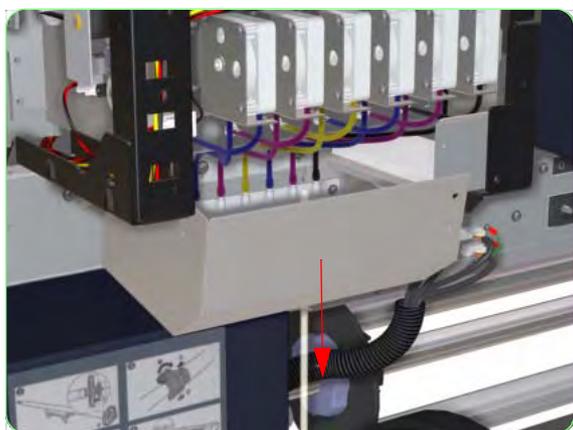

- 13.** Pull the metal cover down slightly so that the Priming Tubes are exposed.




14. Carefully cut the Waste Tube at the point indicated.

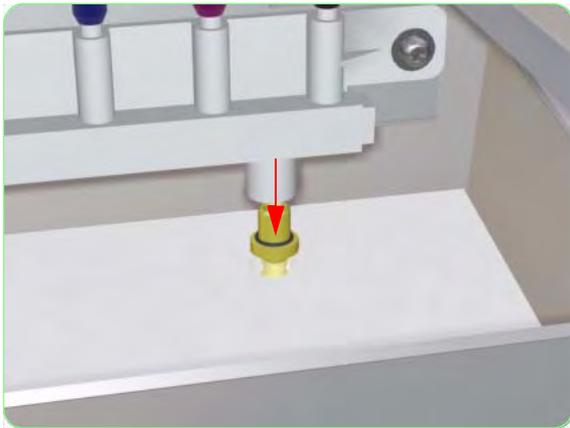


15. Disconnect (or unscrew) and discard the cut part of the Waste Tube (including Tube Joint and the O-Ring) from the Capping Tubes Bracket.



16. Remove the Waste Ink Bottle from the Printer.

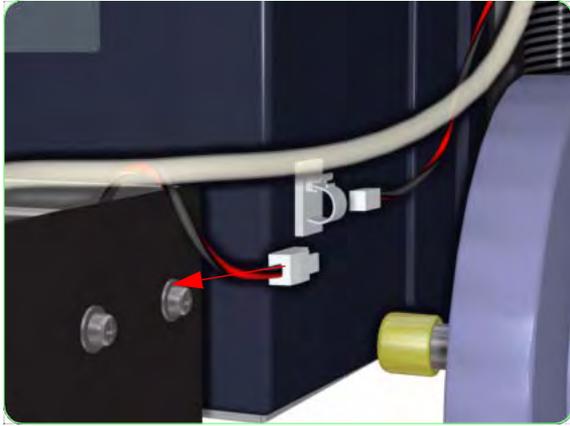

17. Disconnect the Waste Bottle Sensor Cable.

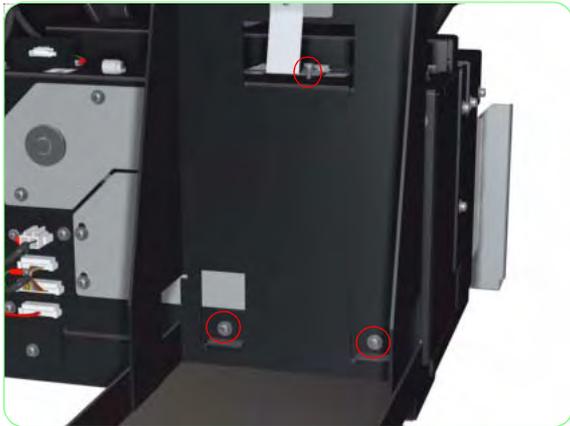


18. Remove three screws that secure the Waste Bottle Holder to the Drive Unit.



19. Remove the Waste Bottle Holder and Assembly from the Drive Unit.

Installation


Once the Waste Bottle Holder has been correctly installed, connect the Waste Tube to the Capping Tubes Bracket as follows:

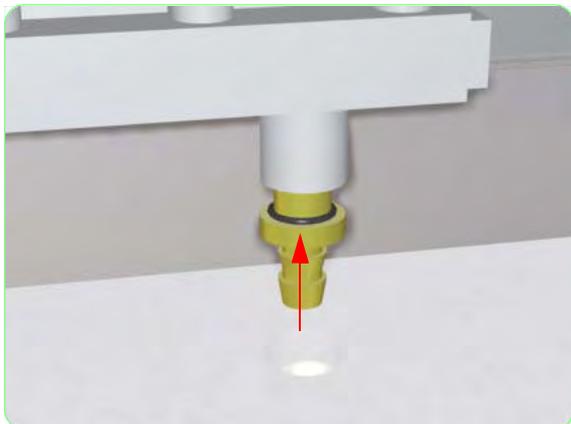

1. Connect (or screw) the Tube Joint and the O-Ring into the Capping Tubes Bracket.



2. Pass the Waste Tube through the hole in the metal cover (containing the foam).

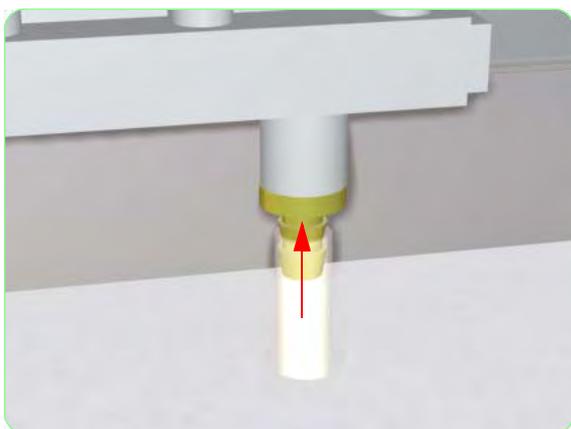



3. Connect the Waste Tube to the Tube Joint.

Wiping Station Assembly


Removal

Switch off the product and remove the power cable.


1. Remove the Upper Side Cover (Left) ⇒ Page 8-4.
2. Remove the Top Side Cover (Left) ⇒ Page 8-5.
3. Remove the Lower Side Cover (Left) ⇒ Page 8-8.
4. Remove the Lower Wiping Cover ⇒ Page 8-15.
5. Remove the Wiping Door ⇒ Page 8-17.
6. Disconnect the Wiping Station cables.

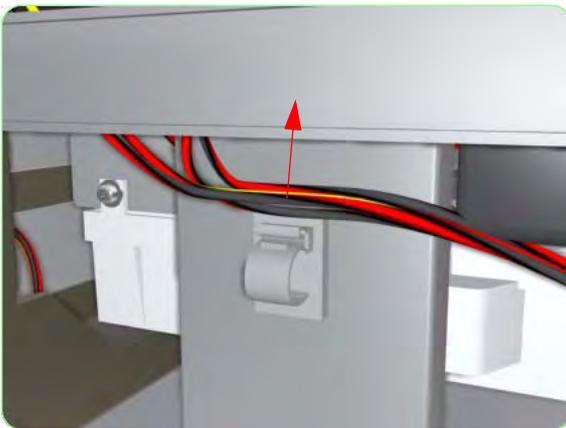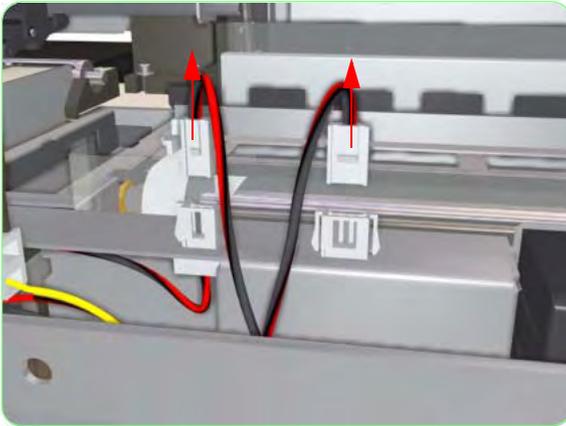

7. Release the Wiping Station cables from the cable clip.

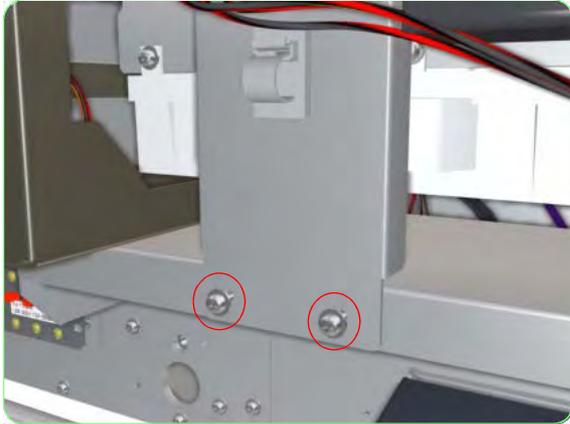


8. Remove two screws that secure the metal bracket to the Wiping Station.

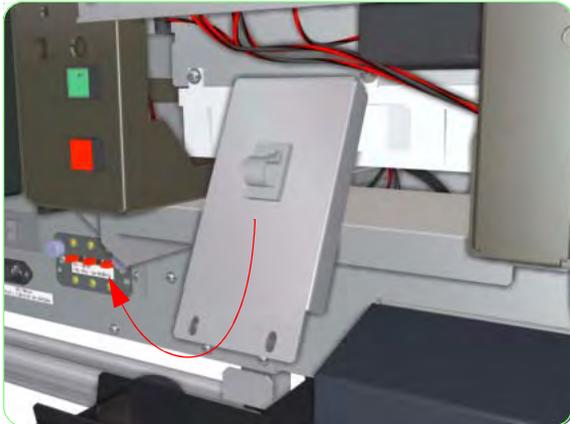


9. Remove the metal bracket from the Wiping Station.



10. Remove two screws that secure the Gear Cover to the Wiping Station.

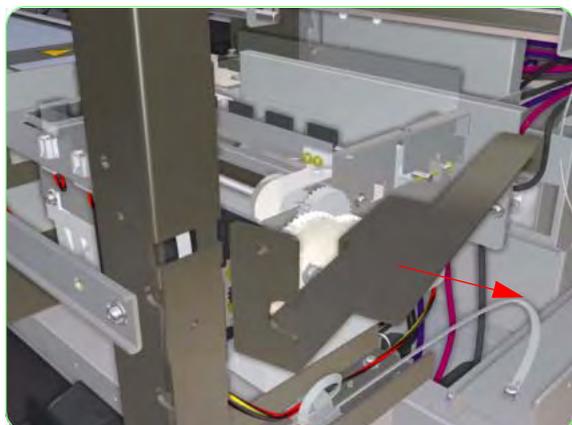


11. Remove the Gear Cover from the Wiping Station.

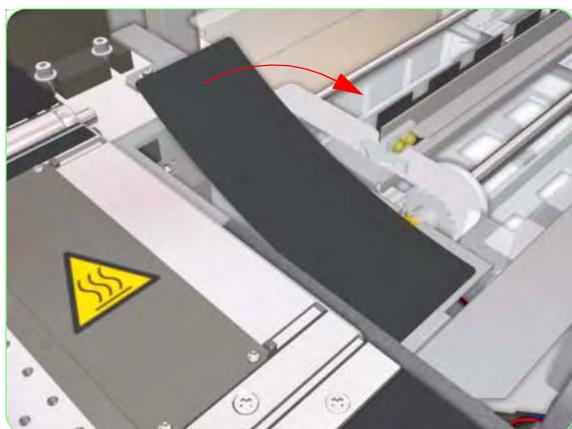

12. Remove the Black Cover that is stuck over the hole in the Wiping Station.



13. Remove three screws that secure the Wiping Station to the chassis.

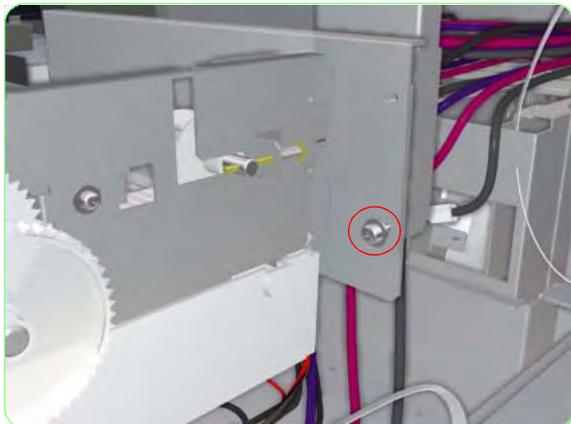

14. Remove one screw that secures the Wiping Station to the chassis.



15. Remove the Wiping Station from the Printer.

Once the Wiping Station Assembly has been installed correctly, you must perform the Wiping Station Height Adjustment. For further information, refer to Page 5-18.

Once you have replaced the Wiping Station Assembly, make sure you reset the following counters:


- **Wiper Cleaning** ⇒ Page 4-84.
- **Wiper Belt** ⇒ Page 4-85.
- **Wiper Blade** ⇒ Page 4-86.

Wiper Cleaning Assembly

Removal


Switch off the product and remove the power cable.

1. Remove the Upper Side Cover (Left) ⇒ Page 8-4.
2. Remove the Top Side Cover (Left) ⇒ Page 8-5.
3. Remove the Lower Side Cover (Left) ⇒ Page 8-8.
4. Remove the Lower Wiping Cover ⇒ Page 8-15.
5. Remove the Wiping Door ⇒ Page 8-17.
6. Remove the Wiping Station Assembly ⇒ Page 8-145.
7. Remove two screws from both sides that secure the Wiper Cleaning Assembly to the Wiping Station Assembly.

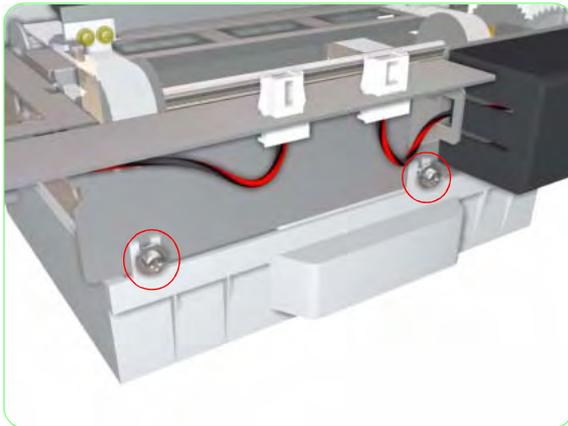

8. Unclip the Wiper Cleaning Assembly from the Wiping Station Assembly.


Once you have replaced the Wiper Cleaning Assembly, make sure you reset the Wiper Cleaning counter (for more information, refer to Page 4-84).

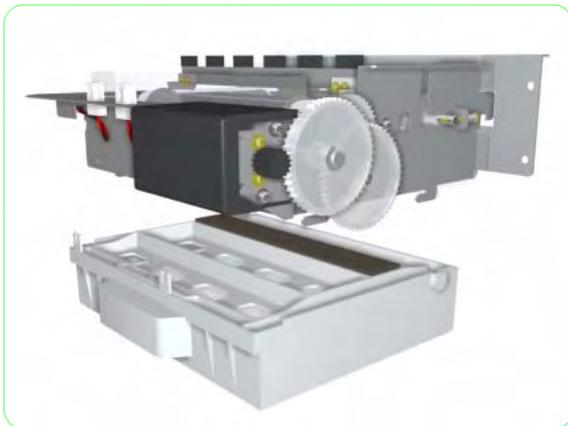


Wiper Blade

Removal


Switch off the product and remove the power cable.

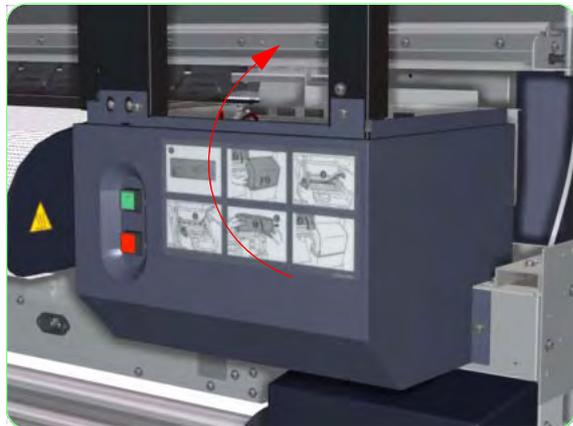


1. Open the Wiping Door.

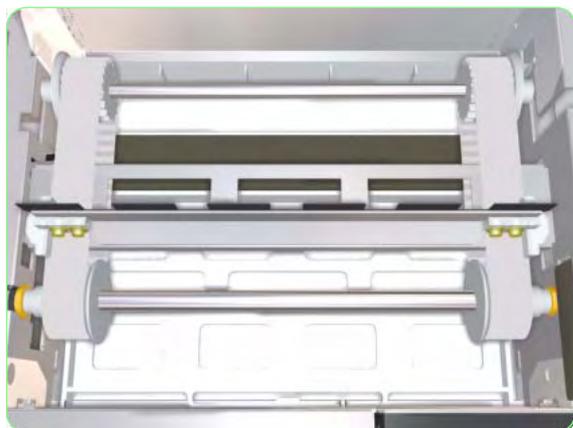

2. Manually turn the Wiper Gear so that the Wiper Blade moves to upper position.

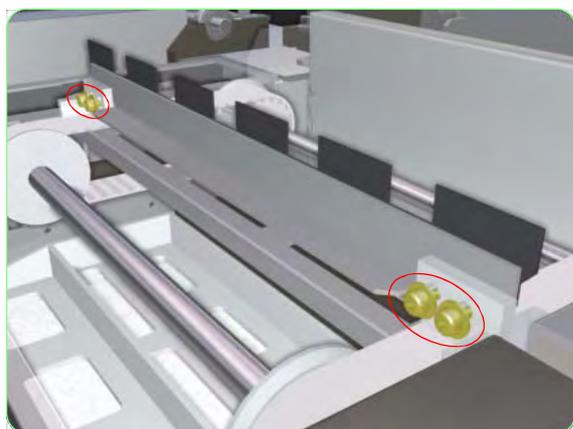

3. Remove four screws that secure the Wiper Blade to the Wiper Belts.

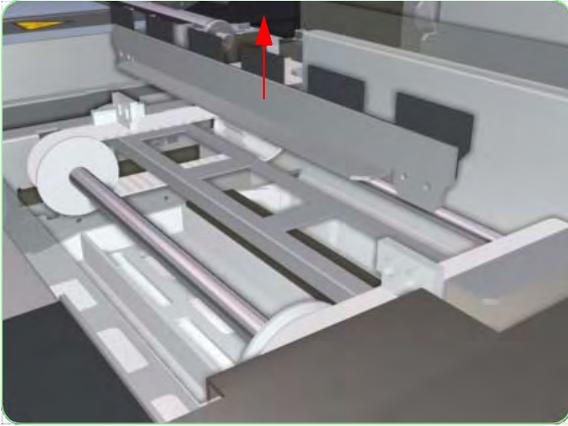

4. Remove the Wiper Blade from the Wiper Belts.

Once the Wiper Blade has been installed correctly, you must perform the Wiper Blade Height Adjustment. For further information, refer to Page 5-22.



Once you have replaced the Wiper Blade, make sure you reset the Wiper Blade counter (for more information, refer to Page 4-86).

Wiper Belts


Removal

Switch off the product and remove the power cable.


1. Remove the Upper Side Cover (Left) ⇒ Page 8-4.
2. Remove the Top Side Cover (Left) ⇒ Page 8-5.
3. Remove the Lower Side Cover (Left) ⇒ Page 8-8.
4. Remove the Lower Wiping Cover ⇒ Page 8-15.
5. Remove the Wiping Door ⇒ Page 8-17.
6. Remove the Wiping Station Assembly ⇒ Page 8-145.
7. Remove the C ring that secures the Gears.

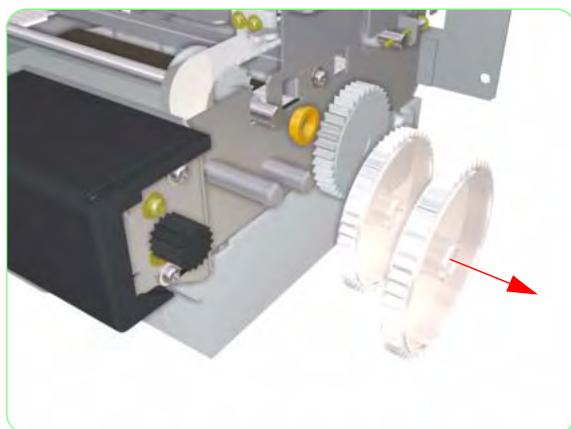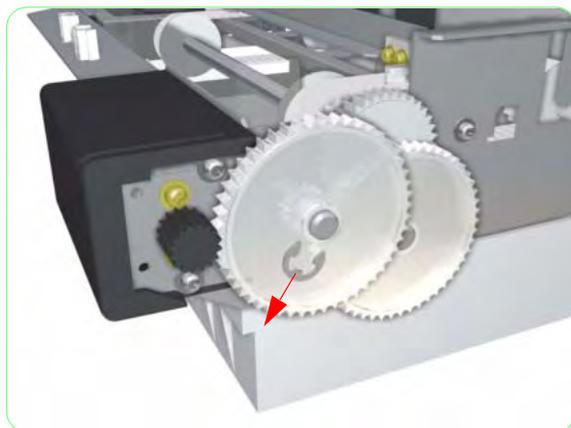


8. Remove the Gears from the Wiping Station.

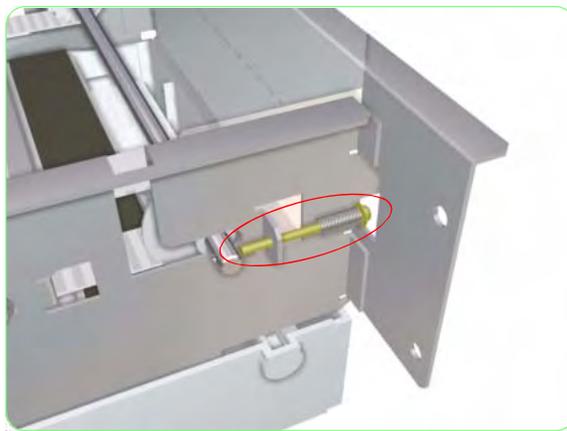


- 9.** Remove the screw and spring from each side of the Wiping Station.

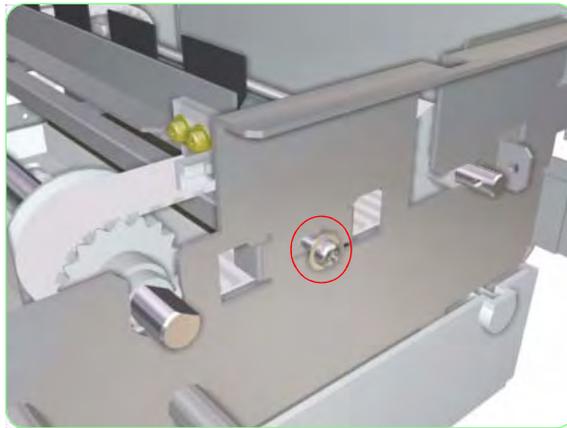


- 10.** Remove one screw that secures the metal plate.

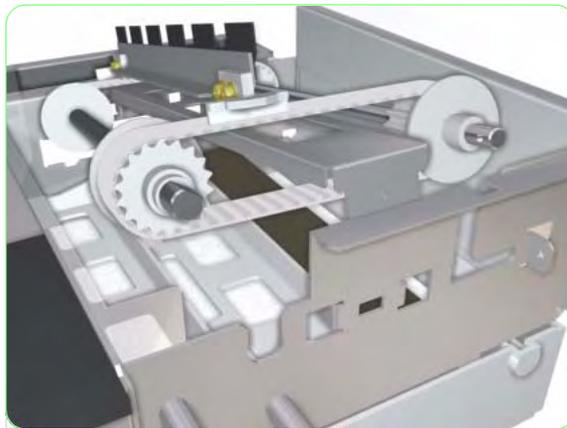


- 11.** Lift up the Wiping System.

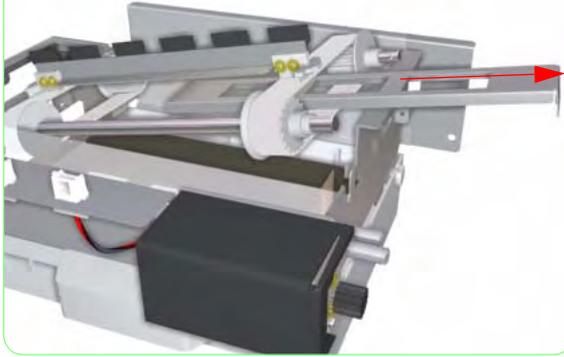


12. Remove the metal plate from the Wiping Station.

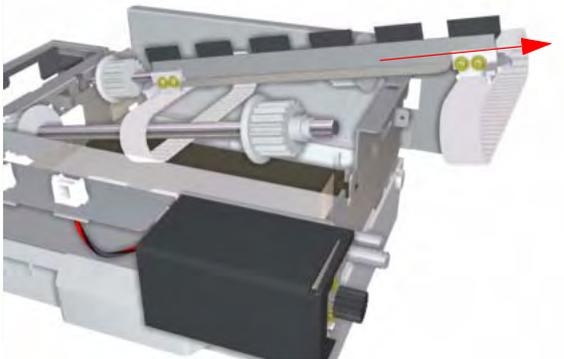

13. Remove the Wiper Blade and belts from the Wiping Station.

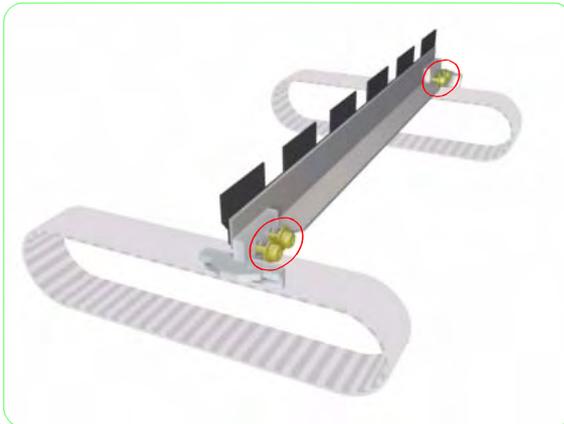

14. Remove four screws that secure the Wiper Blade to the Wiper Belts.

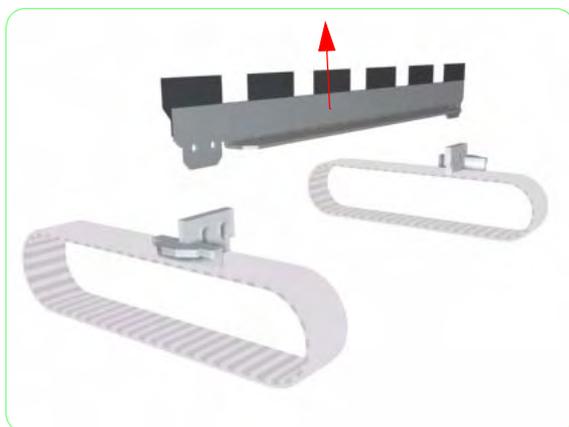

- 15.** Remove the Wiper Blade from the Wiper Belts.

Once the Wiper Belts and Blade have been installed correctly, you must perform the Wiper Belt Tension Adjustment (refer to Page 5-21) and the Wiper Blade Height Adjustment (refer to Page 5-22).

Also, Once the Wiping Station Assembly has been installed correctly, you must perform the Wiping Station Height Adjustment. For further information, refer to Page 5-18.



Once you have replaced the Wiper Belts, make sure you reset the Wiper Belt counter (for more information, refer to Page 4-85).

Pinchwheel Assembly


Removal

Switch off the product and remove the power cable.


1. Remove the Rear Cover ⇒ Page 8-3.
2. Remove the Upper Side Cover (Left and Right) ⇒ Page 8-4.
3. Remove the Top Side Cover (left and Right) ⇒ Page 8-5.
4. Remove the Top Cover ⇒ Page 8-6.
5. Remove the Front Heater ⇒ Page 8-29.
6. Remove the Paper-Axis Motor ⇒ Page 8-68
7. Uncap the Carriage and move it to the Wiping Station.

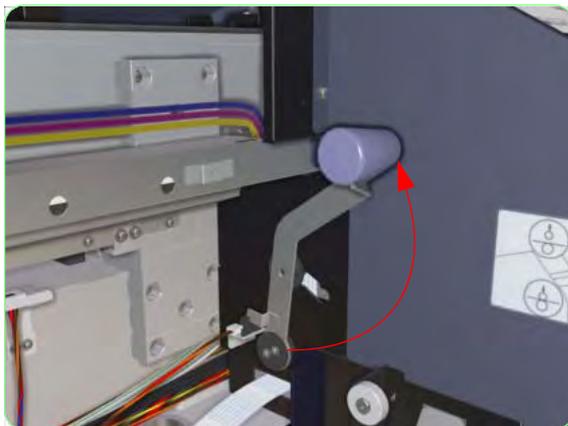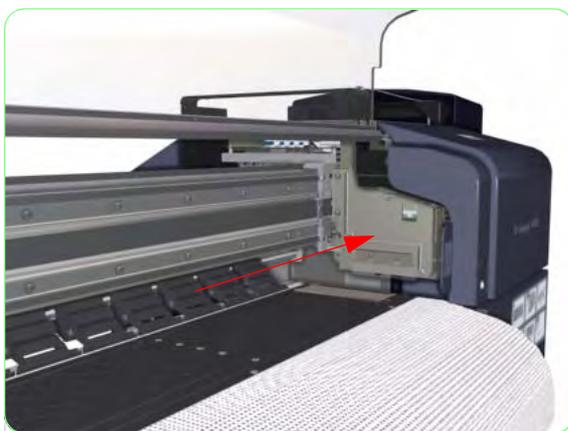

8. Raise the Media Lever.

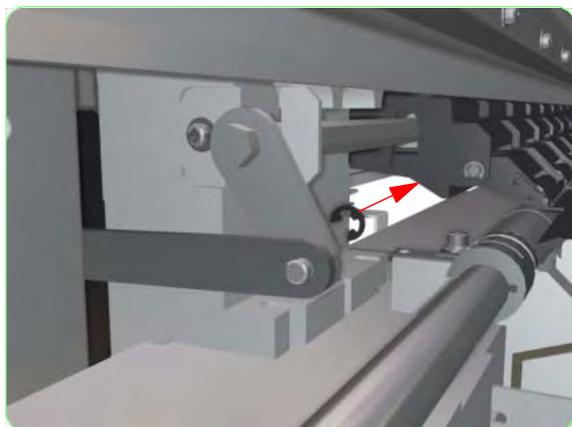

9. Remove the C ring that secures the Linkage to the Pinchwheel Cam.

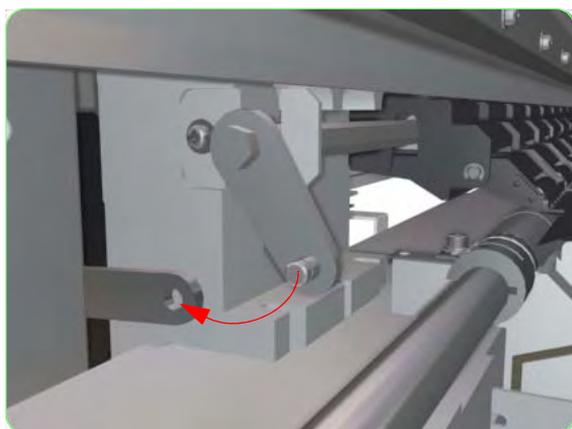

10. Release the Linkage from the Pinchwheel Cam.



11. Pull out the Pinchwheel Cam until the Pinchwheel Assembly that you want to remove can be accessed.


It is NOT necessary to remove the Pinchwheel Cam completely.



12. Remove nine screws that secure the Metal Cover.




13. Remove the Metal Cover from the Printer.

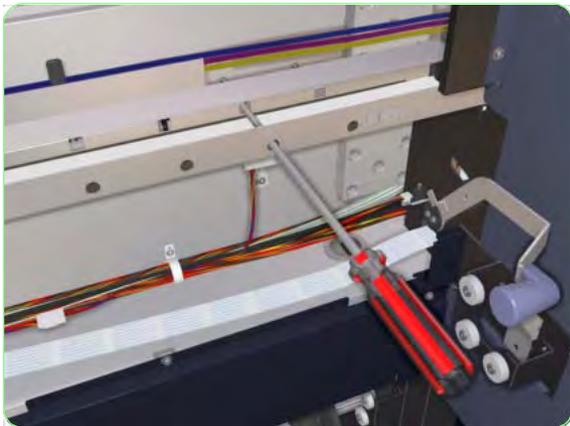

14. Remove two/three screws that secure the Pinchwheel Bracket (that secures the Pinchwheel Assembly that you want to remove).



15. Remove the Pinchwheel Bracket from the Printer.

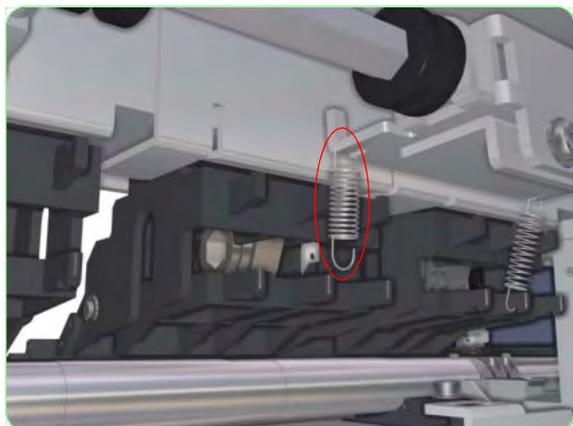

16. Release the Spring from the Pinchwheel Assembly.




17. Remove the Pinchwheel Assembly from the Printer.

Drive Roller

Removal

Switch off the product and remove the power cable.


1. Remove the Rear Cover ⇒ Page 8-3.
2. Remove the Upper Side Cover (Left and Right) ⇒ Page 8-4.
3. Remove the Top Side Cover (left and Right) ⇒ Page 8-5.
4. Remove the Top Cover ⇒ Page 8-6.
5. Remove the Paper-Axis Motor ⇒ Page 8-68.
6. Raise the Media Lever.

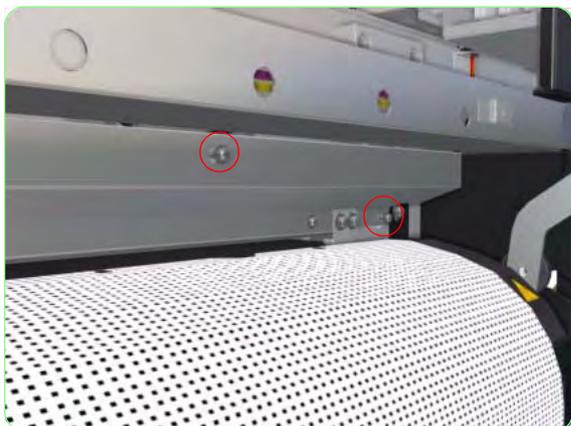

7. Remove nine screws that secure the Metal Cover.




8. Remove the Metal Cover from the Printer.

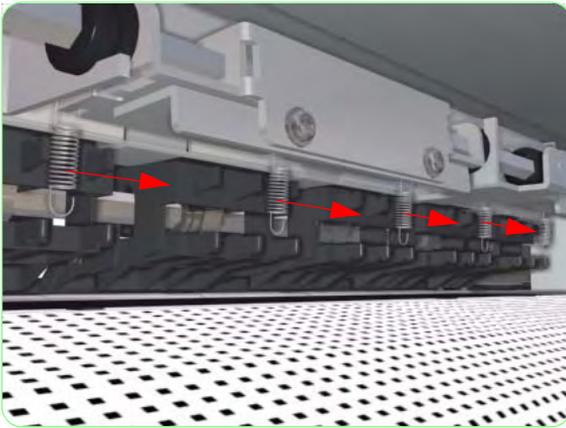

9. Remove ALL the Springs from the Pinchwheels.



10. Remove 55 screws that secure the Center Platen to the Printer.

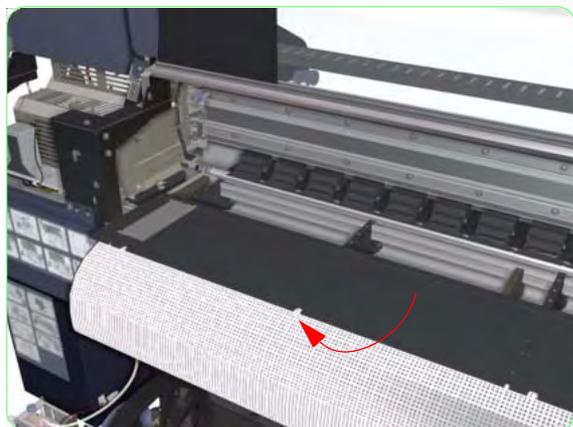


11. Move the Center Platen upwards and then towards you slightly.


Do NOT remove the Center Platen from the Printer. It is only being moved in order to allow access to the Drive Roller.




When moving the Center Platen, take care not to disturb the Shims that are placed underneath the Center Platen.

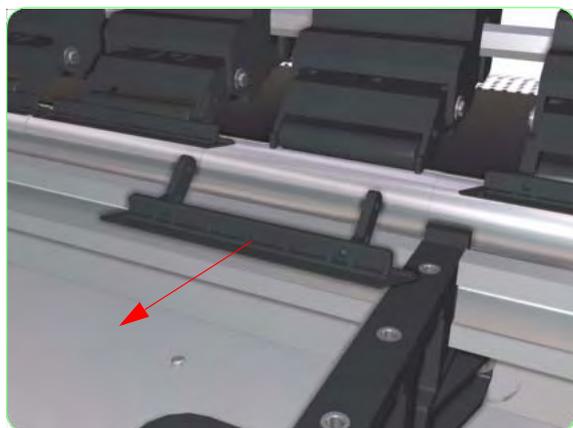

12. Release the Blades from the Pinchwheels and remove from the Printer.

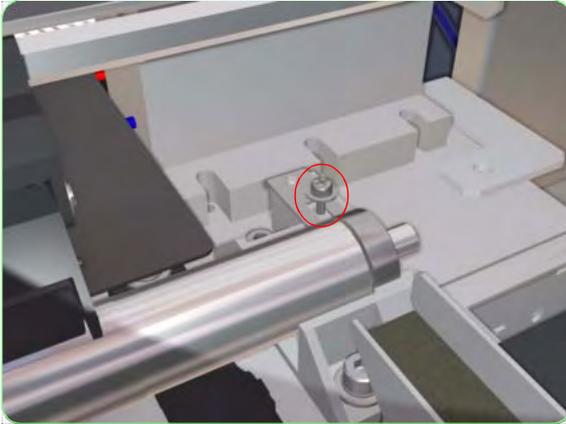


- 13.** Loosen one screw that secures the Locking Plate on the Wiping side.

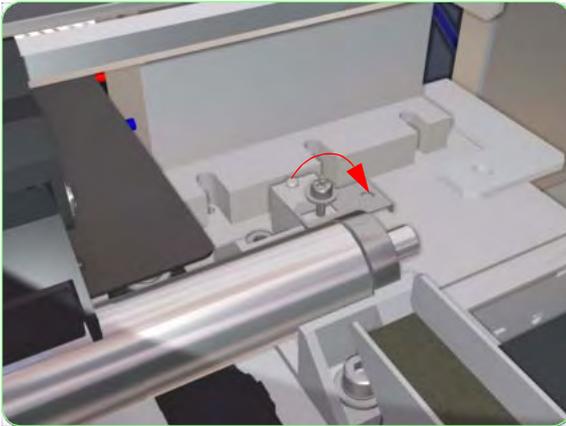

- 14.** Rotate the Locking Plate away from the Drive Roller.



- 15.** Loosen one screw that secures the Locking Plate on the Capping side.

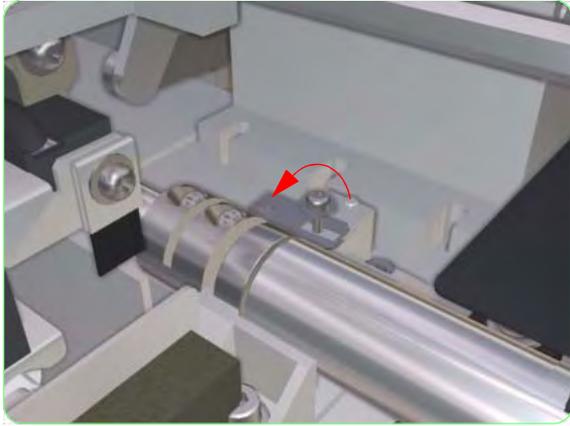

16. Rotate the Locking Plate away from the Drive Roller.



17. Remove two screws from the Drive Roller.




18. Remove the Drive Roller from the Printer.


Media Feed Drive Unit Assembly

Removal


Switch off the product and remove the power cable.

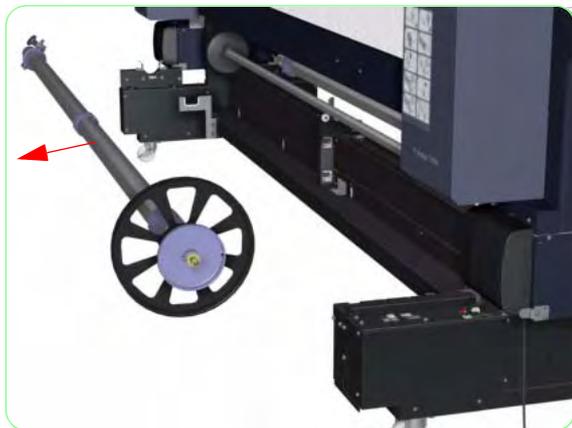


1. Remove the Main Scroller from the media Feed side of the Printer.

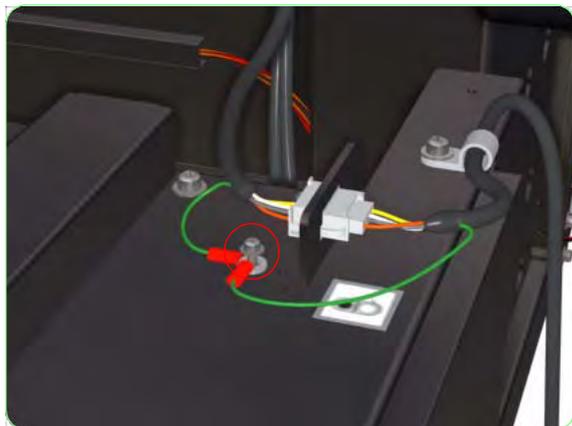


2. Remove one screw that secures the Grounding Cables.

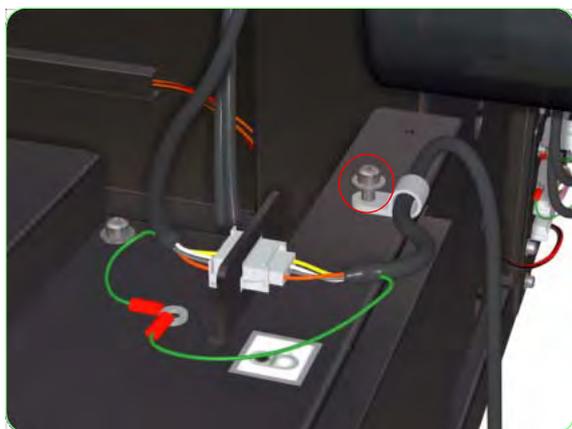


3. Remove one screw from the Cable Clamp and release the Foot Switch Cable from the Cable Clamp.

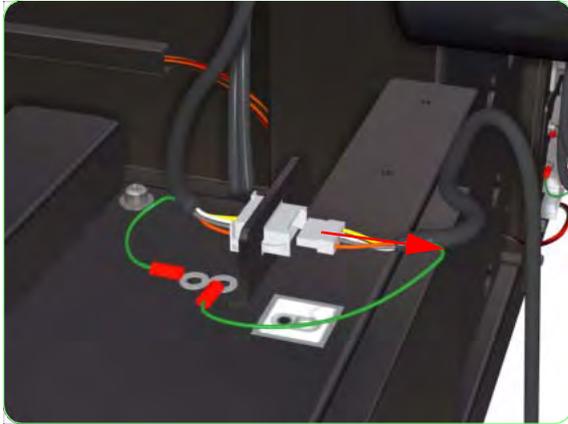

4. Disconnect the Foot Switch Cable from the Drive Unit Assembly and remove the Foot Switch from the Printer.

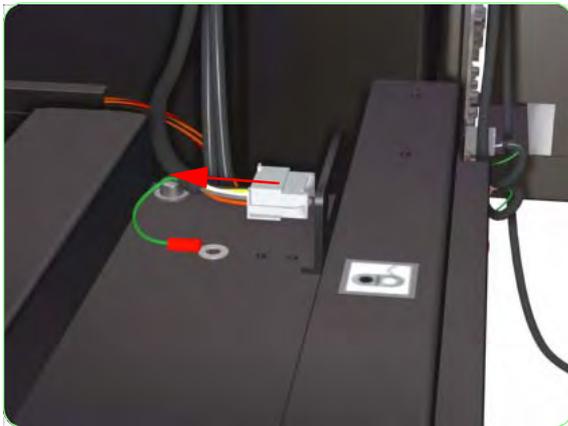

5. Release the Connector from the mounting bracket.

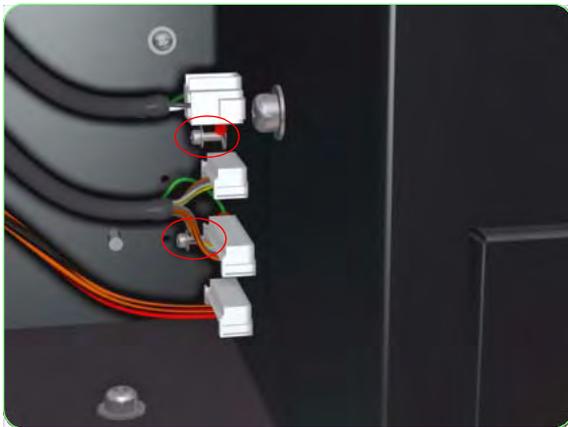

6. Remove a screw that secures each Grounding Cable to the side of the Drive Unit.



7. Disconnect ALL Cables connected to the Drive Unit Assembly.




8. Remove two screws that secure the Drive Unit Assembly on the left hand side.



9. Remove two screws that secure the Drive Unit Assembly on the right hand side.



- 10.** Remove the Drive Unit Assembly from the Printer.

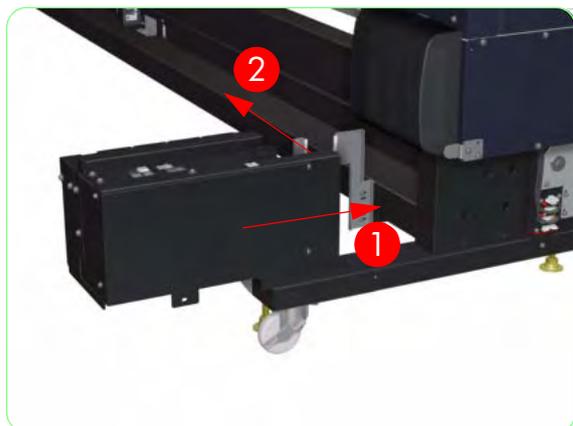

When installing the Drive Unit, push it towards the Printer until it touches the Printer Leg and then move it towards the left to align the sides and then install the screws.

Once the Drive Unit Assembly has been installed correctly, you must perform the Media Feed and Take-Up-Reel Unit Adjustment. For further information, refer to Page 5-29.

Take-Up-Reel Drive Unit Assembly

Removal

Switch off the product and remove the power cable.




1. Remove the Waste Ink Bottle from the Printer.




2. Remove two screws that secure the Waste Bottle Locking Bracket.



3. Remove three screws that secure the Waste Bottle Holder to the Drive Unit.

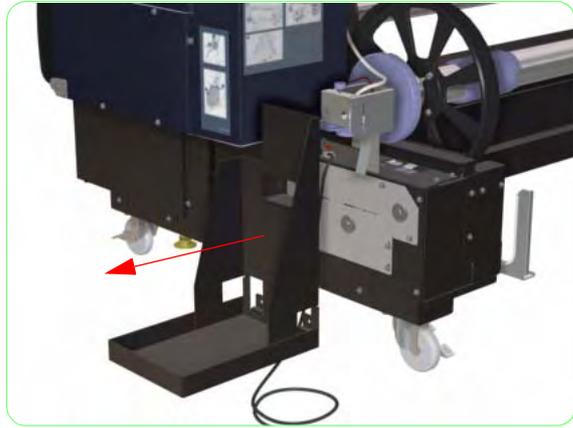


4. Remove the Waste Bottle Holder from the Drive Unit.

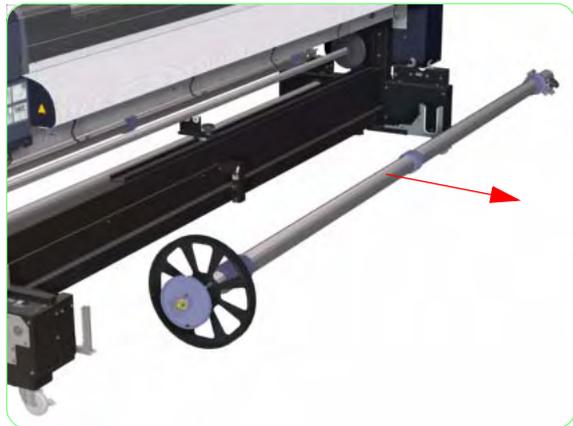


5. Remove the Main Scroller from the Take-Up-Reel Feed side of the Printer.



6. Remove one screw that secures the Grounding Cables.

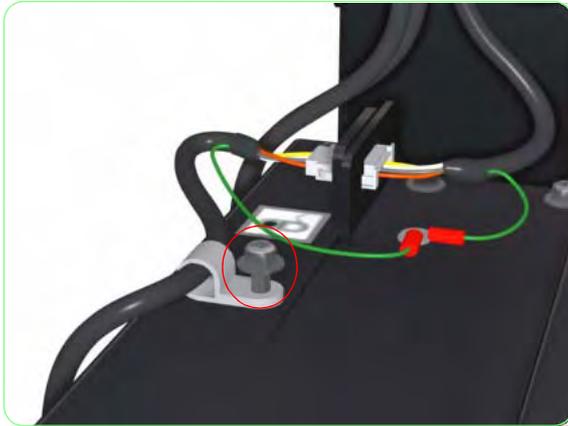

7. Remove one screw from the Cable Clamp and release the Foot Switch Cable from the Cable Clamp.

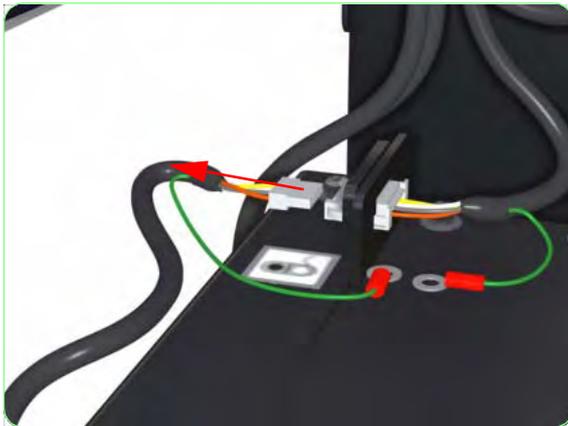

8. Disconnect the Foot Switch Cable from the Drive Unit Assembly and remove the Foot Switch from the Printer.




9. Release the Connector from the mounting bracket.




- 10.** Remove a screw that secures each Grounding Cable to the side of the Drive Unit.



- 11.** Disconnect ALL Cables connected to the Drive Unit Assembly.

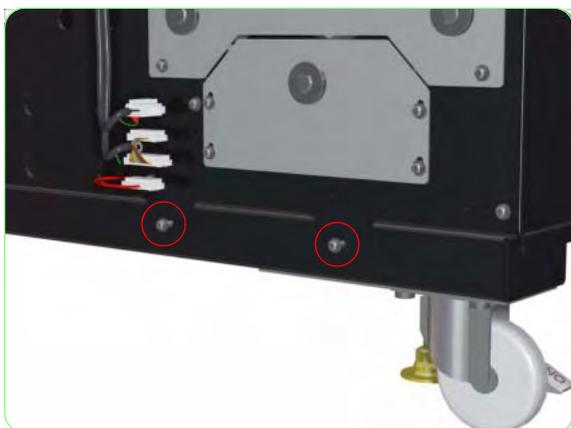


- 12.** Remove two screws that secure the Drive Unit Assembly on the left hand side.

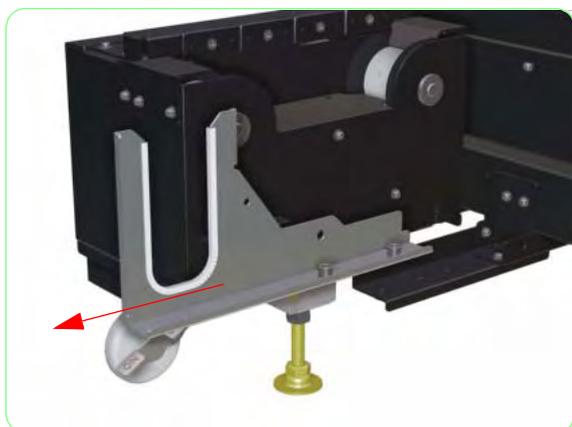

13. Remove two screws that secure the Tension Bar Guide and remove it from the Printer.



14. Remove one screw that secures the Drive Unit Assembly on the right hand side.

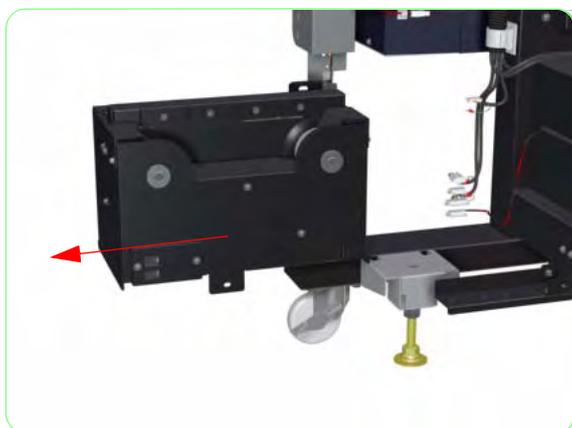

15. Remove the Drive Unit Assembly from the Printer.

When installing the Drive Unit, push it towards the Printer until it touches the Printer Leg and then move it towards the right to align the sides and then install the screws.

Once the Drive Unit Assembly has been installed correctly, you must perform the Media Feed and Take-Up-Reel Unit Adjustment. For further information, refer to Page 5-29.


Drive Unit Rollers

Removal

Switch off the product and remove the power cable.




1. Remove the Media Feed Drive Unit Assembly ⇒ Page 8-165 or the TUR Drive Unit Assembly ⇒ Page 8-169.
2. Remove two screws that secure the Sensor Cover to the Drive Unit Assembly.

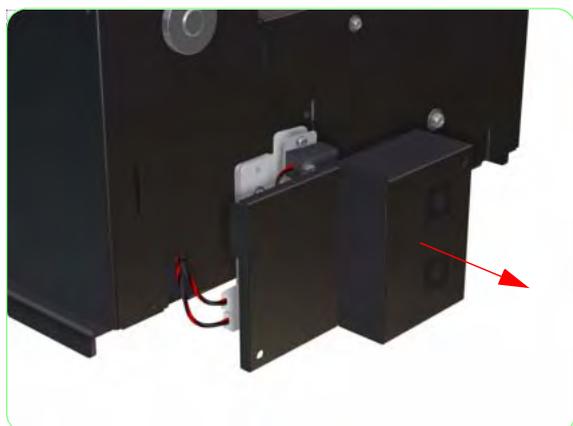


3. Remove the Sensor Cover from the Drive Unit Assembly.



4. Disconnect the cables from the Sensors.

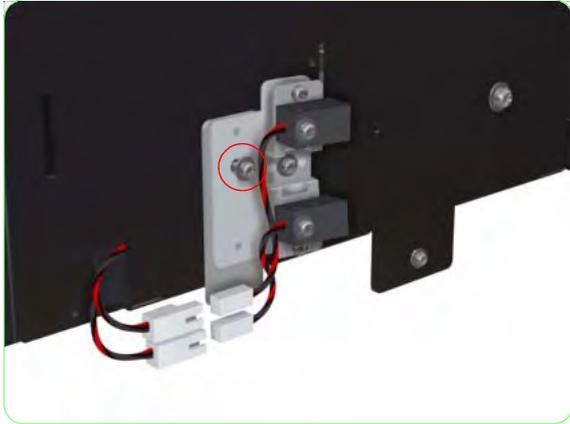

- 5.** Remove one screw that secures the Sensor Bracket to the Drive Unit Assembly.

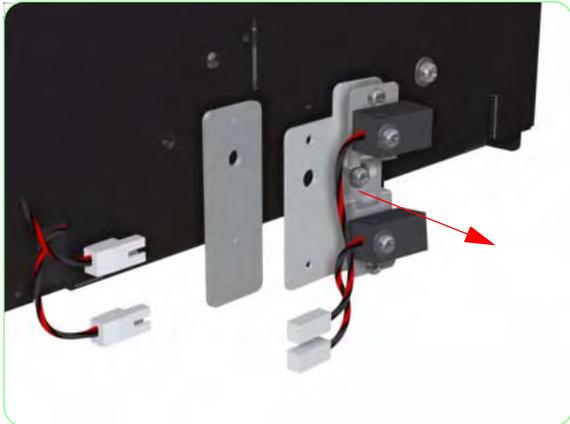

- 6.** Remove the Sensor Bracket (including the Sensors) from the Drive Unit Assembly.



- 7.** Remove two screws that secure the left Roller Cover to the Drive Unit Assembly.



- 8.** Remove the left Roller Cover from the Drive Unit Assembly.




- 9.** Remove two screws that secure the right Roller Cover to the Drive Unit Assembly.



- 10.** Remove the right Roller Cover from the Drive Unit Assembly.




- 11.** Remove three screws that secure the top Roller Cover to the Drive Unit Assembly.

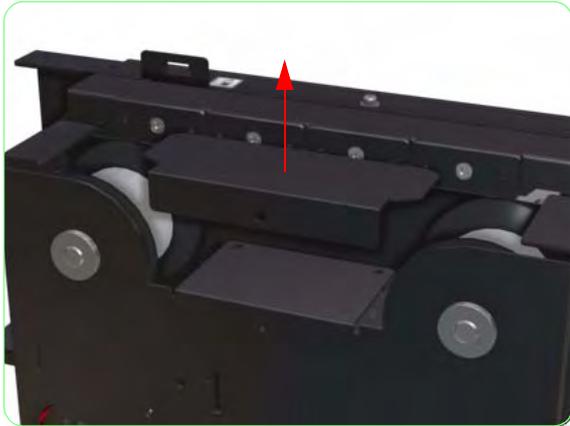


- 12.** Remove the top Roller Cover from the Drive Unit Assembly.



- 13.** Remove five screws that secure the side Roller Cover to the Drive Unit Assembly.

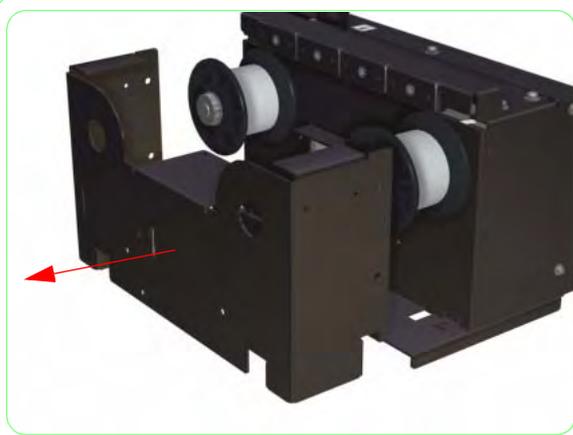


14. Remove the side Roller Cover from the Drive Unit Assembly.

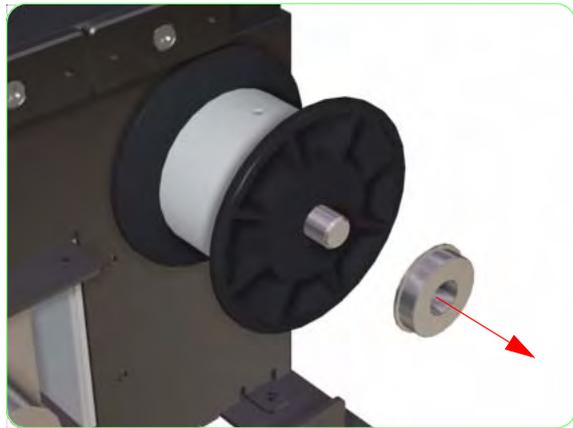


15. Remove the Bearing from the Roller Shaft.



16. Remove the Black Ring from the Roller Shaft.

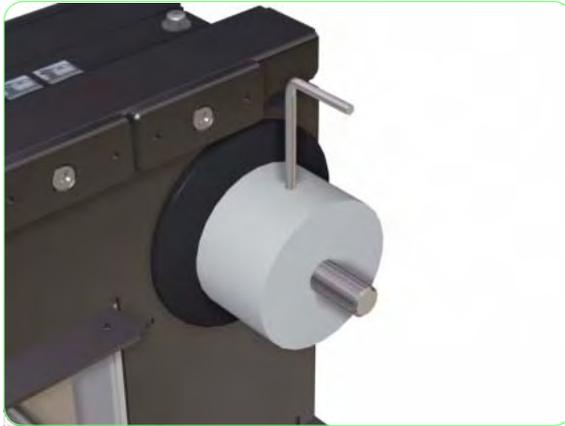

17. Using an Allen Key, loosen the two screws that secure the Roller to the Roller Shaft.

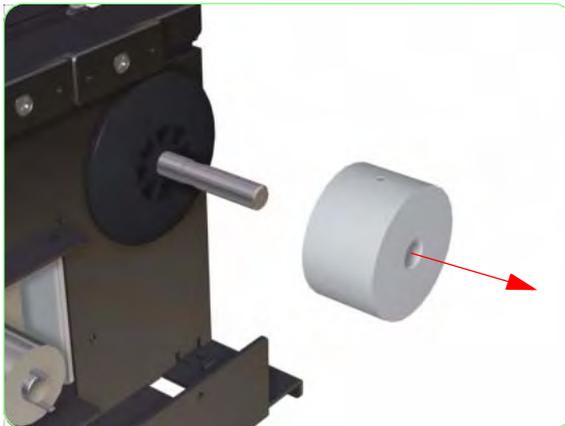

18. Remove the Roller from the Roller Shaft.

Drive Unit Timing Belt

Removal

Switch off the product and remove the power cable.

1. Remove the Media Feed Drive Unit Assembly ⇒ Page 8-165 or the TUR Drive Unit Assembly ⇒ Page 8-169.

The side cover (as explained in steps 2 and 3) is only applicable to the Media Feed Drive Unit Assembly.




2. Remove four screws that secure the side cover to the Drive Unit Assembly.




3. Remove the side cover from the Drive Unit Assembly.




- 4.** Remove four screws that secure the top cover to the Drive Unit Assembly.

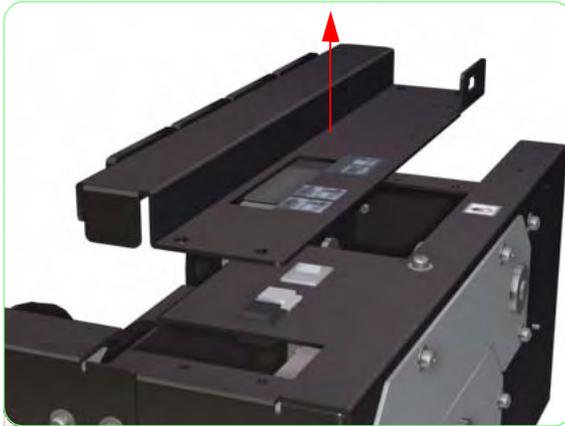


- 5.** Remove the top cover from the Drive Unit Assembly.

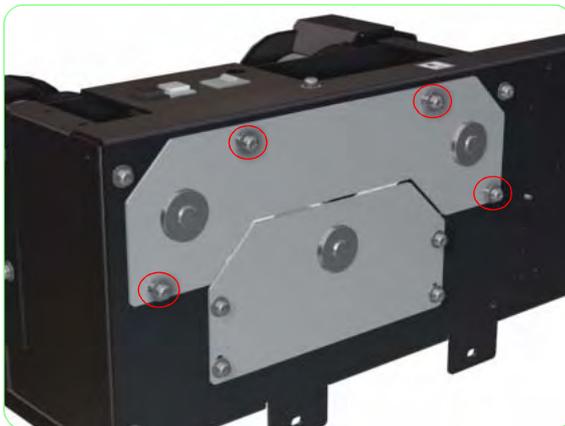


- 6.** Remove four screws that secure the Top Drive Motor Cover to the Drive Unit Assembly.

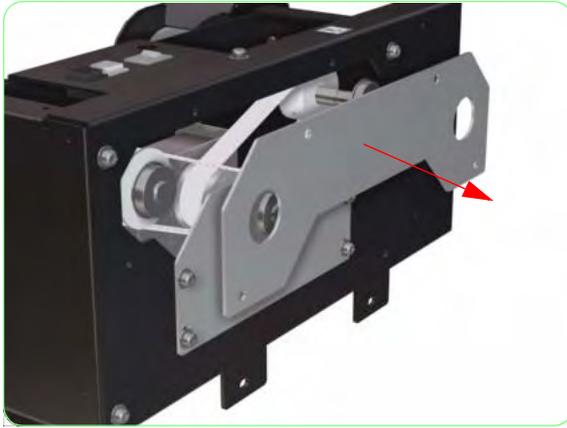


- 7.** Remove the Top Drive Motor Cover from the Drive Unit Assembly.

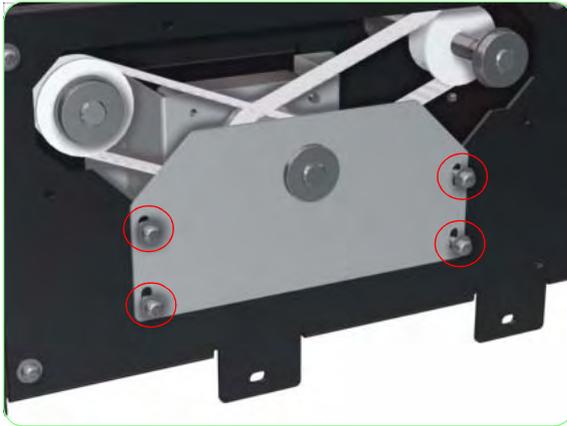


- 8.** Remove four screws that secure the Bottom Drive Motor Cover to the Drive Unit Assembly.

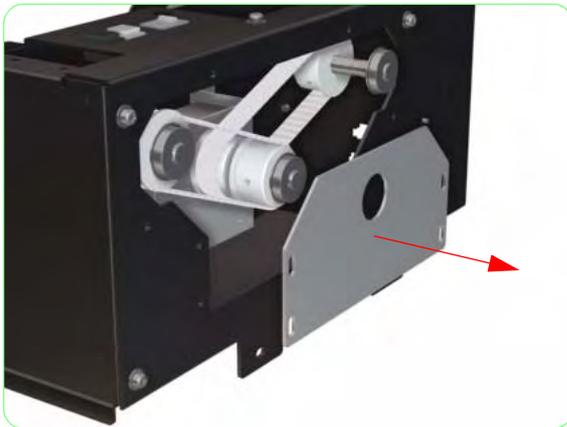


- 9.** Remove the Bottom Drive Motor Cover from the Drive Unit Assembly.

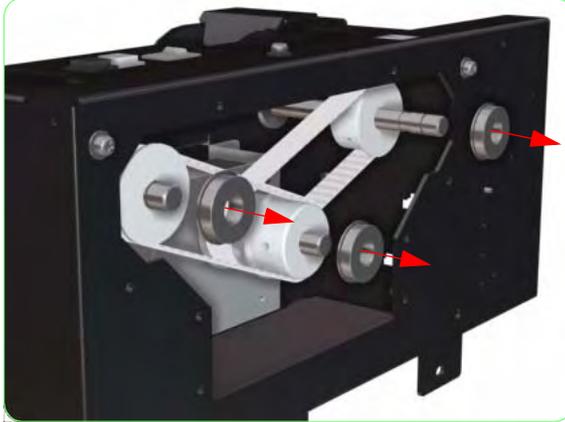

10. Remove the three Bearings from the shafts.

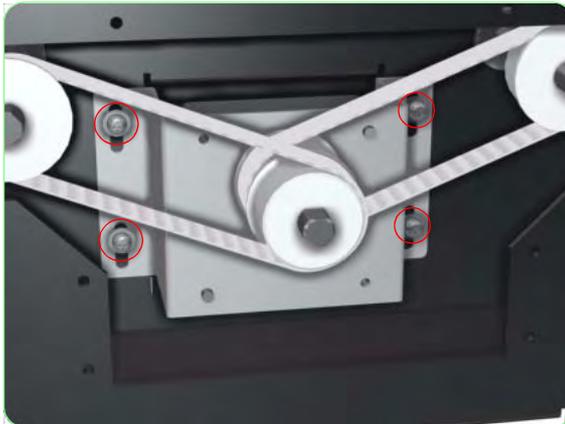

11. Loosen four screws that secure the Drive Motor Bracket to the Drive Unit Assembly.

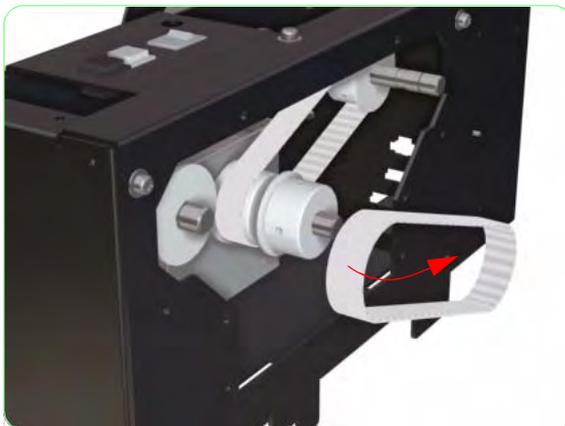

12. Remove the Timing Belt (that needs to be replaced) from the Drive Unit Assembly.

Once the Timing Belts has been installed correctly, you must perform the Timing Belt Tension Adjustment. For further information, refer to Page 5-16.

Media Sensors (Media End, Media Slack and Take-Up-Reel)

Removal


Switch off the product and remove the power cable.

The Media Sensor Kit contains 2 Light Receiving Units and 2 Light Emission Units, so they should be used as necessary to replace any faulty Media Sensors, either on the Media Feed side, or the Take-Up-Reel side.


Media End/Slack Light Emission Units




1. Remove two screws that secure the Sensor Cover to the Drive Unit Assembly.

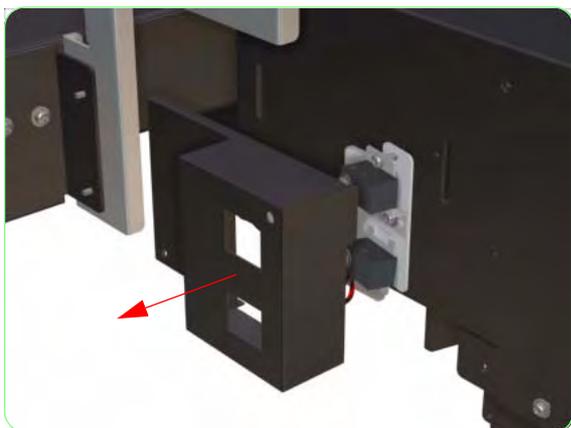


2. Remove the Sensor Cover from the Drive Unit Assembly.

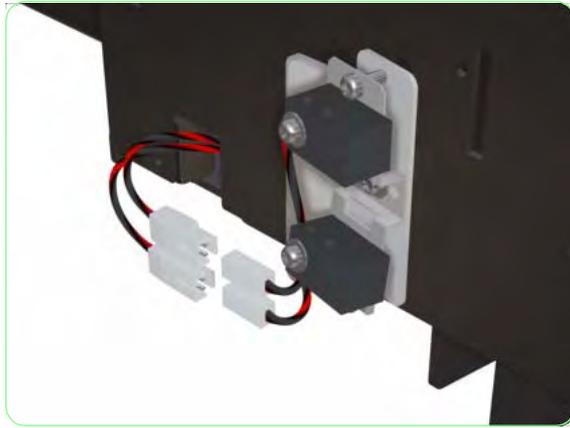

3. Disconnect the two connectors for the Media End/Slack Emission Units.

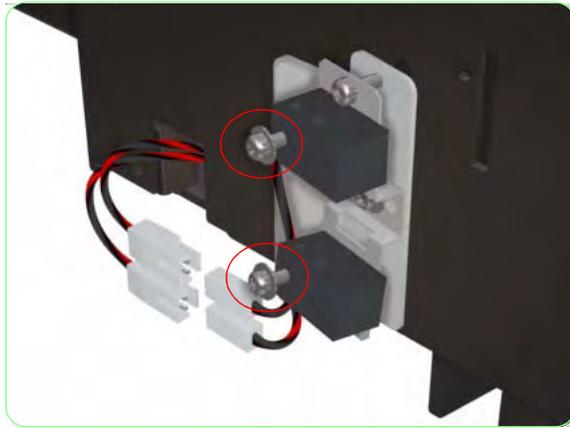


4. Remove one screw from each Media End/Slack Emission Unit.

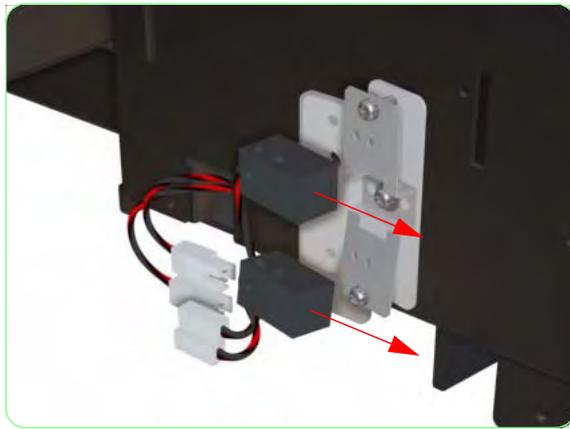


5. Remove both Media End/Slack Emission Units from the Printer.

Once the Media End/Slack Emission Units have been installed correctly, you must perform the Media End/Slack Sensor Adjustment. For further information, refer to Page 5-32 and Page 5-35.

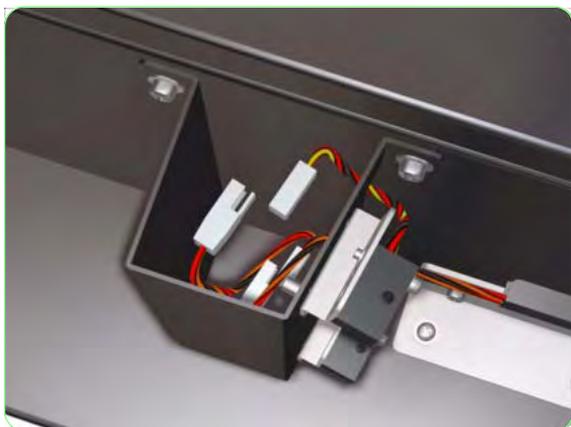


Media End/Slack Light Receiving Units

1. Disconnect the two connectors for the Media End/Slack Receiving Units.

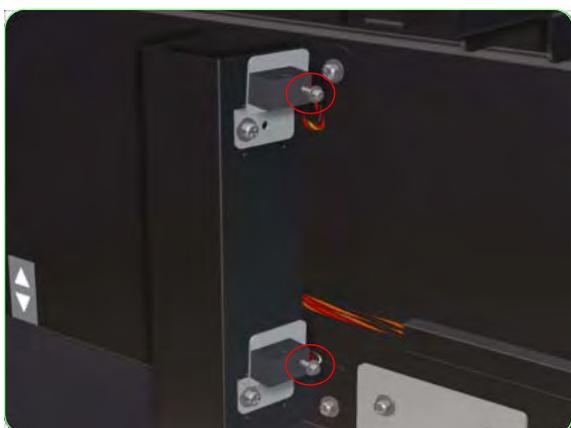

2. Remove one screw from each Media End/Slack Receiving Unit.

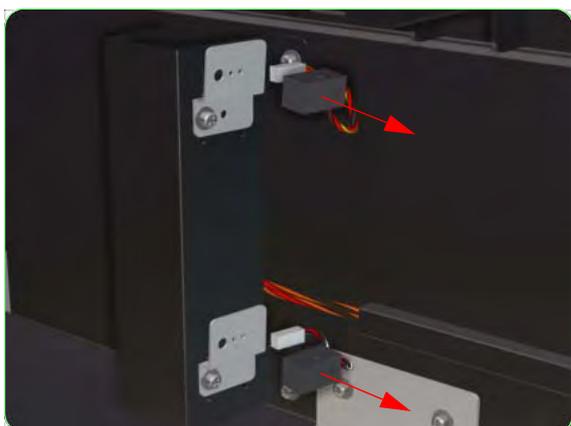


3. Remove both Media End/Slack Receiving Units from the Printer.

Once the Media End/Slack Receiving Units have been installed correctly, you must perform the Media End/Slack Sensor Adjustment. For further information, refer to Page 5-32 and Page 5-35.

Take-Up-Reel Light Receiving Units


1. Remove two screws that secure the Tension Bar Guide and remove it from the Printer.

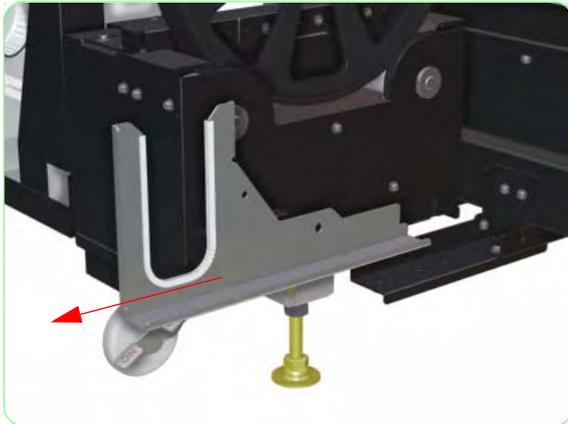

2. Remove two screws that secure the Sensor Cover to the Drive Unit Assembly.




3. Remove the Sensor Cover from the Drive Unit Assembly.

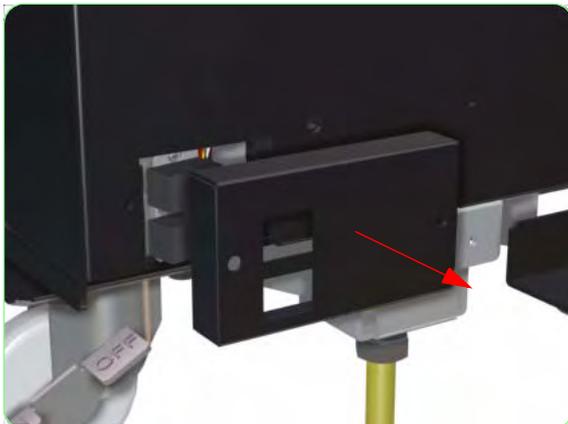



4. Remove one screw from each Take-Up-Reel Receiving Unit.

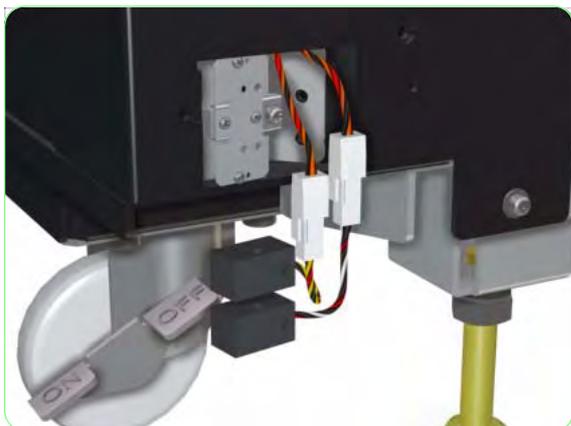

5. Remove the Take-Up-Reel Receiving Units and pull out the cables so that the connectors are accessible.




6. Disconnect the two connectors for the Take-Up-Reel Receiving Units and remove both units from the Printer.

Once the Take-Up-Reel Receiving Units have been installed correctly, you must perform the Take-Up-Reel Sensor Adjustment. For further information, refer to Page 5-38.

Take-Up-Reel Light Emission Unit

1. Disconnect the connector for the Take-Up-Reel Emission Unit.

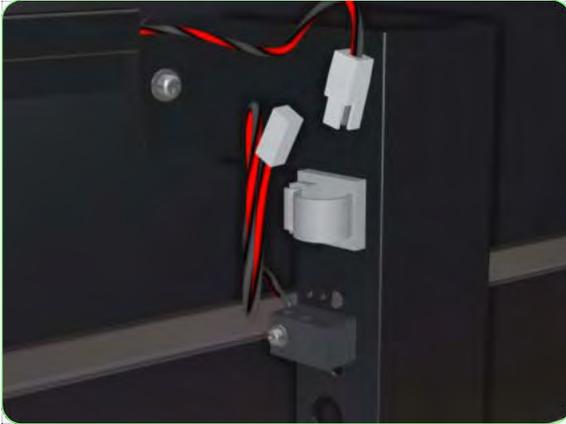

2. Remove one screw from the Take-Up-Reel Emission Unit.



3. Remove the Take-Up-Reel Emission Unit from the Printer.



Once the Take-Up-Reel Emission Unit has been installed correctly, you must perform the Take-Up-Reel Sensor Adjustment. For further information, refer to Page 5-38.



White Nets (For Front and Rear Heaters)

Removal

Switch off the product and remove the power cable.

Front White Net

1. Remove the Upper Side Cover (Left) ⇒ Page 8-4.
2. Remove the Lower Side Cover (Left) ⇒ Page 8-8.
3. Remove the Subtank Side Cover (Left) ⇒ Page 8-9.
4. Carefully pull out the Left Subtank Station slightly ⇒ Page 8-115.
5. Remove the Front Heater ⇒ Page 8-29.
6. Pull the side of the White Net so that the Velcro strip detaches from the Front Heater.
7. Unhook the White Net from the Hooks in the Front Heater.

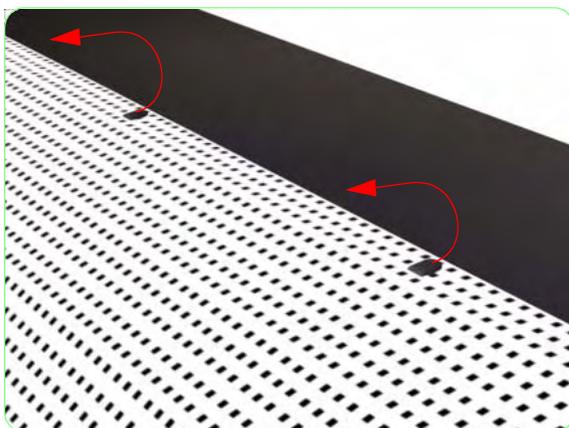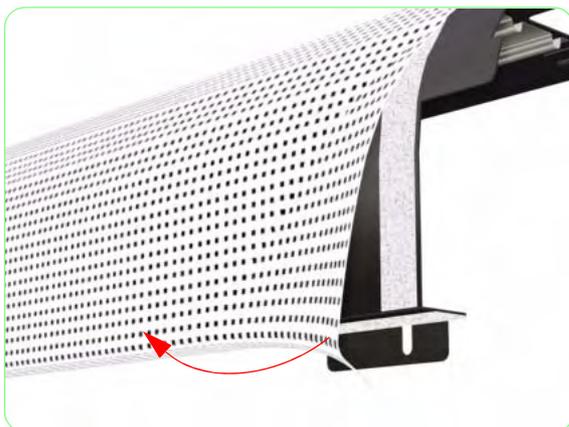




8. Remove the White Net from the Front Heater.

When re-installing the White Net, first hook the Net onto the Hooks in the Front Heater and then attach the Velcro while stretching the Net.


Rear White Net

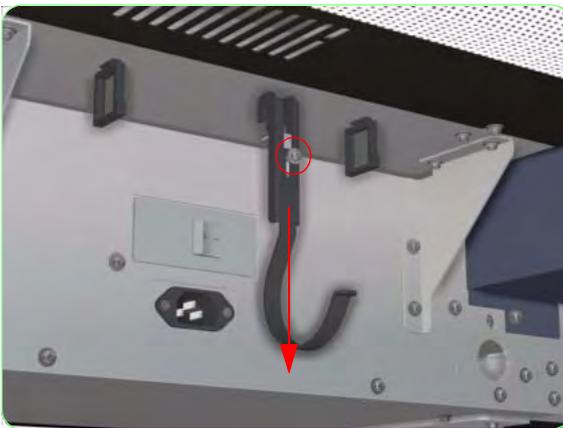

1. Loosen the screw that secures each Tension Bar Holder and remove the five Holders from the Printer.




2. Loosen nine screws that secure the bottom of the Rear Heater to the Printer.

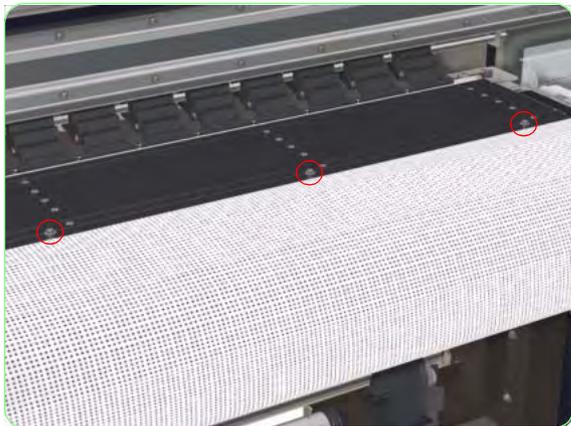

3. Remove 11 screws that secure the top of the Rear Heater to the Printer.

Make sure that the washers do NOT slip underneath the Center Platen.

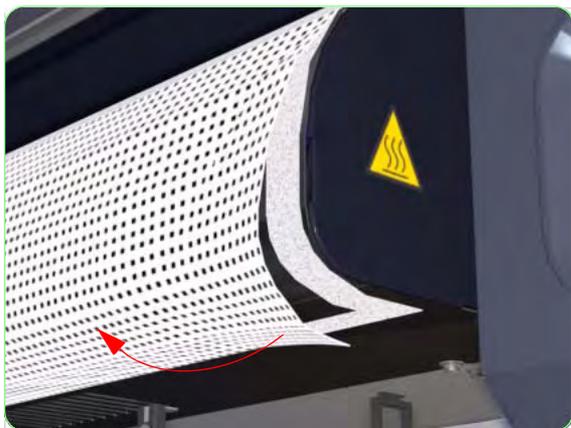

4. Pull the side of the White Net so that the Velcro strip detaches from the Rear Heater.




5. Remove the White Net from the Rear Heater.

When re-installing the Rear Net, make sure you push the white net evenly underneath the Center Platen (this can be done starting from the center and moving outwards).


When installing the top 11 screws, make sure you tighten them starting from the center and then moving outwards.

Sub-Scroller Flange

Removal

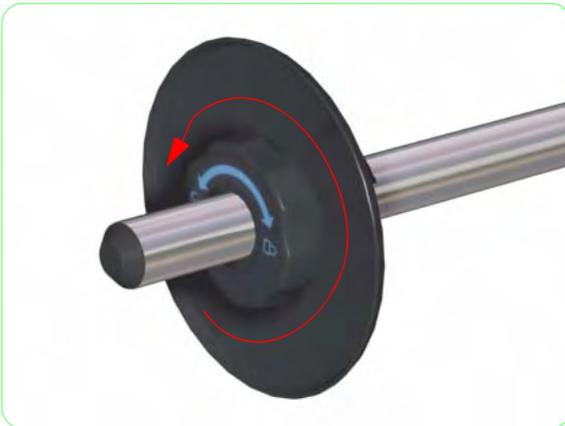

1. Turn the Flange counter-clockwise to loosen it from the Sub-Scroller.

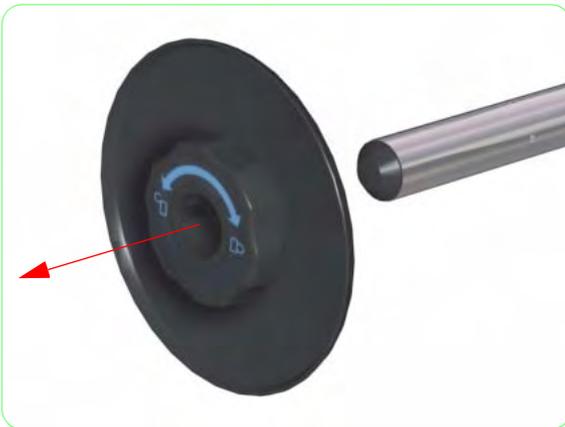


2. Remove the Flange from the Sub-Scroller.

Installation


If the Locking Wheel of the Flange is unscrewed completely and is removed from the Flange, there is a risk that the two metal plates inside the Flange may fall out and that the Flange Hub will get unclipped from the Flange. If this happens, please follow these steps to re-install the parts.




1. Align the clips of the Flange Hub with the guides on the Flange.

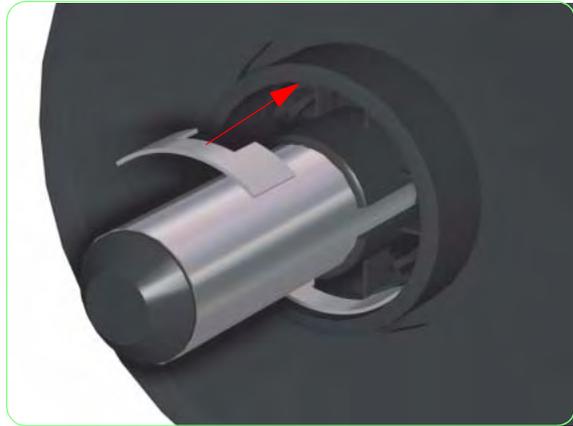

2. Once the Flange Hub is correctly clipped into the Flange, position the two metal plates into the Flange.

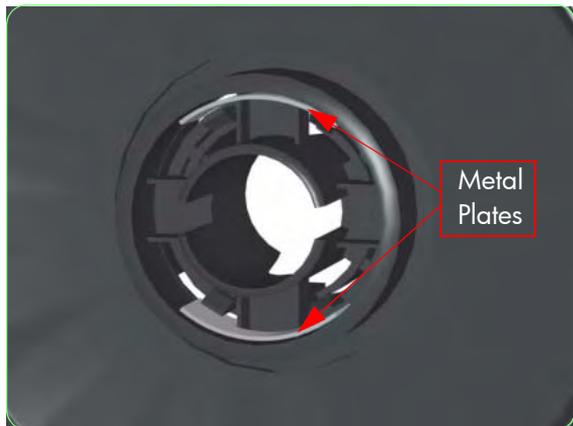

3. Make sure the two metal plates are securely positioned as shown.

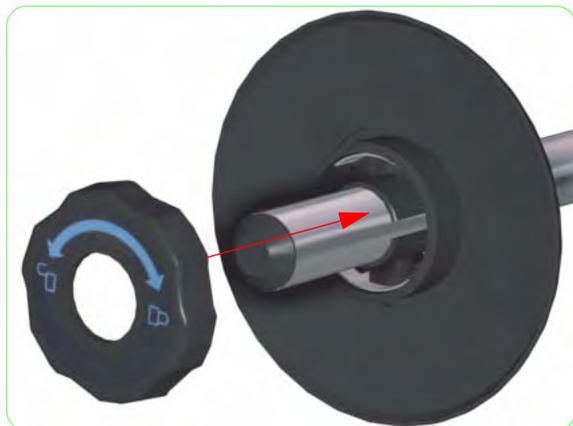

4. Screw the Locking Wheel onto the Flange.

Preventive Maintenance

9

- Printheads Maintenance 9-2
- Daily Inspection and Maintenance 9-3
 - Wiper Blade Cleaning 9-3
 - Moistening the Wiper Sponge 9-5
 - Capping Unit Cleaning 9-6
 - Waste Ink Bottle Disposal 9-8
 - IQ Print 9-10
 - Normal Printhead Recovery 9-11
- When Leaving the Printer Off for more than 2 weeks 9-13
- When Returning to the Printer after more than 2 weeks 9-13
- If the Printer is Switched Off for less than 2 weeks 9-14
- If the Printer is Switched Off for more than one Month 9-14

Preventive Maintenance

In order to keep the Printer in an optimal condition, it is recommended to perform routine maintenance. This Chapter explains the necessary procedures to be performed on a daily, weekly or monthly basis.

A Printer Maintenance Guide is supplied with the Printer which the customer must follow. The information in this Chapter is to be used as a reference for the Service Engineers in the case that the Printer Maintenance Guide is not available.

Printheads Maintenance

In order to ensure Image Quality, the Printheads in the Printer must be maintained on a frequent basis. If the Printheads are not looked after correctly, it is possible to get clogged or misdirected nozzles due to dried ink which can cause banding. If the Printhead cannot be recovered, it means the replacement of the Printhead which can be very expensive.

In order to prevent the Printhead from malfunctioning, the customer has the responsibility to:

- 1 Perform daily maintenance of the Printheads.
The daily maintenance is necessary to:
 - Clean any dried ink that remains on the Capping or Wiping systems.
 - Keep the Wiping system wet so that it can efficiently clean the Printhead's nozzle plate.

- 2 Don't switch Off the Printer.
The Printer has an internal clock which allows to automatically perform a fill cap operation, flushing some ink through the Printhead, which keeps the Printheads in good condition. This is done after the first 20 hours without printing and every 3 days.

If the Printer is switched Off for a long period, this process does not happen. If the ink does not flow through the Printheads from time to time, the ink will dry inside the nozzles, reaching a point where it is impossible to recover them and the Printhead will fail. This will mean an expensive Printhead replacement.

If the Printer must be switched Off for a long period of time, the customer must use either an Ink System Storage Kit to store (and protect) the Printheads or an Ink System Cleaning kit to recover the Printheads.

Tips and Tricks

- If the Printer will not be maintained for a couple of days (i.e. weekends), make sure that the customer performs the daily maintenance before switching Off the Printer.
- If a customer has not been able to perform the daily maintenance for more than one week, ask them to fill up the Wiper Sponge with Wiper Liquid, using a full syringe for each day the Printer has not been used. Also advise the customer to perform a Printhead Recovery, using a "Strong" level.


Daily Inspection and Maintenance

The following procedures should be performed on a daily basis in order to ensure acceptable print quality:

- Wiper Blade Cleaning.
- Moistening the Wiper Sponge.
- Capping Unit Cleaning.
- Waste Ink Bottle Disposal.
- Test Print.
- Normal Printhead Recovery (Only if Printheads require cleaning).

Wiper Blade Cleaning

- 1 When the "Printer Ready" message appears on the Front Panel, press the **Online** key to take the Printer offline.

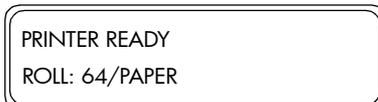

- 2 When the following screen is displayed on the Front Panel, press the **Shift** key once.



- 3 When the following screen is displayed on the Front Panel, press the **▲** key to enter into the PH Main Menu.



- 4 In the PH Main submenu, scroll to "Wiper Cleaning" and press the **OK** key.



- 5 You will need to confirm that you want to perform the Wiper Cleaning procedure by pressing the **OK** key.



- 6 The Wiper Blade will automatically come up for cleaning during which the following message will be displayed on the Front Panel.



Wiper Blade

WIPER MOVING
PLEASE WAIT

- 7 When the following message is displayed on the Front Panel, open the Rear Cover and the Wiping Door.




Rear Cover

OPEN REAR COVER
WIPER CLEANING


Wiping Door

- 8 Make sure that there is no dried ink stuck on the Wiper Blade. Also make sure that the Wiper Blade is not damaged.
- 9 Dip a **new** cleaning swab into the Wiper Cleaning Liquid.

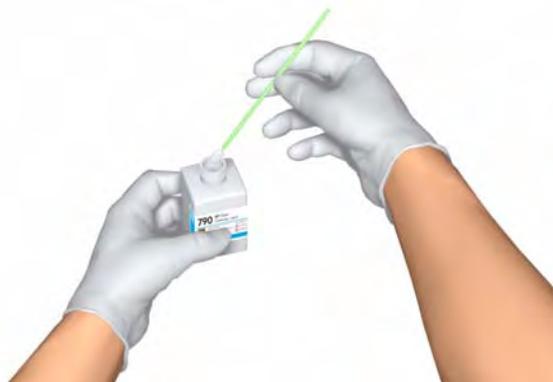

Make sure that you use the Wiping Cleaning Liquid and NOT the Cap Cleaning Liquid to clean the Wiper Blade. The Cap Cleaning Liquid is not strong enough to clean the Wiper Blade properly and could cause damage to the Printheads.

- 10** Use the cleaning swab to clean the front and back parts of the Wiper Blade.

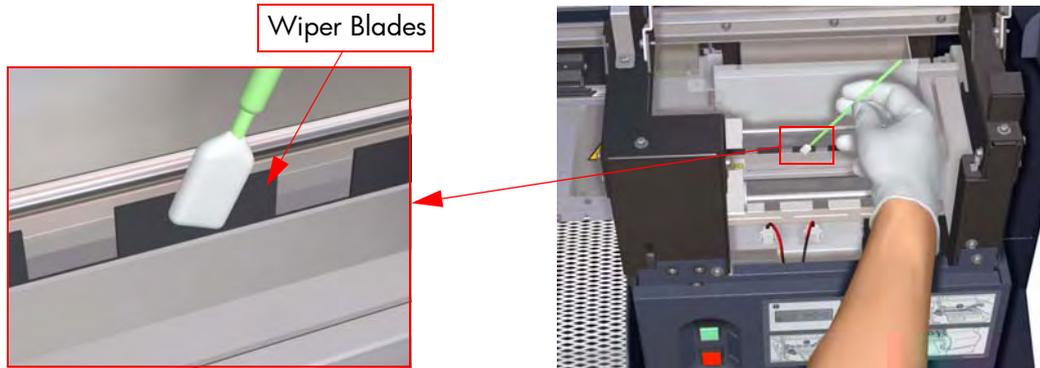


Make sure that the Wiper Cleaning Liquid does not drip on to other parts of the Printer. If the Wiper Cleaning Liquid drips on to the Belt or any nearby Sensors, this could cause serious damage to the Printer.

- 11** After the Wiping Blades have been thoroughly cleaned, close the Wiping Door and the Rear Cover to automatically return the Wiping Blades to their original position.

Moistening the Wiper Sponge

The Wiper Sponge has to always be moist so that the Wiper Blade can correctly clean the Printheads. The following should be done on a daily basis:

- 1** Before printing, check if the Wiper Sponge is moist by pressing a dry swab down on the sponge.
- 2** If the Wiper Sponge is dry, apply a few drops of the Wiper Cleaning Liquid on to the Wiper Sponge using the Dropper.

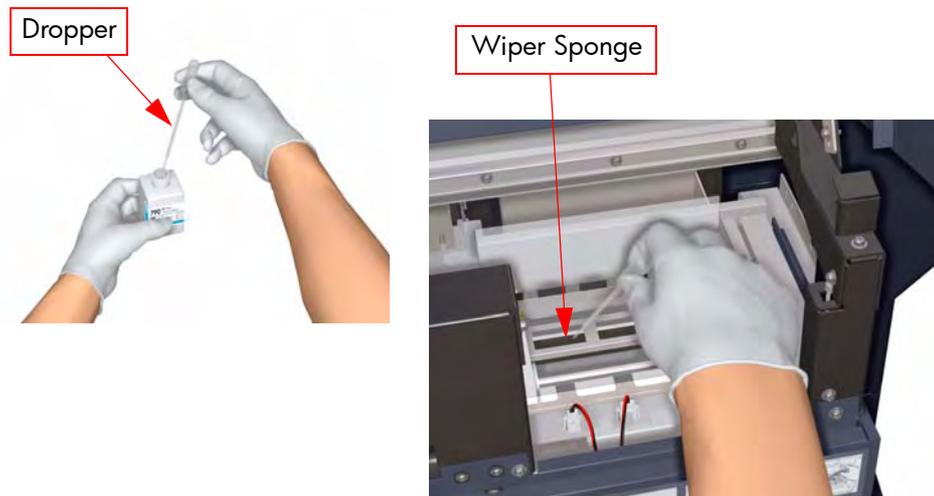

Make sure that the Wiper Cleaning Liquid does not drip on to other parts of the Printer. If the Wiper Cleaning Liquid drips on to the Belt or any nearby Sensors, this could cause serious damage to the Printer.

Capping Unit Cleaning

- 1 When the "Printer Ready" message appears on the Front Panel, press the **Online** key to take the Printer offline.



PRINTER READY
ROLL: 64/PAPER

- 2 When the following screen is displayed on the Front Panel, press the **Shift** key once.



▲ INK MEDIA REG ▼
◀ MEDIA M.ADV ▶

- 3 When the following screen is displayed on the Front Panel, press the ▲ key to enter into the PH Main Menu.



▲ PH. MAIN FEED ▼
◀ PH RECOVERY ▶

- 4 In the PH Main submenu, scroll to "Cap Cleaning" and press the **OK** key.



CAP CLEANING
>

- 5 You will need to confirm that you want to perform the Cap Cleaning procedure by pressing the **OK** key.



CAP CLEANING
* OK?


- 6 The Carriage will automatically move to the wiping side of the Printer so that the Capping Unit can easily be accessed, during which the following message will be displayed on the Front Panel.



CARRIAGE MOVING
PLEASE WAIT

Once the Carriage is out of the Capping Station, the cleaning procedure should be done as quickly as possible so as not to permanently damage the Printheads. The Printer will emit an acoustic warning (beeps) while the Carriage is out of the Capping Station.

- 7 When the following message is displayed on the Front Panel, open the Rear Cover and the Capping Door.

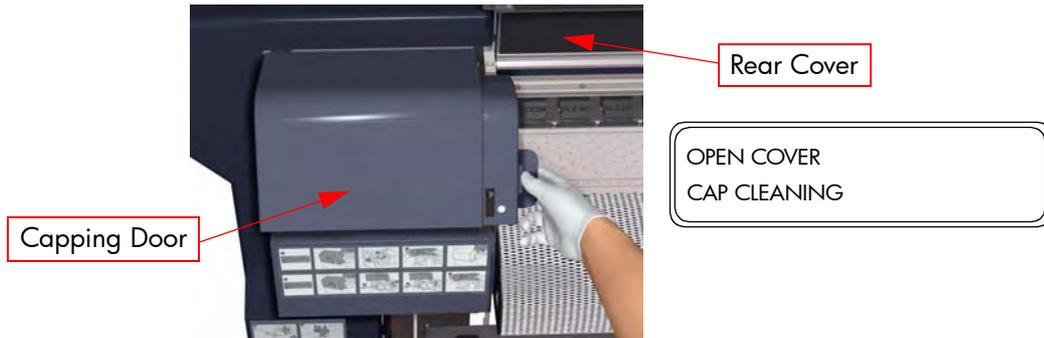

- 8 Dip a **new** cleaning swab into the Cap Cleaning Liquid.



Make sure that you use the Cap Cleaning Liquid and NOT the Wiper Cleaning Liquid to clean the Capping Unit, otherwise you could cause damage to the Printheads.

- 9 Use the cleaning swab to clean the edges and the upper surfaces of ALL six Capping Units.



Make sure that the Cap Cleaning Liquid does not drip on to other parts of the Printer. If the Cap Cleaning Liquid drips on to the Belt or any nearby Sensors, this could cause serious damage to the Printer.


- 10 After the Capping Unit has been thoroughly cleaned, close the Capping Door and the Rear Cover to automatically return the Carriage to its home position.

Waste Ink Bottle Disposal

The Waste Ink Bottle should be checked on a daily basis to make sure that it is not full. The Waste Ink Bottle should be emptied as follows:

It is the customer that has the responsibility to dispose of the Waste Ink whenever necessary. The ink should be disposed as industrial waste. Please refer to the Printer User's Guide for complete information (including safety notes) on waste handling and disposal instructions.

- 1 Loosen the screw and lift up the lever to release the Waste Ink Bottle.

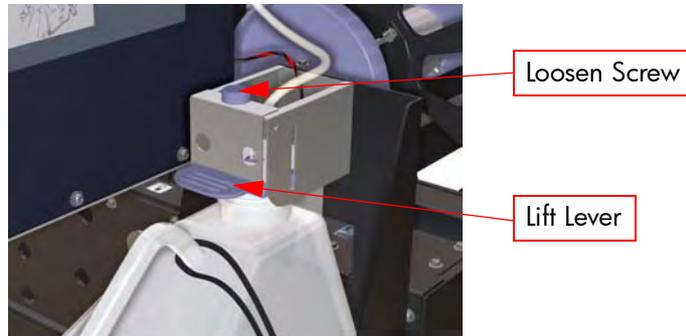


- 2 Carefully pull out the Waste Ink Bottle, taking care not to spill any on the Printer or on the floor.



- 3 Securely screw on the top on the full Waste Ink Bottle and store in a safe place until it can be taken for disposal.
- 4 Install a **new** Waste Ink Bottle into position.



- 5** Lower the lever and tighten the screw, making sure that the Waste Ink Bottle is securely in position.

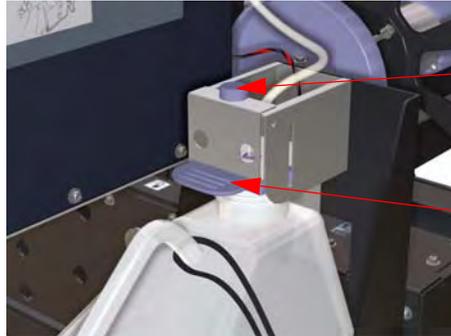

Tighten Screw

Lower Lever

- 6** Once the Waste Ink Bottle is correctly installed, the Front Panel will request you to reset the Waste Counter.


BOTTLE EMPTY
* NO

- 7** Select "Yes" and press the **OK** key to reset the Waste Counter by indicating that the Waste Bottle is empty.

BOTTLE EMPTY
* YES

IQ Print

The IQ Print can be used to check for Print Quality problems (like banding) and can be used to isolate the root cause of the problem.

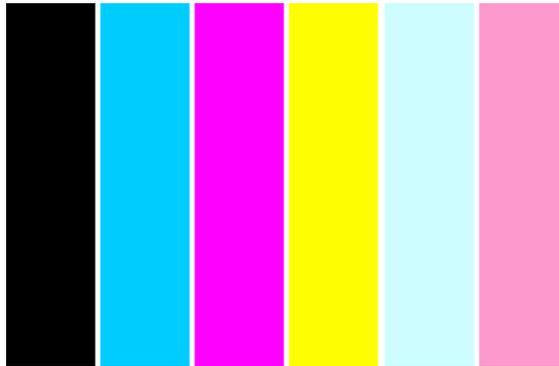

- 1 When the "Printer Ready" message appears on the Front Panel, press the **Online** key to take the Printer offline.

PRINTER READY
ROLL: 64/PAPER

- 2 When the following screen is displayed on the Front Panel, press the **Shift** key twice.

▲ INK MEDIA REG ▼
◀ MEDIA M.ADV ▶

- 3 When the following screen is displayed on the Front Panel, press the ◀ key to enter into the Adjust Menu.

▲ PRINTER SETUP ▼
◀ ADJUST

- 4 In the Adjust submenu, scroll to "Test Prints" and press the **OK** key.

TEST PRINTS
> IQ PRINT

- 5 In the Test Prints submenu, scroll to "IQ Print" and press the **OK** key.

TEST PRINTS
* IQ PRINT

- 6 You will need to confirm that you want to print the IQ Print by pressing the **OK** key.

TEST PRINTS
* IQ PRINT OK?

- 7** The Printer will start to print the IQ Print and the following message will appear on the Front Panel.



- 8** The IQ Print can be cancelled at any time by pressing the **Cancel** key.




If problems are found in the IQ Print, try the following:

- If the problem detected is banding in one or several colors, it is recommended to perform the Printhead Recovery procedure.
- If the problem detected is banding across ALL the colors, it is recommended to perform the Media Advance adjustment on the media that is currently being used ⇒ Refer to the User's Guide.
- For further information regarding Print Quality problems, please refer to Chapter 6 - Print Quality.

Normal Printhead Recovery

Printhead Recovery should be performed only if a Print Quality defect has been found in the IQ Print. Otherwise, Printhead Recovery should only be performed once a month.

- 1** When the "Printer Ready" message appears on the Front Panel, press the **Online** key to take the Printer offline.

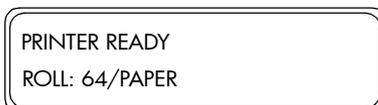


- 2** When the following screen is displayed on the Front Panel, press the **Shift** key once.



- 3** When the following screen is displayed on the Front Panel, press the **◀** key to enter into the PH Recovery Menu.



- 4** In the PH Recovery submenu, press the **OK** key.

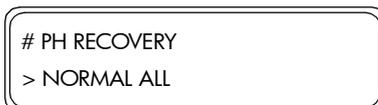

- 5 In the PH Recovery submenu, select the level of recovery you would like and then press the **OK** key.

PH RECOVERY
* NORMAL ALL

Recommended cleaning
level is NORMAL

The different levels of Printhead Recovery are as follows:

- Normal All - Activates a normal recovery for all Printheads.
 - Strong All - Activates a strong recovery for all colors.
 - Strong K, Lm, Lc - Activates a strong recovery for the Black, Light Magenta and Light Cyan Printheads.
 - Strong Y, M, C - Activates a strong recovery for the Yellow, Magenta and Cyan Printheads.
- 6 You will need to confirm that you want to perform the selected Printhead Recovery procedure by pressing the **OK** key.

PH RECOVERY
* OK?

- 7 When the following message appears on the Front Panel, check whether the Waste Ink Bottle is present and is NOT full. Press the **OK** key once the Waste Ink Bottle has been checked.

PH RECOVERY
* BOTTLE OK?

- 8 The Carriage will begin to perform the recovery process by pumping ink through the Printheads and performing the wiping procedure in order to unblock any nozzles that could be blocked. During the recovery process, the following message will be displayed on the Front Panel.

PH RECOVERY
* EXECUTING XXX

- 9 Once the recovery process has finished, the Front Panel will return to the following screen.

PH RECOVERY
> NORMAL ALL

When Leaving the Printer Off for more than 2 weeks

It is important to remember that the Printer should not be switched Off so that the Printer can automatically trigger the internal Printhead maintenance procedures to prevent the Printheads from failing.

But there might be certain circumstances where the Printer needs to be switched Off for a long period of time. In order to do this, the customer must follow the storage procedure using the HP 790 Ink System Storage Kit together with the internal storage option. This procedure replaces the ink from the Ink System with a lower solvent liquid which will maintain the health of the Printheads, preventing them from failing.

Before leaving the printer switched Off for more than 2 weeks, perform the Store Ink System procedure ⇒ Page 4-27.

In order to perform the Service Clean procedure, you will need the HP 790 Ink System Storage Kit (part number CB297A). This kit includes:

- Six Ink System Purging Cartridges.
- Six Ink System Storage Liquid Cartridges.

If the Printer is switched On after leaving it switched Off for more than one month (31 days), Error Code 11E0 will be displayed on the Front Panel.

When Returning to the Printer after more than 2 weeks

When returning to the Printer, a Printhead recovery procedure will need to be done using the Ink System Cleaning Kit together with the Printhead Wash option to clean the Ink System from the maintenance liquid. Once the Ink System is cleaned, the Ink Charge option is used to refill the Ink System with regular ink.

After returning to the Printer after leaving it switched Off for more than 2 weeks, perform the following:

- Daily Maintenance ⇒ Page 9-3.
- Clean Ink System ⇒ Page 4-33.
- Charge Ink ⇒ Page 4-23.

In order to perform the Clean Ink System procedure, you will need the HP 790 Ink System Cleaning Kit (part number CB296A). This kit includes:

- Six Ink System Purging Cartridges.
- Six Ink System Cleaning Liquid Cartridges.

If the Printer is Switched Off for less than 2 weeks

If a customer accidentally leaves the Printer switched Off for less than 2 weeks, they will be able to recover the Printheads if the nozzles have been blocked with dried ink. The success of recovering the Printheads will depend on how long the Printer has been left switched Off. If the Printer has been switched Off for longer than 2 weeks, it could mean the replacement of some or ALL of the Printheads.

After returning to the Printer after leaving it switched Off for less than 2 weeks, perform the following:

- Daily Maintenance ⇒ Page 9-3.
- Clean Ink System ⇒ Page 4-33.
- Charge Ink ⇒ Page 4-23.

In order to perform the Clean Ink System procedure, you will need the HP 790 Ink System Cleaning Kit (part number CB296A). This kit includes:

- Six Ink System Purging Cartridges.
- Six Ink System Cleaning Liquid Cartridges.

If the Printer is Switched Off for more than one Month

If the Printer is switched On after leaving it switched Off for more than one month (31 days), Error Code 11E0 will be displayed on the Front Panel. In order to clear this Error Code, perform the following:

- 1 Turn the Printer ON in error skip mode by holding down the **Cancel** and **Shift** keys and pressing the ON button.
- 2 When the following screen is displayed on the Front Panel, you will be requested to enter a password. Press the following keys in this order: ◀, ▶, **Shift** and **OK**.



- 3 Switch the Printer OFF and then ON again.

About this Edition

This is the 1st edition of this Service Manual

1st edition, titled
HP Designjet 10000s Series Printers Service Manual (Model Q6693A) -
September 2006

What's in this Service Manual

This manual contains information necessary to test, calibrate and service:

- HP Designjet 10000s Series Printers (Model Q6693A).

For information about using these printers, refer to the corresponding User Guide.

The procedures described in this manual are to be performed by HP-qualified Service Personnel only.

